4


Specifications

Chipset Brand	Intel Processor
CPU	Intel Jasper Lake N5095
	Intel UHD Graphics
Memory	LPDDR4X
	8GB/16GB/32GB(Option)
Storage	EMMC(Option): 32GB/64GB/128GB
	SSD(Option): 2280 Type.SATA 3.0 or PCIE*4
	HDD(Option): 2.5 inch 500GB/1TB/2TB
WIFI/Bluetooth	M.2 2230: AC WIFI/WIFI 5, BT 5
AC adapter	AC 100~240V, 50/60Hz,12V/2A, ¢5.0mm
TPM	Support TPM 2.0
Wireless Type	1216 on Board
Dimension(LxFxH)	125mm*112mm*46.7mm
Weight(g)	About 430g
Operating System	Windows 10 Pro / Windows 11 Pro




B00JP1 | Quick Guide

2

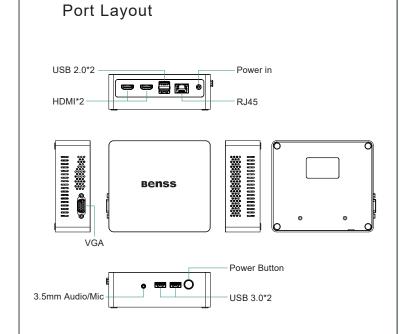

Connection

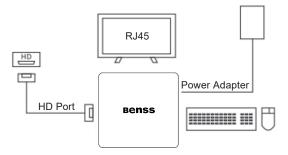

- 1.Connect the device with the display device (such as TV, screen, projector, etc.) via HD line, and select the "video input source" of the display device to the connected HD input channel.
- 2.DC-IN power supply: Connect the DC-IN interface of the power cord of the accessories to the device and insert the other end directly into the plug.
- 3.Use the device by connecting it with a wired or wireless keyboard and mouse via USB port.
- 4. Press the power button to start the system.

6

Package







1* Adapter



1* Vesa







1* HMDI

Benss

Mini PC

Model:B00JP1

Customer Service



For More Information,
Please scan QR code
www.benss-tech.com
support06@benss-tech.com

Caution

- 1. After abnormal withdrawal or accidental power failure of the mini pc system, the hard disk scanning should be carried out as soon as possible to repair the errors in time.
- 2. When the mini pc boots, we should pay attention to the defense of the virus and try to use the virus firewall.
- 3. Turn on the display, printer, and other peripherals first, and finally turn on the device. Turn off the device first, then turn off the display.
- 4. If you do not use the device for a long time, turn off the main power switch.
- 5. The device should not be powered off for a long time (e.g. 1-3 months) before using it.
- 6. The device should not be turned on or off frequently, the time interval between two boots should be at least 10 seconds, preferably no less than 60 seconds.
- 7. Please don't move the device or turn off the power while reading/writing to the hard disk. Wait for about 30seconds after shutting down it.

FCC Warning

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.