


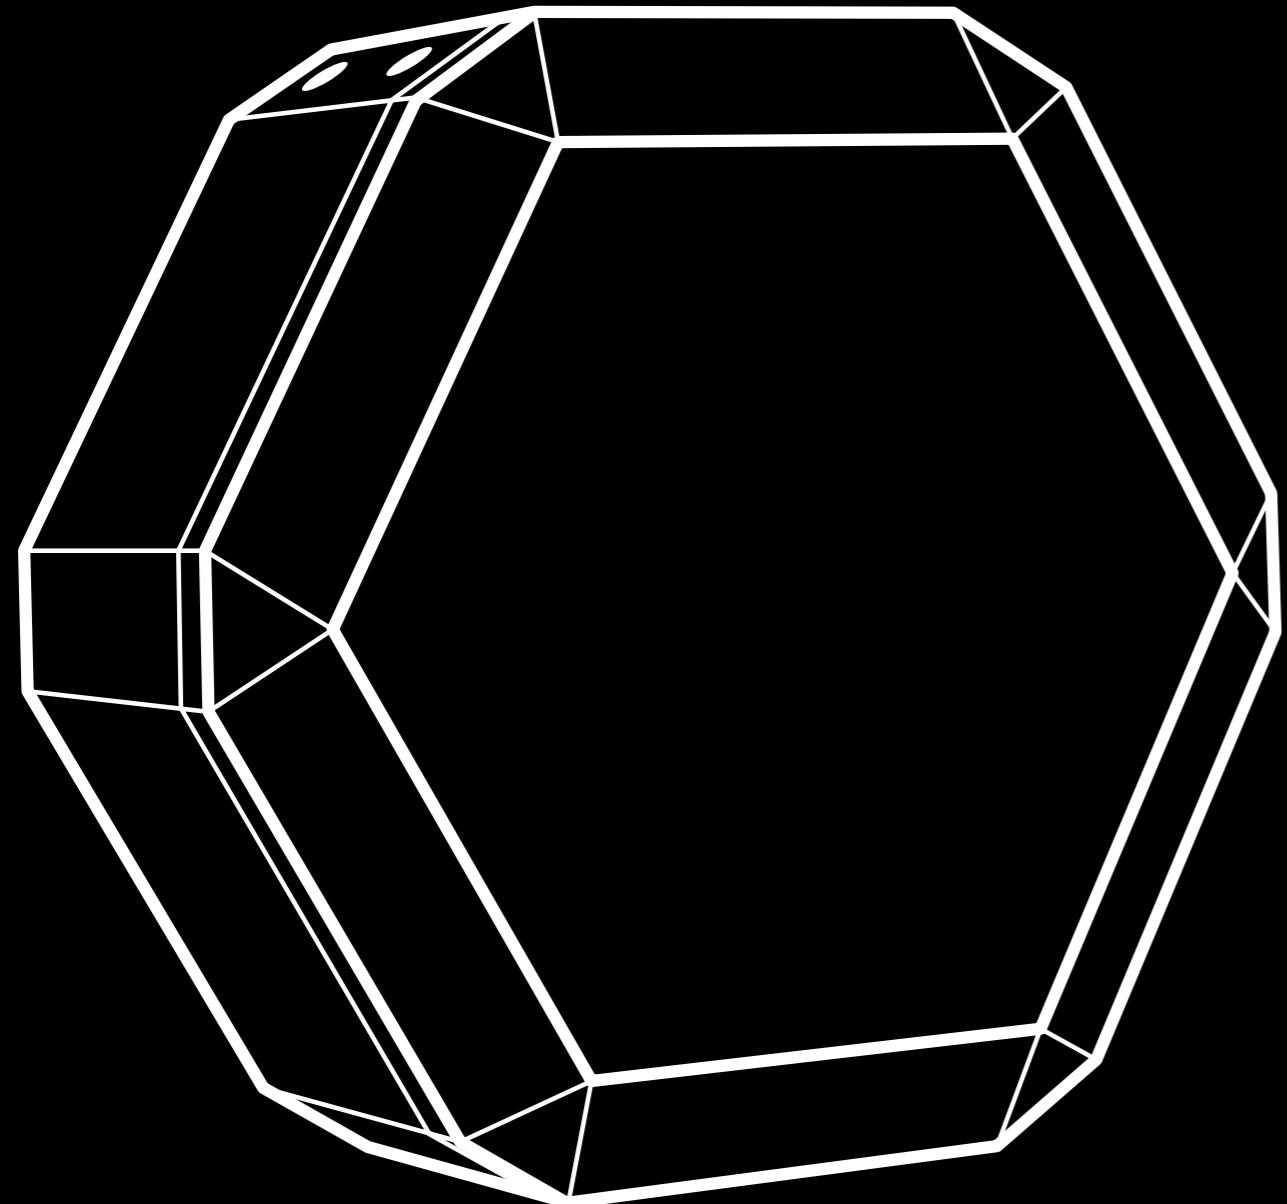


USER GUIDE

CONTENTS




1. BOOMBOT ANATOMY
2. GETTING STARTED
3. BLUETOOTH PAIRING
4. AUDIO CONTROLS
5. SPEAKERPHONE
6. SPECIFICATIONS
7. TROUBLESHOOTING
8. WARRANTY

BOOMBOT ANATOMY

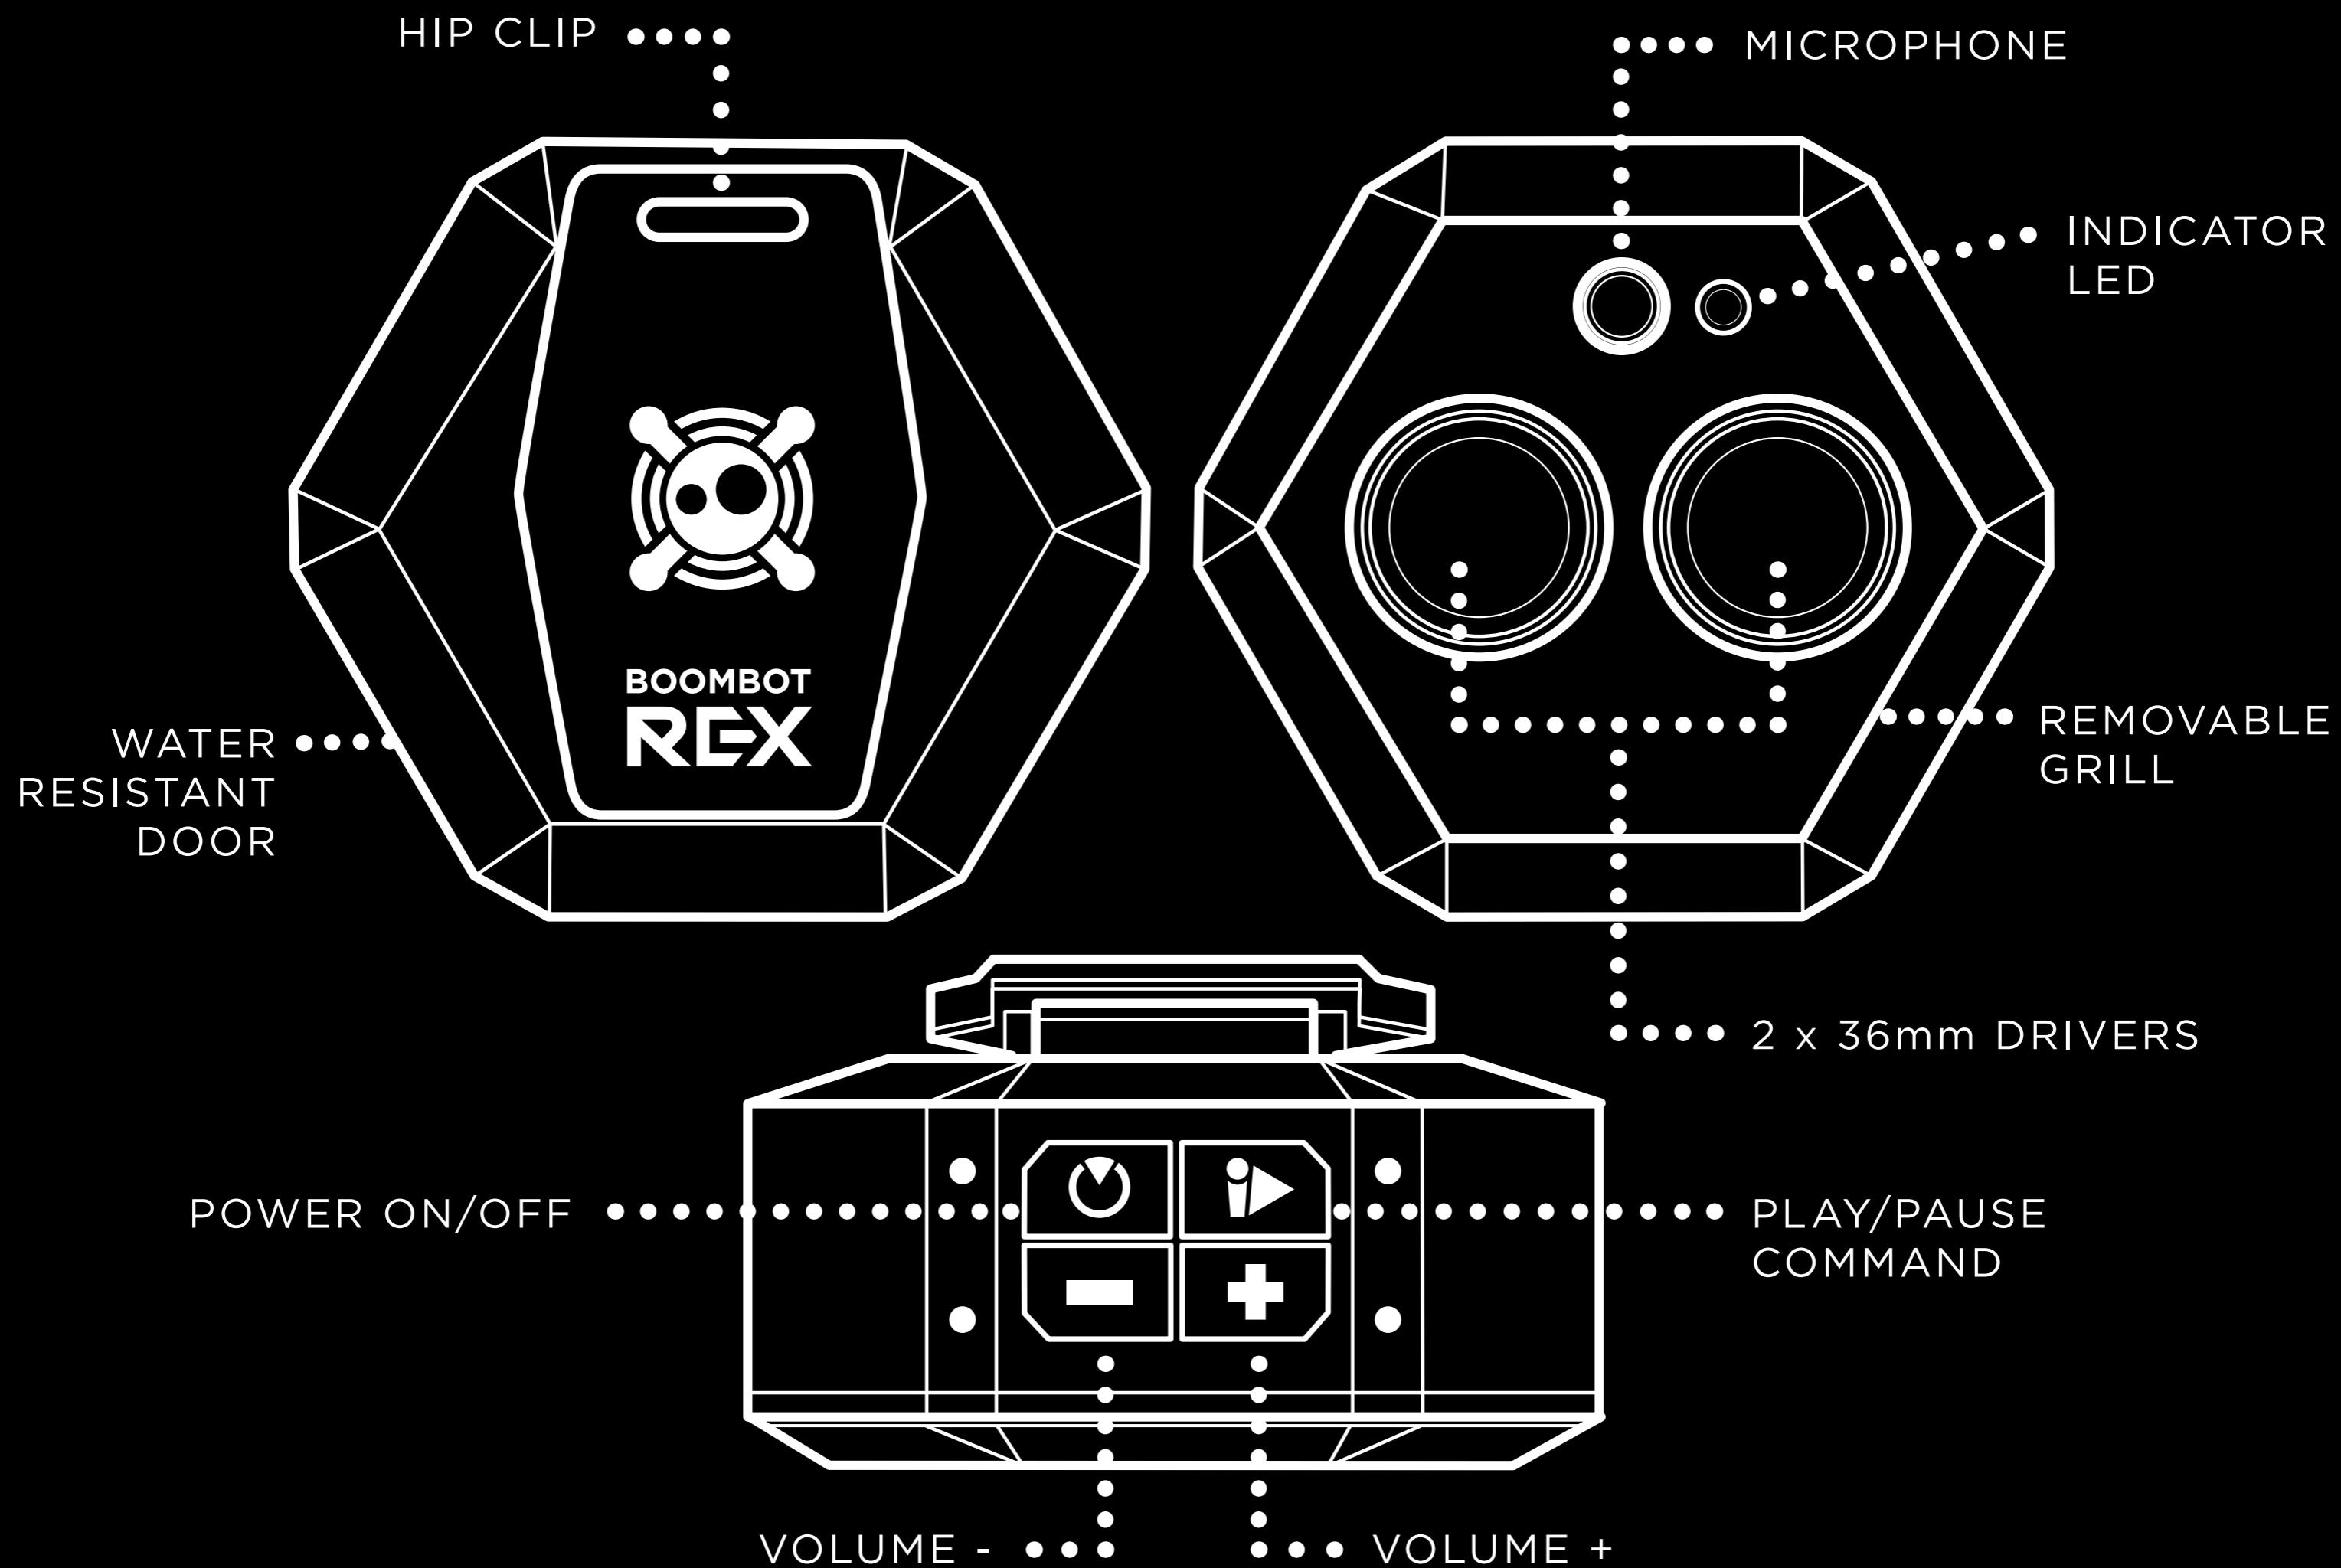


BOOMBOT REX

GETTING STARTED

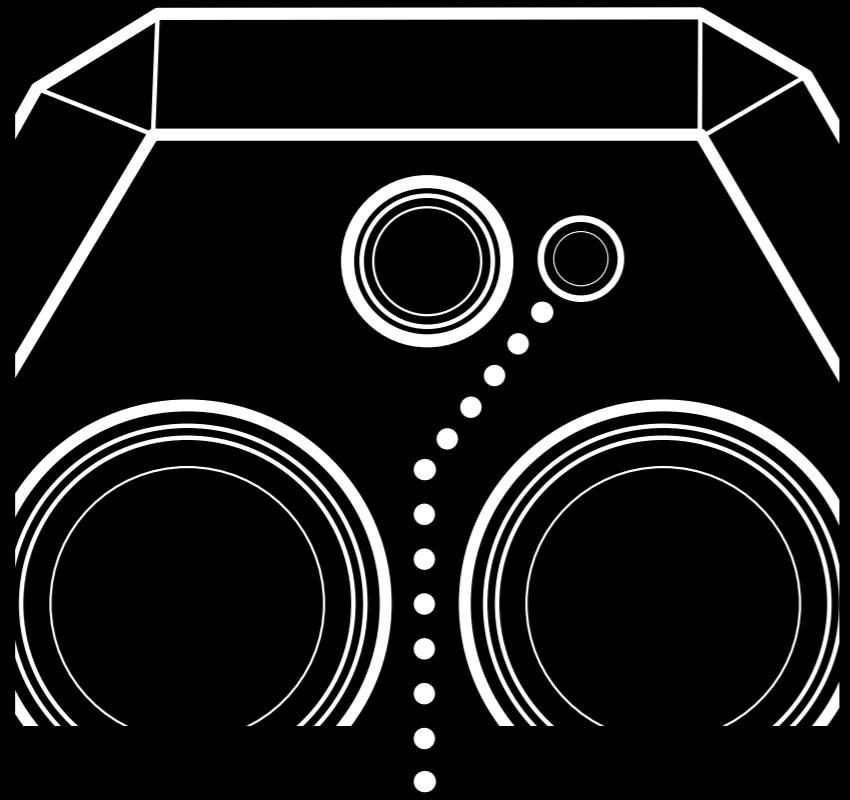

INDICATOR LED

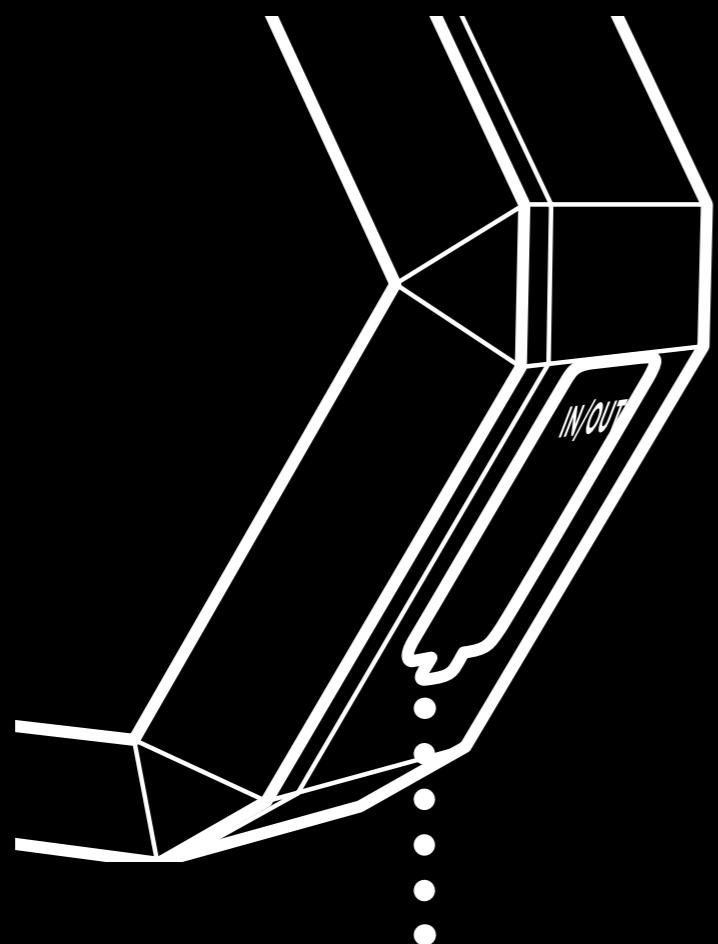

CHARGING PORT

FULLY CHARGE YOUR BOOMBOT REX BEFORE USE WITH INCLUDED MICRO USB CABLE

FULL CHARGE IS REACHED IN 1.5 - 3 HOURS

PULSING ORANGE - CHARGING



SOLID ORANGE - FULLY CHARGED






BLINKING RED - LOW BATTERY



BATTERY LIFE TYPICALLY RANGES FROM 2.5 - 16 HOURS, 8 HOURS OF PLAYBACK AT 70% VOLUME

YOUR BOOMBOT REX IS NOT WATER RESISTANT WHILE CHARGING, IT IS ONLY WATER RESISTANT WITH THE REAR DOOR CLOSED

BLUETOOTH PAIRING

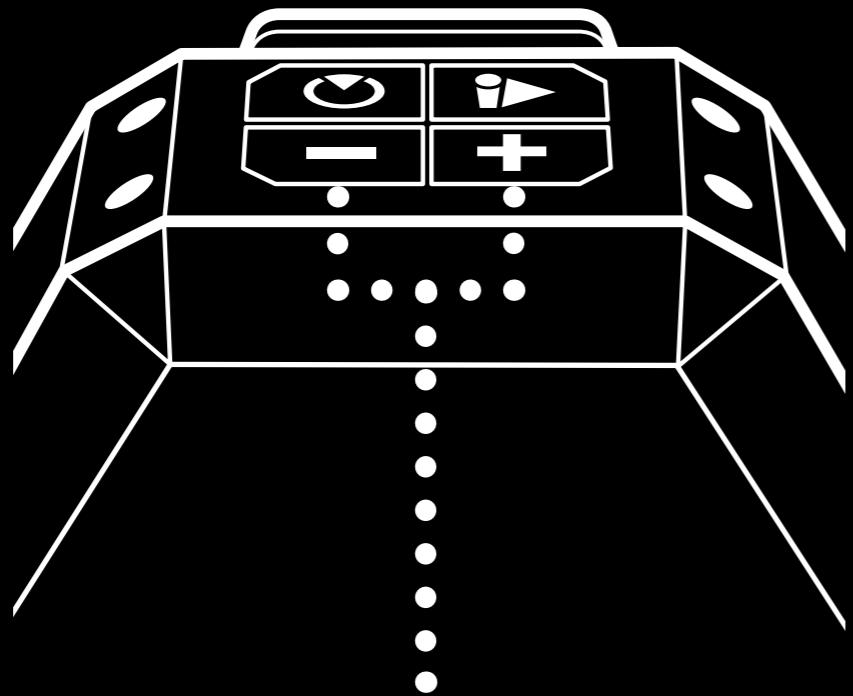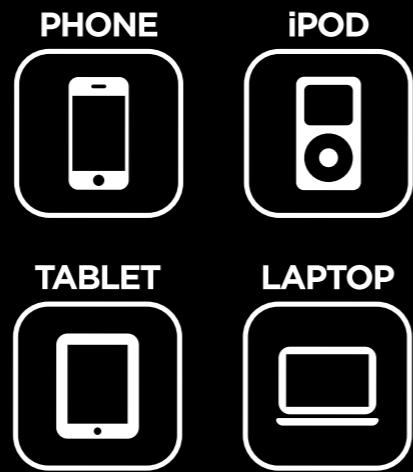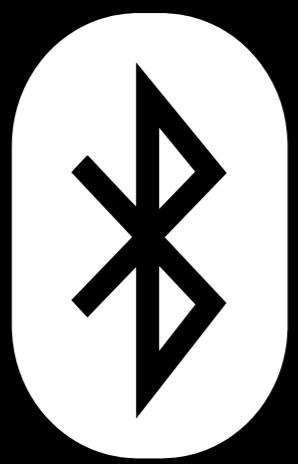

HOLD (2 SECONDS)

YOUR BOOMBOT REX CONNECTS EASILY WITH YOUR BLUETOOTH DEVICE

1. POWER ON BOOMBOT REX INDICATED BY A BLINKING BLUE LED



2. SELECT BOOMBOT REX ON YOUR BLUETOOTH DEVICE'S DISCOVERABLE DEVICE LIST

3. BOOMBOT REX WILL CHIME WITH A PAIRING ALERT AND A SOLID BLUE LED



YOUR BOOMBOT REX WILL AUTOMATICALLY BE PAIRED TO THE MOST RECENTLY CONNECTED DEVICE

TO DISCONNECT YOUR BOOMBOT REX, HOLD BOTH VOLUME BUTTONS (+ AND -) SIMULTANEOUSLY FOR 2 SECONDS




TO RESET BLUETOOTH CONNECTION, HOLD BOTH VOLUME BUTTONS (+ AND -) SIMULTANEOUSLY FOR 2 SECONDS



BOOMBOT REX

AUDIO CONTROLS

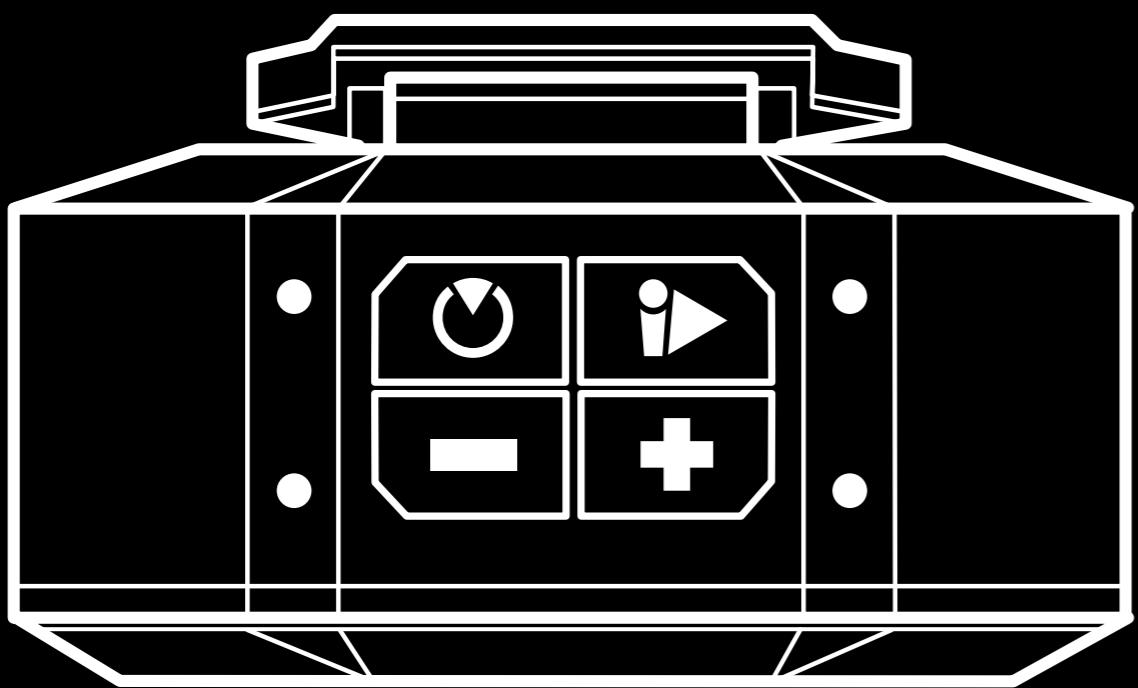

• YOUR BOOMBOT REX IS BUILT FOR
OPTIMAL AUDIO QUALITY WITH
THE SPEAKER CLIPPED ON OR SEATED
WITH BUTTONS FACING UPWARD

• **PLAY** - PRESS COMMAND



• **PAUSE** - PRESS COMMAND



• **NEXT TRACK** - PRESS COMMAND X 2



• **VOLUME UP** - PRESS VOLUME UP



• **VOLUME DOWN** - PRESS VOLUME DOWN



• VOLUME CONTROLS RAMP IN SPEED
WHEN HELD DOWN



HOLD -OR-



HOLD

BOOMBOT **REX**

SPEAKERPHONE



- THE BUILT IN MICROPHONE TURNS YOUR BOOMBOT PRO INTO A WIRELESS SPEAKERPHONE
- FOR BEST RESULTS, SPEAK WITHIN 3 FEET OF THE FRONT OF THE SPEAKER
- SPEAKERPHONE CONTROLS ARE ENABLED WHEN RECEIVING A CALL
- **ANSWER CALL** - PRESS COMMAND

- **END CALL** - HOLD COMMAND
 HOLD
- **IGNORE CALL** - PRESS A VOLUME BUTTON
 -OR- 

SPECIFICATIONS

AUDIO	PROPRIETARY DUAL 36MM 3W ACOUSTIC DRIVER + PASSIVE BASS WOOFER
PLAY TIME	8 HOURS OF CONTINUOUS PLAY
STANDBY TIME	UP TO 14 DAYS
WEIGHT	180g/ 6.3oz
DIMENSIONS	90mm L x 51mm W x 85mm H
STEREO INFORMATION	INPUT: BLUETOOTH WIRELESS OUTPUT: 3.5mm JACK FOR DAISY CHAIN +BLUETOOTH RECEIVER FUNCTIONALITY
DEVICE COMPATIBILITY	BLUETOOTH-ENABLED DEVICES INCLUDING iPHONE, iPAD, iPOD TOUCH, ANDROID SMARTPHONES AND TABLETS, AND MOST MAC OR PC COMPUTERS
INGRESS PROTECTION	IPX4 WATER RESISTANT
MULTI-POINT TECHNOLOGY	ACCEPT CALLS WHILE IN PLAY MODE
BLUETOOTH 2.1	PROFILES: ADVANCED AUDIO DISTRIBUTION PROFILE(A2DP) 1.2, HANDS-FREE PROFILE(HFP) 1.5, HEADSET PROFILE(HSP) 1.1, 100-FOOT RANGE
MIC CONTROL FUNCTIONS	SPEAKERPHONE TO ANSWER, END, OR DENY PHONE CALLS
BATTERY TYPE/CAPACITY	RECHARGEABLE, NON-REPLACEABLE LITHIUM POLYMER
BATTERY STATUS	DISPLAYED ON HANDSET, AUTOMATICALLY SHUTS DOWN AFTER 5 MINUTES OF INACTIVITY OR UNPAIRED
CHARGE CONNECTOR PORT	MICRO USB (CABLE INCLUDED)
CHARGE TIME (MAXIMUM)	LESS THAN 100 MINUTES FOR FULL CHARGE
WARRANTY AND SERVICE	1-YEAR LIMITED WARRANTY

TROUBLESHOOTING

DEVICE NOT PAIRING

TURN UNIT ON AND OFF AND RESET BLUETOOTH BY HOLDING + AND -
DELETE ADDITIONAL BLUETOOTH DEVICES FROM BLUETOOTH SETTINGS

MUSIC NOT PLAYING

CHECK MUSIC SOURCE AND INTERNET/DATA

DEVICE NOT CHARGING

CONFIRM MICRO USB CABLE IS SEATED PROPERLY IN PORT AND DEVICE HAS APPROPRIATE POWER INPUT

MICROPHONE INPUT UNCLEAR

BE SURE USER VOICE INPUT IS WITHIN 3 FEET OF THE FRONT OF REX SPEAKER

FOR ADDITIONAL SUPPORT HEAD OVER TO BOOMBOTIX.COM/SUPPORT

WARRANTY



Boombotix warrants to the original retail purchaser of this Boombotix portable speaker that should this product or any part thereof during normal consumer usage and conditions, be proven defective in material or workmanship that results in product failure within the first twelve (12) month period from the date of purchase, such defect(s) will be repaired or replaced (with new or rebuilt parts) at the Company's option, without charge for parts or labor directly related to the defect(s). The antenna, keypad, display, rechargeable battery and battery charger, if included, are similarly warranted for twelve (12) months from date of purchase. This Warranty is not transferable or assignable. This Warranty does not apply to:

- (a)** Product subjected to abnormal use or conditions, accident, mishandling, neglect, unauthorized alteration, misuse, improper installation or repair or improper storage;
- (b)** Product whose mechanical serial number or electronic serial number has been removed, altered or defaced;
- (c)** Damage from excessive exposure to moisture, humidity, excessive temperatures or extreme environmental conditions;
- (d)** Damage resulting from connection to, or use of any accessory or other product not approved or authorized by the Company;
- (e)** Defects in appearance, cosmetic, decorative or structural items such as framing and nonoperative parts;
- (f)** Product damaged from external causes such as fire, flooding, dirt, sand, weather conditions, blown fuse, theft or improper usage of any electrical source.
- (g)** Product taken apart without written permission by Boombotix. This includes and is not limited to removing the metal clip or removing the screws holding the casing together.

Boombotix reserves the right to inspect any Product subject to a warranty claim to determine, at its sole discretion, whether the claimed defect is a Manufacturing Defect or otherwise. Note that Boombotix regularly changes the models, colorways, and styles of its Products and cannot guarantee the availability of an exact replacement for any Product. **BOOMBOTIX DOES NOT ASSUME ANY LIABILITY FOR ANY INCIDENTAL, CONSEQUENTIAL OR INDIRECT DAMAGES UNDER THIS LIMITED WARRANTY.**

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with FCC radiation exposure limits set forth for an uncontrolled environment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution!

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

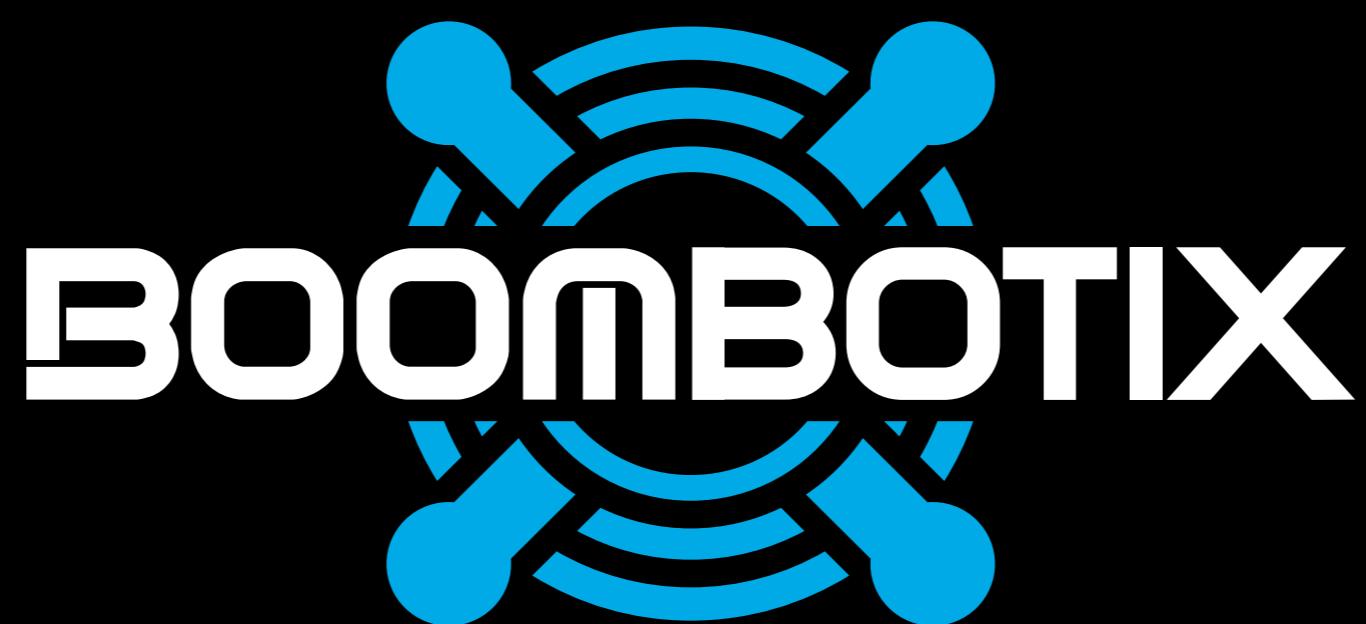

SOUND OF THE BRAVE

www.boombotix.com