

Bluetooth Telephone



Brand: BPVOICE
Model: BT-3000

Version:EUS-1-1
March, 2008.

Content:

1. Product features:.....	P1
2. Package content:	P2
3. Quick start:	P3
4. LED indicator status of BT-3000:	P3
5. Charge to bluetooth headsets :	P3
6. Pairing information:	P4
7. Bluetooth headset sequence with BT-3000:	P4
8. Bluetooth headset (bt-5) & BT-3000 operation:	P5
9. System setup:	P6
10. Put up function operation:	P8
11. Appearance of BT-3000:	P9
12. Detail operation of Bluetooth headset (bt-5) with Mobile:	P10
13. Enjoy hand-free music with the external audio source:	P11
14 .Q &A :	P11
15 . Service Center in USA.....	P12
16 .Warning :	P12
17 . Note	P12

1. Product features:

- *Optimum telephone is in 2.4GHz digital hand-free communication of bluetooth technology.
- *Hands free for PSTN call with Bluetooth Headsets.
- *BT-3000 could pair other bluetooth headset of bluetooth version since 1.0 to 2.0.
- *Bluetooth Headsets has the coming music.
- *No-limit standby time of Bluetooth Headsets.
- *Volume control of Handsets & Bluetooth Headset.
- *LED indicator of bluetooth status & Phone call.
- *Skype & MSN voice, iPod, TV, Radio, MP3 player,... Input external voice.
- *Super-easy Operated with PSTN (3 Steps Setup with phone line of RJ-11)
- *Focused on In-door usage only.
- *Caller ID function & DTMF/FSK compatibility. (Press "***#" to select "DTMF" or "FSK" system.)
- *Redial / Music on Hold function
- *Tone / Pulse dialing.
- *35 groups of coming number and 16 groups of OUT number memory.
- *3 groups for one-touch memory and 10 groups for two touch memory.
- *16 kinds ring select.
- *3 - groups alarm clock.
- *Blue backlight LCD Display.
- *Hang up and the finally number can redial.
- *5 - level adjust for LCD brightness.

2. Package content:

1. AC-DC Power adapter x 1, input:120Vac/60Hz, Output: 6Vdc/400mA.



2. External audio-in line x 1




3. BT-3000 Bluetooth Telephone x 1 set including a bluetooth antenna, and handset.



4. bluetooth headset bt-5 x1: (Optional)




5. Handset cord x1:

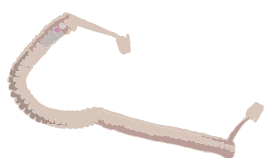

6. Charge cable x1:



7. Telephone line: RJ-11(M) - RJ-11(M) x1

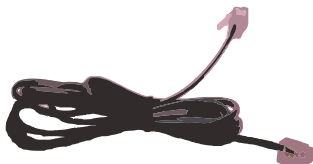

8. User manual x1:



3. Quick start:

3-1. Install the handset of BT-3000 with its cable between BT-3000 and handset jack on BT-3000 left side.

3-2. Connect the power adaptor into the jack of DC-IN 6V in BT-3000, and supply the proper external power (120Vac, 60Hz) to AC-DC adaptor.

3-3. Insert the RJ-11 plug of telephone line into the line jack of BT-3000.

3-4. Power on main Bottom of bluetooth headset (bt-5).

3-5. Start using BT-3000 with bluetooth headset (bt-5) for your telephone communication.

4. LED indicator status of BT-3000:

LED indicator	BT-3000 status
Flashing once every 3 seconds	Idle mode (Power on)
Flashing once every 1 second	Pairing mode
Flashing twice every 3 seconds	Connected mode
Flashing five times every 1 second	A call incoming
On (Steadily)	Call active mode

5. Charge to bluetooth headsets :

5-1. Insert the charge cable between the charge hold of bluetooth headsets and the DC-OUT 6V on the right side of BT-3000, when you first time to use headsets.

5-2. Normal charge period, we suggested to charge it for 3 hours. You should see the RED LED on headsets turn itself off.

5-3. After above two steps, The attached bluetooth headsets could work with BT-3000 during the next charge period and without the limited of standby time.

6. Pairing information :

6-1. The bluetooth telephone (BT-3000) & headset (bt-5), those are pairing already when they were finished by the production. Please power on the bluetooth headset (bt-5) to start using. You could find last page to refer the LED indicator status of BT-3000 as item 5 on P3.

6-2. If the bluetooth headset do not pairing with BT-3000. please try to manual into both pairing modes for the linking.

6-3. Follow up below step.6-4 & step.6-5 for making both pairing within 5 meters distance.

6-4. How bt-5 (bluetooth headset) into pairing mode: Press and hold the main button about 9 seconds till the RED and BLUE LED flashing. This period is the pairing mode of bt-5.

6-5. How BT-3000 (bluetooth telephone) into pairing mode: Press and hold the orange button to 3~5 seconds. The USE-IN (RED LED indicator on BT-3000) will flash once every 1 second. This period is the pairing mode of BT-3000.

6-6. After finish pairing both devices, you have two ways checking the paired link:

6-6-1. The LED indicator of BT-3000 will flash twice in every 2 seconds, the LED of bt-5 will flash 4 times in every 3 seconds.

6-6-2. Check the RED LED light on BT-3000 when you press the main button of bt-5 to enable the BT-3000.

7. Start using the Bluetooth Telephone.

8. If the pairing fail, please do the step.3, 4, 5 again.

7. Bluetooth headset sequence with BT-3000 :

1. Two channels for bt-5 selection.

1-1. Do not supply external audio source from 3.5Φ external audio-in line to BT-3000. The channel sequence will be ON (TEL), OFF, ON(TEL), OFF.

1-2. If do supply external source with audio-in line to BT-3000. The channel sequence will be ON (TEL), OFF, ON(Audio source), OFF.

8. Bluetooth headset (bt-5) & BT-3000 operation:

8-1. Take coming call from bt-5 via BT-3000 (bluetooth telephone):

8-1-1 During the paired link mode and power bt-5 on.

8-1-2 When the coming call from BT-3000 and bt-5 is in effective distance, user should hear the coming music.

8-1-3 Press the main button of bt-5 to take this coming call.

8-2. Dial the phone number with bt-5 (bluetooth headset):

8-2-1 Press the “SPK” button on BT-3000 into hand-free mode. You should hear the telephone sound for dialing.

8-2-2 Dial the phone number you want to call out on BT-3000, finish the dial numbers after hear dialing awaiting sound on speaker of hand-free.

8-2-3 Press the main button of bt-5 to transfer the telephone voice to from speaker to bt-5.

8-2-4 Press the “SPK” button on BT-3000 again for leaving the hand-free mode of BT-3000. (Recommend follow up this step, you could not to go back BT-3000 for switching itself off when you finish this phone call.)

8-2-5 Enjoy the best efficiency & life with bluetooth communication.

9. System setup:

(Setting: At on-hook state, press "SET/FL" to enter the set mode. LCD will display "SET 12345678", You can press "UP" "DOWN" or number button to select the different item, and the LCD display correspond option; then press "SET/FL" key into setting option, when finish the setting, press "DEL" button to exit. Then press "UP" or "DOWN" chose the next setting. Detail as under list) :

9-1. Setting date / time: press "SET/FL" button to select "1", LCD display 1-DATE, 2-CL. Then press "SET/FL" to confirm, follow press "UP" or "DOWN" to chose the setting item, also direction input the number to chose "DATE" / "TIME" setting. Chose "1" into the date setting, and the letter flicker, into the number, press "SET" confirm. When the date setting finished, it will automatically identify week, time setting is same with date setting. Press "SPK " key to exit setting.

9-2. Ring setting and the ring volume adjust: press "SET/FL" key to select "2", LCD will display: RING 1-T 2-VIP 3-VOL, then use "UP"/ "DOWN" button or number key change the setting item, LCD display correspond item, next press "SET/FL" key into setting. Select "1" into the common coming ring setting, press "UP" or "DOWN" select the ring type and press "SET/FL" key to confirm. Press "DEL" back the pre-menu; Select "2" into the VIP ring setting, and the setting method accord with up; Select "3" into the ring volume adjust, use "UP"/ "DOWN" key to adjust the ring volume, press "SET/FL" press confirm. Press " SPK " key to exit.

9-3. Alarm clock setting: press "SET/FL" key to select "3", LCD will display AL 1-2-3, then press "UP"/ "DOWN" key or input the number key to into the setting item, LCD display "ALAR OFF", then "OFF" flicker, you can directly input alarm clock time; if you want off the alarm clock, use "UP" / "DOWN" select "OFF". When it in the alarming state, press any key can stop the ring. At the same time.