# User's manual BH-06 Bluetooth Stereo Headset



# **SPECIFICATIONS**

Model no	BH-06	Version.	Bluetooth V.3.0+EDR
<b>Bluetooth Profiles</b>	HSP,HFP,A2DP,AVRCP	<b>Effective Range</b>	10Meters
Music Time	15 Hours	Talk Time	18Hours
Standby Time	Up to 250 Hours	Input	DC: 5V/500ma
Charge Time	4~5Hours	Dimensions	19*21.5*8.5cm

### **About BH-06**

BH-06 is a stereo headset with Bluetooth technology. It supports the following Bluetooth profiles:

HSP —— Speaker Profile

HFP —— Hands-free Profile

A2DP—— Advanced Audio Distribution Profile

AVRCP——Audio/Video Remote Control Profile

## Overview



1		2	Volume UP
3	MFB	4	Volume down
5	Next	6	microphone
7	preview	8	3.5 headset port

<sup>9</sup> micro USB power charger port

#### Rotating

BH-06 can offer rotating function, it can save a lot of space when you carry BH-06 away.



#### 3.5 headset port

When battery is run out or you want to use BH-06 in some place not allow use Bluetooth, you can easy plug 3.5 headset cable to 3.5 headset port, and easy use BH-06 just like cable headset.



#### Charging the battery with USB cable

- Step1: Insert USB charging cable into any USB port have more than 500ma (PC/NB/power bank/adapter)
- Step2: Connect charging cable with the charging port of **BH-06**.
- When the red light is on, the BH-06 is charging.
- When the blue light is on, the BH-06 battery is charged fully.
- It takes about 4~5 hours to full charge the battery.

### Warning:

- The battery is rechargeable.
- First time charging: Before use BH-06, please charge the battery fully

#### How to use

#### A. power on and paring

long push MFB button till headset have "power on" and "paring" notice,BH-06 will waiting for paring with voice device. Then the red/blue LED will become blink alternately.

#### B. Pairing the BH-06 with Bluetooth devices

Be sure BH-06 in paring mode first. Press and hold the MFB for 3 seconds, till Red and blue Led blink alternately, or you hear the indication "Do Do" twice come out. And then release the MFB. The unit will become pairing mode.

#### B) Pairing the BH-06 with Bluetooth device (mobile phone, pad, notebook...)

Please make sure your **Bluetooth device** has Bluetooth function that can be used.

Specific pairing procedures were not the same with different **Bluetooth device**. Please refer to your Bluetooth device manual for further information.

#### Steps as follows:

- a) Please keep the BH-06 and **Bluetooth device** in the range of 1 meter when pairing.
- b) Start the Bluetooth device and search the Bluetooth devices.
- c) Wait the BH-06 enter into pairing mode (Please refer to "how to enter into pairing mode").

After got the BH-06 on the list, select "BH-06" in the Bluetooth device list.

- a) Almost all Bluetooth device no need enter pass word but some version Bluetooth device maybe need it, if need it ,the password is "0000", and press the key of "Yes" or "confirmed".
- b) After successful pairing, select "BH-06" in the Bluetooth device list, and press "connect".
- c) After successful connecting, the blue LED of the BH-06 will quickly blinks twice or three times every 4 seconds.

# Making calls with the BH-06

Function	Status of BH-06	Operation
Redial last number	Standby mode	Short press MFB twice quickly
Volume up	Conversation mode	Short press or hold + key.  When the volume is adjusted to max, you will hear an indication tone.
Volume down	Conversation mode	Short press or hold – key.  When the volume is adjusted to min, you will hear an indication tone.
Answer calling	Ringing	Short press MFB
Reject calling	Ringing	Short press MFB twice quickly

# Playing music

When the BH-06 connects with the Bluetooth device which supports A2DP, you can enjoy music through BH-06.

Function	Status of headset	Operation
Pause	Playing music	Short press MFB
Play	Standby	Short press MFB
Last song	Playing music	Press " key
Next song	Playing music	press " " key
Volume up	Playing music	push "+" key.  When the volume is adjusted to max, you will hear an indication tone.

		press "– "key.
Volume down	Playing music	When the volume is adjusted to min, you will hear an indication tone.

#### Notes: .

• When you use BH-06 remote control the function of last song/next song/pause, it needs your mobile phone or Bluetooth transmitter supports AVRCP. Please refer to the instruction of your mobile phone or Bluetooth transmitter. for further information.

### **LED** indicator

#### A) In Charging mode

LED indicator	Status of the BH-06
Red LED is on	Charging
Blue LED is on	Finish charging

#### B) In use mode

LED Indicator	Status of the headset
Red and blue LEDs blink alternately	Pairing mode
Blue LED quickly blinks once every 2 seconds.	Not connected to a device
Blue LED gradually turns on and off	Conversation mode
Red LED blinks twice every 20 seconds	Low power

### Note. Re-connecting to a Bluetooth device

#### 1. Automatic connecting

Every time the BH-06 is power on, it will connect to the last connected device, and connected automatically.

#### 2. Manual connecting to last connected device

When the BH-06 in standby mode and did not connect to any devices, short press **MFB** button once, it will connect to last connected device automatically.

#### **FCC Statement**

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -- Reorient or relocate the receiving antenna.
- -- Increase the separation between the equipment and receiver.
- -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -- Consult the dealer or an experienced radio/TV technician for help

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1)this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation