 
 


## TRANSMITTER PREPARATION

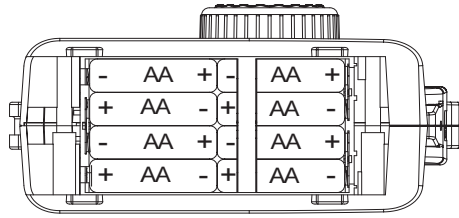 


- Install eight "AA" batteries into transmitter, making sure the polarity is correct.
- Insert the antenna into the top of the transmitter and tighten the screw.
- Turn the transmitter on and check the battery light.
- If all LED's light up, the batteries are acceptable. If only the red LED lights up, immediately replace the batteries.

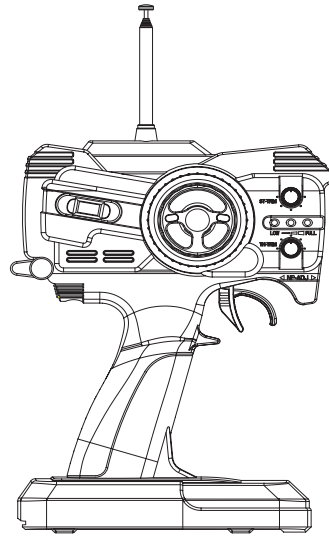

- Without permission, any company, business or user shall not change the frequency, nor increase the capacity, nor modify the original characteristics or functions once this low frequency radio is granted type approval certificate.
- The usage of the low frequency radio shall not affect aviation safety or disturb legal communications. Once found, it shall be stopped, and must be improved until this impact is eliminated.
- The legal communications aforementioned refer to radio-communication under the telecommunications act.
- Low frequency radios must submit to disturbance produced by legal communications, and radio-wave radiation generated by industrial, scientific and medical equipments.

## GLOSSARY OF TRANSMITTER

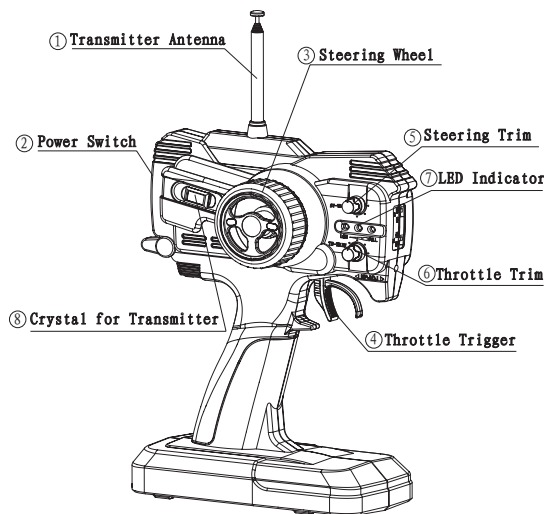

- ① The transmitter antenna is for transmitting the radio waves.
- ② The power switch is for switching the power on/off.
- ③ The steering wheel is for controlling the direction of right/left.
- ④ The throttle trigger is for controlling the throttle and brake.
- ⑤ The steering trim is for adjusting the position of neutral.(right/left)
- ⑥ The throttle trim is for adjusting the carb in idle position.
- ⑦ The LED indicator is for showing the remaining amount of the battery.when turn on the power switch.
- ⑧ Crystal for transmitter is for changing the radio frequency by replacing the c-rystal.

## BEFORE THE OPERATING

- Install the receiver antenna.
- Install the transmitter antenna.
- Loading the battery on the transmitter.
- Install the charged battery on the truck.

## RC OPERATING PROCEDURES

- 1.Please pull out the transmitter antenna and then turn on the power switch first, before turning on the receiver.
- 2.Please raises the tires off the ground and check if the control is responding.
- 3.Hold the throttle trigger to let truck running.if it doesn't work please adjust the throttle servo and trim.
- 4.Please replace the battery,when speed drops down.
- 5.When you finish the racing,please turn the receiver switch off first,and then the transmitter.
- 6.Please make sure the battery is disconnect and remove the battery after finishing the racing.

**FCC WARNING**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: The manufacturer is not responsible for and radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.