



Badger Meter

ORION® Mobile Reading Software



IMPORTANT:
This manual contains important information.
READ AND KEEP FOR REFERENCE.

CONTENTS

- About This Manual..... 7**
 - Intended Audience 7
 - Reason for Reissue 7
 - Conventions Used in this Document 7
 - Naming Convention 7
 - Navigational Directions 7
 - License Requirements 7
- System Overview 7**
 - ORS..... 7
 - How it Works..... 7
 - ORS Terminology 8
 - Overview of This Manual 8
- Getting Started 8**
 - System Components..... 9
 - Equipment Setup 9
 - Software Initialization..... 10
- Splash Screen 11**
- Main Screen..... 13**
 - Start 13
 - Pause 13
 - Done 13
 - Settings 14
 - Find..... 14
 - List View..... 14
 - Map View 14

Reports	14
Alerts	14
Help	14
Load.....	15
Start Reading.....	15
Unload	15
Clear Route	15
Quick Read	15
Unarchive.....	15
Exit.....	15
Map Control.....	16
Select Meter	16
Recenter	16
Zoom In	16
Zoom Out	16
Zoom Default	17
Legend	17
Find Address	17
Show All Services	17
Loading and Unloading a Route.....	19
Out-of-Scope	19
Load Example.....	19
Reading Example	21
Unload Example	26
Quick Read.....	27
Details Summary	28

Best Practice 28

Splash Screen 28

Read Meters..... 28

Load 31

List View 33

Map View 34

Legend: 35

Status Bar..... 35

Split View 36

Meter Details 36

Current Reading 36

Current Reading..... 37

Enter/Edit Meter Reading 40

Add/Edit Trouble Code 41

Add/Edit Reader Codes 42

Add/Edit Text Message 43

Find 44

Reports 47

Supported Features:..... 47

Setup 52

General Tab..... 54

Alerts Tab..... 55

Map Tab 56

Communications Tab 58

User Interface Tab..... 59

Geocoding Meter Locations..... 60

Scenario 60

Steps 60

Processing Meter Readings Not in the Route..... 62

Out-of-Route Reading Example:..... 63

Unload 66

Unarchive 67

Unarchive 68

What If Things Go Wrong 69

Using Technical Support 69

What To Report To Customer Support..... 69

Faxing the Customer Support Group 69

E-Mailing the Customer Support Group 69

About This Manual

This manual is accessible through the interactive Help section of the ORION® Reading Software (ORS) software. Help topics provide direct access to specific information.

Intended Audience

This document is intended for field technicians to collect accurate utility meter readings from homes and businesses using the ORS software from the convenience of their vehicles.

Reason for Reissue

This document is being reissued to capture the changes associated with the ORS Mobile Read version 2.0 software used for meter readings on laptops in conjunction with other Badger Meter equipment such as a magnetic antenna that is placed over the vehicle and the ORION receiver that connects to the antenna at one end and the ORION laptop at the other end.

Conventions Used in this Document

The following conventions are used in this document:

Naming Convention

This document also refers to the ORION Reading Software for Mobile Reading, the Mobile Read Version 2.0, generically as "software."

Navigational Directions

In lieu of mouse click and select options, the user must keep in mind that touch screen options are also available for menu functions. Touching or tapping options can be used to navigate through the software.

License Requirements

This device complies with Part 15 of FCC Rules. Operation of this device is subject to the following conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

No FCC license is required by a utility to operate an ORION meter reading system.

Any changes made, but not approved by Badger Meter, can void the user's authority to operate the equipment.

System Overview

The ORS is an automated meter reading system. This system incorporates a GPS system to display the location of the reading vehicle on a map while reading meters.

ORS

ORS is also a Geographic Information System (GIS) based meter reading system. A GIS system displays meter reading information. In addition to using a standard mouse or keyboard commands, the laptop running the software is also equipped with a touch screen to facilitate icon and function selection and promote ease-of-use.

How it Works

The laptop connects to a radio frequency-controlled ORION receiver. The receiver captures meter readings from endpoints installed on each meter. The meter information is then captured by the laptop system and displayed on the laptop screen. Examples of displayed information are as follows:

- Meter serial number
- Meter and reading vehicle location
- Unread/uncaptured meter information
- Meter leakage and tampering

ORS Terminology

Terms used in this document are described in this section. The ORS terminology is alphabetically listed in the following table:

Baud Rate	The speed of communication from one electronic component to another, specifically from the GPS to the laptop and the Receiver to the laptop.
Field	An individual data item on an ORS page.
GIS	Geographic Information System
GPS	Global Positioning System
List View	This view shows a current list of meter readings.
Map view	This view displays the location of the vehicle where the meter reading occurs and each meter is depicted by an icon.
ORS	ORION® Reading Software
ReadCenter	Badger Meter Reading Data Management Software that supports BadgerTouch®, ORION, and GALAXY® Fixed Network AMI Solutions
Receiver	The receiver collects reading data transmitted from the meter and forwards it to the laptop
Split View	Shows both the Map View and the List View on the laptop screen
Tab	The top header of a page which identifies the setting, or contents of that area.
Endpoint	The endpoint is attached to the meter and transmits the meter reading to the ORS.

Overview of This Manual

The initial section of this manual provides an overview of the ORS start-up screens with brief descriptions of menu button functions. The “Detailed Examples” section provides descriptions of buttons and associated menus.

Getting Started

The information contained in this section guides you through the steps of meter reading using the ORION® Reading Software.

System Components



Figure 1: Components

The components of the system are:

1. Panasonic ToughBook™ laptop computer installed with the ORS software.
2. ORION mobile receiver
3. Magnetic antenna
4. GPS receiver

Equipment Setup

The instructions in this section allow you to set up the equipment in the vehicle:

1. Place the magnetic mount antenna on the roof of the vehicle. Ensure that the area around the base of the antenna equals the height of the antenna.
Note: The antenna must be at least 2 feet away from the other antennas and the cable must be in good condition.
2. Connect the antenna to the ORION receiver.
3. Connect the ORION receiver to the laptop.
4. Switch ON the ORION receiver.
5. Switch ON the GPS antenna and place on the dashboard of the vehicle.
6. Plug the ORION receiver into the vehicle's interior DC power source (utility or cigarette lighter) if AC power is unavailable.
7. Plug the laptop to the vehicle's DC power source (if another power source is available, otherwise use a Y-adaptor).

Software Initialization

1. Power up the laptop and enter "ORION" in the log in window.
Result: The windows desktop is displayed.
2. Double-click the ORION Reading Software desktop icon, which displays the ORION logo.



3. Alternatively, you can navigate to the desired destination: < Start/Program Files/ Badger Meter, Inc./ ReadCenter-Mobile/ReadCenter-Mobile.exe.>
4. In the User Name window, enter your initials or any three digit numeral, for example, 123.
5. Click the Accept button.
6. Follow the software options to collect meter readings.

Splash Screen

The Splash screen is the initial screen that is displayed when you log in to the ORS.

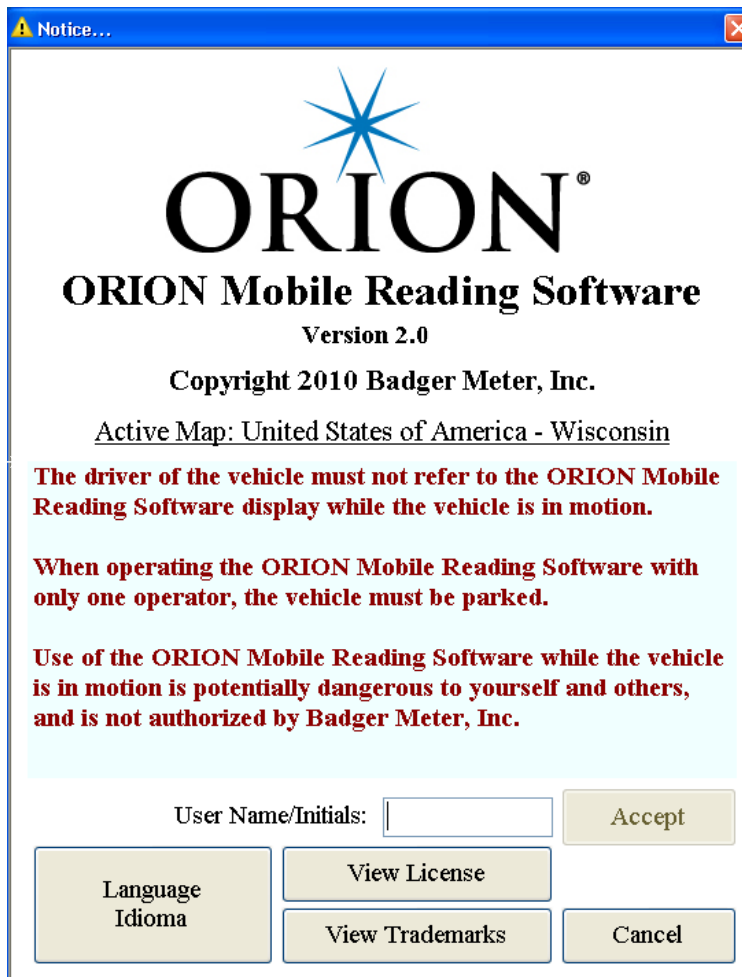


Figure 2: Splash Screen

1. Select the appropriate language, if other than English. See Figure 3.
2. To view a list of all registered trademarks, click the Trademarks button. See Figure 4.
3. Type your User Name/Initials in to the blank field.
4. Select **Accept**.
5. Select **Cancel** to exit the program.



Figure 3: Language Change Options

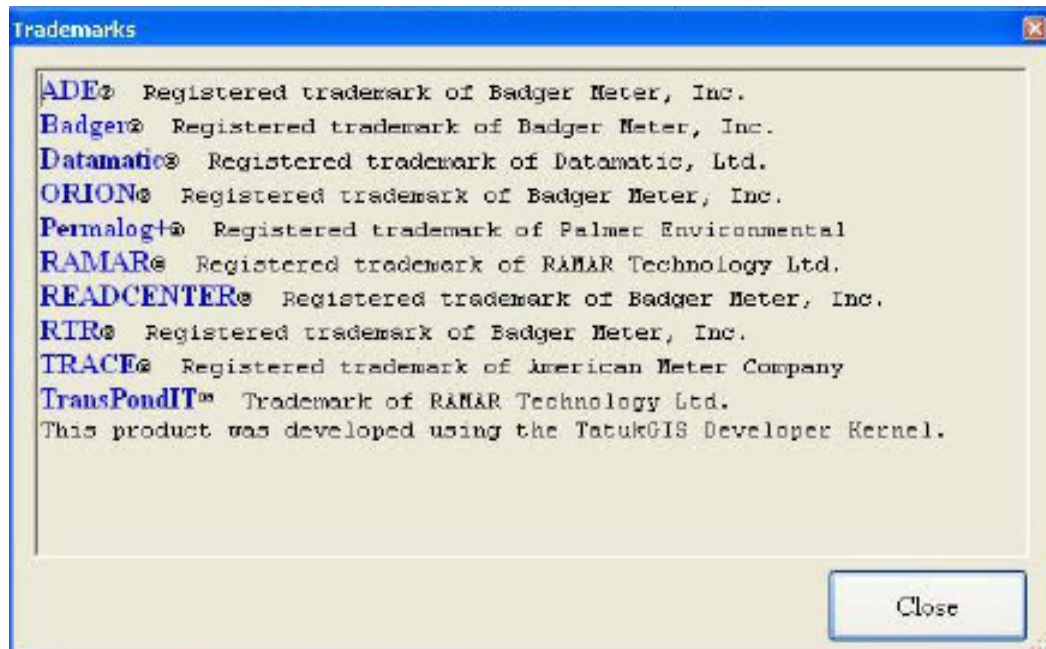


Figure 4: Trademark List

Main Screen

The after the Splash screen, the Tool Bar, Main Menu and Status Bar appear.

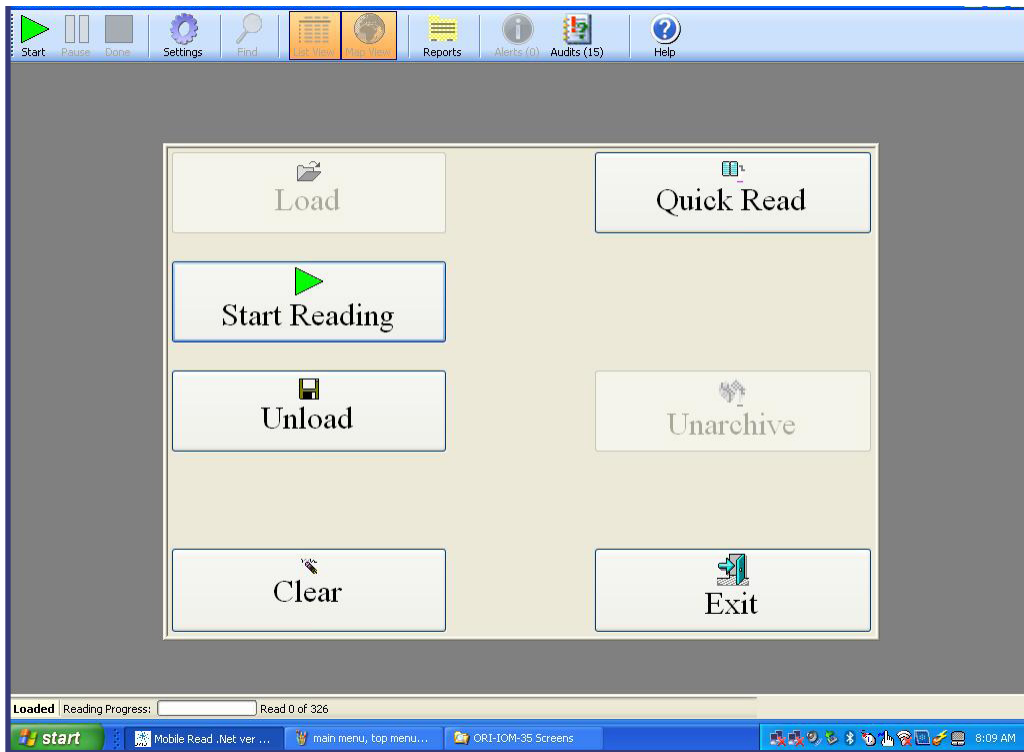


Figure 5: Main Screen

Tool Bar

The Tool Bar contains the different commands and configuration options that make up ORS.



Figure 6: Tool Bar

Start

The **Start** button begins or resumes the meter reading process. Select **Start** to navigate to the next screens including “List View” or “Map View.”

Pause

The **Pause** button temporarily pauses the meter reading process. To resume the application, click **Start**. If you are finished reading meters, click **Done**.

Done

The **Done** button completes the meter reading process and prepares the readings for transfer to Reading Management Software. Click **Done** to navigate to the “Main Screen.”

Settings

The **Settings** button allows you to change the settings that control the behavior of the ORS software. It holds the information that controls all of the subsystems including the ORION® Receiver and GPS connection information, and the map display options.

Note: A password is needed when you click on Setup. If you do not set up a password for yourself in the Reading Management Software, the default password is "ORION!"

Find

The **Find** button allows you to search for meters using a number of different means.

List View

The **List View** button displays the unread meters in reading sequence order. It also allows you to display the detailed information about each meter by selecting on the Meter Details button. This button also displays the Map Control buttons for map zooming and other functions.

Map View

The **Map View** button displays the location of the meter reading vehicle and all meters with their current status on the area map. It also allows you to display the detailed information about each meter by selecting on that meter's icon. This button also displays the Map Control buttons for map zooming and other functions.

Reports

The **Reports** button displays the different reports available. Selecting on one of the report names brings up that report.

Alerts

The Alert button appears grayed out on the Tool bar, but the **Alerts** tab is accessible from the **Settings** button. This option allows users to set appropriate alerts for potential issues that can occur when meter reading is in progress, The system allows the user to add warnings, alarms, leak cautions, error signals and so on. Each alert can be set to a desired sound option that a user can select from a **Sound Played** list.

Audits

The **Audits** button is inaccessible with this version of the software.

Help

The **Help** button displays the ORS User Manual in a separate window to allows users to look up information about the software functionality.

Main Menu

The Main Menu contains all general functions for gathering meter readings.

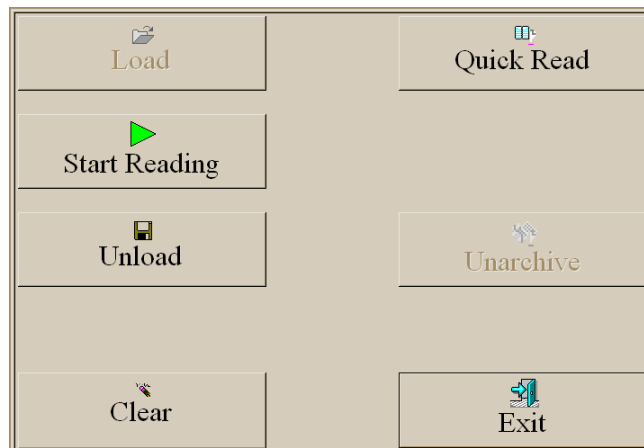


Figure 7: Main Menu

Load

The **Load** button loads the route from a specified location.

Note: If the button is inaccessible, it indicates that the route was already selected.

Start Reading

The **Start Reading** button activates the GPS and the receiver, and switches the view to your choice of the List and/or Map Views.

Unload

When you have completed the meter readings, click the **Unload** button on the Main Menu to write the meter reading data to a storage device, such as a memory stick. These readings will then be uploaded into the Reading Data Management Software. Unloading the data will also archive the data in case the user needs to unload the route again.

Clear Route

The **Clear** button deletes all current meter reading information currently being processed.

Quick Read

Use the **Quick Read** button to read an ORION endpoint without the need to load a route. This is helpful for final reads and to verify that the endpoint is operating correctly.

Unarchive

The **Unarchive** button reloads a prior route of readings so that the user can save the data (unload) again.

Exit

The **Exit** button closes the application and returns you to Windows® desktop.

Status Bar

The **Status Bar** is located at the bottom of the screen. You can quickly view the number of meters left to read in the route, the percent complete, and the number of routes and meters loaded.



Figure 8: Status Bar

Meter Reading Status – Yellow indicates that the reading is paused, green indicates that the reading is in progress.

Percent Complete - This bar indicates the progress of the reading application. As meters are read, the progress bar will increase. Proper ratio of read meters to unread meters is displayed beside the progress bar.

Routes - This information provides the user with the number of routes loaded in the software, and the total number of meters in all routes.

ORION OK – Shows the communications status with the receiver. Green indicates good communications while Red indicates no communications.

Note: If the GPS is not selected, the following message is displayed at the start of your session:

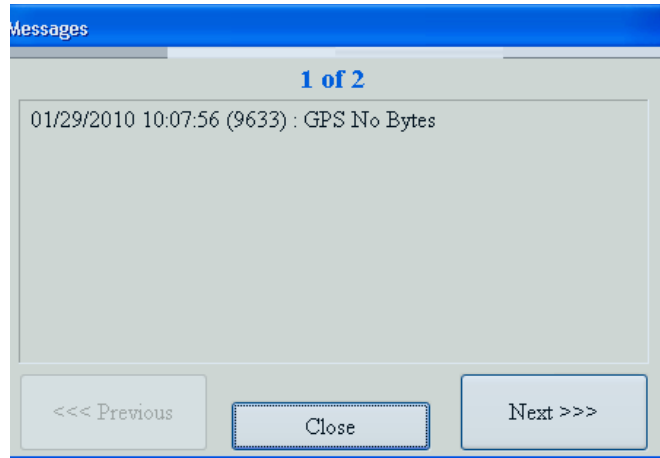


Figure 9: No Signal Detection Message

Map Control

The Map Control buttons are located on the right and left sides of the display when either **List View** or **Map View** buttons are selected from the Menu Bar. These buttons perform the following map control functions:

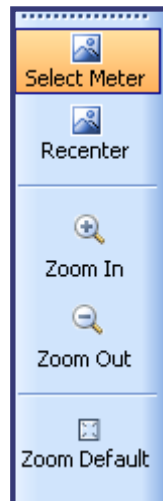


Figure 10: Right Side Buttons

Select Meter

The select meter option allows you to select a meter icon to display the details of the meter. If two or more meters are in the same place, a list containing all the available meters in that spot are displayed for you to choose a specific meter.

Recenter

The Recenter option allows you to move the map in any direction. Select hold and drag the map to the location you desire.

Zoom In

The zoom in feature allows you to draw a box around an area and zoom into it. If you click this button, you can zoom into the map by centering the map on the spot that you selected.

Zoom Out

The zoom out feature facilitates zooming out the area. If you click this button, you can zoom out of the map using the select point as the center of the map.

Zoom Default

Select this button to return to the default setting to view the map.

The left side buttons perform the control functions:

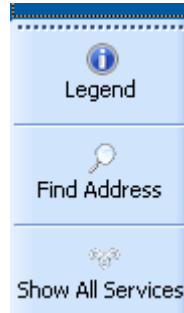


Figure 11: Left Side Buttons

Legend

Click this button to toggle between the distance legend and the icon legend.

Find Address

Click this button to enter a specific address. Select OK when finished entering the address and the map will center itself to the address.

Show All Services

1. To display the location information of all available meters, click the Show All Services button.

Result: This button centers all of the meters with location information on the map.

Loading and Unloading a Route

This section describes detailed ORS screens and procedures that begin with loading the ORION Software and culminate with the unloading process.

Out-of -Scope

The examples provided in this section do not include Reading Data Management Software procedures to create route information to Load ORS, nor does it include Reading Data Management Software procedures to store the captured meter information.

Load Example

1. Obtain a flash drive memory stick that contains files from the Reading Data Management Software route information for the route you intend to read.
2. Insert the flash drive into the USB port of the ToughBook.
3. From the Windows desktop , double-click the ORION icon, enter your initials on the Splash Screen, and then select **Accept**.

Result: The Main Menu is displayed.

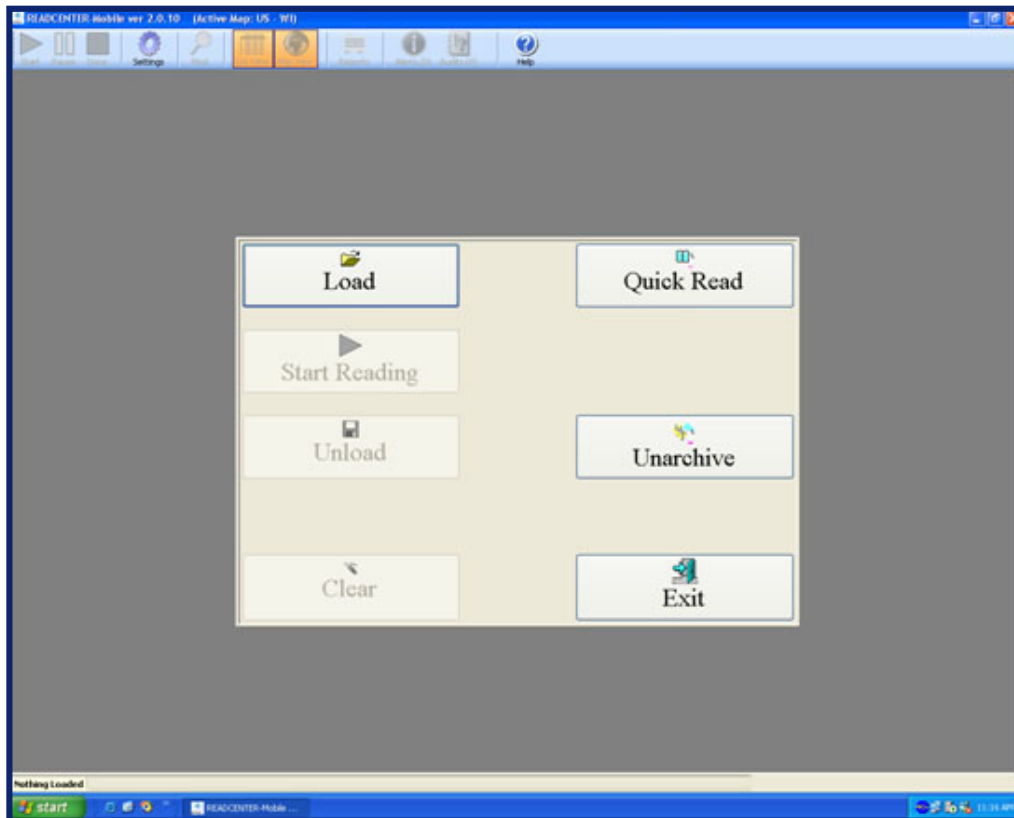


Figure 12: Main Menu - Load ORION Software

4. Click **Load** to load the route files.
Result: The **Select Folder** screen is displayed:

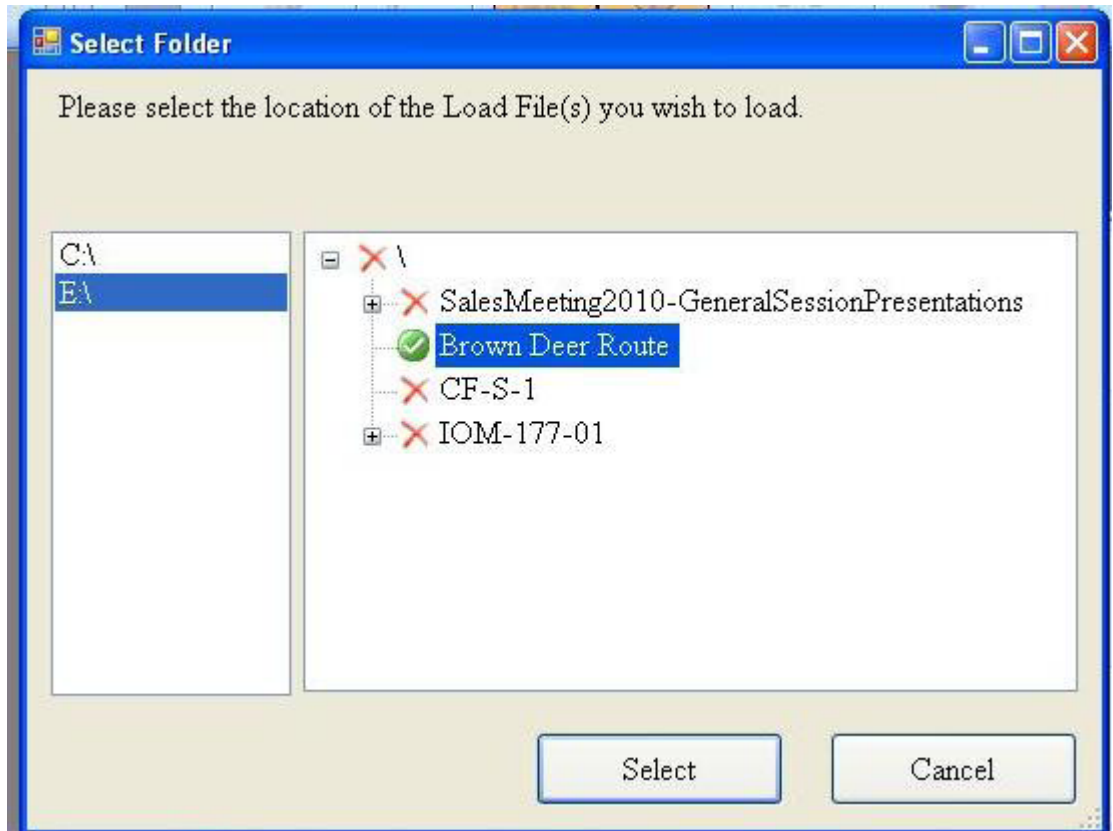


Figure 13: Route File Selection

5. In that screen, select the drive letter from the drive list of the flash drive.
6. From the folder options, select the folder containing the route data.
7. Click the small plus sign to open a folder and display its contents.
Result: When ORS identifies the route files, a green check mark is displayed beside the folder containing the route files.
8. Click **Select** to begin loading the route file.
Result: If the ORS cannot read a file, an alert is displayed.

When the route files have been loaded, meters can be read. The Main Menu indicates the **Load** button as inaccessible and the **Start Reading** button is accessible.

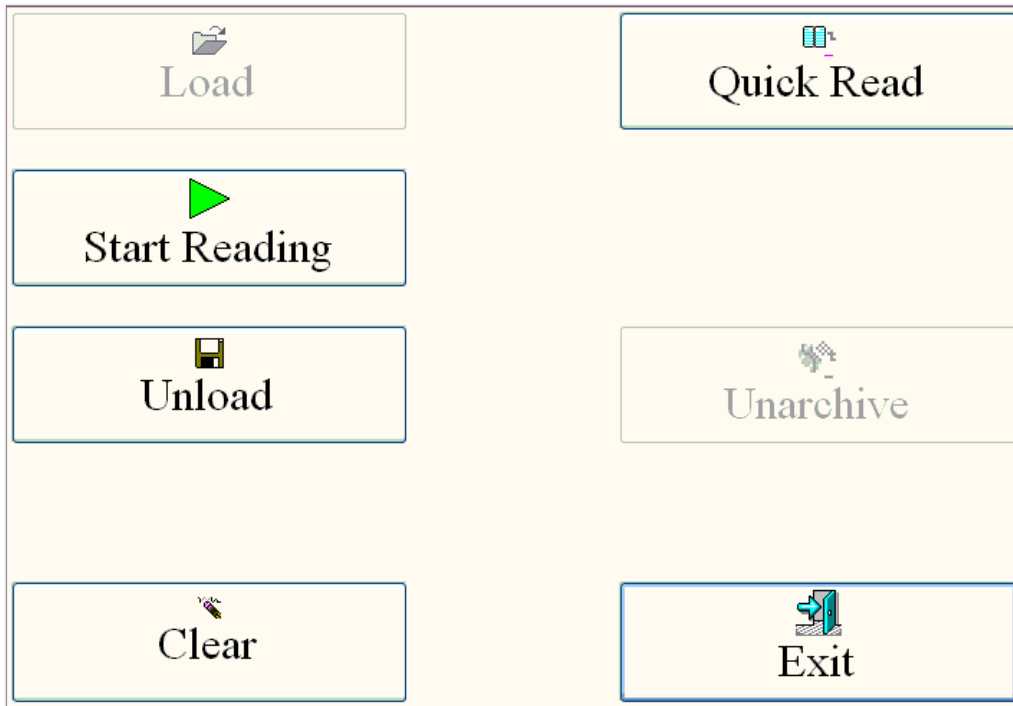


Figure 14: Main Menu - Start Reading

Reading Example

1. Click the **Start Reading** button. Refer to the Start Reading screen.
2. Select the **List View** button.

	Read Method	Name	Address	Meter Serial #	Se #	Service	Acct	AMR S/N	Longitude
Details...	Orion	DAVID FALENCKI	76770 DEWEY DR.	35796209	/0	Serv1	000000003	81828099	-91.6
Details...	Orion	R.L. HUGHES	76830 DEWEY DR.	35796218	/0	Serv1	000000005	81828151	-91.6
Details...	Orion	DONALD GHOLSON	16985 DEWEY DR.	35796219	/0	Serv1	000000006	81828153	-91.6
Details...	Orion	KAREN B MYER	76945 DEWEY DR.	35796227	/0	Serv1	000000008	81828086	-91.6
Details...	Orion	HARRIET ALLEN	77010 DEWEY DR.	35796230	/0	Serv1	000000010	81835702	-91.6
Details...	Orion	GEORGE CALCAGNO	77180 DEWEY DR.	35796246	/0	Serv1	000000012	81828126	-91.6
Details...	Orion	STEVE SHAW	77250 DEWEY DR.	35796259	/0	Serv1	000000014	81828142	-91.6
Details...	Orion	KRISTINA BABIN	16950 BABIN LANE	35796256	/0	Serv1	000000016	81828117	
Details...	Orion	DAVID BABIN	16955 BABIN LANE	35796255	/0	Serv1	000000017	81828132	-91.6
Details...	Orion	LIONEL EZELL	16930 BABIN LANE	35796254	/0	Serv1	000000018	81828143	-91.6
Details...	Orion	ANDREA /WILLIAMS PER	16930 BABIN LANE	35796253	/0	Serv1	000000019	81828141	-91.6
Details...	Orion	MARY CAVALIER	16935 BABIN LANE	35796252	/0	Serv1	000000020	81828111	-91.6
Details...	Orion	BONNIE SPRAGIS	16925 BABIN LANE	35796250	/0	Serv1	000000021	81828119	-91.6
Details...	Orion	ROKCANNE HOTARD	16960 JOHNNY LANE	35796248	/0	Serv1	000000022	81828123	-91.6
Details...	Orion	WALLACE L. PERRAUL	16980 JOHNNY LANE	35796244	/0	Serv1	000000023	81828134	-91.6
Details...	Orion	DAVID TAYLOR	17010 ROBERT LANE	35796240	/0	Serv1	000000026	81828146	-91.6
Details...	Orion	ROBERT ANGELLOZ	17050 ROBERT LANE	35796241	/0	Serv1	000000027	81828130	-91.6
Details...	Orion	TERESA ANGELLOZ	17050 ROBERT LANE	35796240	/0	Serv1	000000028	81828222	-91.6

Figure 15: Tool Bar - List View Button

The List View displays details about each meter on the line to identify quickly a particular meter.

- To view all the details about a specific meter, click the Meter **Details** button for that meter. The Service Details window will open.

Service Details

Current Reading | Comment Codes/Messages

Account Number: 000000003

Service Type: Serv1

Module S/N: 81828099

Low Reading: 30738

High Reading: 37414

Name: DAVID FALENCKI

Address: 76770 DEWEY DR.

Meter Location:

Meter Serial #: 35796209

Sequence #: /0

Location

Latitude: 30.42539333

Longitude: -91.4422283

Find on Map

Store Current Position

Enter/Edit Meter Reading | Clear Meter Reading | Close

Figure 16: Service Details

As meter readings are received from the ORION Receiver, the line on the List View for that meter is removed from the list so as to monitor the reading status and missed reads in real-time. When all the meters are read, the List view goes blank and the following Audit message appears.

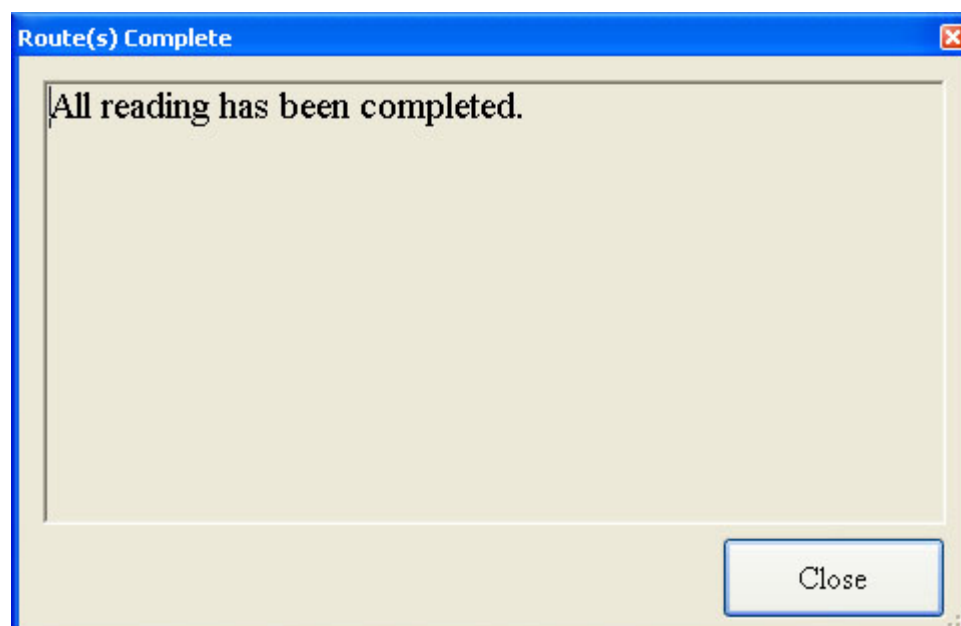


Figure 17: Meter Reading Completed

If you select the **Map View** on the Toolbar, the following screen is displayed:

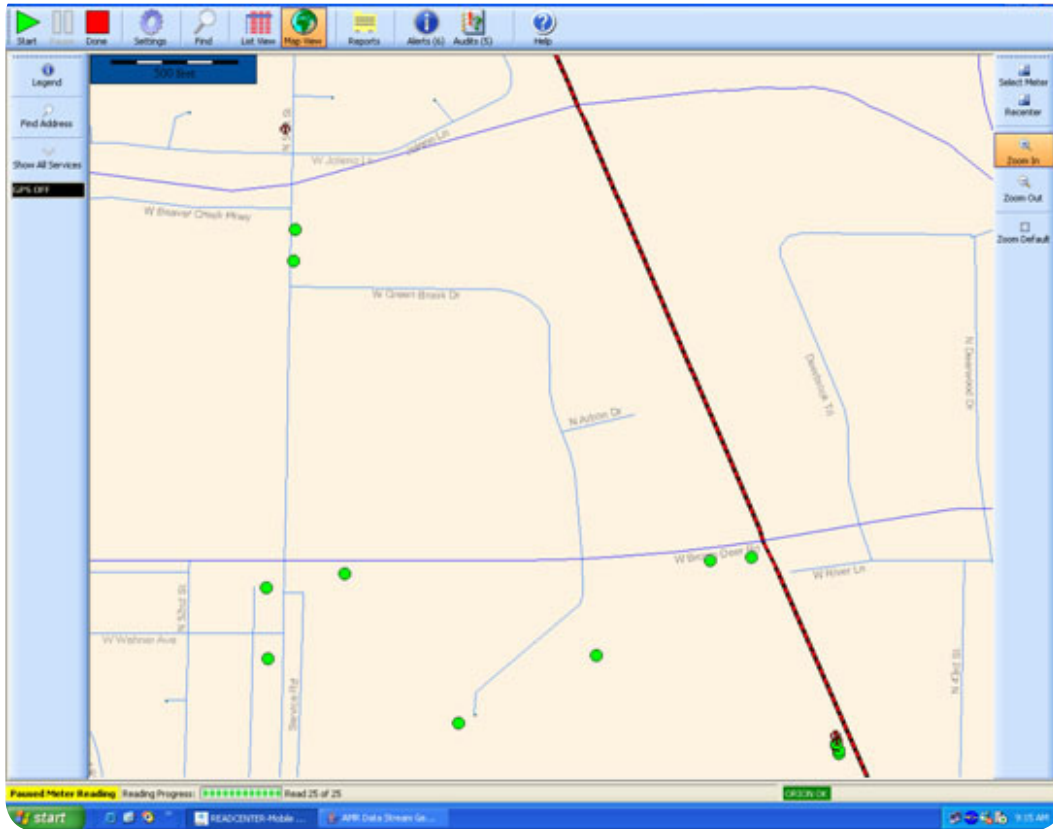






Figure 18: Map View

- To view the meter details, select one of the meter icons.
Note: If more than one meter is present in the reading area, ORS indicates a list of related meters from which to select.

Services								
	Read Method	Name	Addr	Mtr L	Mtr #	Addr	S	
Details...	◆	Orion	2020 20TH St.	Woody Herman 2	OH	00950014	2020 20TH St.	V
Details...	◆	Orion	1616 16TH St.	Don Ellis	m	00050016	1616 16TH St.	V
Details...	◆	Orion	1717 17TH St.	Bill Chase	m	00050017	1717 17TH St.	V

Figure 19: Meter Icons

In the Map View, when a meter reading is received, that meter's icon changes to reflect the status of the meter.

	Successfully read meters are displayed by a green circle.
	Meters with a tamper condition are displayed as a T inside a circle, and potential water leaks are indicated by an asterisk (*).
	Misread meters are displayed as a red square.
	A blue diamond indicates an insufficient proximity to a meter.

- To remove successfully read meters from the screen, check a box on the Setup screen.
Result: This method removes green circles from the map when the meter reading is received, leaving the unread, missed, leak, and tamper status meter icons.
- Click **Done** on the tool bar to return to the Main Menu.

Unload Example

1. To Unload received readings, click the **Unload Route** button on the Main Menu.

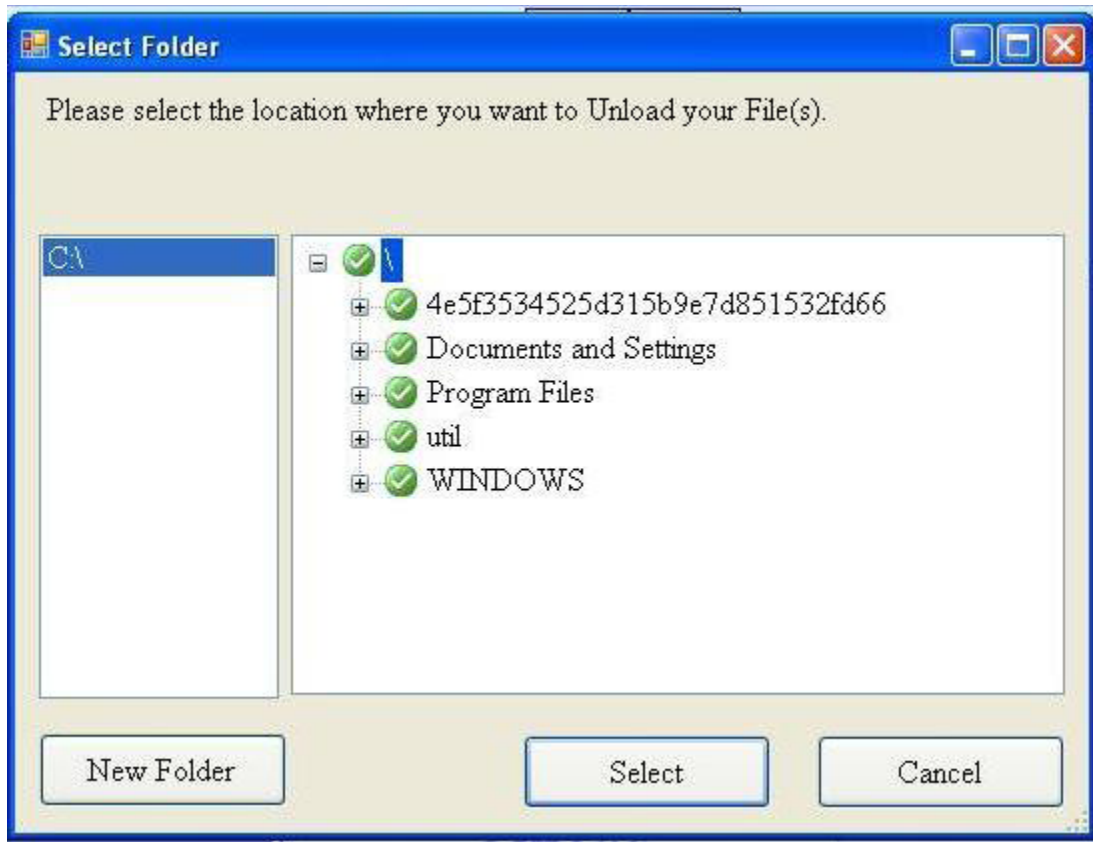


Figure 20: Unload Readings

2. Highlight the folder **Click** to write the meter readings to the selected drive or folder to be transferred to the Reading Data Management Software.

Quick Read

The Quick Read Feature allows you to read a ORION unit without having a route loaded. This is handy when you wish to verify the installation of a unit, if you wish to verify that a unit is operating correctly, or if you wish to collect the reading and status of a unit without loading a route.

The Quick Read screen displays each reading received from an individual ORION endpoint or within range of ORION endpoints. This screen also verifies proper ORION endpoint installation and can also be used to obtain final meter reads.

1. Click the **Quick Read** button on the Main Menu, to view the following screen:

Note: These readings cannot be transferred to the Reading Data Management Software.

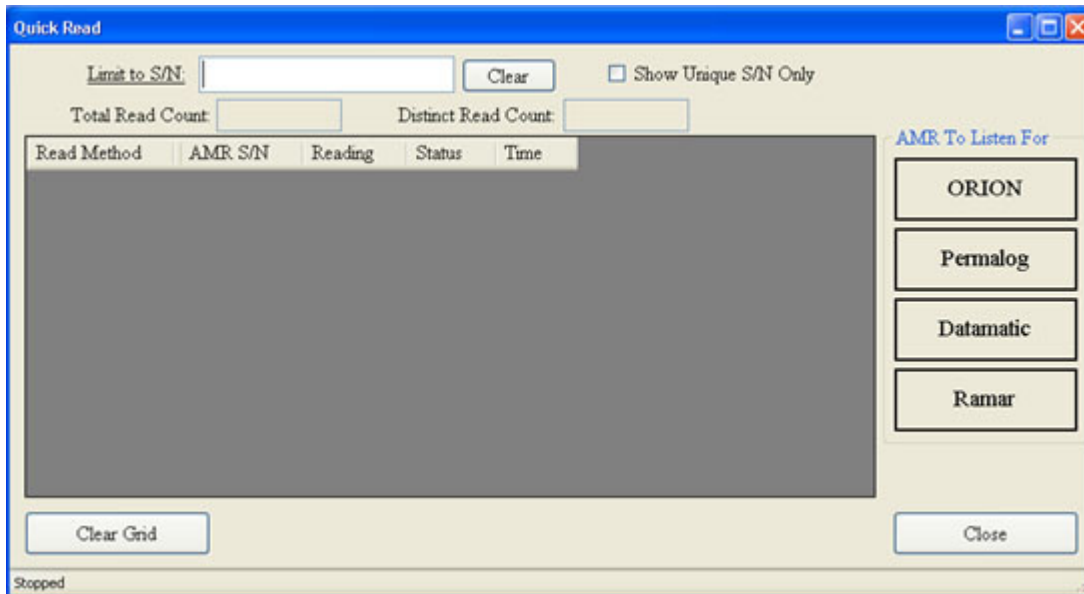


Figure 21: Quick Read

2. To begin reading, select the desired reading technology, such as **ORION** and/or **Permalog**.
Result: Readings from both types of devices are displayed.
 - To view all of the readings, move the slider bar up or down.

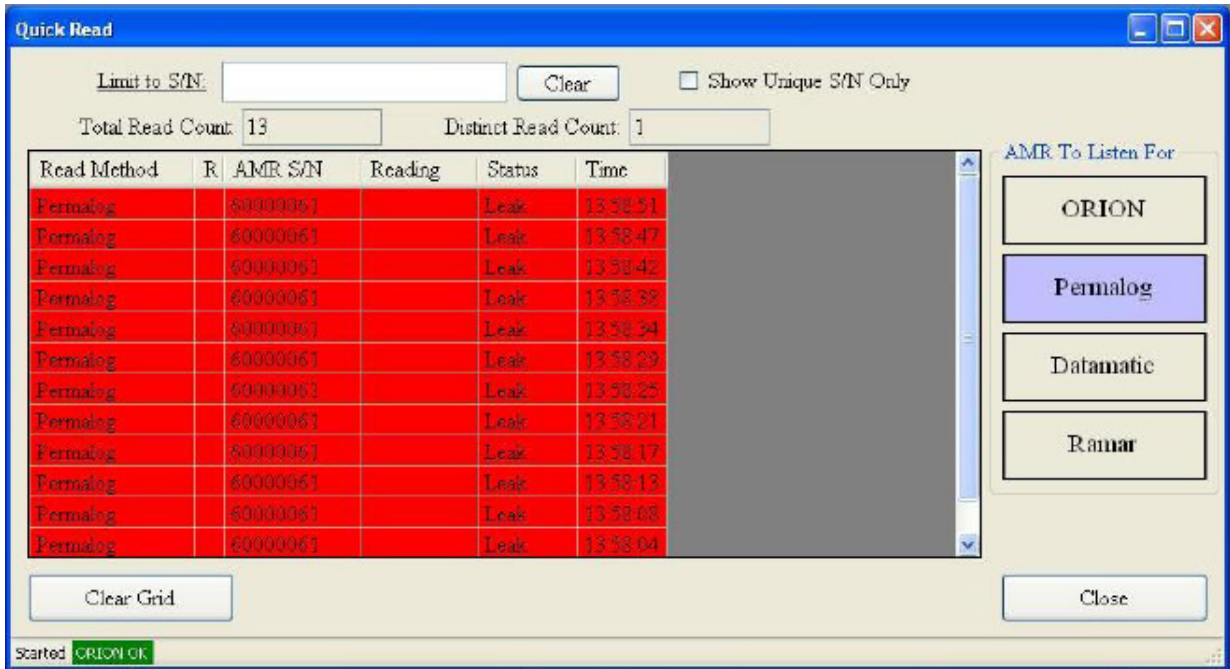


Figure 22: Quick Read: Technology Selection and Serial Number Entry

- To read a particular ORION meter, enter the endpoint serial number in the “Limit to S/N” field.

Details Summary

This section provides a detailed description of screens and screen-buttons functions.

Best Practice

The recommended practice for meter reading is to engage a second person, not the driver, to monitor progress. If that is not practical, you can also drive through an area without observing the screen and stop when convenient to view progress.

Splash Screen

The Splash Screen alerts you to the dangers of watching the ORS screen while driving.

The Splash Screen displays five buttons:

- View License
- View Trademarks
- Language
- Accept
- Cancel

Read Meters

1. To read meters, click the **Accept** button.
2. If you click Cancel, the ORION Reading Software session ends.

If	Then
the Trademarks button is selected,	a list of Trademarks button references in ORS is displayed
the Change Language button is selected,	a list of languages that can be used with ORS is displayed
the View License button is selected	the ORS software license is displayed. The utility must accept the software the first time the software is used.

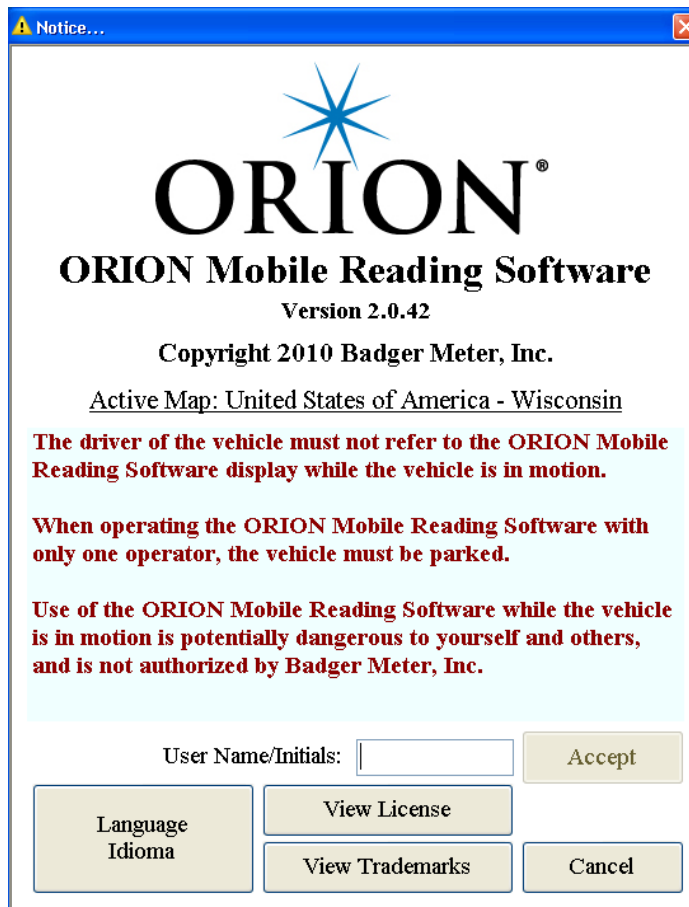


Figure 23: ORS Start-up Screen

⚠ WARNING

Do not use ORS while driving.

Main Screen

The Main Screen allows you to choose the ORS functions you wish to perform. The functions are divided into the following three areas:

- The top button bar with Setup and Help functions.
- The left side buttons devoted to meter reading.
- The right side buttons for other ORS functions.

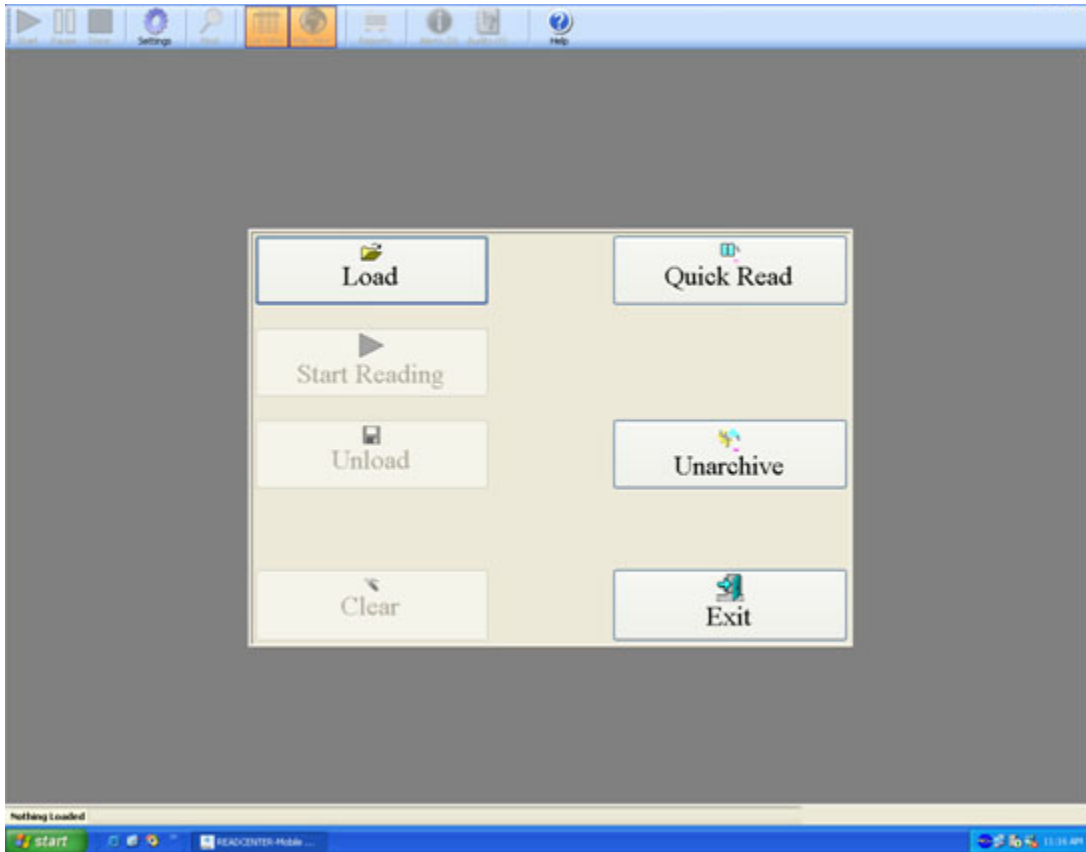


Figure 24: Main Menu

Load

The **Load Route** button loads the route from a specific drive and directory.

1. When ORS alerts you with a message reading: "Route Files Found", Click **OK**.

If	Then
If the route files are not found in the selected folder or drive...	the "No Route Data Available" message appears.
If the route file has corrupted information in the account numbers or the endpoint serial numbers...	the ORS software generates error messages.

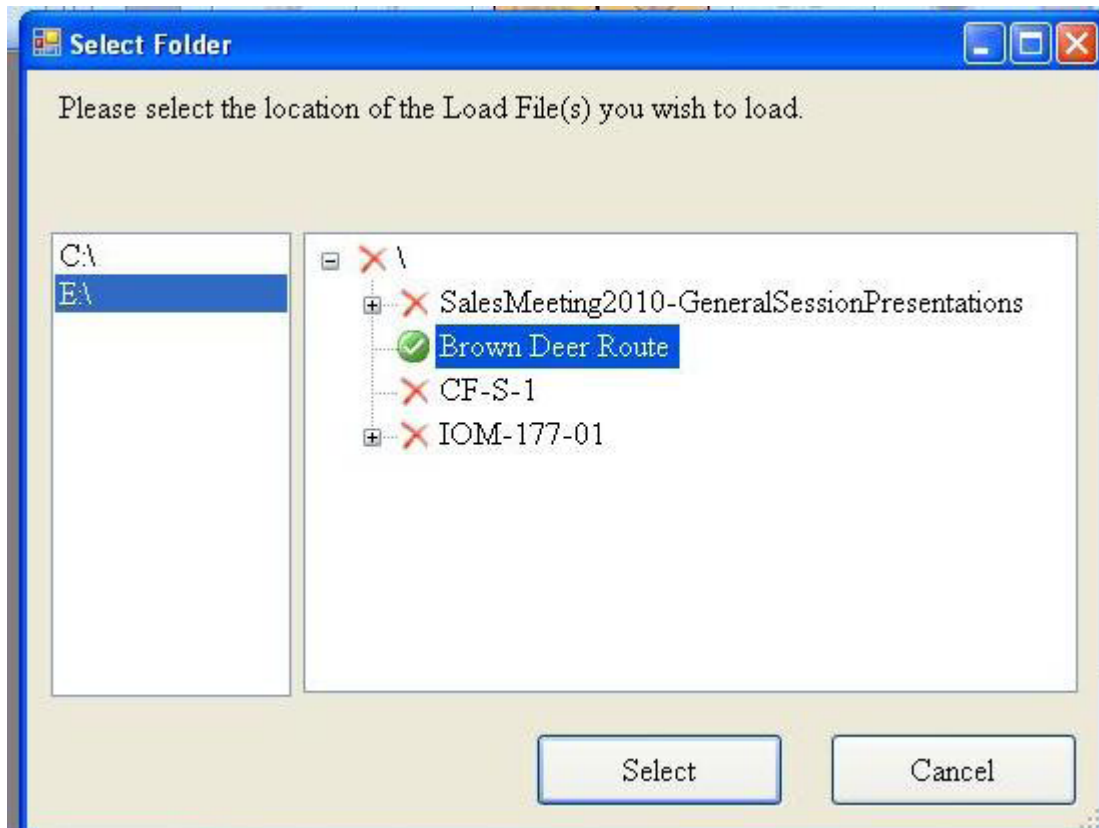


Figure 25: Select Folder

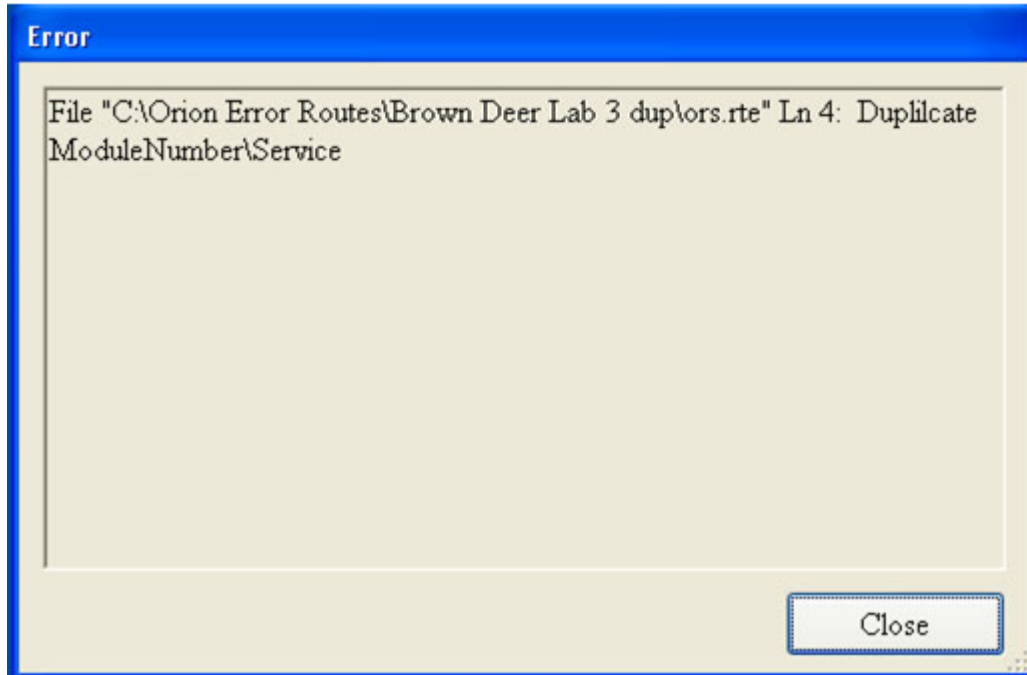


Figure 26: File Error

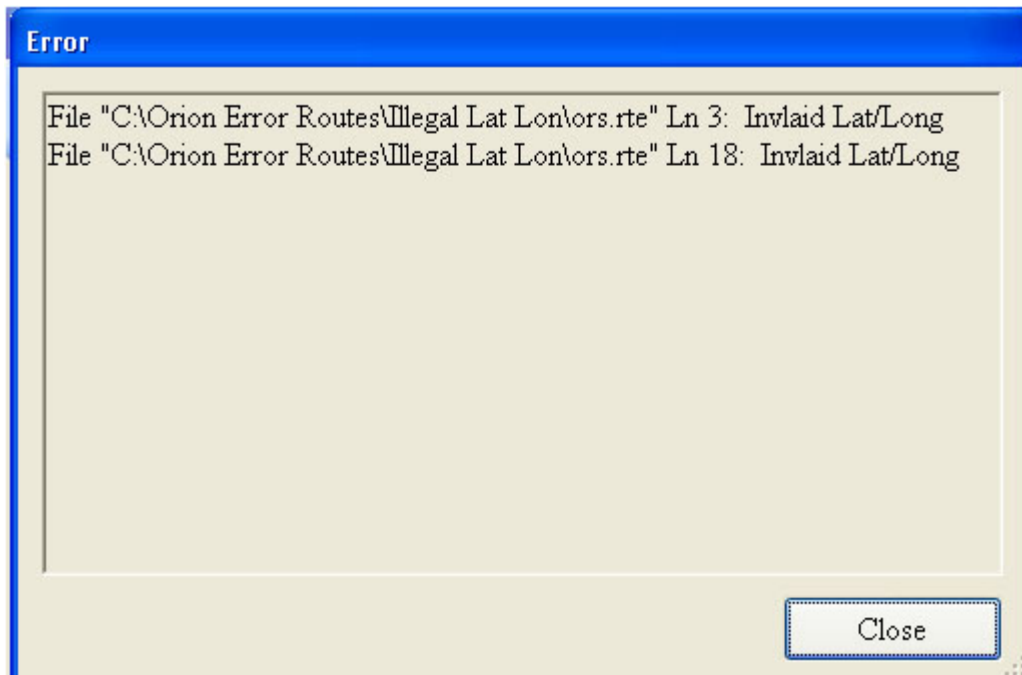


Figure 27: File Error

Verify and correct the corrupted data in the Reading Data Management Software and possibly the billing system, to read the intended route correctly.

List View

List View presents a list of unread meters in reading sequence order. As meters are read, they are removed from this list.

	Addr	Read Method	Name	Mtr L	Mtr #	Addr	Service	Acct	AMR ID#	Longitude	Latitude
Details...	John Smith 1	Orion	111 1ST St	ms	00050001	111 1ST St	Water	050-0001-ORION	77340313		
Details...	John Smith 2	Orion	222 2ND St	ms	00050002	222 2ND St	Water	050-0002-ORION	70000241		
Details...	John Smith 3	Orion	333 3RD St	ms	00050003	333 3RD St	Water	050-0003-ORION	70000246		
Details...	John Smith 4	Orion	444 4TH St	ms	00050004	444 4TH St	Water	050-0004-ORION	70000472		
Details...	John Smith 5	Orion	555 5TH St	ms	00050005	555 5TH St	Water	050-0005-ORION	70000910	-87 9663816	43 174815
Details...	John Smith 6	Orion	66 ROUTE 66	ms	00050006	66 ROUTE 66	Water	050-0006-ORION	71245289	-87 97441	43 182065
Details...	John Smith 7	Orion	777 7TH ST	ms	00050007	777 7TH ST	Water	050-0007-ORION	77667842	-87 9743933	43 18252666
Details...	John Smith 8	Orion	888 8TH St	ms	00050008	888 8TH St	Water	050-0008-ORION	77667844	-87 97439	43 18252333
Details...	John Smith 9	Orion	999 9TH St	ms	00050009	999 9TH St	Water	050-0009-ORION	73276937	-87 9664166	43 17493333
Details...	John Smith 11	Orion	1111 11TH St	ms	00050011	1111 11TH St	Water	050-000A-ORION	70031755	-87 967674	43 1777052
Details...	John Smith 12	Orion	1212 12TH St	ms	00050012	1212 12TH St	Water	050-000B-ORION	70000408	-87 9748183	43 17725166
Details...	John Smith 13	Orion	1313 13TH St	ms	00050013	1313 13TH St	Water	050-000C-ORION	1190008	-87 97366	43 17745833
Details...	John Smith 14	Orion	1414 14TH St	ms	00050014	1414 14TH St	Water	050-000D-ORION	71160028	-87 96639	43 17486333
Details...	John Smith 15	Orion	1515 15TH St	ms	00050015	1515 15TH St	Water	050-000E-ORION	70000317	-87 9664066	43 17490666
Details...	John Smith 16	Orion	1616 16TH St	ms	00050016	1616 16TH St	Water	050-000F-ORION	71840002	-87 96642	43 17496
Details...	John Smith 17	Orion	1717 17TH St	ms	00050017	1717 17TH St	Water	050-000G-ORION	74259922	-87 9664283	43 17502166
Details...	John Smith 18	Orion	1818 18TH St	ms	00050018	1818 18TH St	Water	050-000H-ORION	74194867	-87 974565	43 184025
Details...	John Smith 19	Orion	1919 19TH St	ms	00500019	1919 19TH St	Water	050-000I-ORION	73407888	-87 9745616	43 184025
Details...	John Smith 20	Orion	2020 20TH St	OH	00950014	2020 20TH St	Water	050-000J-ORION	71830077	-87 96646	43 17509
Details...	John Smith 21	Orion	2121 21TH St	ms	00950015	2121 21TH St	Water	050-000K-ORION	73211577	-87 9682766	43 17765
Details...	John Smith 22	Orion	2222 22TH St	ms	00950016	2222 22TH St	Water	050-000L-ORION	71160018	-87 9719866	43 17526333
Details...	John Smith 23	Orion	2323 23TH St	ms	00950027	2323 23TH St	Water	050-000M-ORION	75570660	-87 9747933	43 17621
Details...	John Smith 24	Orion	2424 24TH St	ms	00500018	2424 24TH St	Water	050-000N-ORION	74522340	-87 967674	43 1777052
Details...	John Smith 25	Orion	2525 25TH St	ms	00500519	2525 25TH St	Water	050-000P-ORION	74325928	-87 969955	43 176255
Details...	John Smith 10	Orion	1010 10TH St	Cincinnati	00050010	1010 10TH St	Water	050-0010-ORION	70000474	-87 9744133	43 182065

Figure 28: List View

Details allow the user to view meter details, enter codes/messages and perform manual meter readings.

Map View

1. If you click the **Map View**, ORS displays the map of the area, with the reading location as the focal point.
2. If you click the **Start Reading Meters** button, the map centers at the starting location.

Once the GPS system determines the correct location from the satellites, the screen shows the map centered at the vehicle's location.

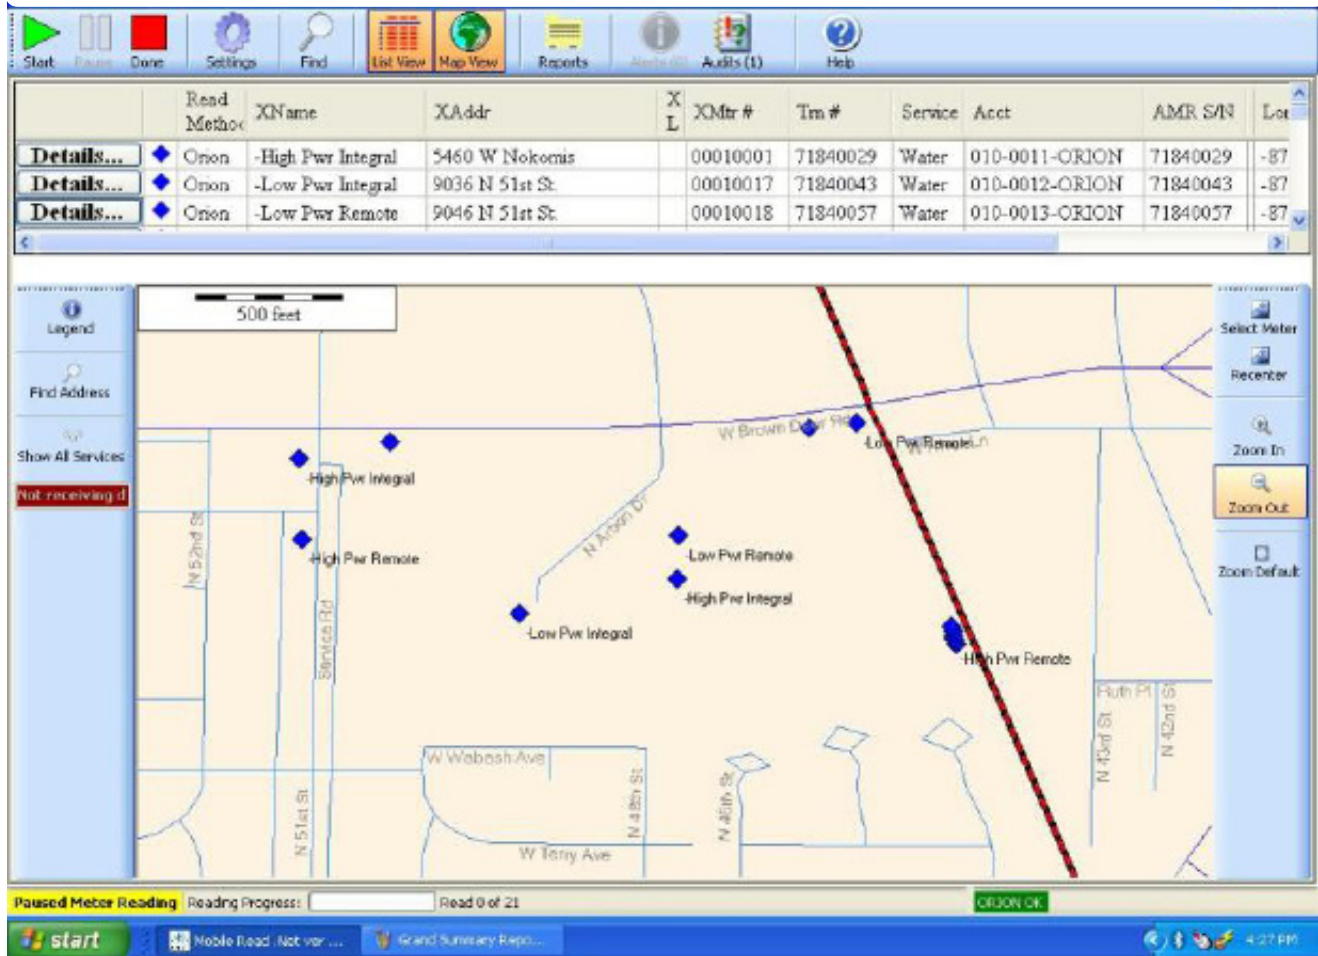


Figure 29: Map View

A meter icon identifies each meter's status and location. The placement on the map indicates the location, while the color and shape of the icon indicates the status.

3. If you click the **List View**, a list of unread meters is displayed.
4. When both the **Map View** and **List View** are selected, a split screen displays both views.

Note: The Map Legend describes each of the icons present in the map.

Legend:

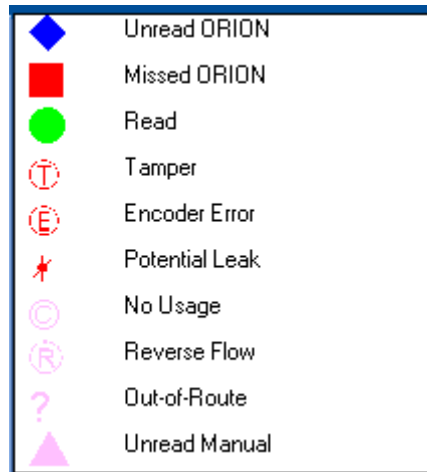


Figure 30: Legend Icons

Read	A green circle indicates a successful reading with no problems reported. A green circle that contains the letter "L," indicates a successful reading of an acoustic leak detection module (Permalog®).
Unread	A blue diamond indicates an unread meter. A hollow diamond indicates a meter without an ORION® endpoint. A blue triangle with a hollow "L" indicates an unread acoustic leak detection module.
Problems	<ul style="list-style-type: none"> • A red circle with a "T" in the center indicates an ORION endpoint tamper condition. • A red circle with an "E" in the center indicates an encoder connected to the ORION endpoint is reporting an error condition. • A red asterisk "*" indicates an ORION endpoint is reporting a potential leak condition (water only). • A red "L" with an asterisk indicates a leak condition by an acoustic leak detection module. • A "C" with a circle around it indicates no usage on that meter since the last report. • An "R" with a circle around it indicates a meter in which flow has reversed. • A "?" on the map indicates a meter not in the route.
Missed	<p>A missed meter is one that was in range to be read but the reading was not received, and is indicated by a red square.</p> <ul style="list-style-type: none"> • If the square is solid, an ORION endpoint was missed. • If the square is hollow, a non-ORION endpoint was missed. If the square contains an "L," the reading from an acoustic leak detection module was missed.
Unread Manual	Meters read manually are indicated by a pink triangle.

Status Bar



Figure 31: Status Bar

The status bar, located at the bottom of the screen allows you to view the progress of the meter reading and the status of the receiver and the GPS systems. Green lettering in the route summary indicates that the system is operating normally, while red indicates the system is not currently in operation.

Split View

If you select both **Map View**, and **List View**, the current listing of unread meters appear at the top as well as the current map on the bottom. When using a mouse, height adjustment of each area is accomplished by placing the cursor on the line between the two areas. When the cursor changes to an arrow, click and drag to adjust the height as preferred.

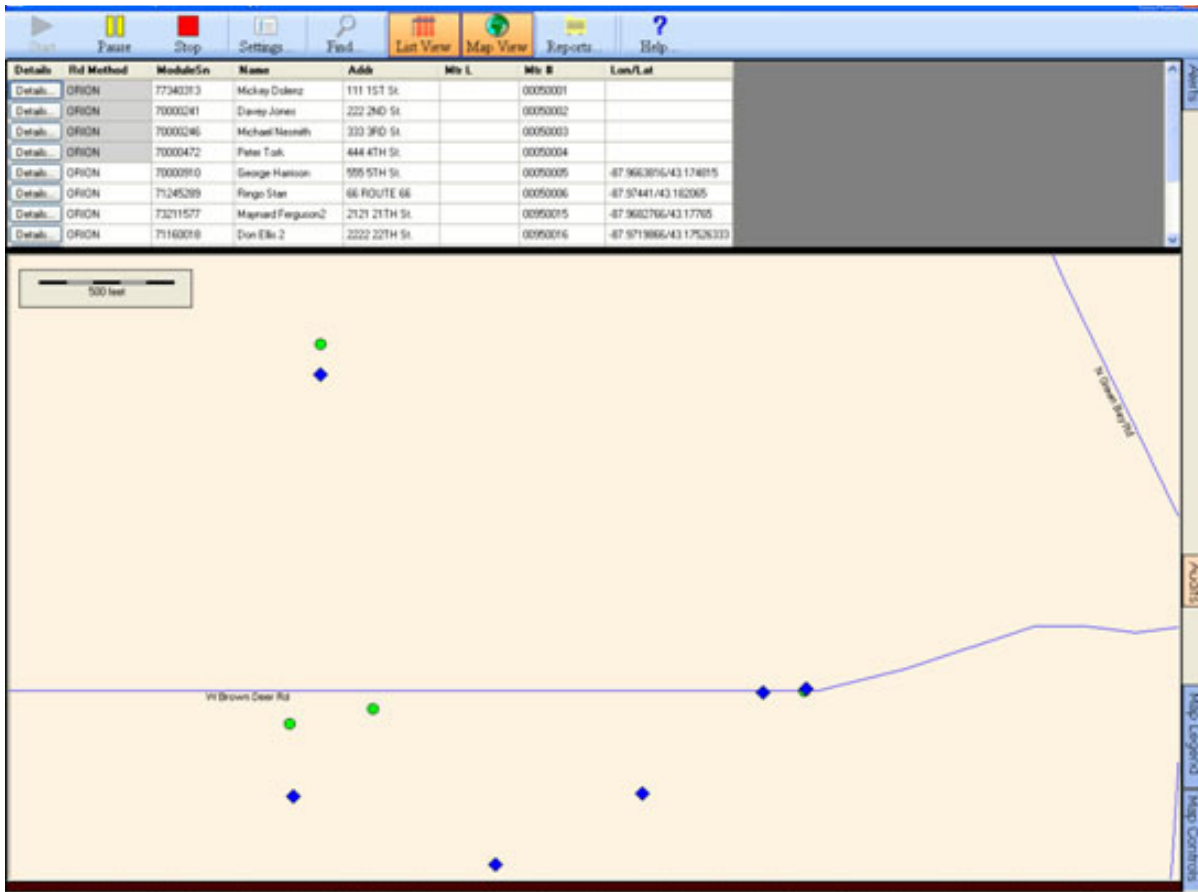


Figure 32: Split View

Meter Details

The Meter Details window displays all of the information that the ORS has regarding that meter. The information is displayed on two tabs: Current Reading and Comment Codes/Messages.

Current Reading

Current reading information is divided into these segments:

- Identification and current reading (upper left)
- Detailed information about the reading (right)
- Meter functions (bottom)

The screenshot shows a 'Service Details' window with the following data:

Account Number:	11-4277	Orion
Service Type:	Water	Module S/N: 70084643
Low Reading:	0	Current Reading: 518495
High Reading:	0	Pot. Leak
Name:	JANZER	Actual Read Method: Orion
Addr:	8455 N 51ST ST	Read Date/Time: 10/28/2010 13:13:16
Mtr L:		Reader ID: scr
Mtr #:		
Addr:	8455 N 51ST ST	

Location section:

Latitude:	43.17175833	Find on Map
Longitude:	-87.97488	Store Current Position

Buttons at the bottom: Enter/Edit Meter Reading, Clear Meter Reading, Close

Figure 33: Current Reading Example

Current Reading

- **Account Number** - This field indicates the account number sent by Reading Data Management Software..
- **Service Type** - This field contains the description of the service being measured by the meter, such as Water, Electric, Gas, etc.
- **Module S/N** - The serial number of the ORION endpoint mounted on the meter. The serial number allows ORS to identify each meter uniquely. The serial number is sent from Reading Data Management Software and is not editable.
- **Current Reading**- The current reading value is stored in this field. If the meter is a gas meter, the index value and not the sub count appears. If the meter is unread, UNREAD appears in the reading field.
- **Low Reading** -If the current reading is lower than this value, it will be considered low.
- **High Reading** - If the current reading is higher than this value, it will be considered high.
- **Potential Leak** – If the ORION endpoint detects a potential leak, **LEAK** is displayed below the reading.

The subsequent four fields are selected in the Reading Data Management Software, and downloaded to the ORS.

Note: Refer to the Reading Data Management Software manual for more information. In this example, the five fields downloaded from Reading Data Management Software were (continued on next page):

- **Name**
- **Addr**
- **Mtr L**
- **Mtr #**
- **Trn #**

The last of the meter reading fields on the right side of the screen pertain specifically to the meter reading that was gathered:

- **Actual Read Method:** This field indicates the type of technology used for reading, for example: ORION.
- **Read Date / Time** – This field contains the date the reading was taken. (-These fields are not present)
- **Reader ID** – This field displays the identification of the meter reader. This is typically the reader's initials.
- **Location**
 - **Longitude** – This field holds the GPS longitude as a decimal number.
 - **Latitude** – This field holds the GPS latitude as a decimal number.
- **Find On Map** – This button displays the meter on the map.
- **Store Current Position** – This button stores the current vehicle location as the location for the meter. The coordinates of the meter become the location at which the meter can be read successfully.
- **Enter/Edit Meter Reading** – Click this button to enter meter readings manually.
- **Clear Meter Reading** – Click this button to clear current reading.
- **Close** – Click this button to exit the screen.

The **Comment Codes/Messages** tab is used to display any Codes /Messages relating to a meter.

Figure 34: Comment Codes/Messages

- **Reader Codes** - Reader codes are values that the reader can create about a specific meter. These values are channelized into ORS by the Reading Data Management Software.
- **Trouble Code** -Trouble codes are values that the reader can create for problems related to a specific meter. These values are passed into ORS by the Reading Data Management Software.
- **Popup Comment Code** - Comment codes are messages from the Reading Data Management Software that relay information about a specific meter. An example could be 'Beware of Dog'. These values are passed into ORS by the Reading Data Management Software.
- **Extended Comment** – This field stores a text field in which the meter reader can insert a message to be sent back to the office. The field contains Create and Delete buttons to add or delete a text comment. There is a limit to how many characters can be entered in this field, displayed by an automated "Character Remaining" monitor.
- **Clear Meter Reading** - Removes the current meter reading.
- **Close** - Exit the screen.

Enter/Edit Meter Reading

1. To enter a reading manually, select the **Enter/Edit Meter Reading** button. See Figure 34 on page 39.

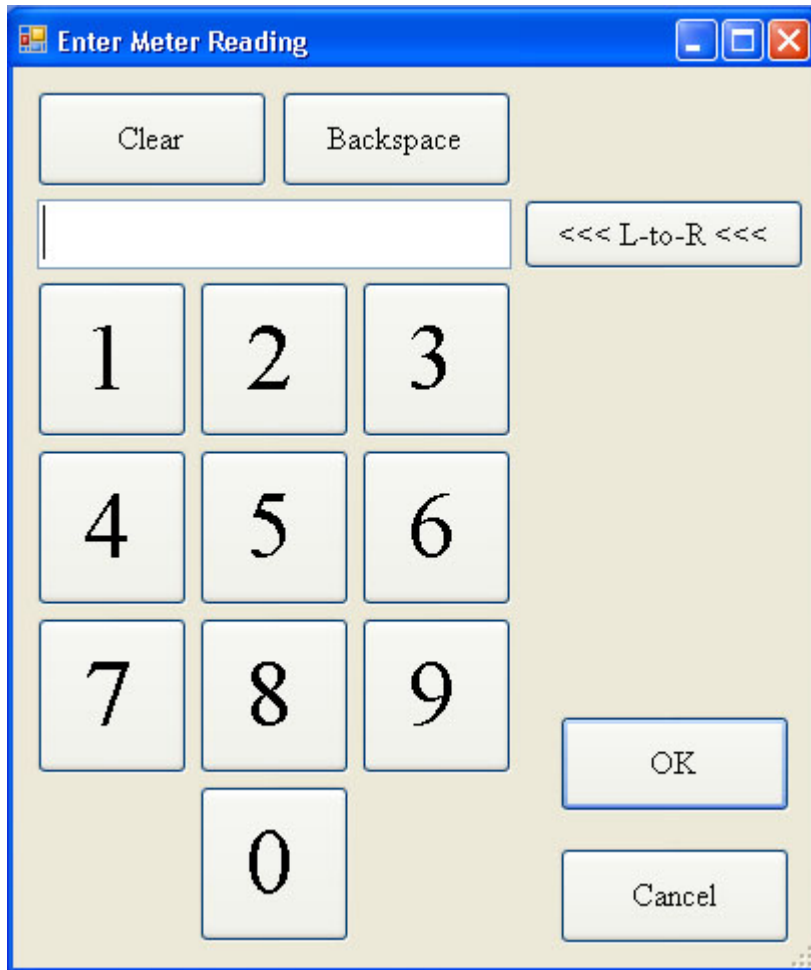


Figure 35: Enter Meter Reading

Manually enter a meter reading on the touch screen or type the reading on the laptop keyboard. If the meter reading has dials set from right to left, click the box to reset the option to "L-to-R."

Note: If a tamper report is received from a meter and a manual reading for that meter is entered, the reading information relayed to the Reading Data Management Software will include both the manual reading and the reported tamper condition.

Add/Edit Trouble Code

1. To report a trouble condition at a meter, click the Select button in the Trouble Code area.

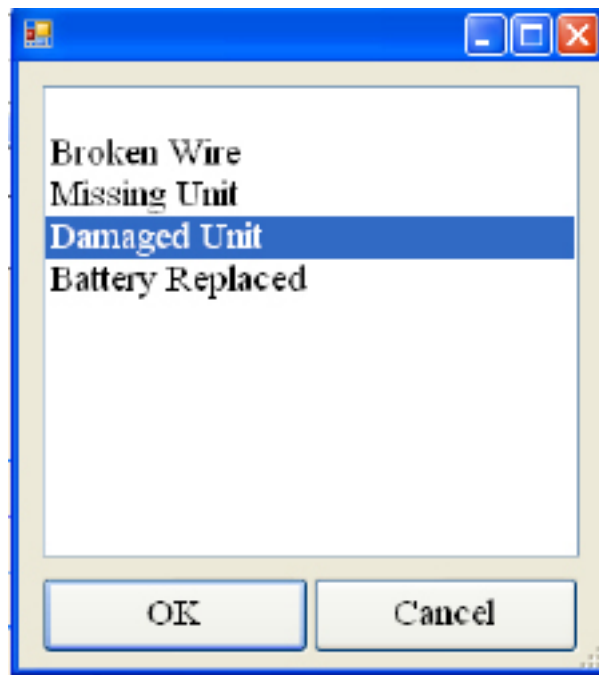


Figure 36: Trouble Codes

The Trouble Code screen allows you to send a trouble code (such as a broken wire, missing unit, or damaged unit) to the utility. **Note:** The trouble codes are defined in Reading Data Management Software and sent to the ORS.

2. To select a trouble code, select the appropriate code from the list of codes available and click **OK**.
Result: Once the trouble code is selected and you click OK, the trouble code (Damaged Wire) is appended to the Service Details screen.
3. Once a trouble code is entered, and you wish to change it, click **Change** in the Trouble Code Area and select the required option from the list.
4. If no trouble code is required, select **Cancel** to return to the **Service Details** screen.

Add/Edit Reader Codes

1. To report non-trouble information about a meter, click one of the Select buttons in the Reader Code area (see Figure 34 on page 39).

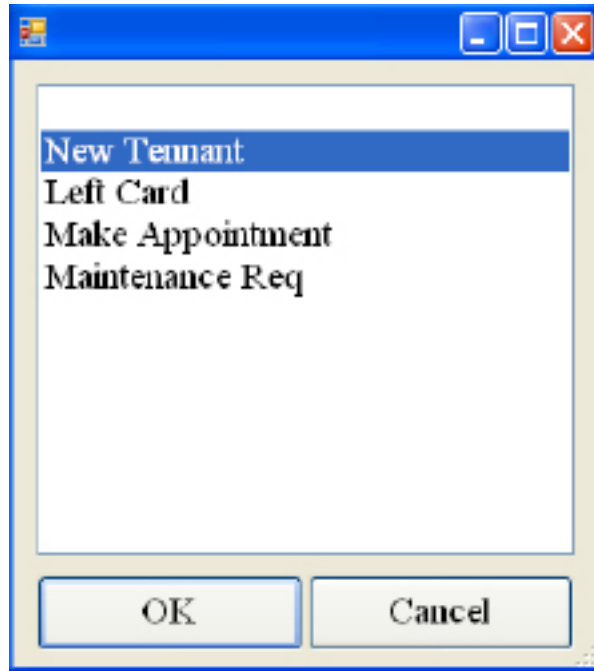


Figure 37: Select a Comment

Note: You can select up to three comments and send those comments back to the office for a given meter.

Note: The Reader Codes are also defined in the Reading Data Management Software and sent to ORS.

2. To set a Reader Code, select the code and then select **OK**.

Note: When the readings are sent back to the Reading Data Management Software, reports of meters containing these codes can be generated to help identify problem meters.

Add/Edit Text Message

This option allows users to record text messages or notes that can be utilized later when reporting issues to Technical Support. For more information on Technical Support, refer to "Using Technical Support" at the end of the manual.

The screenshot shows a software window titled "Service Details" with two tabs: "Current Reading" and "Comment Codes/Messages". The "Comment Codes/Messages" tab is active. On the left, there are three "Reader Codes" sections, each with a "Select..." button and a yellow text field. Below these is a "Trouble Code" section with a "Select..." button and a yellow text field. On the right, the "Extended Comments*" section contains a "Cancel" button, a "Delete" button, and a large text area with the placeholder "Enter text here". At the bottom right of this section, it says "Characters Remaining: 125". At the bottom of the dialog, there are three buttons: "Enter/Edit Meter Reading", "Clear Meter Reading", and "Close".

Figure 38: Adding or Editing Text

Note: Text messages up to a maximum length of 139 characters can also be sent back to the utility.

1. Click in the Extended Comments text box.
2. Type the message in on the laptop keyboard and select **OK**.

Find

The Find icon allows you to perform searches based on specific criteria.

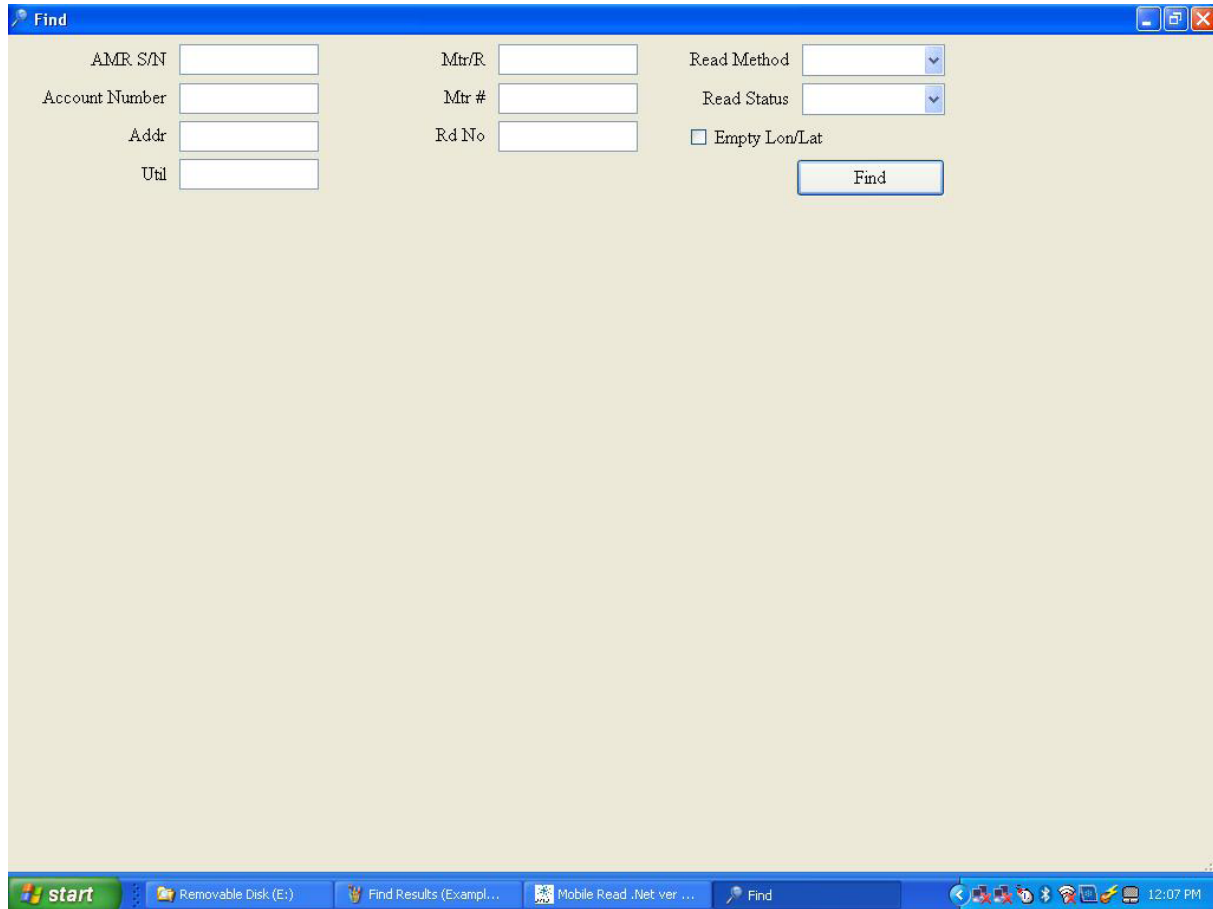


Figure 39: Find Menu

1. To search for a meter, enter information about the particular meter into one of the search fields. For example, if you enter "3" to the Addr field, the following result is generated:

The screenshot shows a software window titled "Find" with search criteria and a results table. The search criteria are: AMR S/N (empty), Account Number (empty), Addr (3), and Util (empty). The "Find" button is visible. Below the criteria, it says "Services Found: 172 Rows, 70.78 % of all Services." and a "Print Results .." button. The table below contains the following data:

	Read Method	Addr	Ut	Mtr/R	Mtr #	Rd No	Servis	Acct	AMR S/N
Details...	Orion	1333 CARLENE AVE	7	LF/5-0	06123320	LF/5-005015-00	High	500501500	7099892
Details...	Orion	1330 CARLENE AVE	7	1LF/1-	08140564	1LF/1-007828-02	High	100782804	8081941
Details...	Orion	1325 CARLENE AVE	7	LFYD/1	05097755	LFYD/1-007673-07	High	100767307	7045640
Details...	Orion	1316 CARLENE AVE	7	RF/7-0	07482789	RF/7-005198-00	High	700519800	8058790
Details...	Orion	1310 CARLENE AVE	7	CF/3-0	05092137	CF/3-004992-00	High	300499200	7044554
Details...	Orion	1301 CARLENE AVE	7	2LF/5-	07160278	2LF/5-005280-00	High	500528000	7181584
Details...	Orion	1239 CARLENE AVE	7	CF/1-0	06595343	CF/1-007697-03	High	100769703	7153747
Details...	Orion	1236 CARLENE AVE	7	CF/7-0	05092143	CF/7-005187-00	High	700518700	7045024
Details...	Orion	1235 CARLENE AVE	7	LF/2-0	07449196	LF/2-04835-0	High	200483500	8050066
Details...	Orion	1232 CARLENE AVE	7	CF/8-0	07160309	CF/8-005046-00	High	800504600	7182506
Details...	Orion	4113 W RIVERSIDE DR.	7	RF/4-0	05200206	RF/4-004974-00	High	400497401	7057252
Details...	Orion	1223 BILTMORE DR.	7	CF/7-0	05097910	CF/7-05184-1	High	700518403	7045626
Details...	Orion	1234 BILTMORE DR.	7	RF/4-0	06596030	RF/4-04983-0	High	400498300	7153712
Details...	Orion	1238 BILTMORE DR.	7	LF/3-0	05097911	LF/3-004953-00	High	300495300	7045612
Details...	Orion	1239 BILTMORE DR.	7	RF/7-0	07160306	RF/7-005181-01	High	700518103	7182502
Details...	Orion	1239 BILTMORE DR.	7	1RF/3-	06109155	1RF/3-007866-00	High	300786600	7095886
Details...	Orion	1253 BILTMORE DR.	7	LF/2-0	07482787	LF/2-04866-0	High	200486600	8058341
Details...	Orion	1300 BILTMORE DR.	7	RF/8-0	05092084	RF/8-05015-0	High	800501500	7044596
Details...	Orion	1303 BILTMORE DR.	7	1RF/3-	05097909	1RF/3-005077-00	High	800507700	7045596

Figure 40: Find Results (Example 1)

Result: In Example1, there are several meters that have the value of "3" in their address field. If "30" was entered in the AMR S/N field, the search would be narrowed to the meters fitting both criteria.

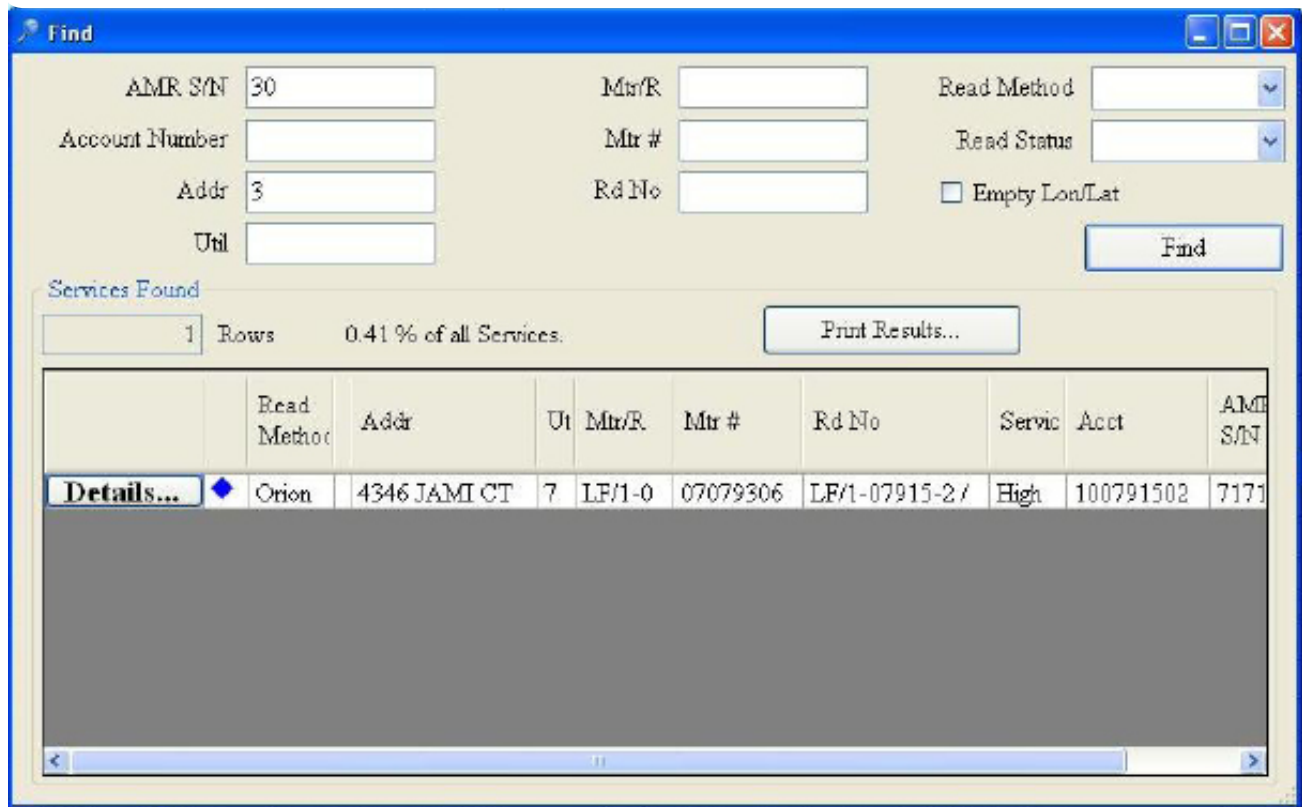


Figure 41: Find Results (Example 2)

In Example 2, there is only one meter in the system that has “3” in the Addr field and “30” in the AMR S/N field.

A search can also be performed by the following methods:

- Read Method
- Read Status
- Search by assigned latitude/longitude coordinates

As in the example above, if information is entered in more than one field, ORS will search for meters meeting all search criteria. To view the details of any meter found in the search, select on the **Details** button.

Reports

The Reports feature organizes meter reading information in a number of different ways to facilitate easy information gathering. The screen is organized to accommodate report types, filters, and exceptional status filters.

- **Special Reports:**
 - **Summary:** This report contains the current status of in-progress meter reading.
 - **Audit:** The audit report shows all error conditions encountered in ORS according to time and date.
 - **Alert:** The Alert report allows you to view each of the alert messages that have been displayed during meter reading.
 - **Out-of-Route:** The Out-of-Route report records endpoints that were received while driving the route, but are not included in the loaded route.
- **Read/Unread Filter**
 - **Read Services Only:** Tapping the Read Services button will display all meters in the loaded route that were successfully read.
 - **Only Low/High Readings (check box associated with Read Services Only option):** Checking the High/Low box will restrict the Read Services list to only those meters with a high or low reading.
 - **Unread Services Only:** Tapping the Unread Services Button will display all meters in the loaded route that were not successfully read.
 - **Only Missed (check box associated with Unread Services Only):** Checking the Only Missed box will restrict the Unread Services list to only those meters that have been marked as missed.
- **Exceptional Statuses Filter**
 - **Tamper:** Checking the Tamper box displays the list of endpoints that have reported a tamper condition.
 - **Reverse Flow:** Checking the Reverse Flow box displays the list of endpoints that have reported a reverse flow condition.
 - **Encoder Error:** Checking the Encoder Error box displays the list of endpoints that have reported an Encoder Error condition.
 - **No Usage:** Checking the No Usage box displays the list of endpoints that have reported a No Usage condition.
 - **Potential Leak:** Checking the Potential Leak box displays the list of endpoints that have reported a potential leak condition.

Supported Features:

- Reports can be maximized to the full screen to see all of the details.
- Rows are color coded for the reading status: gray background for tampers and leaks, have a color background for high and low readings, and have a white background for all other meters.
- Reports can be sorted by selecting a column header (similar to a spreadsheet).
- If you connect a printer to your laptop, you can print your report if you click **Print Report**.

1. Select the **Reports** button (on the Tool Bar - Figure 5 on page 13) to display the Reports menu.

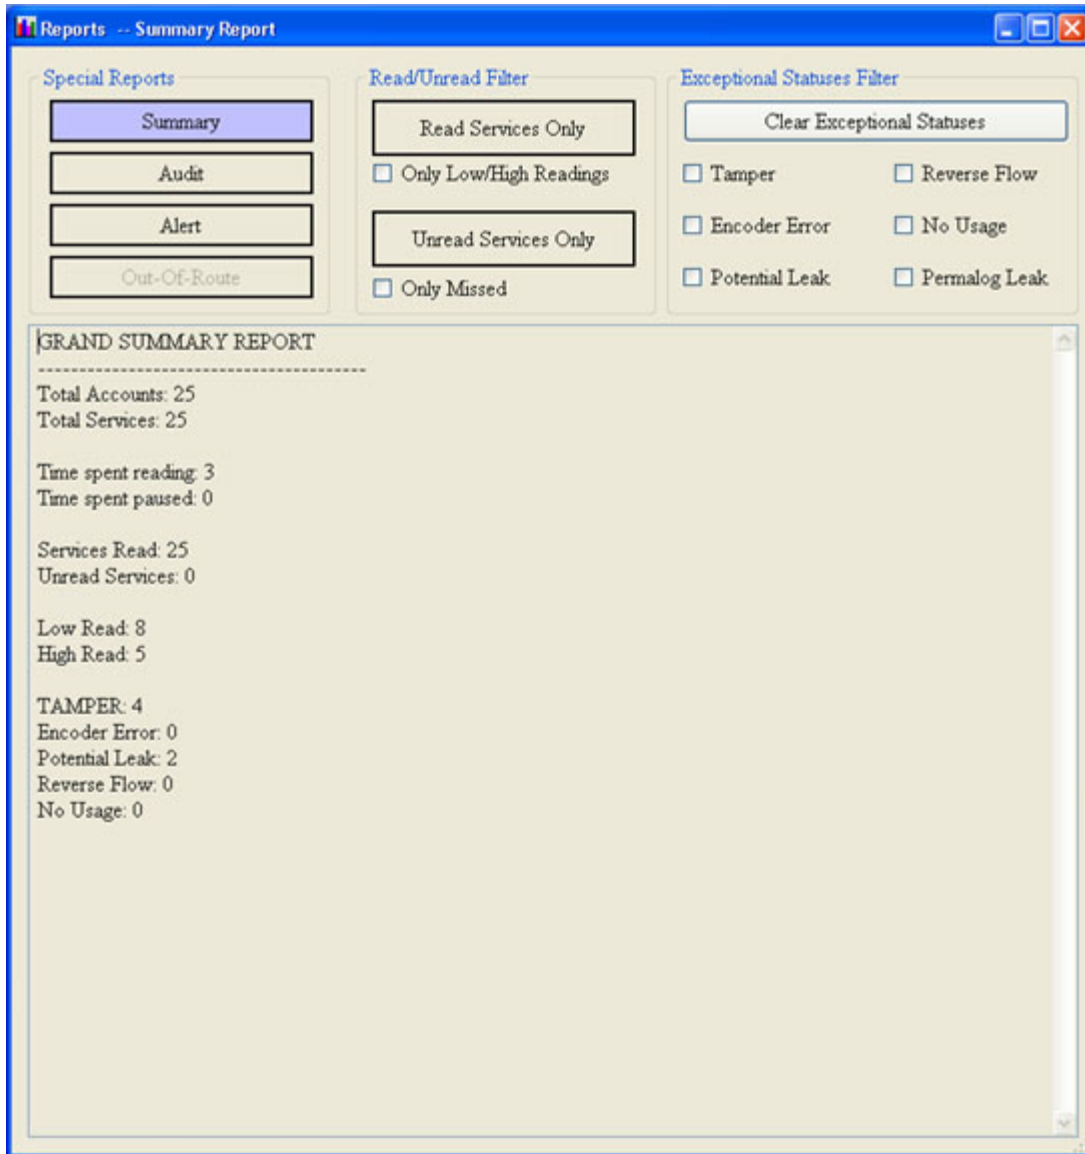


Figure 42: Reports Menu

To see a report of the meters that have been read, select the **Read Services Only** button. Refer to to Figure 43 view this report:

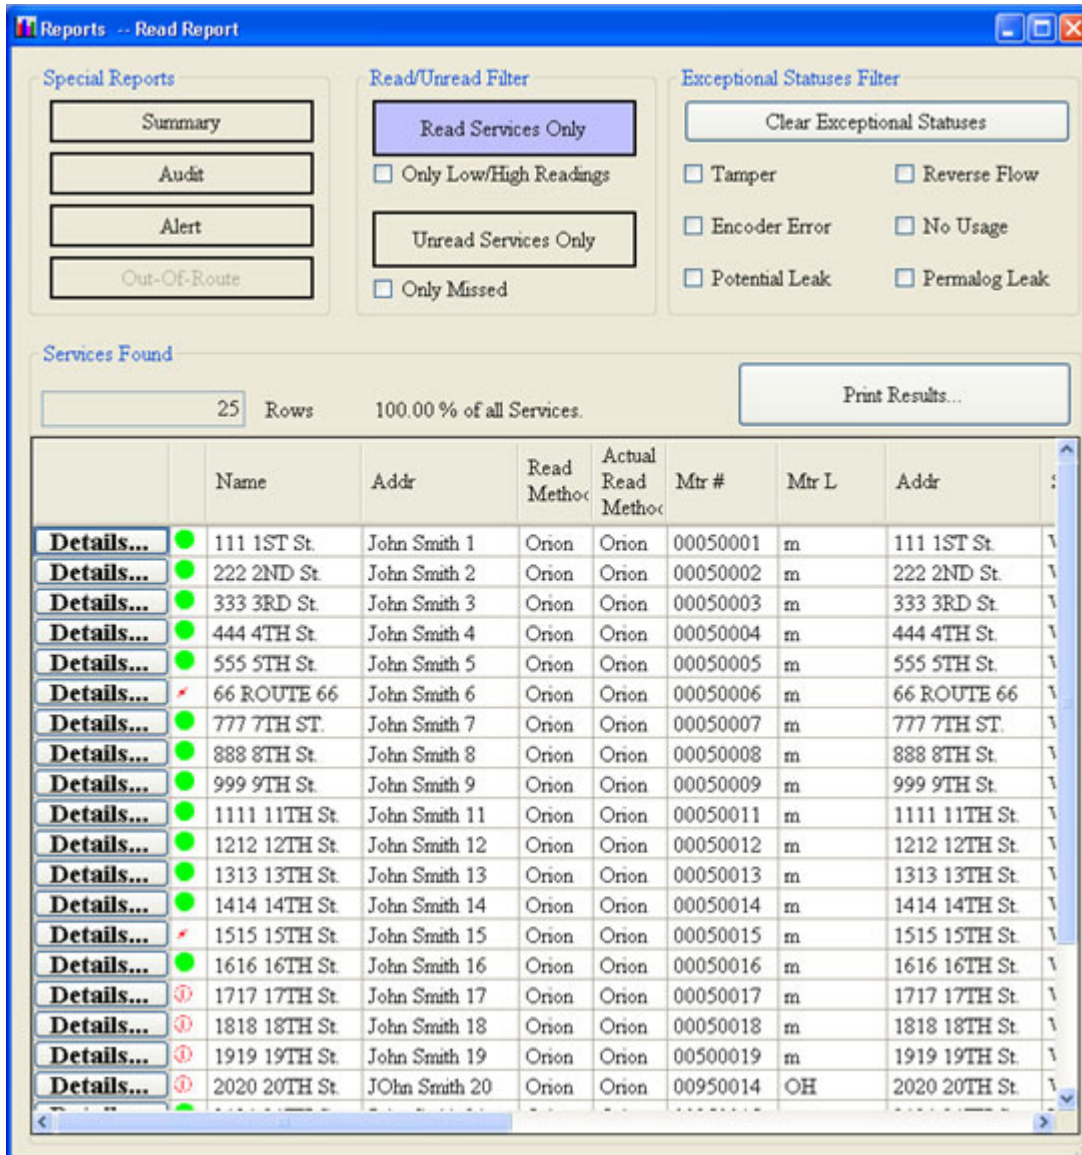


Figure 43: Read Services Result

Note: For meter icons that indicate special conditions, refer to "Figure 30: Legend Icons" on page 35. The check boxes beneath the "Exceptional Statuses Filter" allow user-selectable report criteria. For example, to see only those meters that have been successfully read but are reporting a Potential Leak status:

1. Select the **Read Services Only** button.
2. Select the **Potential Leak** box.
3. As with the other reports, if you select the Details button, the Meter Details screen for that meter is displayed.
4. To report on all conditions, select the **Clear Exceptional Statuses** button.
 - Unread Services Only – lists all unread meters
 - Read Services – list the meters read successfully
 - Tampered Report – lists meters reporting a tamper condition

Each of the Special Reports for the ORS application is described below. Each report is automatically updated as the meter reader views the report and ORS gathers data.

Grand Summary Report – This report contains the current status of in-progress meter reading.

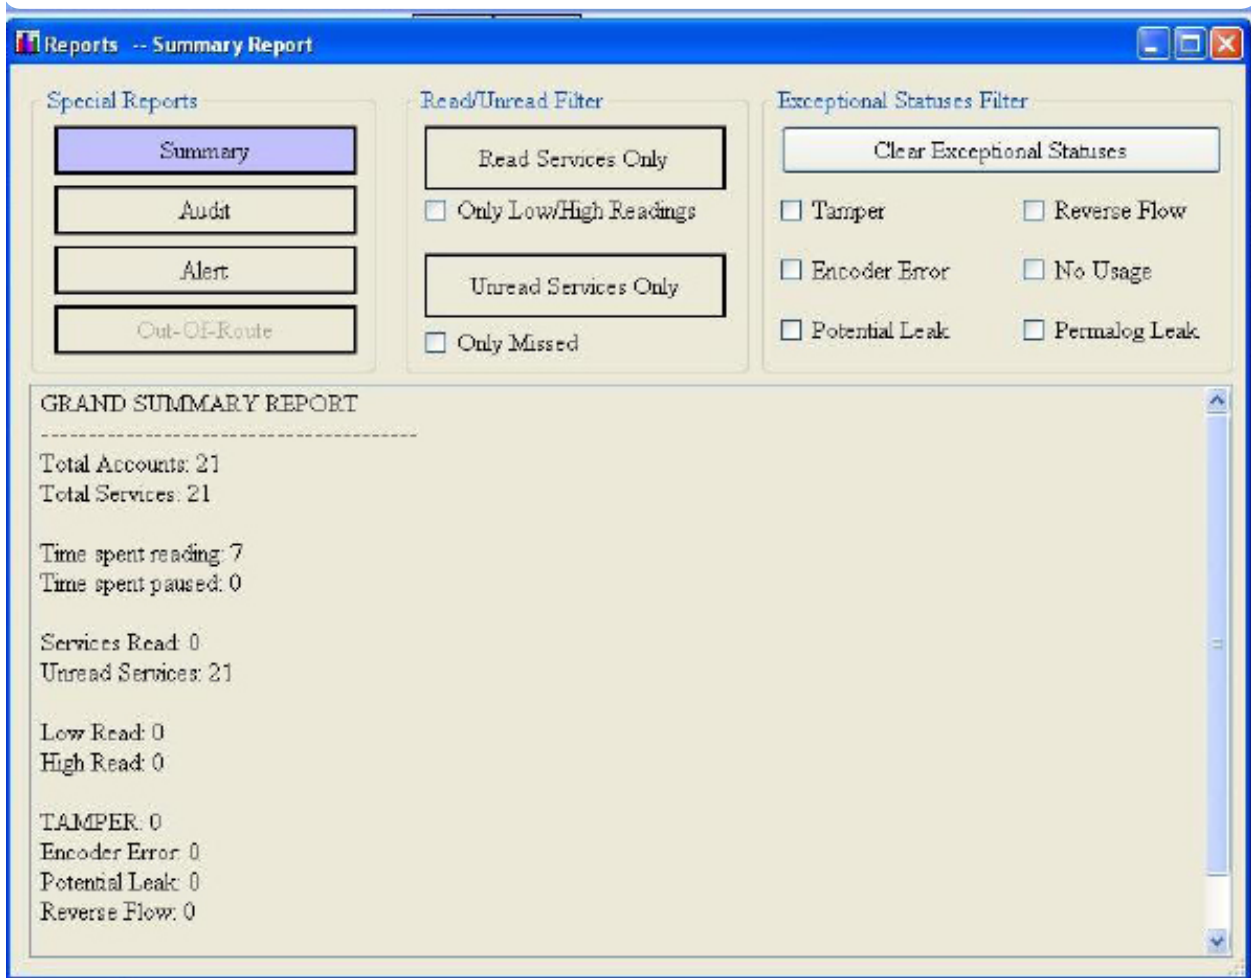


Figure 44: Summary Report

- **Total Accounts** – The number of accounts that were loaded in the route file.
- **Total Services** – The total number of services that were included in those accounts.
- **Unread Services Only** – The number of services/meters that were not read.
- **Out-of-Route Services** –The number of out of route services that were read.
- **Time Spent Reading** –The total amount of time (in minutes) ORS was in active reading mode.
- **Time Spent Paused** –The total amount of ORS was paused.
- **Low Read** – Exceptionally low readings meter readings.
- **High Read** – Exceptionally high meter readings.
- **Tamper** – The number of ORION endpoints reporting a tamper condition.
- **Encoder Error** – The number of ORION endpoints connected to encoders reporting an error condition.

- **Potential Leak** – The number of ORION water endpoints reporting a potential leak condition.
- **Reverse Flow** – The number of reverse flow meter readings that were recorded.

Audit Report - The audit report shows all error conditions encountered in ORS according to time and date. Here are the different fields reported in the audit report:

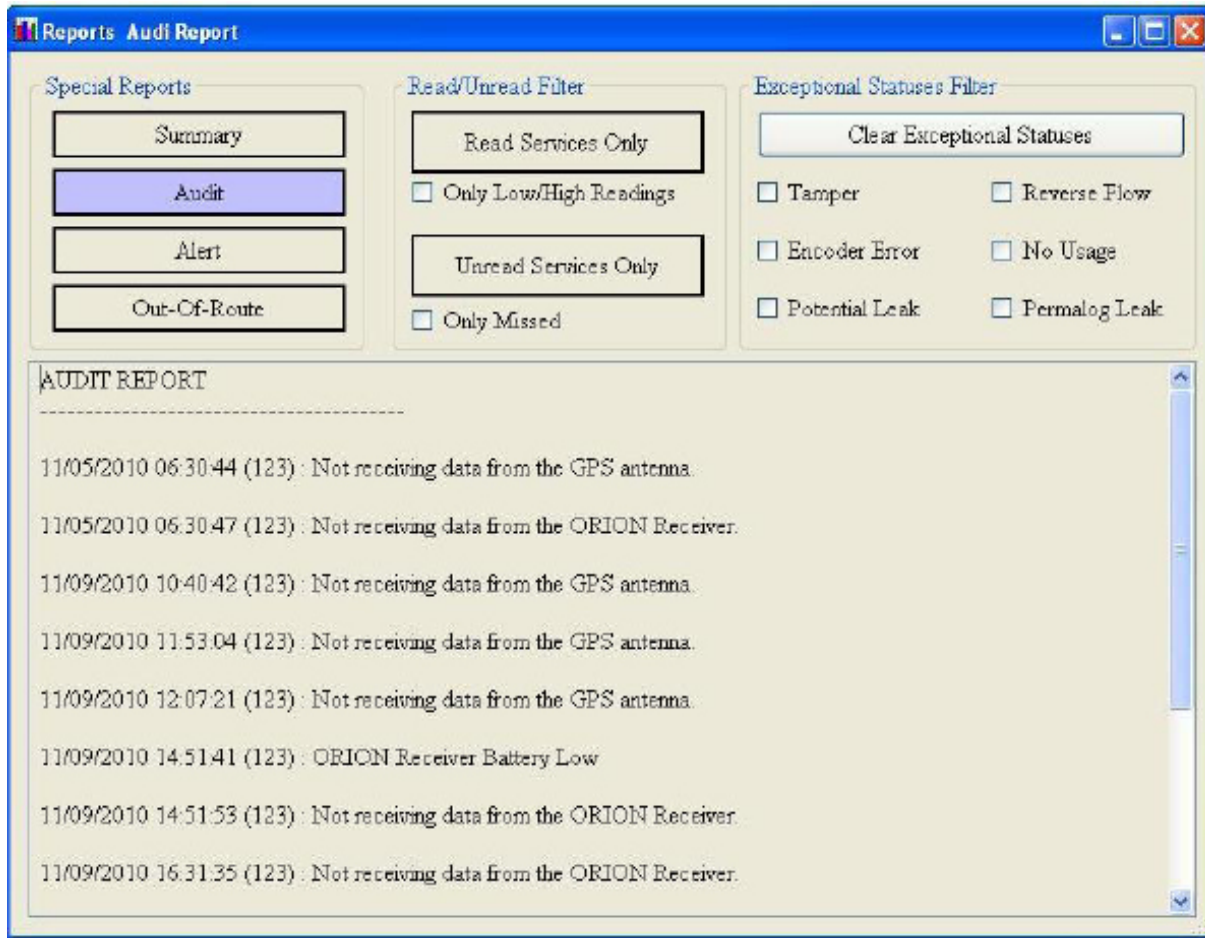


Figure 45: Audit Report

The audit report displays the following error alerts:

- GPS errors
- ORION receiver errors

Alert Report – The Alert report allows you to view each of the alert messages that have been displayed during meter reading.

These reports use the same format as List View.

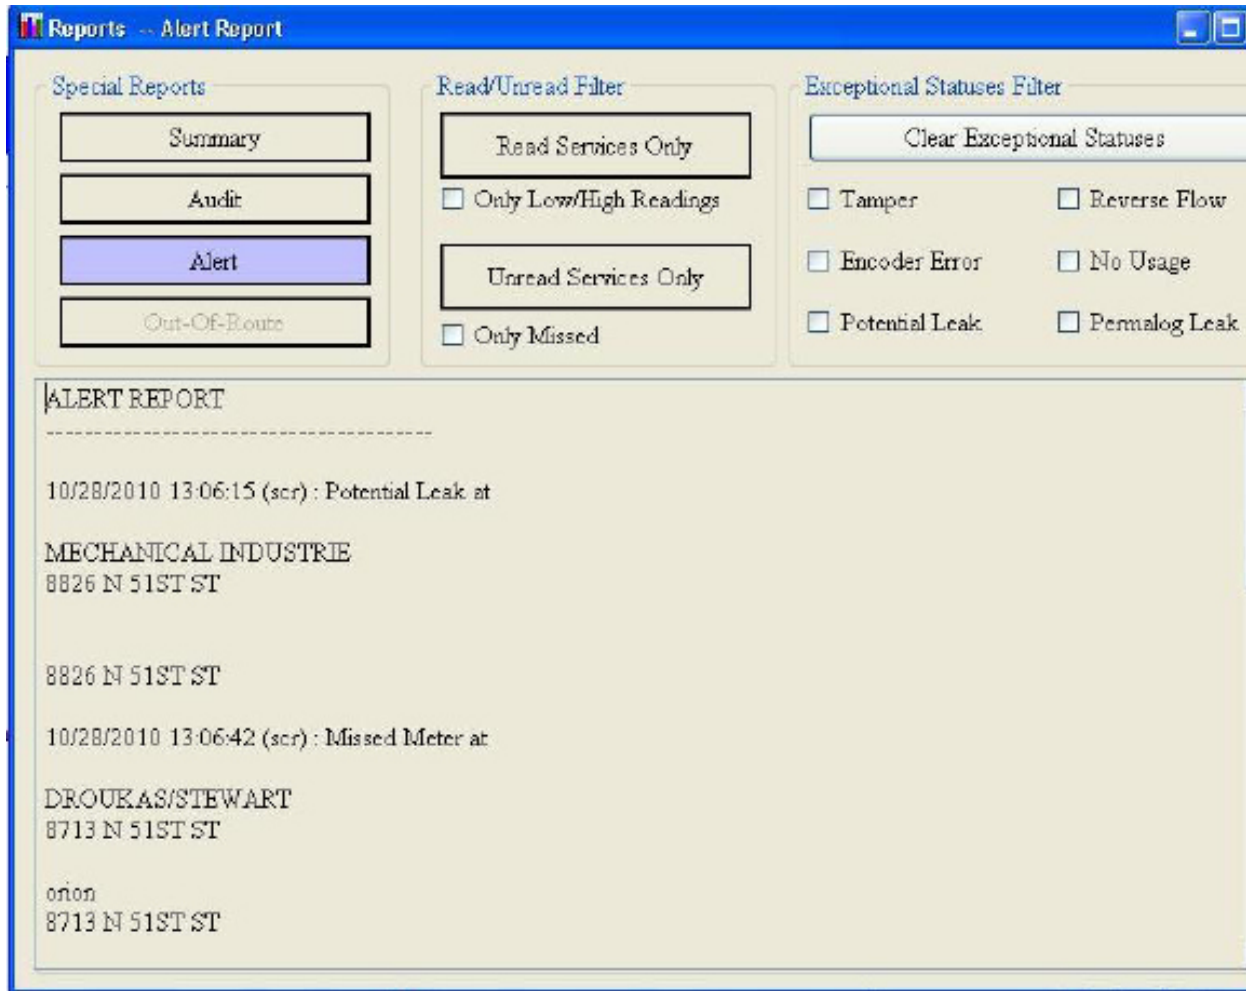


Figure 46: Alert Report

This report indicates potential leaks that were sited and provides the addresses associated with those potential leaks. It includes the time and date when the reading occurred.

Setup

The **Setup** button allows you to change the settings being used by the software in its operations. The settings are stored on the following five tabs:

- General
- Alerts
- Map
- Communications

User Interface

A password is required to access and change any settings. If you make changes to any of the tabs and you wish to save, select the **OK** button. If you wish to disregard the changes, select the **Cancel** button.

Note: If you did not change the password in the ORS, the initial password is "ORION."

1. Select the **Settings** button on the Tool Bar to see the Password Entry screen.



Figure 47: Password Entry

If an incorrect password is entered, the following prompt is displayed:



Figure 48: Incorrect Password

General Tab

The General Tab displays the **Units of Measure**, **Out-of-Route Options**, and **Geocoding Options**.

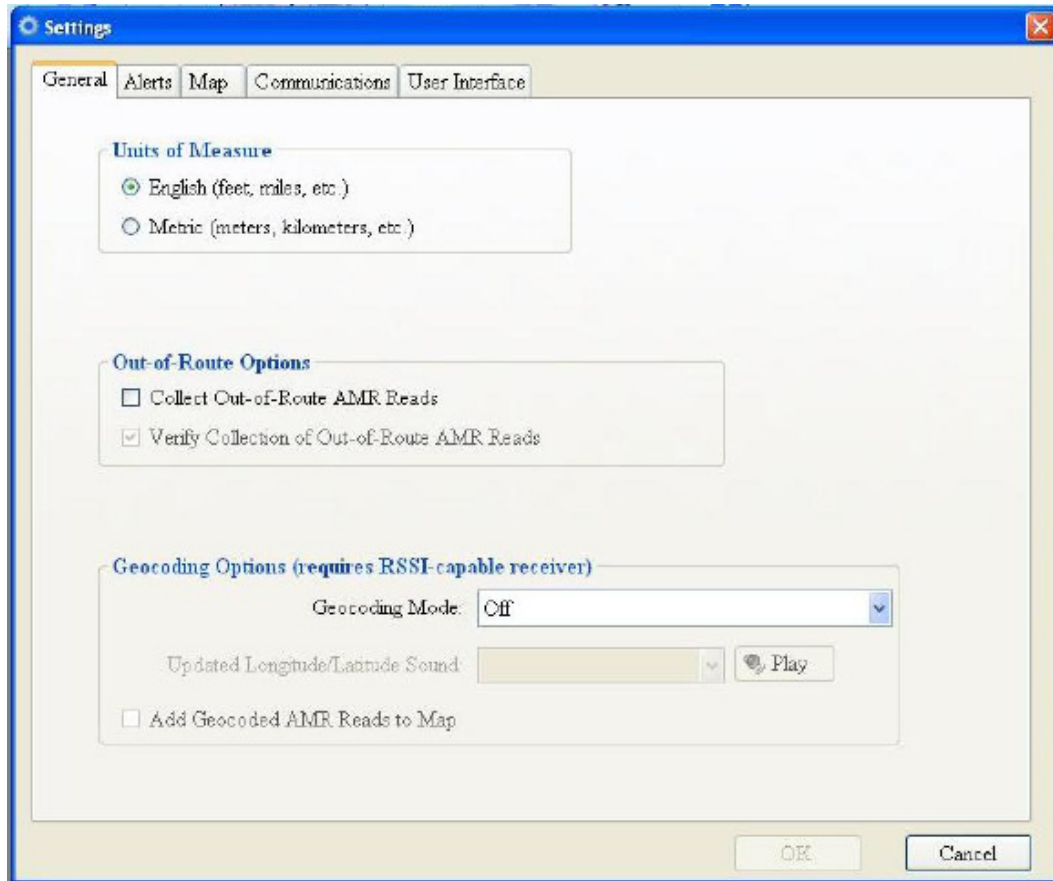


Figure 49: Settings - General Tab

- **Units of Measure:** Select English or Metric units
- **Out-of-Route Options:** If the Collect Out-of-Route AMR Reads box is checked, any readings received that are not in the route are logged and included when the route is unloaded. If the box is not checked, the laptop only records the readings for the meters in the route.
Note: When collecting out of route readings, the unload file can become large and may slow down the performance of the laptop. Badger Meter does not recommend collecting out-of-route readings during regular meter reading.

If	Then	Notes
the Verify Collection box is checked,	a software prompt that confirms your intention to collect readings outside of the route is displayed.	
the Verify Collection box is not checked,	this prompt is not displayed.	It is recommended that the box is checked.

- **Geocoding Options:** If the Geocoding Mode is ON (and you have an RSSI Receiver), the software will store the vehicle latitude and longitude coordinates for the meter’s location when the meter read message with the strongest signal is received. When geocoding, choose the type of audio alert for when meters are added to the map. Refer to the Geocoding section of this manual.

Alerts Tab

The **Alerts Tab** allows users to set alerts based on sound preferences. This option also allows the user to set pop up and flashing icon options.

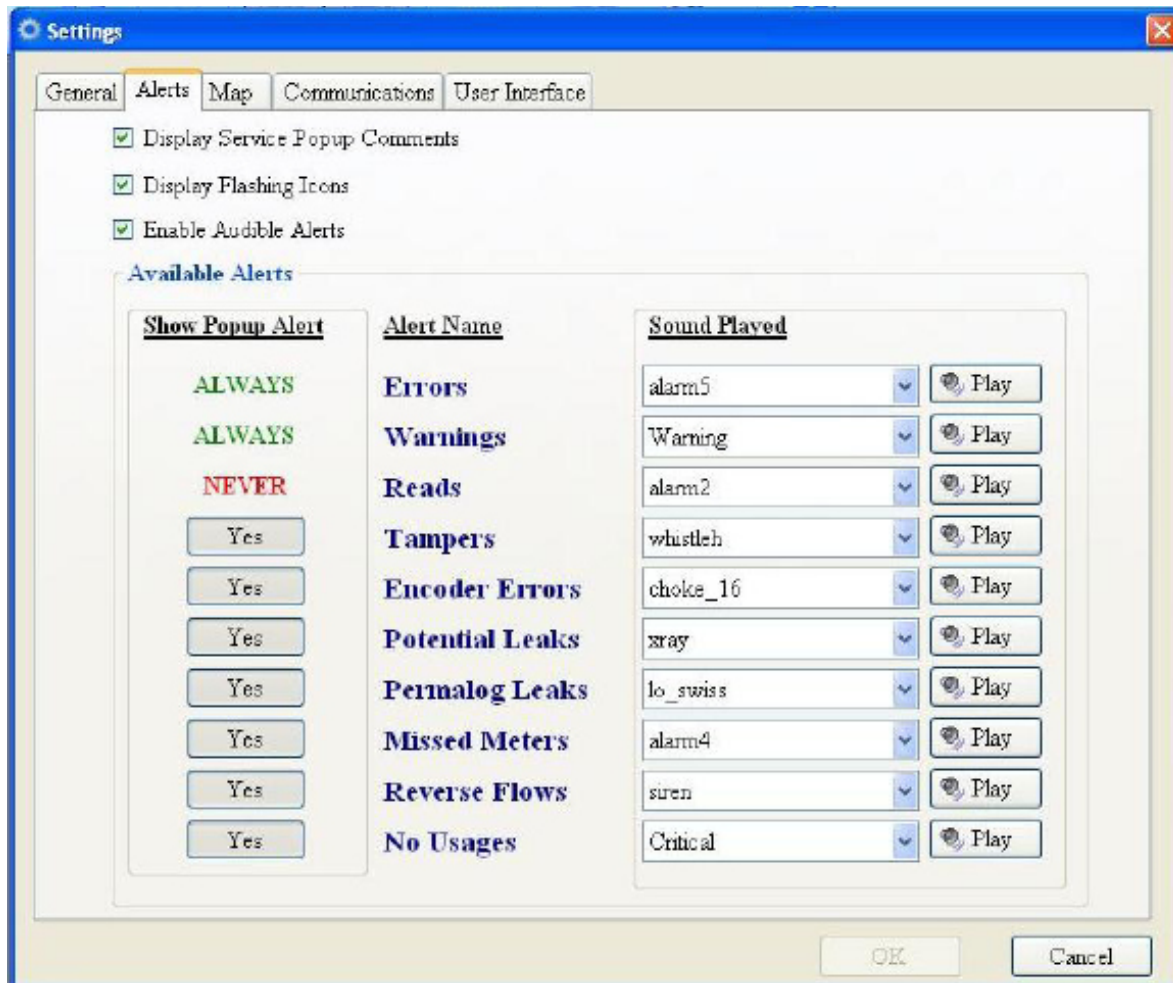


Figure 50: Settings - Alerts Tab

- **Display Service Popup Comments:** When the box is checked, any comments sent from the route management system that are associated with a particular meter will be displayed as an Alert Message. If unchecked, the alert will not appear.
- **Display Flashing Icons:** When this box is checked and the GPS or ORION Receiver is not communicating, the GPS and Receiver icons will flash.
- **Enable Audible Alerts:** When not checked, NO alerts will sound for ANY alerts. When checked, the sound chosen for each alert at the bottom of the screen will sound for that particular alert. Note that one of the options for an individual alert is SILENCE, and that a sound can be reviewed by selecting the Play Sound button.
- **Show Popup Alert:** The following options are available: Always, Never, Yes and No to change option settings for alert types as required.
- **Alert Name:** This option displays the alert names based on the type of the alerts, examples are Errors, Warnings, Tamperers, Leaks etc.
- **Sound Played:** The sound options provide a range of sounds. Based on user preference, a sound alert can be set for each alert type.

Map Tab

The Map Tab primarily displays the location, features, orientation and entry and exit zones for Maps. Users can customize the Map display based on their preferences.

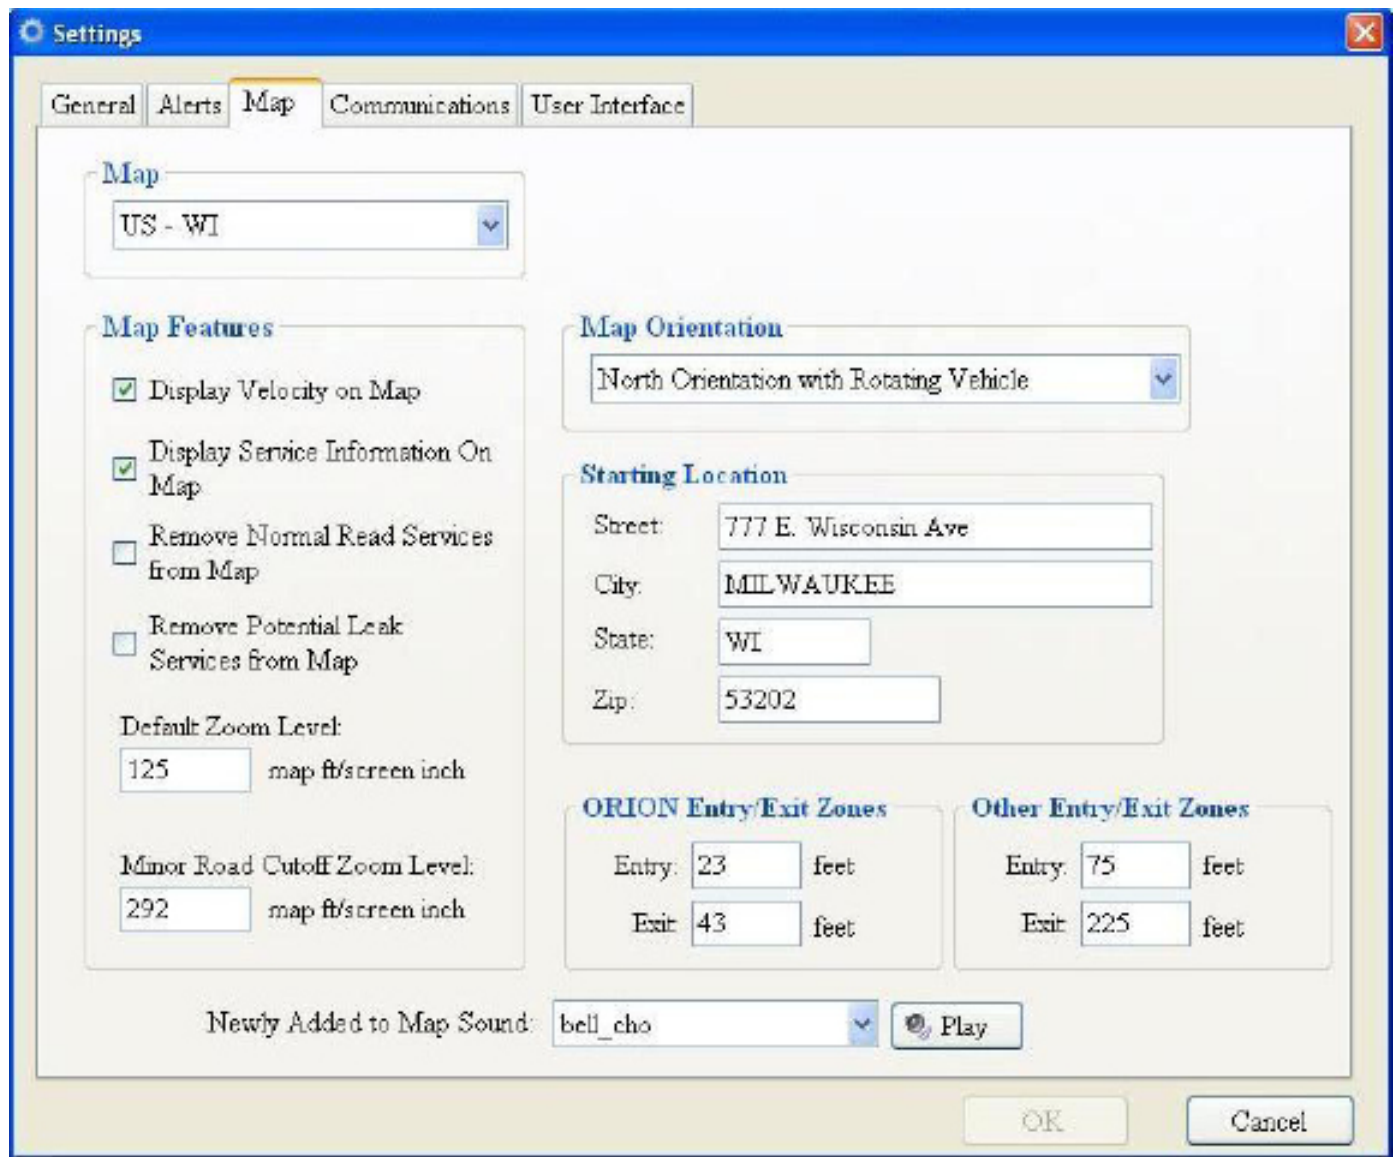


Figure 51: Settings - Map Tab

- **Map:** This field shows the state map that is currently loaded.
- **Map Features:** Select/deselect map information and detail:
 - **Display Velocity on Map:** When checked, this box displays the speed of the vehicle on the map.
 - **Display Service Information on Map:** When checked, the first field of information is displayed next to the meter icon.
 - **Remove Normal Read Services from Map:** When checked, the meter icon disappears when a successful reading is received. If unchecked, the green circle will be displayed.
Note: When you change the value of this setting, you must exit the software and restart it.
 - **Remove Potential Leak Services from Map:** When checked, the meter icon disappears when a potential leak is received. If unchecked, the red asterisk is displayed.

Note: When you change the value of this setting, you must exit the software and restart it.

- **Default Zoom Level:** A value of 250 will show 250 feet as 1 inch on the screen.
- **Minor Road Cutoff Zoom Level:** When zooming out past this value, only the major roads are visible.
- **Map Orientation:** Choose how the map is displayed while reading meters:
 - **North Orientation and Rotating Pointer:** The map shows north at the top of the screen and the pointer representing the vehicle will point in the current driving direction (the most common choice).
 - **North Orientation:** The map always shows north at the top of the screen.
 - **Rotating Map:** The top of the screen indicated the current driving direction; the map rotates as the vehicle turns corners.
- **Starting Location:** This address (or latitude / longitude coordinates) will show on the map when you Start Reading meters, until the GPS antenna reports the current location of the vehicle. From then on, the map will center at the location of the vehicle.
- **ORION Entry/Exit Zones:** These distances specify when an endpoint is within range of the receiver, and when it has moved out of range. If an endpoint was within range, and moved out of range without receiving a reading, that endpoint is marked as MISSED.
- **Other Entry/Exit Zones:** These zones are used for reading technologies other than ORION.
- **Newly Added to Map Sound:** When geocoding and a new meter is added to the map, you will hear the selected sound.

Communications Tab

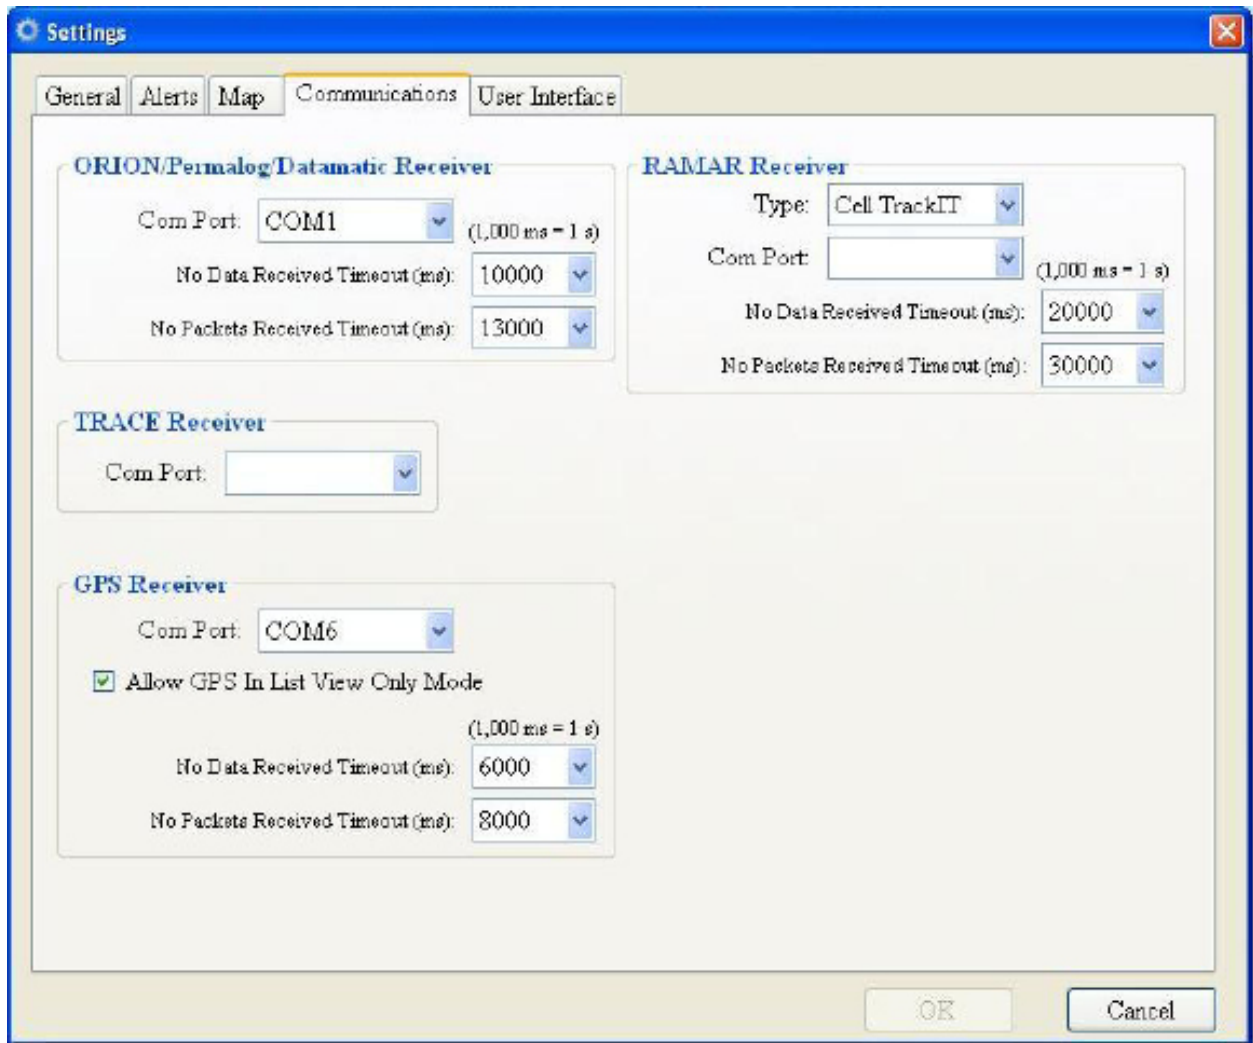


Figure 52: Settings - Communications Tab

- **ORION/Permalog/Datamatic Receiver:**
 - **Com Port:** The COM port assigned to the receiver.
 - **No Data Received Timeout (ms):** The time (in milliseconds) needed to determine that the GPS has stopped operating.
 - **No Packets Received Timeout (ms):** The time (in milliseconds) needed to determine that the receiver is malfunctioning.
- **TRACE Receiver:** If reading Trace meters, you must set the COM port.
- **GPS Receiver:**
 - **Com Port:**The COM port assigned to the GPS receiver.
 - **Allow GPS In List View Only Mode:** Set Latitude / Longitude values even when in List Mode.
 - **No Data Received Timeout (ms):** The time (in milliseconds) needed to determine that the GPS has stopped operating.
 - **No Packets Received Timeout (ms):** The time (in milliseconds) needed to determine that the receiver is malfunctioning.

- **RAMAR Receiver:** Choose the COM port and the type of RAMAR receiver you are using.
 - **Type:** Choose the type of RAMAR receiver you are using.
 - **No Data Received Timeout (ms):** The time (in milliseconds) needed to determine that the GPS has stopped operating.
 - **No Packets Received Timeout (ms):** The time (in milliseconds) needed to determine that the receiver is malfunctioning.

User Interface Tab

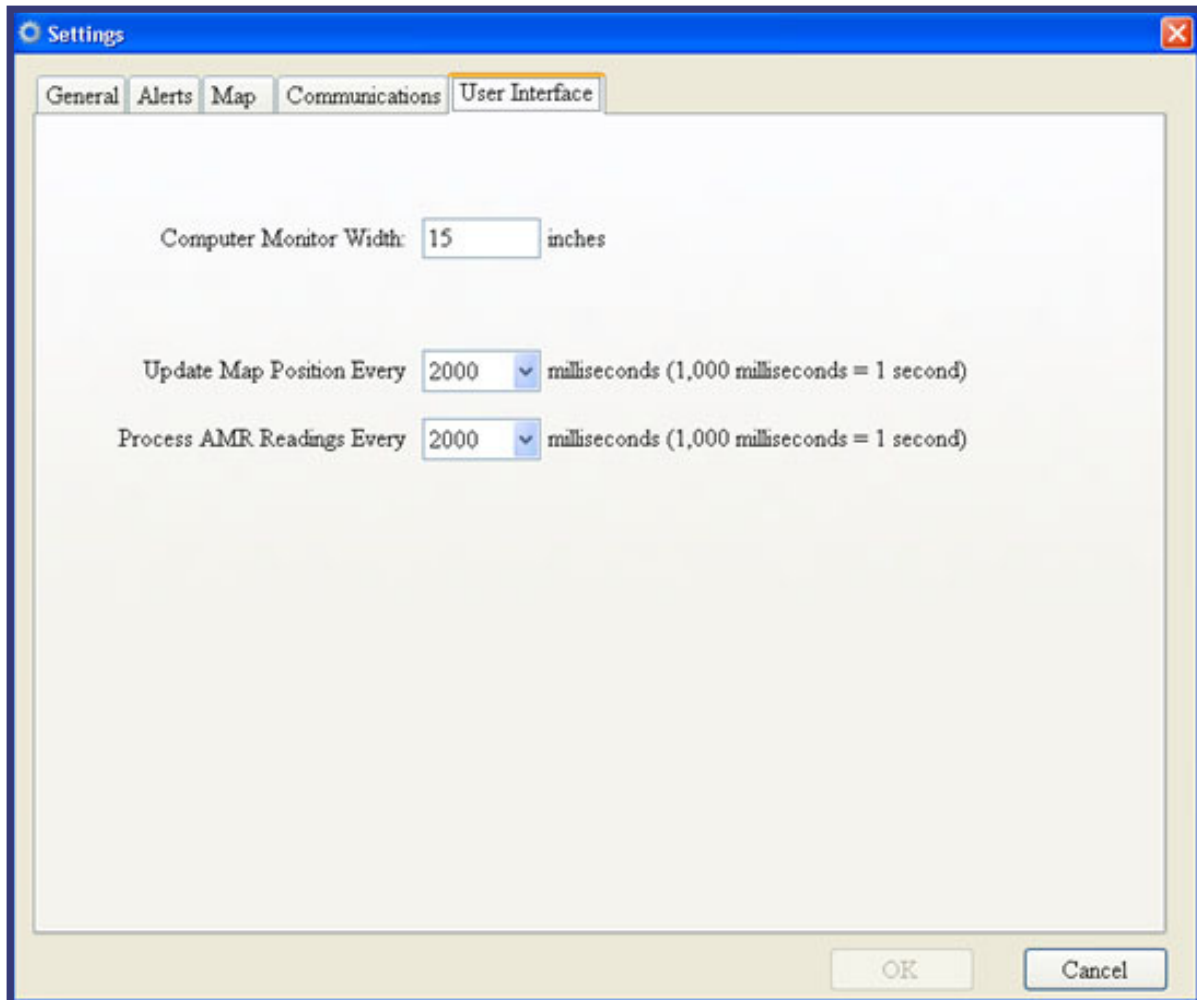


Figure 53: User Interface Tab

- **Computer Monitor Width** – For all Panasonic Toughbook computers, this field is set at the factory. If you are running ORS on a different computer, or you have recently updated the software, measure the width of the screen and enter it here.
- **Update Map Position** – This value (in milliseconds) specifies how often the map is updated for position.
- **Process AMR Readings** – This value (in milliseconds) specifies how often the acquired readings are processed.

Geocoding Meter Locations

To capture the approximate location of the meters automatically, the location coordinates (latitude and longitude) can be gathered automatically. The GEOCODE feature of the ORS Software assigns the current location of the vehicle to the meter when the meter reading transmission is received. Furthermore, to capture the closest location to the meter, the software will also store the location of the meter reading that had the strongest signal strength. This is possible through the use of the updated ORION Receiver, which reports the meter reading transmission information as well as the strength of the transmission that was received.

Note: You must have an ORION receiver that has the Signal Strength capabilities built into it.

To check if your receiver has these capabilities, please contact the Badger Meter Technical Support group.

Scenario

As an example, let's assume you are driving down a street with meters that require locations and the GEOCODE feature is turned on. When the first meter reading is received from a meter that requires a location, the software will store the reading, place the green dot on the map at the current location of the vehicle to show that the meter has been read, and make a sound indicating that the location is stored.

As you drive further down the road, you may receive more meter readings from that meter. If the signal strength from one of the meter readings is greater than the one that was stored above, the location of the meter is updated but no changes are made to the screen and no other sounds are heard.

Because the locations are updated whenever a meter reading with a stronger signal is received, the initial location of the meter as it is placed on the map may not be the location that is stored once the route is completed. For example, you might receive a meter reading from 52nd street while you are driving on 51st street. The icon will be added to the map on 51st street when the first meter reading is received. However, when driving on 52nd street, stronger meter readings will be received and the location information will be updated in the database, resulting in a stored location on 52nd street.

Because the location information is updated whenever a stronger meter reading signal is received, it is important when using this method to assign locations, that every street, alley, or access way be driven and that the slowest possible speed be used when driving. These techniques will maximize the number of meter readings received for each meter, yielding better location assignments.

Steps

The steps for setting the meter coordinates based on the signal strength are as follows:

1. Assemble the system and begin reading meters as usual.
2. When you arrive at the area where the latitude and longitude values are to be assigned, stop the vehicle
3. To begin geocoding, in the Settings, on the General tab, change the Geocoding Mode to one of these options:
 - Add Only: Meters that do not have location data will be added to the map.
 - Update only: Meters that already have location data will be updated, but no new meters will be added.

Note: If you wish to see an icon on the map for a new meter, be sure to check the box for Add Geocoded AMR reads to map.

4. The display changes to show that you are geocoding. Drive the route slowly (between 5 and 10 mph). As meter readings are received, the software logs the latitude and longitude values of each meter reading. The location values for the strongest reading received for each meter are stored.
5. If you drive over 15 miles per hour, the speed display will turn red and you will hear the siren sound. Slow down.
6. When you have completed storing locations, change the GEOCODE status to OFF on the General tab or the Settings screen. The display returns to the standard one.
7. When you unload the readings into Reading Data Management Software, the latitude and longitude values are unloaded.

The following observations can be made audibly or visibly:

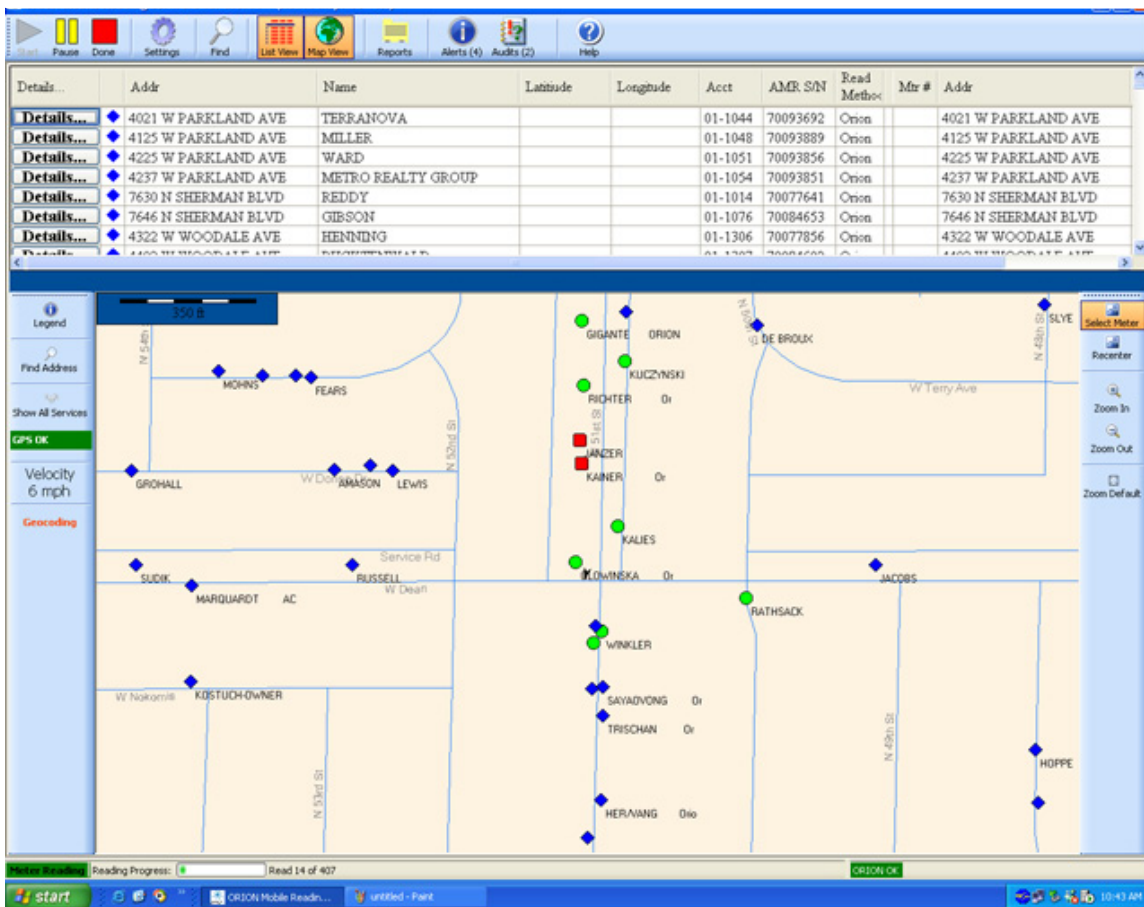


Figure 54: Geocoding

Once you click the GEOCODE button, you are slowly driving the route under 10 MPH, and a meter reading comes in that requires a location, you will hear a sound and the map display will show a new green circle for the meter that was just read. Each time you receive a meter reading from a meter that requires a location, you will hear the sound and see another green circle. In the background, the software is fine-tuning the location information for meters that require locations when a stronger meter reading transmission is received. However, you will not hear or see anything while that is happening. Once you have driven every street where coordinates are needed, you can set the GEOCODE setting to OFF, which will turn off the assignment of coordinates and return to normal operation.

Processing Meter Readings Not in the Route

There are times when it is convenient to read and store the readings of ALL the meters in an area, not just those meters included in the route. For these occasions, the ORION Mobile Reading Software provides the Out of Route Processing feature. When enabled, the features will log the readings of all meters it encounters as if they were in the route. The readings can also be unloaded for use in billing.

The Out-of-Route Processing feature works as follows: When a reading is received, the software stores the reading in the route and marks the meter as read. If the meter is not in the route, it is added to a table of Out of Route meters. If you wish to view the meters that have been saved that are not in the route, you can display the Out of Route Report from the Reports screen.

The Out-of-Route Processing is enabled on the “General” Settings screen.

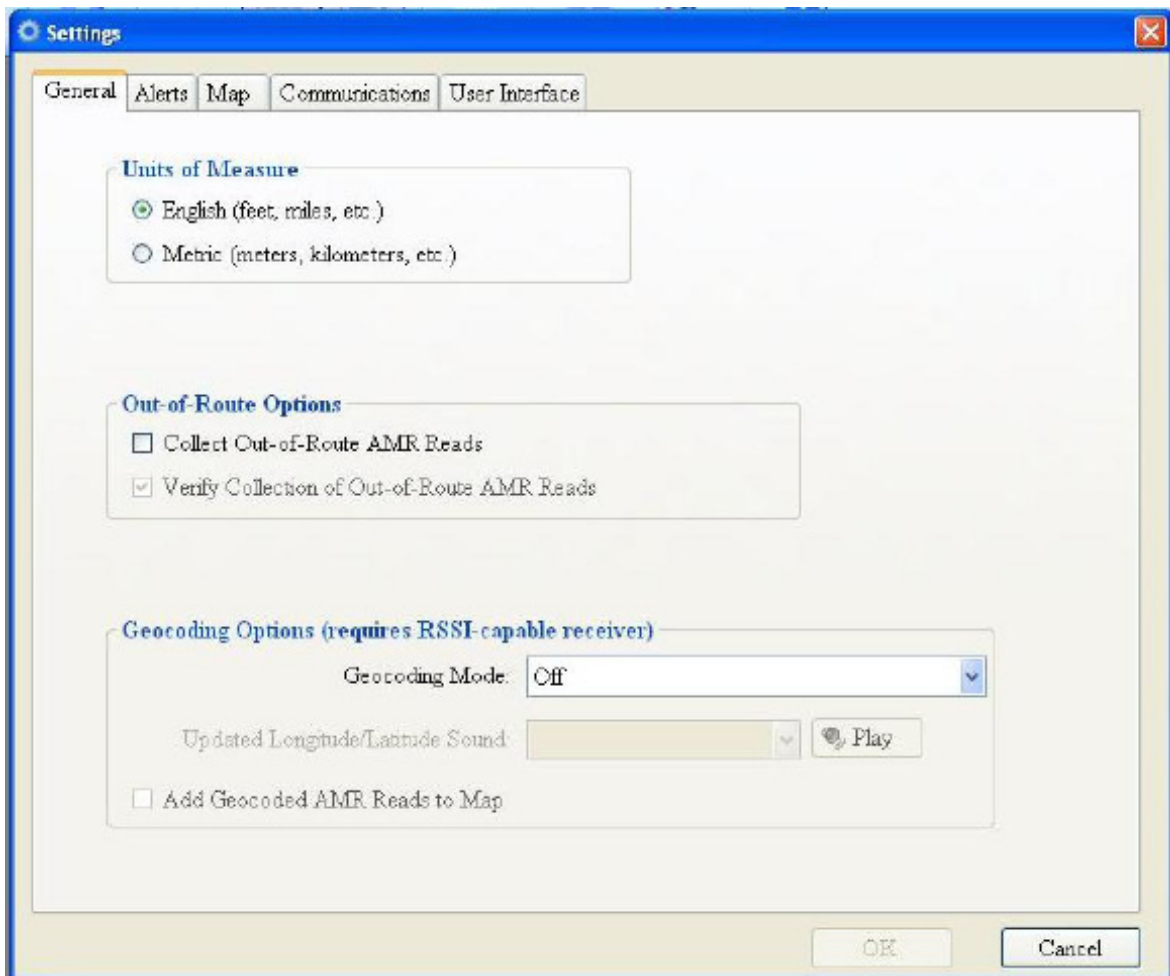


Figure 55: Settings Tab

If	Then
the Collect Out-of-Route Reads is not checked,	the ORION Mobile Reading Software performs normal route meter reading.
the Collect Out-of-Route Reads field is checked,	the other option becomes available.
the Verify Collection of Out-of-Route Reads field is checked,	a software prompt asks you whether or not you want to read Out-of-Route meters when you press the Start Reading Meters button.

This is handy in the event you are reading Out-of-Route meters on one day, and performing normal meter reading on the next day. If you forget to turn off the Out-of-Route reading, you will be reminded to do so before you begin normal meter reading.

Note: It is recommended that you always have this field checked.

The second field, **Verify Collection of Out-of-Route** AMR Read icons on Map, if checked, displays question marks on the map display where an Out-of-Route reading was received.

Out-of-Route Reading Example:

Let's assume that you have the Collect Out-of-Route Reads and Verify Collection of Out-of-Route Reads fields checked. On the main menu, before loading a route, the Start Reading Meters button is available, allowing you to gather any readings heard.

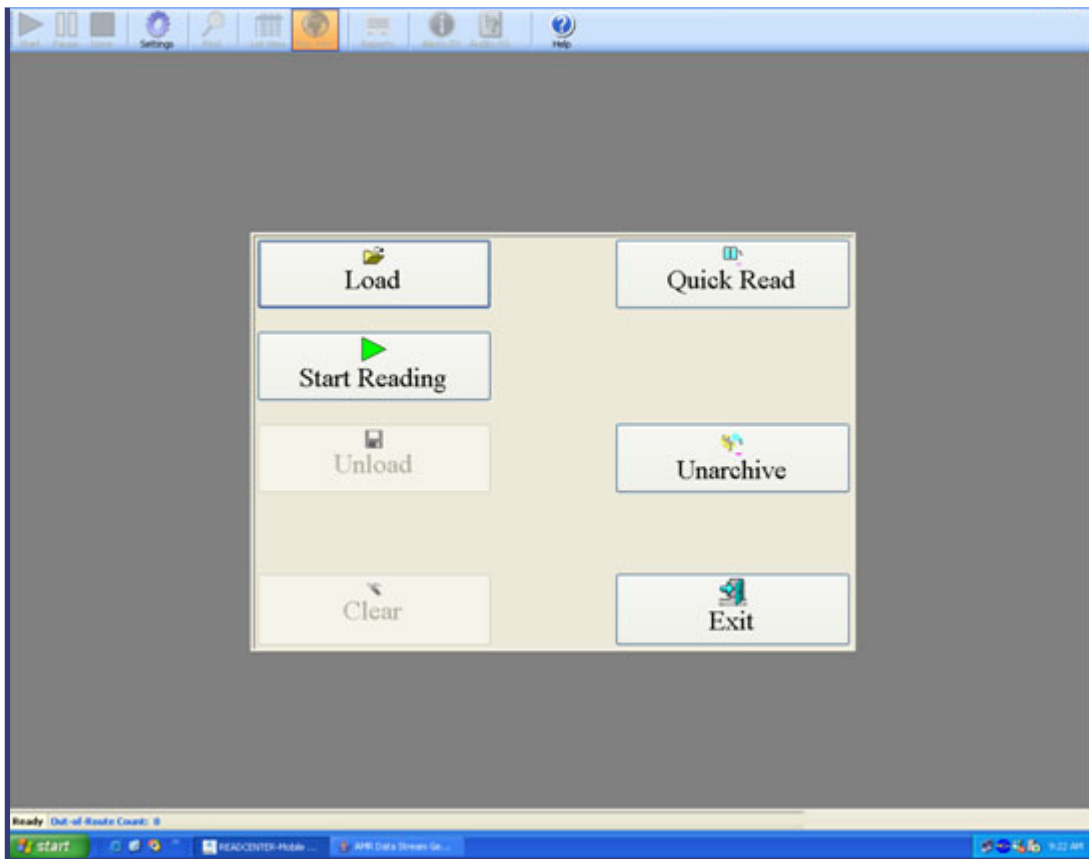


Figure 56: Main Menu

Once the route is loaded and you click Start Reading Meters, the following prompt is displayed to confirm your intention to collect out-of-route meter readings.

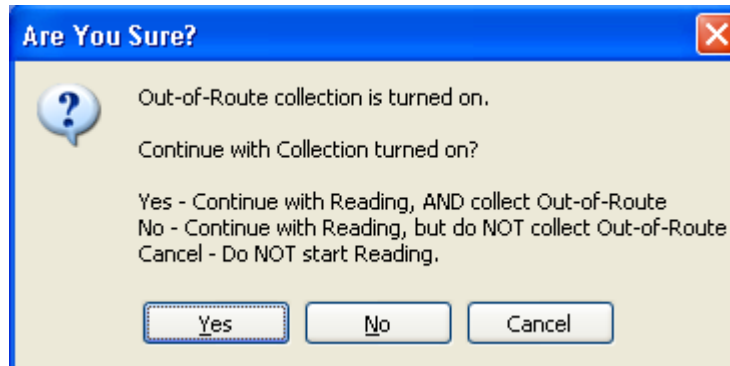


Figure 57: Confirmation Prompt

- 8. If you wish to collect Out-of-Route Readings, click **Yes**.
- 9. If you click **NO**, the Out-of-Route processing is turned off automatically.
Note: You do not need to proceed to the Setup screen to turn off the Out-of-Route Reading feature.

Note: When reading Out-of-Route meters the status bar at the bottom shows the status of the route as well as the number of meters read that were not in the route.



Figure 58: Status Bar

The Summary report shows the number of Out-of-Route meters read.

10. If you select the Out-of-Route Report button, the Out-of-Route Report is displayed.

	Actual Read Method	AMR S/N	Read Date/Time	Reading
Details...	Onon	70000453	1/26/2010 9:24:53 AM	65
Details...	Onon	76881636	1/26/2010 9:24:53 AM	0
Details...	Onon	70169788	1/26/2010 9:24:54 AM	1
Details...	Onon	70000888	1/26/2010 9:24:54 AM	0
Details...	Onon	70000004	1/26/2010 9:24:55 AM	0
Details...	Onon	70055555	1/26/2010 9:24:55 AM	5
Details...	Onon	70161983	1/26/2010 9:24:56 AM	0
Details...	Onon	70000439	1/26/2010 9:24:56 AM	4
Details...	Onon	71190004	1/26/2010 9:24:56 AM	4
Details...	Onon	70052847	1/26/2010 9:24:56 AM	123
Details...	Onon	70126073	1/26/2010 9:24:56 AM	234
Details...	Onon	70052857	1/26/2010 9:24:57 AM	345
Details...	Onon	70126083	1/26/2010 9:24:57 AM	456
Details...	Onon	70131207	1/26/2010 9:24:58 AM	1
Details...	Onon	1637778887	1/26/2010 9:24:58 AM	333
Details...	Onon	1637089298	1/26/2010 9:24:59 AM	444
Details...	Onon	1637089309	1/26/2010 9:24:59 AM	555
Details...	Permalog	60000001	1/26/2010 9:25:00 AM	4212
Details...	Permalog	60000002	1/26/2010 9:25:00 AM	108762

Figure 59: Out-of-Route Report

When meter reading is completed and you unload the route, those meter readings that were not in the route will be added to the unload file. The Reading Data Management Software will then include them in the Unload report, and store them if they are in the database.

If you chose to display the Out-of-Route meters on the Map display, the ORION Mobile Reading Software will log the location of the meter reading on the map with a question mark “?” icon.

Unload

Once you complete the meter readings, use the **Unload Meter Readings** button on the Main Screen to write the meter reading data. The readings can then be uploaded into the Reading Data Management Software.

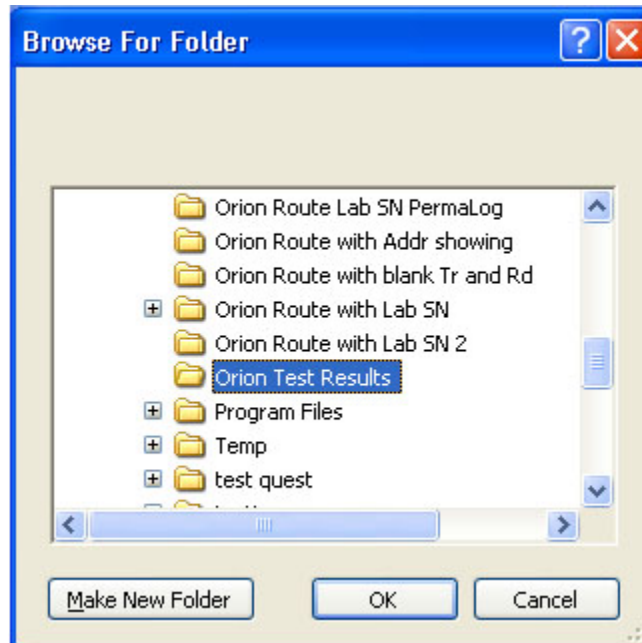


Figure 60: Unload Data

When you unload, the data gets automatically archived in case the disk is misplaced or destroyed before uploading to Reading Data Management Software. Select the **Unarchive** button if you need to access meter readings from a prior reading session.

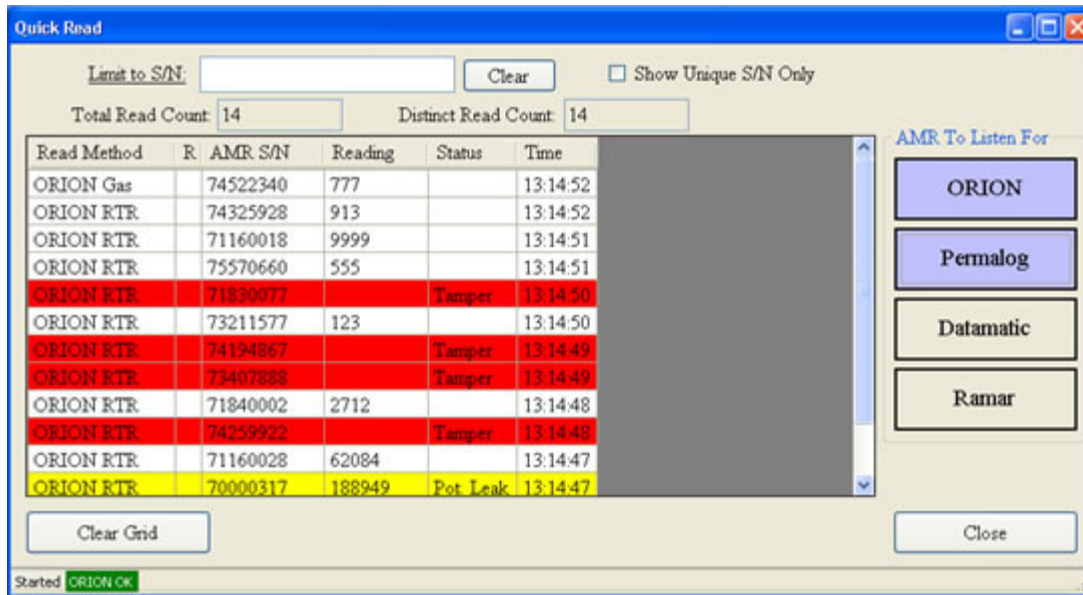



Figure 61: Endpoint Reading

Note: You can use the slider bar to view all the readings.

- When you are done with the Quick Read screen, click **Close**.

Unarchive


The **Unarchive** button loads back a prior route of readings so that the user can save the data (unload) to a disk.

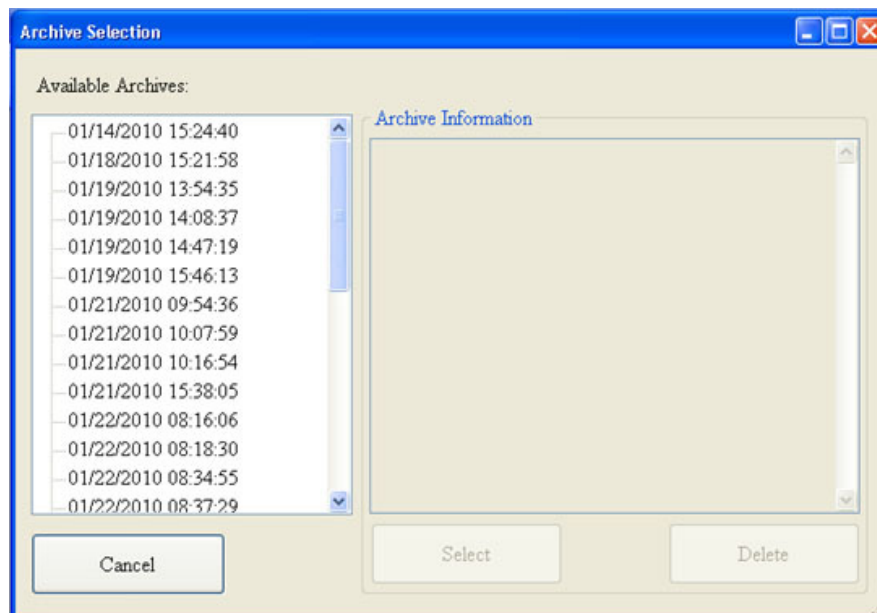


- Based on the time and date, select the reading session you want to restore and click **OK**.
Result: The readings will be restored and you will return to the main menu, allowing you to Unload the readings again.
- If you wish to remove a route from the Archives, select the route and then select the **Delete** button.
Result: The following ORS prompt is displayed to verify if you wish to remove the screen:

Unarchive

The **Unarchive** button loads back a prior route of readings so that the user can save the data (unload) to a disk.

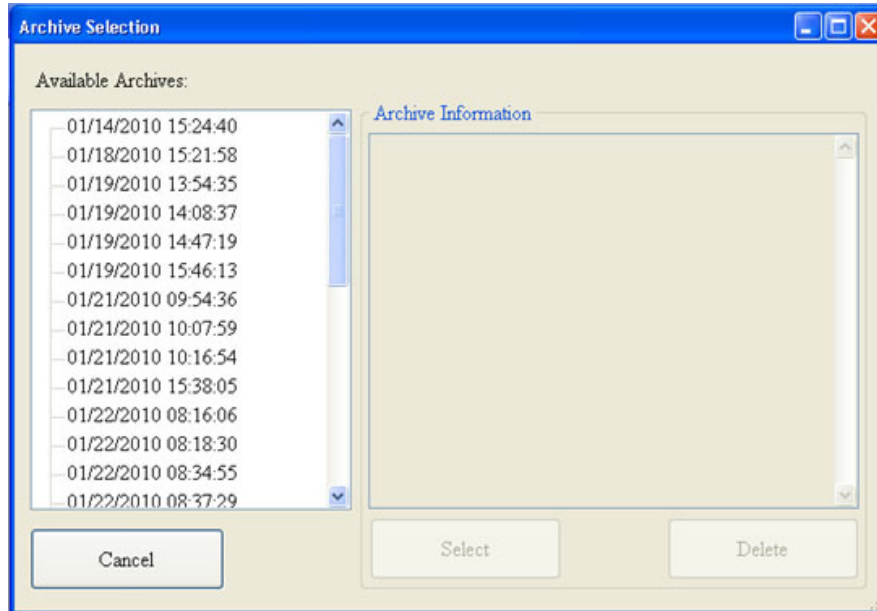


1. Based on the time and date, select the reading session you want to restore and click **OK**.
Result: The readings will be restored and you will return to the main menu, allowing you to Unload the readings again.
2. If you wish to remove a route from the Archives, click on the route and click **Delete**.
Result: A prompt appears asking if you really wish to delete the route?

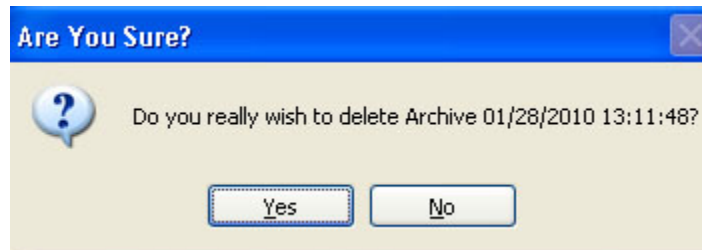

3. Click **Yes** to delete the route from the Archive or No to return to the Main Menu.
Note: It is recommended that you do not delete any archived routes until after the following month's meter reading is completed.

Clear

The Clear Meter Sequence Data button deletes all current meter sequence data that is currently loaded. It will ask you if you are sure you want to delete all of the meter reading information currently active in ORS.

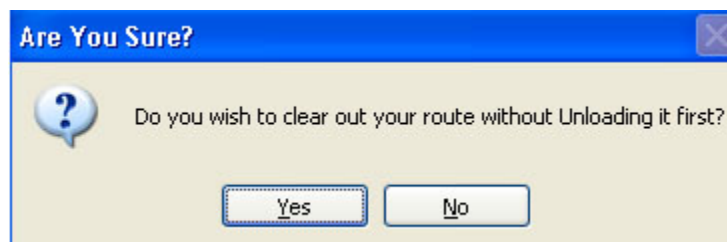

4. If you answer **Yes**, all of the reading information will be cleared, and you will be able to load a new route. If you answer **No**, you will return you to the Main Menu.

Exit

To end the software session, click **Exit**.

What If Things Go Wrong

During the normal course of operations, ORS may run into problems. These problems can occur in a number of different areas:

- When ORS finds information in the data base that it was not expecting,
- When ORS does not find the expected information.
- When the data base inside ORS reports a problem
- When the operating system on the laptop reports a problem.

While errors do not occur normally, errors can occur in any software product. This section gives you guidelines on how to respond to the times when ORS reports a problem.

Using Technical Support

When you call 1-800-456-5023, a Support Specialist will answer. Describe the issues that you are experiencing in the ORS including the information you recorded.

Note: Use information from the recorded text and notes created in the trouble section of the software. Provide the following information to the Support Specialist:

- The steps being performed on the screen
- Any entries that were made to the screen
- The message in the error window, including any error code and explanation that is shown
- The current state of the laptop

Your Support Specialist may ask you to fax notes or other information to Badger Meter to assist in the investigation.

What To Report To Customer Support

It is important that you report all occurrences of error windows to the Customer Support Hotline. It allows Badger Meter to improve its products and improve your system at the same time. In some cases, the error may have already been resolved, and the Support Specialist can send you a software upgrade to correct the problem. In other cases, the Support Specialist can direct you to perform a function in a certain way so that the error does not occur.

In certain cases, the Support Specialist will direct you to perform some additional steps, if the problem recurs. These are valuable instructions that will speed up the investigation and restore your system to normalcy. If the problem does recur, follow those steps and call the Hotline. The Support Specialist will gather the information for that particular problem, and direct you accordingly, if further action is required.

Faxing the Customer Support Group

The Badger Meter Technical Support Group can also be reached by fax at 1-888-371-5982. This may be a convenient way to follow up with your support specialist on particular steps. This number is in service 24 hours per day, 7 days per week.

E-Mailing the Customer Support Group

The Badger Meter Customer Support Group is also available via electronic mail through the Internet. To send questions or comments to the Customer Support group, address your e-mail to **TechSupport@BadgerMeter.com**. The Customer Support Group can respond to your comments or questions via phone, fax, or e-mail. Just let us know in your message the type of response you would prefer.

Intentional Blank Page

Intentional Blank Page

ORION® is a registered trademarks of Badger Meter, Inc.
Other trademarks appearing in this document are the property of their respective entities.

Copyright 2010, Badger Meter, Inc. All rights reserved.



Due to continuous research, product improvements and enhancements, Badger Meter reserves the right to change product or system specifications without notice, except to the extent an outstanding contractual obligation exists.

Badger Meter | P.O. Box 245036, Milwaukee, Wisconsin 53224-9536
800-876-3837 | infocentral@badgermeter.com | www.badgermeter.com