

User Manual

FCC ID: UZI-W120



Writing board



cover



stylus



USB cable

Getting start

1. Please wait for fully charged at first charge(the green light on).
2. Battery life: Up to 10 days(Under normal usage)
3. Changing battery might cause damage, our warranty doesn't cover damage caused by unauthorized modifications.
4. Please keep away from the extremely environment.
5. Don't use organic solvent to clean the machine, it might damage the surface.
6. The recommended charging voltage is 5V ,500mA.
7. When machine is not working, please insert a paperclip into the hole on rear of the machine to force power off, then press power button to restart the machine.

Bluetooth Pairing

1. Please make sure the distance between the mobile device and the machine is within 5 meters while pairing.
2. please finish pairing before first usage.
 - I. Pair with PC: Please download our software and connect the machine to your PC via the USB cable, and wait for it to finish.
 - II. Pair with mobile devices: Please download our free application from App Store or Google Play, and follow the instruction in our application to finish the first pairing.

The Federal Communication Commission Statement

This equipment has been tested and found to comply with the limits for a Class B Digital Device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction, may cause harmful interference to radio communication. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of more of the following measures: -

- **Reorient or relocate the receiving antenna.**
- **Increase the separation between the equipment and receiver.**
- **Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.**
- **Consult the dealer or an experienced Radio/TV technician for help.**

Use only shielded cables to connect I/O devices to this equipment. You are cautioned that change or modifications not expressly approved by the party responsible for compliance could void your authority to operate the equipment.

THIS DEVICE COMPLIES WITH PART 15 OF FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:

- 1 This device may not cause harmful interference and
- 2 This device must accept any interference received, including interference that may cause undesired operation.

The antenna used for this transmitter must not be collocated or operation in conjunction with any other antenna or transmitter.

Notice : The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

IMPORTANT NOTE: To comply with the FCC RF exposure compliance requirements, no change to the antenna or the device is permitted. Any change to the antenna or the device could result in the device exceeding the RF exposure requirements and void user's authority to operate the device.

- After finishing pairing, you will be able to upload your screenshot to your devices or synchronize the machine's screen across your devices.

Introduction



- | | | |
|---|--|---|
| 1 | Micro USB | charging hole |
| 2 | power indicator | <ul style="list-style-type: none"> ● Green light on - power on/ fully charged ● Red light on - charging ● Red light blinking - low battery power ● Green light blinking - uploading via USB cable |
| 3 | Connection status indicator (Blue light) | <ul style="list-style-type: none"> ● Blue light on - connected ● Blue light blinking - data uploading ● Blink once - Bluetooth start connecting |
| 4 | Power button | Press to turn on machine |
| 5 | Erase button | Press to erase the screen |
| 6 | APP button | |
| 7 | Upload button | Press to upload screenshot |
| 8 | Writing pen | |
| 9 | Reset button | Insert a paperclip to force shut down machine. |