

MIPOW Portable Bluetooth Stereo speaker

USER MANUAL BOOMAX with incredibly big sound!

BTS1000 aptX



PLEASE READ THE MANUAL BEFORE USE

WELCOME
Thank you for purchasing MIPOW BOOMAX. We hope you enjoy it!

BOOMAX CAN:
Connect wirelessly by Bluetooth to Phones, Tablets and Laptops.

Play music with CD music quality (i.e. apt-X) sound with bass and volume control.

Chat with your friends on your phone, tablet or PC
- Use BOOMAX as a portable speakerphone to make calls, answer calls and more...

ENGLISH BOOMAX	Contents Page
1 ABOUT BOOMAX	1
2 ACCESSORIES BOOMAX	2
3 SPECIFICATIONS BOOMAX	3
4 OPERATION & VOICE PROMPT BOOMAX	4-7
5 TURN ON / TURN OFF BOOMAX	8
6 PAIRING with your 1st Phone BOOMAX	9-12
7 PAIRING with your 2nd Phone BOOMAX	13-14
8 PLAY MUSIC BOOMAX	15-16
9 TALKING - Paired with One Phone BOOMAX	17-19
10 TALKING - Paired with Two Phones BOOMAX	19
11 WIRED CONNECTIONS BOOMAX	20
12 LED INDICATOR BOOMAX	21
13 CHARGING BOOMAX	22
14 TROUBLE SHOOTING & FAQ BOOMAX	23
15 CARE INSTRUCTIONS BOOMAX	24
16 ENVIRONMENTAL PROTECTION BOOMAX	25
17 FCC STATEMENT BOOMAX	26
18 WARRANTY CARD BOOMAX	27
19 CUSTOMER SERVICE CENTER BOOMAX	28

 
1 ABOUT BOOMAX

BOOMAX is a Bluetooth V4.0 compliant, low energy Bluetooth medium size speaker with incredibly big and clear CD music quality sound (i.e. apt-X) and bass. It is compatible with most smart phones, tablets, notebooks, PCs, and most devices with built-in Bluetooth.

BOOMAX comes with its stereo output power of 3 Watts x 2, its classic shape matches well with the carefully chosen anodized aluminum-alloy colors, it also comes with a detachable handle suitable for outdoor use. With built-in microphone, it can be used as a portable Bluetooth speakerphone.

The built-in battery can support up to 12 hours talk time and 12 hours playing music time (i.e. depending on volume and music type). Its compact size and only measures 110(W) x 56(L) x 92(H)mm. With its voice guidance, BOOMAX tells you what you need to know about the pairing.

2 ACCESSORIES BOOMAX

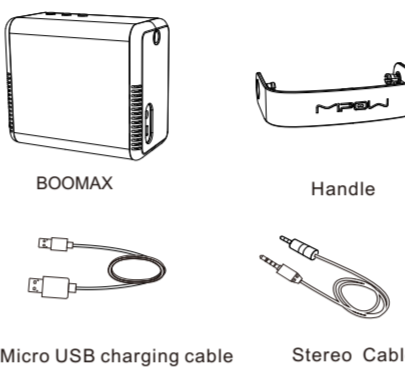

BOOMAX Handle
Micro USB charging cable Stereo Cable

3 SPECIFICATIONS BOOMAX

Model : BTS1000
Talk time : Up to 12 hours
Music playing time : Up to 12 hours depending on volume and music type
Standby time : Up to 125 days
Charging time : 3-4 hours (for full)
Weight : 370 grams
Dimensions : 110(W)x56(L)x92(H)mm
Colors : light blue /chocolate /red /pink
Bluetooth Version : 4.0
Multipoint : Connected two mobile phones or Bluetooth devices simultaneously
Wireless range : 10m (33 feet)
Supported Profiles : A2DP 1.2/AVRCP 1.4 /HFP 1.6 (HD Voice)
Supported Decoders : apt-X/AAC/MP3
Supported 3.5mm jack : with supplied 3.5mm stereo jack cable
Charging Plug : 5 PIN micro-USB, B Type

4 OPERATION BOOMAX

Function	Operation	Voice prompt/Tone
Pairing	Press & hold [Power] for 7s	"Boot music"...pairing
Turn On	Press & hold [Power] for 3s	"Boot music"
Turn Off	Press & hold [Power] for 4s	"Turn off music"
Answer call	Tap the [Call] button	"Continuous... beep"
Hang up	Tap the [Call] button	"Beep"
Reject call	Double-Tap [Call] button	"Beep Beep"
Redial	Double-Tap [Call] button	"Beep"
Cancel dial	Tap the [Call] button	"Beep"

4 OPERATION...Continued BOOMAX

Function	Operation	Tone
Voice dial	Press & hold [Call] + [Call] both buttons for 1s	"Beep"
Stop voice dial	Press & hold [Call] + [Call] both buttons for 1s	---
Play / pause	Press & hold [Play] button for 1s	"Beep"
Last song	Press & hold [Play] button for 2s	---
Next song	Press & hold [Play] button for 2s	---
Switch phone & headset	Press & hold [Call] button for 3s	"Beep"

4 OPERATION...Continued BOOMAX

Function	Operation	Tone
Volume Up	Tap the [Volume Up] button	"Beep"
Volume Down	Tap the [Volume Down] button	"Beep"
Answer call while playing music	Tap the [Call] button	---
EQ Select	Simultaneously press [EQ] + [Call] both buttons while playing music	"Beep"


4 OPERATION...Continued BOOMAX

Function	Operation (paired 2 phone)	Tone
When 1st phone on call, 2nd phone is calling (Answer the 2nd phone call & End the 1st phone call)	Tap the [Call] button	"Beep"
When 1st phone on call, 2nd phone is calling (Answer the 2nd phone call & Hold the 1st phone call)	Double-tap [Call] button	"Beep"
When 1st phone on music, 2nd phone is calling (Answer the 2nd phone call & 1st phone music pause, call end & music resumes)	Tap the [Call] button	"Beep..."

VOICE PROMPT

Function	Voice Prompt
Pair	"Pairing"
Turn On	"Boot music"
Turn Off	"Turn Off music"
Low battery	"Battery low"

 5 TURN ON / TURN OFF BOOMAX

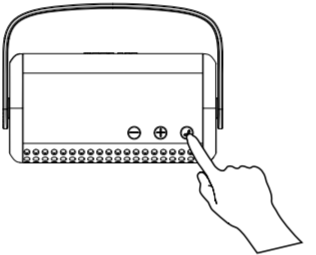

- Press & Hold [Power] button for 3 seconds to **Turn on** BOOMAX, a white LED blinks twice and "boot music" will be heard.
- Press & Hold [Power] button for 4 seconds to **Turn off** BOOMAX, a white LED lights up for 2 seconds and "Turn off music" will be heard.

6 PAIRING with your 1st Phone BOOMAX

Pair BOOMAX with your 1st phone

Step 1. Activate Bluetooth on your phone

Step 2. Turn on Bluetooth On an iPhone, iPod or iPad
Go to SETTINGS > GENERAL > and enable Bluetooth.

On a Blackberry
Go to SETTINGS/OPTIONS > BLUETOOTH and enable Bluetooth.

 
On an Android Phone
Go to SETTINGS > WIRELESS & NETWORK > Bluetooth Settings and enable Bluetooth.

Other Cell Phones
Review the user manual that came with your phone

6 PAIRING with 1st Phone...Continued BOOMAX


Turn on your Bluetooth on your BOOMAX

- Press & Hold [Power] button for 7 seconds on your BOOMAX to activate pairing mode of the BOOMAX.
- * you will hear the "boot music" at the 3rd second and the voice prompt "pairing" at the 7th second and white LED will blink during pairing.

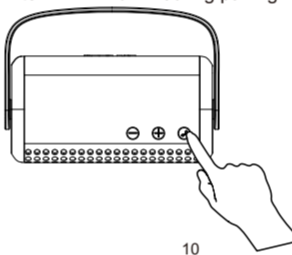

6 PAIRING with 1st Phone...Continued BOOMAX

 
- Open your phone's Bluetooth settings, add or search for devices when "MIPOW_BOOMAX" appears, select it or enter pass code "0000" if asked.

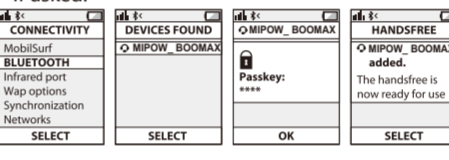

- You will hear "beep" sound from BOOMAX when paired with your phone, the LED flashes once every 7 seconds when paired.
- If the BOOMAX is connected before, it can be re-connected again when it is in standby mode.

6 PAIRING with 1st Phone...Continued BOOMAX

 Battery meter on iPhone shows up automatically when connected. Pairing is successfully completed.

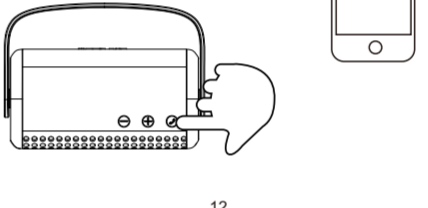


Battery level shows on screen

7 PAIRING with your 2nd Phone BOOMAX

Pairing with TWO phones for the first time

- When BOOMAX needs to pair with a second device, it needs to be restarted and reactivate the pairing mode.
- Go to your phone's Bluetooth settings, add or search for devices when "MIPOW_BOOMAX" appears, select it or enter passcode "0000" if asked.
- "beep" tone will be heard when paired.



7 PAIRING with 2nd Phone...Continued BOOMAX

 
NOTE :
If your BOOMAX is connected before, then you just need to Press & Hold [Power] for 2 seconds to reconnect the Second phone. Otherwise, you need to repeat the steps in 7. (i.e. Pages 10 - 13) for the pairing details.

Clear the old paired information
Simultaneously Press & Hold [Call] + [Call] buttons for 6 seconds to clear the old paired information, a "beep beep" tone will be heard and clear is completed.

Deactivate BOOMAX pairing mode

- Under pairing mode, BOOMAX will deactivate if there is no connection within 90 seconds.
- For 6 minutes without connection, BOOMAX will power off automatically.

8 PLAY MUSIC BOOMAX

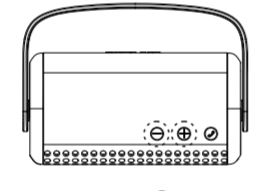

- In pairing mode, Press & Hold [Power] button for 1 second to play or stop music, "beep" tone will be heard.
- During music play, Press & Hold [Power] button for 2 seconds to play the previous song and Press & Hold [Power] button to play the next song.
- During a call or music play, press [Volume Up] button to volume up and [Volume Down] button to volume down.

8 PLAY MUSIC...Continued BOOMAX

- The music will pause if there is an incoming call, tap the [Call] button to answer the call. The music will resume once you end the call.

EQ Select (Equalizer-Audio effect)
2 types of EQ - "Mega Bass" and "Rock" can be selected.

 
When playing music, simultaneously Press & Hold [Call] + [Call] both buttons, "beep" tone can be heard and "Mega Bass" is selected.

Simultaneously Press & Hold [Call] + [Call] both buttons again, "beep" tone can be heard and "Rock" is selected.

9 TALKING - Paired with One phone BOOMAX

Speakerphone [Speakerphone icon]

You can use BOOMAX as the speakerphone by connected wirelessly with Bluetooth to your phone, tablet or PC so that you can make calls, answer calls by speaking to the built-in microphone as shown in the diagram below.

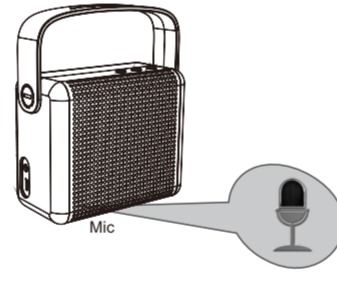

9 TALKING - Paired with One phone... BOOMAX

Answer a Call
Tap the [Call] button to answer an incoming call, a "beep" tone can be heard.

Reject a Call
Double-tap [Call] button to reject an incoming call, a "beep...beep" tone can be heard.

End a Call
While on a call, tap the [Call] button to hang off and end the call, a "beep" tone can be heard.

Redial the Last Number Called
To redial the last number called, Double-tap [Call] button, a "beep" tone can be heard.

Cancel a Call
To cancel a call, Tap the [Call] button, a "beep" tone can be heard.

Initiate a Voice Dial
To initiate a voice dial, Press & Hold [Call] + [Call] button for 1 seconds, then speak a command or a name.

9 TALKING - paired with One phone... BOOMAX

Switch call from BOOMAX to Phone
While you are speaking with the speakerphone of BOOMAX and you want to switch the call to the Phone just Press & Hold [Call] button for 2 seconds to transfer the call from BOOMAX to Phone.

 
10 TALKING - Paired with Two phone BOOMAX

Choose Multipoint function
Double-tap [Call] button to initiate the multipoint function. Double-tap [Call] button to cancel the multipoint function. Tap the [Call] button to end the 1st phone's call and answer the 2nd phone's call. If you want to hold the 1st phone's call, Double-tap [Call] button to hold the call. Tap the [Call] button to answer the 2nd phone's call. 1st phone's music play will pause, when you end your 2nd phone's call, 1st phone music play resumes.

11 WIRED CONNECTIONS BOOMAX

3.5mm Jack Connector
Connect BOOMAX to any audio device with a 3.5mm Jack Connector, using the supplied audio stereo cable.


Note : When a device is connected to the 3.5mm Jack Connector, Bluetooth is disabled and wireless devices will not be able to play music.

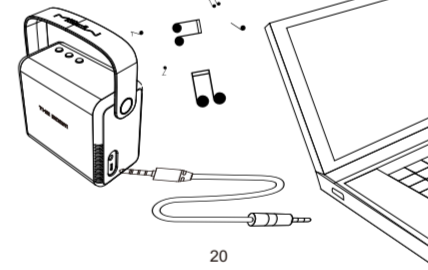

12 LED INDICATOR BOOMAX

Connected	LED blinks twice every 7 seconds
Disconnected	LED blinks twice every 2 seconds
Incoming call	LED blinks once every 1 seconds
Talking	LED blinks once every 7 seconds
Turn on	LED lights for 3 times
Turn Off	LED lights for 2 seconds
Pairing mode	LED blinks quickly
Music play	LED twinkles continually
Charging	LED is always on
Charging completed	LED is off

 13 CHARGING BOOMAX

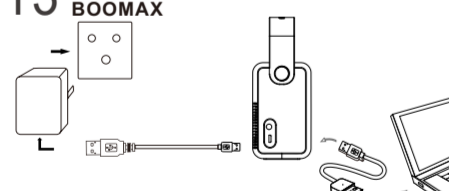

Use the supplied micro USB cable to connect BOOMAX to the USB wall charger or computer USB

- when BOOMAX has low battery level, there will be voice prompt "Battery low".
- white LED is "ON" during charging.
- LED is "OFF" when charging is completed.
- fully charging BOOMAX takes 2-3 hours.
- if you charge BOOMAX without turning it off, it is still connected to your mobile devices

14 TROUBLE SHOOTING & FAQ BOOMAX

I hear crackling noises
For the best audio quality, always put BOOMAX as close your mobile phone as possible.

I cannot hear anything from BOOMAX

- Ensure that BOOMAX is paired with the phone.
- Make sure that the phone is connected to BOOMAX, if it does not connect either from the phone's Bluetooth menu or by pressing the [Call] button, follow the pairing instructions in Section 6.

I have pairing problems
You may delete BOOMAX pairing connection in your mobile phone. Follow the pairing instructions in Section 6.

Will BOOMAX work with other Bluetooth devices ?
BOOMAX is designed to work with Bluetooth mobile phones. It can also work with other devices that are compliant with Bluetooth version 4.0 and support a hands-free profile, A2DP music play.

14 TROUBLE SHOOTING & FAQ BOOMAX

I cannot use reject call, redial or voice dialing, battery App meter

These functions are dependent on your phone supporting them. Please check your mobile phone's manual for further details.

15 CARE INSTRUCTIONS BOOMAX

Taking care of your BOOMAX

- Always store the BOOMAX with the power off and safely protected.
- Avoid storage at extreme temperatures (above 45°C or below -10°C). This can shorten battery life and may affect operation.
- Do not expose the BOOMAX to rain or other liquids.

16 Environmental Protection BOOMAX

After the implementation of the European Directive 2002/96/EU in the national legal system, the following applies: Electrical and electronic devices must not be disposed of with domestic waste. Consumers are obliged by law to return electrical and electronic devices at the end of their service life to the public collection points that are set up for this purpose or designated points of sale. However, such details are defined by the national law of the respective country. This symbol on the product, the instruction manual or the packaging indicates that the product is subject to these regulations. By recycling, reusing the materials, or other forms of utilizing old devices, you are making an important contribution in protecting our environment.

17 FCC STATEMENT BOOMAX

This device complies with Part 15 of the FCC Rules. Operation is subject to the following conditions :
(1) This device may not cause harmful interference, and
(2) This device must accept any interference received, including interference that may cause undesired operation.

17 FCC STATEMENT BOOMAX

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

18 WARRANTY CARD BOOMAX

Limited Warranty

Thank you for your purchase of MIPOW's product. MIPOW warrants that the product is at the time of its original purchase free of defects in workmanship and material. This Limited Warranty for the product shall last for twelve(12) months from the date of original purchase. This original warranty card and original invoice must be presented at the time you require warranty service or such warranty will be voided. This limited warranty is valid only if the product is used for the purpose for which it was designed; it does not apply to damage or loss caused by negligence; physical abuse; misuse; accident; exposure to moisture; dampness or extreme temperatures; unauthorized modifications; unauthorized opening or repair; forces of nature; or other actions beyond the reasonable control of MIPOW. In case of when the warranty does not apply, a repair or replacement charge will be incurred, the customer shall be responsible for sending the defective product to and collecting the repaired or replaced product from the service centre.

NB: MIPOW reserves the right to interpret the terms and conditions contained herein, and the right for any changes without prior notice.

19 CUSTOMER SERVICE CENTER BOOMAX

28



www.mipow.com