

INSIGNIA™



# Bluetooth Plug-in Wall Speaker

NS-SPBTP1-W

# NS-SPBTP1-W Bluetooth Plug-in **Wall** Speaker

## Contents

- Introduction .....2
- Safety information .....2
- Features .....5
- Setting up your Bluetooth speaker.....6
- Using your Bluetooth speaker .....7
- Charging an external device.....9
- Troubleshooting .....9
- Maintaining.....10
- Specifications.....10
- Legal notices.....11
- ONE-YEAR LIMITED WARRANTY - INSIGNIA .....13

## Introduction

Congratulations on your purchase of a high-quality Insignia product. Your NS-SPBTP1-W represents the state-of-the-art in Bluetooth plug-in speaker design and is designed for reliable and trouble-free performance.

## Safety information



This symbol indicates that dangerous voltage constituting a risk of electric shock is present within your speaker. This label is located on the back of your speaker.



This symbol indicates that there are important operating and maintenance instructions in the literature accompanying your speaker.

## Important safety instructions

- 1 Read these instructions.
- 2 Keep these instructions.
- 3 Heed all warnings.
- 4 Follow all instructions.
- 5 Do not use this apparatus near water.
- 6 Clean only with a dry cloth.
- 7 Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8 Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9 Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10 Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11 Only use attachments/accessories specified by the manufacturer.
- 12 Use only with the cart, stand, tripod, bracket or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



Portable cart warning (symbol provided by RETAC)

- 13 Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14 Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 15 To reduce the risk of fire or electric shock, do not expose this device to rain, moisture, dripping, or splashing, and no objects filled with liquids, such as vases, shall be placed on it.

 
- 16** The wall plug is the disconnecting device. The plug must remain readily operable.
- 17** The batteries (battery pack & batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.
- 18** Do not place any naked flame sources, such as lighted candles, on the apparatus.
- 19** The battery used in this product must be properly recycled or disposed of. Please contact your local recycling center for proper battery handling and disposal instructions.



## Features

- Bluetooth connectability
- Built-in power adapter
- Built-in rechargeable battery

## Package contents

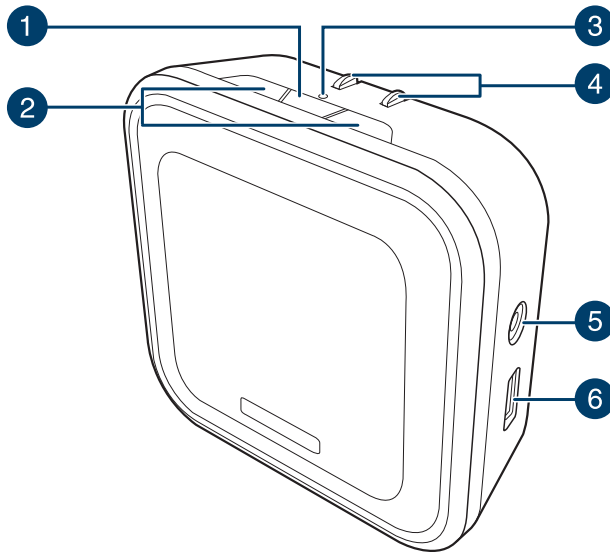- Bluetooth plug-in speaker
- *Quick Setup Guide*



#	Item	Description
1	 /  (power/pair) button	<ul style="list-style-type: none"> <li>• Press and hold for <b>three seconds</b> to turn this system on.</li> <li>• Press and hold for two seconds to put this system into pairing mode.</li> <li>• <b>Press and release to turn this system off.</b></li> </ul>
2	Volume +/- buttons	Press to increase or decrease the volume level of playback.
3	Battery/charging indicator	<ul style="list-style-type: none"> <li>• Indicates the battery charging status.</li> <li>• Indicates the pairing states.</li> </ul>
4	AC power plugs (foldable)	Fold down, then plug into a wall outlet to charge your speaker.
5	<b>AUX IN</b> jack	Plug an external audio device into this jack to hear the playback from this speaker.
6	USB charge port	Connect an external device to this port to charge it.

 
## Setting up your Bluetooth speaker

Your plug-in wall speaker is typically used while plugged into a wall socket. You can also use the speaker unplugged, with the built-in rechargeable battery.


### Charging the battery

Your speaker has a built-in rechargeable battery, which must be be charged to use the speaker.

- Fold down the AC power plug from the speaker body and plug it into an AC wall outlet.


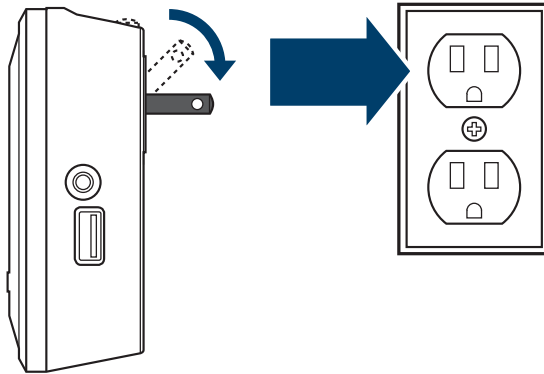


 
- The battery/pairing indicator turns red when the battery is charging and turns off when the battery is fully charged.


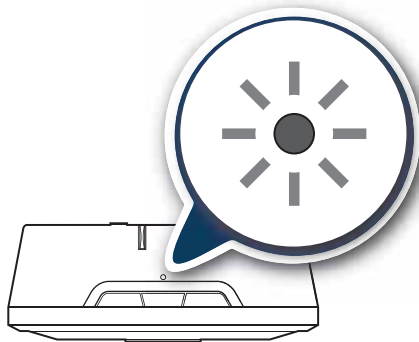


# Using your Bluetooth speaker
  
## Turning on and pairing your speaker

   - 1 Press and hold the  /  (power/pair) button for **three seconds** to turn on your speaker.

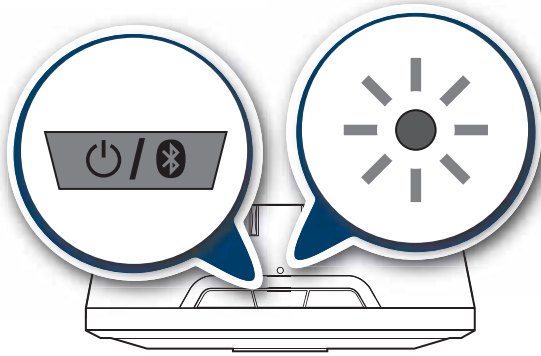

- 2 Press and hold the  /  (power/pair) button for two seconds to enter pairing mode. The pair indicator light flashes blue rapidly.
- 3 Open the Bluetooth settings on your Bluetooth-enabled device. After the speaker is recognized, "NS-SPBTP1" appears in the list of Bluetooth devices.
- 4 Select "NS-SPBTP1" to pair with your device. The pair indicator light turns solid blue when your speaker is successfully connected. You can use your paired device to control playback.


### Notes

- On most devices no password is needed to pair, however, if a password is requested, the default password is **0000**.
- Before playing back via Bluetooth, make sure that the audio cable has been removed from the **AUX IN** jack of your speaker.

## Controlling the volume

 
- You can change the playback volume by either pressing the **VOLUME+** or **-** buttons on the top of your speaker, or changing the volume on your paired device. For maximum volume, turn both to maximum.

## Connecting two Bluetooth devices simultaneously

- 1 Press and hold the  (power/pair) button for two seconds to disconnect the current Bluetooth connection and enter pairing mode, then follow steps 3 and 4 in “Turning on and pairing your speaker” on page 7, to establish a Bluetooth connection with another device.
- 2 On the initial Bluetooth device, select **NS-SPBTP1** from the list of available Bluetooth devices to resume the connection. Now, both Bluetooth devices are simultaneously connected to this speaker.
- 3 Start playback on one of the paired devices to streaming music to this system. If you want to play from the other paired device, pause the current playback and start playback on the other paired device.

## Playing music from a non-Bluetooth external sound source

- 1 Connect a non-Bluetooth external sound source, such as an MP3 player, by plugging an audio cable with a 3.5 mm plug (not included) into the **AUX IN** jack on the right side of your speaker.

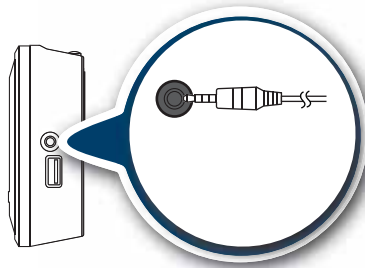

### Note

- If the connected external device is playing music at a normal volume level, your speaker plays from that source. If the connected external device has no sound or the volume level is too low, your speaker continues Bluetooth playback.
- When playing music via audio cable, it is suggested that you pause the Bluetooth sound source paired to your speaker or disconnect the Bluetooth device.

 
- 2 Start playback on the external device.
- 3 Press **VOLUME +** or **-** to adjust the volume.
- 4 Control playback using the controls on the external device.



## Charging an external device

You can charge an external device with a USB cable when your speaker is plugged into an AC wall outlet.

- To charge your external device, plug a USB cable from the device (such as a **mobile** phone, tablet, or wireless headset) into the USB port on the side of your speaker.

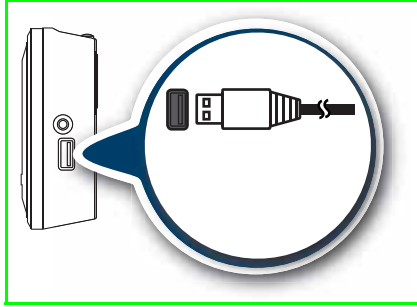

### Notes

- Your speaker must be plugged into an AC wall outlet to be able to charge an external device.
- The maximum output current of the USB port is 1000mA when the system is idle. The output current is 500mA when this system is playing music.

## Troubleshooting

Problem	Solution
My speaker won't turn on.	<ul style="list-style-type: none"> <li>• Make sure that the battery is charged or your speaker is plugged into an AC wall outlet.</li> </ul>
The built-in battery won't charge.	<ul style="list-style-type: none"> <li>• Make sure that the speaker is not exposed to excessive heat (above 140°F [60°C]). Try charging the battery again when the temperature returns to normal.</li> </ul>
No sound.	<ul style="list-style-type: none"> <li>• Make sure that the battery is charged and your speaker is turned on.</li> <li>• Make sure that your external device, if connected, is turned on and playing.</li> <li>• Make sure that the volume on your external device is turned up and is not set to mute.</li> <li>• Make sure that the volume is not extremely low.</li> </ul>
My external device won't play.	<ul style="list-style-type: none"> <li>• Make sure that the battery is charged and your speaker is turned on.</li> <li>• Make sure that the external device is not paused or muted.</li> <li>• Make sure that there are songs on your external device.</li> </ul>

Problem	Solution
My external audio device (MP3 player) won't play.	<ul style="list-style-type: none"> <li>• Make sure that your external device is on and charged.</li> <li>• Make sure that your external device is not paused or muted.</li> <li>• Make sure that the audio cable is fully inserted into the external device and the <b>AUX IN</b> jack on your speaker.</li> <li>• Make sure that there are songs in your external device.</li> <li>• Make sure that your external device is working properly before you connect it to your speaker.</li> </ul>

## Maintaining

- To prevent fire or shock hazard, disconnect your speaker from the AC wall outlet when cleaning.
- The finish on your speaker may be cleaned with a dust cloth and cared for as other furniture. Use caution when cleaning and wiping the plastic parts.
- If the speaker becomes dirty or smudged with fingerprints it may be cleaned with a soft cloth slightly dampened with a mild soap and water solution. Never use abrasive cloths or polishes as these will damage the finish of your speaker.

### Caution

- Never allow water or other liquids to get inside your speaker.
- Modifying or tampering with the internal components of your speaker can cause a malfunction and might invalidate its warranty. If your speaker is not performing as it should, take it to the local dealer for assistance.

## Specifications

General	
Bluetooth	3.0 + EDR, support A2DP, SBC
Power requirement	Built-in battery
Power supply	AC 120V~60Hz (built-in 300 mAh Li-ion rechargeable battery)
Battery	Built-in 300 mAh Li-ion rechargeable battery to support music playback > 2.5 hours.
Audio output power	Typical 3 W
USB port	Supports 5 V at 1 A charging current (no audio playback)
Dimensions (HxWxD)	3.7 × 3.7 × 1.4 in (9.5 × 9.5 × 3.5 cm)

## Legal notices

### FCC Part 15

This device complies with Part 15 of the FCC Rules. Operation of this product is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply within the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced technician for help.

### FCC warning


Changes or modifications not expressly approved by the party responsible for compliance with the FCC Rules could void the user's authority to operate this equipment.

### Canada IC statement

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

This equipment complies with IC radiation exposure limits set forth for an uncontrolled environment.

For compatibility between the system and another device with Bluetooth technology, consult the device's documentation and dealer. In some countries, there may be restrictions on using Bluetooth devices. Check with your local authorities.

 **Bluetooth®** is a registered trademark of Bluetooth SIG, Inc.



# ONE-YEAR LIMITED WARRANTY - INSIGNIA

## Definitions:

The Distributor\* of Insignia branded products warrants to you, the original purchaser of this new Insignia-branded product ("Product"), that the Product shall be free of defects in the original manufacturer of the material or workmanship for a period of one (1) year from the date of your purchase of the Product ("Warranty Period").

For this warranty to apply, your Product must be purchased in the United States or Canada from a Best Buy branded or Future Shop branded retail store or online at [www.bestbuy.com](http://www.bestbuy.com), [www.bestbuy.ca](http://www.bestbuy.ca), or [www.futureshop.ca](http://www.futureshop.ca) and is packaged with this warranty statement.

## How long does the coverage last?

The Warranty Period lasts for 1 year (365 days) from the date you purchased the Product. Your purchase date is printed on the receipt you received with the Product.

## What does this warranty cover?

During the Warranty Period, if the original manufacture of the material or workmanship of the Product is determined to be defective by an authorized Insignia repair center or store personnel, Insignia will (at its sole option): (1) repair the Product with new or rebuilt parts; or (2) replace the Product at no charge with new or rebuilt comparable products or parts. Products and parts replaced under this warranty become the property of Insignia and are not returned to you. If service of Products or parts are required after the Warranty Period expires, you must pay all labor and parts charges. This warranty lasts as long as you own your Insignia Product during the Warranty Period. Warranty coverage terminates if you sell or otherwise transfer the Product.

## How to obtain warranty service?

If you purchased the Product at a Best Buy or Future Shop retail store location, please take your original receipt and the Product to any Best Buy or Future Shop store. Make sure that you place the Product in its original packaging or packaging that provides the same amount of protection as the original packaging. If you purchased the Product from a Best Buy or Future Shop online web site ([www.bestbuy.com](http://www.bestbuy.com), [www.bestbuy.ca](http://www.bestbuy.ca), or [www.futureshop.ca](http://www.futureshop.ca)), mail your original receipt and the Product to the address listed on the web site. Make sure that you put the Product in its original packaging or packaging that provides the same amount of protection as the original packaging.

To obtain warranty service, in the United States call 1-888-BESTBUY, Canada call 1-866-BESTBUY for Future Shop call 1-800-663-2275. Call agents may diagnose and correct the issue over the phone.

## Where is the warranty valid?

This warranty is valid only in the United States and Canada at Best Buy or Future Shop branded retail stores or websites to the original purchaser of the product in the county where the original purchase was made.

## What does the warranty not cover?

This warranty does not cover:

- Customer instruction/education
- Installation
- Set up adjustments
- Cosmetic damage
- Damage due to weather, lightning, and other acts of God, such as power surges
- Accidental damage
- Misuse
- Abuse
- Negligence

- Commercial purposes/use, including but not limited to use in a place of business or in communal areas of a multiple dwelling condominium or apartment complex, or otherwise used in a place of other than a private home.
- Modification of any part of the Product, including the antenna
- Display panel damaged by static (non-moving) images applied for lengthy periods (burn-in).
- Damage due to incorrect operation or maintenance
- Connection to an incorrect voltage or power supply
- Attempted repair by any person not authorized by Insignia to service the Product
- Products sold “as is” or “with all faults”
- Consumables, including but not limited to batteries (i.e. AA, AAA, C etc.)
- Products where the factory applied serial number has been altered or removed
- Loss or Theft of this product or any part of the product
- Display panels containing up to three (3) pixel failures (dots that are dark or incorrectly illuminated) grouped in an area smaller than one tenth (1/10) of the display size or up to five (5) pixel failures throughout the display. (Pixel based displays may contain a limited number of pixels that may not function normally.)
- Failures or Damage caused by any contact including but not limited to liquids, gels or pastes.

REPAIR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS YOUR EXCLUSIVE REMEDY FOR BREACH OF WARRANTY. INSIGNIA SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR THE BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT, INCLUDING, BUT NOT LIMITED TO, LOST DATA, LOSS OF USE OF YOUR PRODUCT, LOST BUSINESS OR LOST PROFITS. INSIGNIA PRODUCTS MAKES NO OTHER EXPRESS WARRANTIES WITH RESPECT TO THE PRODUCT, ALL EXPRESS AND IMPLIED WARRANTIES FOR THE PRODUCT, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF AND CONDITIONS OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE WARRANTY PERIOD SET FORTH ABOVE AND NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, WILL APPLY AFTER THE WARRANTY PERIOD. SOME STATES, PROVINCES AND JURISDICTIONS DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE OR PROVINCE TO PROVINCE.

Contact Insignia:

For customer service please call 1-877-467-4289

[www.insigniaproducts.com](http://www.insigniaproducts.com)

INSIGNIA is a trademark of Best Buy and its affiliated companies.

Registered in some countries.

Distributed by Best Buy Purchasing, LLC

7601 Penn Ave South, Richfield, MN 55423 U.S.A.

©2014 Best Buy. All rights reserved.

Made in China

# INSIGNIA™

[www.insigniaproducts.com](http://www.insigniaproducts.com)

1-877-467-4289 (U.S. and Canada) or 01-800-926-3000 (Mexico)

INSIGNIA is a trademark of Best Buy and its affiliated companies.

Registered in some countries.

Distributed by Best Buy Purchasing, LLC

7601 Penn Ave South, Richfield, MN 55423 U.S.A.

©2014 Best Buy. All rights reserved.

Made in China.

V1 ENGLISH  
14-0887