

SOUNDFREAQ®

Sound Kick


SFQ-O4



Bluetooth®

User Manual

Safety Information

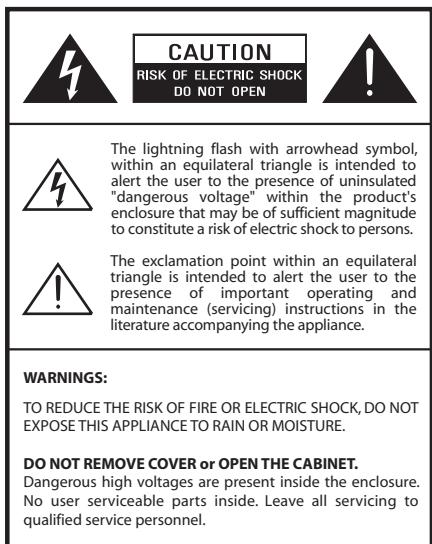

IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions.
2. Keep these Instructions.
3. Heed all Warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding - type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.

10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



PORTABLE CART WARNING
(Symbol provided by RETAC)

13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vase, shall not be placed on the apparatus.
16. The mains plug is used as disconnect device and it shall remain readily operable during intended use. In order to disconnect the mains plug from the mains completely, the mains plug should be disconnected from the mains socket outlet completely.
17. The batteries (battery pack & batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.

18. Do not place any naked flame sources, such as lighted candles, on the apparatus.
19. The battery used in this product must be properly recycled or disposed of. Please contact your local recycling center for proper battery handling and disposal instructions.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio TV technician for help.

FCC and IC Information:

This device complies with Part 15 of the FCC Rules and RSS-210 of the IC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.

Warnings: The device meets the exemption from the routine evaluation limits in section 2.5 of RSS 102 and users can obtain Canadian information on RF exposure and compliance from the Canadian Representative Burnport Holdings Ltd. 72MT Belcher Pls, East, Calgary, Alberta, T2Z 2G1, CANADA. Tel: 403-257-4961

FCC&IC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment and meets the exemption from the routine evaluation limits in section 2.5 of RSS 102.

1. This Transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.
2. This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 centimeters from user and bystanders.

For compatibility between the SFQ-O4 system and another device with Bluetooth technology, consult the device's documentation and dealer. In some countries, there may be restrictions on using Bluetooth devices. Check with your local authorities.

 **Bluetooth®** is a registered trademark of Bluetooth SIG, Inc

Please read rating label at the bottom of system for power input and other safety information.

CAUTION — Proper Installation

- Install the system in a place which is level, dry and neither too hot nor too cold. The appropriate temperature is between 5 °C and 35 °C.
- Install the system in a location with adequate ventilation to prevent internal heat from building up inside the unit.
- Leave sufficient distance between the system and TV.
- Keep the system away from TV to avoid interference with TV.

CAUTION — Proper Ventilation


To avoid risk of electric shock and fire, and to prevent damage, locate the apparatus as follows:

Front: No obstructions and open spacing.


Sides / Top / Back: No obstructions should be placed in the areas shown by the dimensions below.

Bottom: Place on the level surface. Maintain an adequate air path for ventilation by placing on a stand with a height of 10 cm (3-15/16") or more.

Front View:

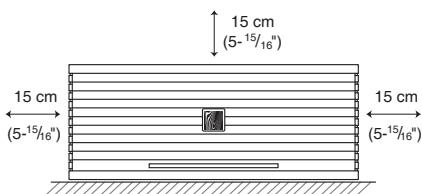

Side View:

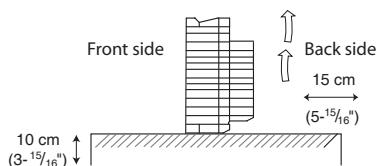

Information for Users on Disposal of Old Equipment

[European Union]



Attention:
This symbol is
only valid in the
European Union.

This symbol indicates that the electrical and electronic equipment should not be disposed as general household waste at its end-of-life. Instead, the product should be handed over to the applicable collection point for the recycling in accordance with your national legislation.

By disposing of this product correctly, you will help to conserve natural resources and will help prevent potential negative effects on the environment and human health that could otherwise be caused by inappropriate waste handling of this product. For more information about collection point and recycling of this product, please contact your local municipal office, your household waste disposal service or the shop where you purchased the product. Penalties may be applicable for incorrect disposal of this waste, in accordance with national legislation.

[Other Countries outside the European Union]

If you wish to dispose of this product, please do so in accordance with applicable national legislation or other rules in your country for the treatment of old electrical and electronic equipment.

QDID: B020153


Contents

Getting Started	5
Package Contents	5
Pulling out the X-Kick™ Chamber	5
Connecting the AC Adapter	5
Charging an External Device	6
Charging the Internal Battery	7
Selecting the Sound Source	7
System Overview	8
Front View	8
Top View	8
Back View	8
Playing back via Bluetooth	9
Downloading the Soundfreq App	9
Establishing a Bluetooth Connection	9
Using Multiple Bluetooth Devices	10
Playing back from Macbook or Macbook Pro	10
Playing back from PC/Notebook	10
Playing back from External Source	11
Optimizing Sound Quality	12
Troubleshooting	13
Technical Specifications	14


Getting Started

Package Contents

Examine whether the following package contents are all included:

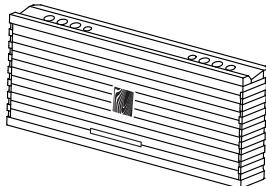

Main Unit

 

AC Adapter




Audio Cable

Pulling out the X-Kick™ Chamber

Sound Kick will only be operated when the X-Kick™ chamber is fully extended.

Pull out the X-Kick™ Chamber using the finger notches until the silver indicator line is visible.

Note: If the X-Kick™ Chamber is closed, the unit will be powered off automatically.

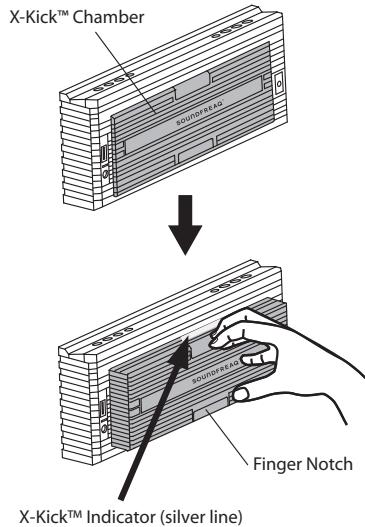


Connecting the AC Adapter


WARNING! For optimal performance, use only the supplied AC adapter.

- Ensure that power supply outlet matches with the unit AC's input 100-240V~, 50/60Hz before connection.

1. Pull out the two blades of AC adapter.
2. Connect one end of the AC adapter to the **DC IN** jack of the unit and the other end to an electrical outlet.

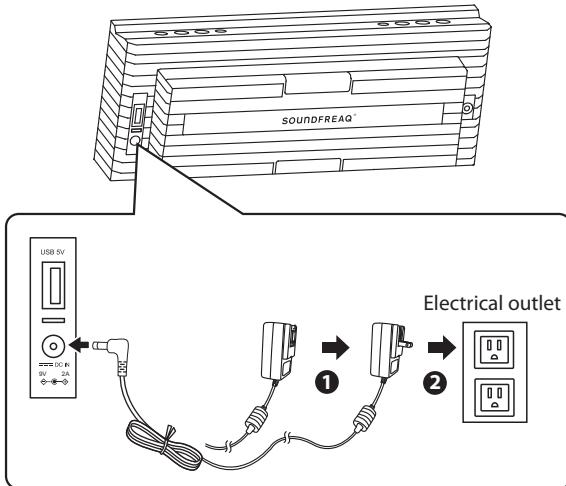

Charging an External Device

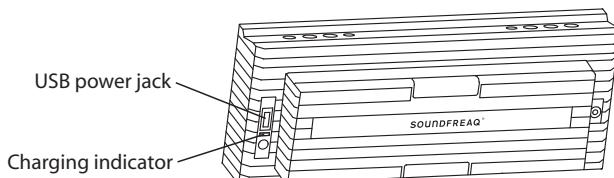

The USB jack can be used to charge most devices that allow for USB charging (including many mobile phones, smart phones and wireless headsets).

- When volume setting is over the threshold, the green charging indicator will be off, and hence the USB jack power will be off.
- When the internal battery level is below 10%, the charging indicator will turn red.

Note: Please use the USB power cord that came with your device to connect to Sound Kick to charge.

Note: We suggest when using the USB power jack to charge external mobile devices, the unit's battery should be fully charged or the unit should be connected to the provided AC wall adapter.

To preserve Sound Kick's battery life, external device charging is disabled when running on battery power at high volumes:

- The charging indicator will turn green when the volume setting is below the volume threshold. This means the USB jack power is enabled.

Charging the Built-in Battery

The Sound Kick has a built-in Lithium-Ion battery to give you portable power when not using the AC adapter. When the adapter is plugged in, the unit will charge. During charging, the charging indicator next to the **DC IN** jack will be solid red. When fully charged, it will be turn green. When operating the unit in battery mode, a flashing red indicator means the battery is below 10%.

You must charge this unit for 12 hours before using for the first time.

Notes:

- The battery cannot be replaced by the user.
- It takes about 3 hours to charge the battery from empty to full.
- Do not dispose of unit in fire; battery may explode or leak.


Type: Lithium-Ion Rechargeable Battery

Model No: LC18650

Rated Voltage: 3.7 V (* 1)

Capacity: 2200 mAh

WARNING! There is a danger of explosion if the battery is incorrectly replaced. Replace it only with the same or equivalent type. Do not expose it to excessive heat such as sunshine, fire, etc.

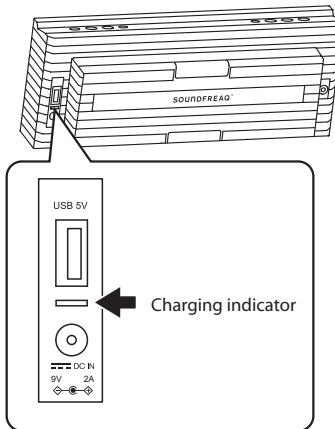

Check the built-in Lithium coin battery capacity:

Hold the **▶II** (play/pause) button on the unit to check the battery capacity by the charging indicator.

Status	Color	Capacity
Solid	Green	90%
Blinking (3 times)	Green	90 - 70%
Blinking (1 times)	Green	70 - 50%
Blinking (1 times)	Red	50 - 30%
Blinking (3 times)	Red	30 - 10%
Solid	Red	less than 10%


Selecting the Sound Source

This system enables you to access two sound sources - AUX and Bluetooth.


- If you use the Soundfreq Remote App, press the **SOURCE** button on the App in the Bluetooth mode
- If you do not use the Soundfreq Remote App, connect the audio cable to the unit or making a Bluetooth connection with a target device to enjoy either sound source.

System Overview


Front View

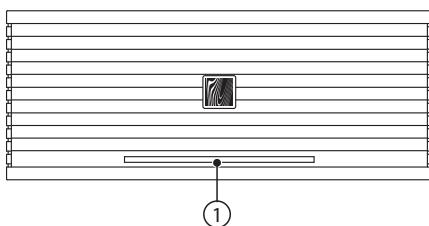

Top View

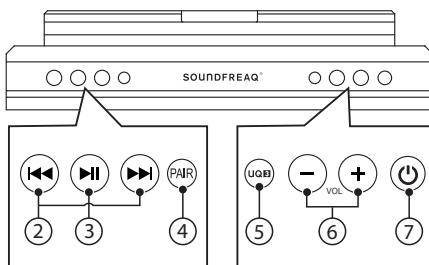

Back View

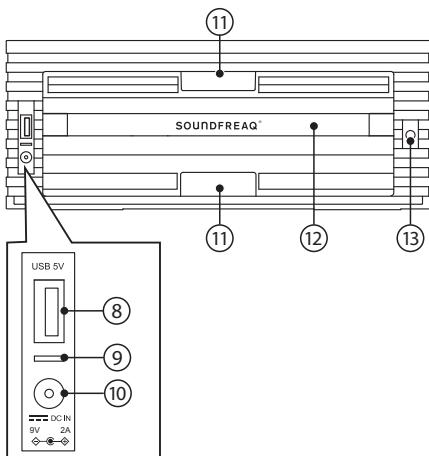

1. **LED indicator**
2. **◀▶ (Previous) / ▶▶ (next) button**
Skip to the previous or next track in Bluetooth mode.
3. **▶⏸ (Play/Pause) button**
Press to play or pause a track.
4. **PAIR button**
Put Sound Kick in pairing mode.
5. **UQ3 button**
Press to activate or deactivate the UQ3 (High Definition Wide Stereo) sound effect.
6. **Vol +/- button**
Press to increase (+) or decrease (-) the volume level.
7. **○ (on/Standby) button**
Switch between power-off and power-on modes.
8. **USB power jack**
The jack can be used to charge most devices.
9. **Charging indicator**
To indicate the status of charging.
10. **DC IN jack**
11. **Finger notch**
12. **X-Kick™ Chamber**
13. **AUX IN jack**
For transmitting an audio input signals from auxiliary source.

Playing back via Bluetooth

Downloading the Soundfreaq App



Soundfreaq

We have developed a Soundfreaq Remote App to give you full control from your Android devices while playing audio over the Bluetooth connection, please download the "Soundfreaq Remote App" in the App Store* for FREE.

* **App Store** is an online store where you can free download or purchase applications for your mobile devices. Apps are designed to expand the functionality of a mobile device.

After paring an Android device with Sound Kick, you can download the free Soundfreaq Remote App in the Android Market and on our website: www.soundfreaq.com

When the App installation is finished, you can control the playback from your Android device. The app can be used as a remote control.

Warning!


Do not unplug the AC adapter from the unit when playing back a track over the Bluetooth connection.

Establishing a Bluetooth Connection

Notes:

- If your mobile phone supports A2DP protocol, its music will play through the unit.
- You can make a Bluetooth connection with a mobile phone, an iPhone/iPad/iPod touch or any other Bluetooth-enabled devices.

1. Pull out the X-Kick™ Chamber using the finger notches until the silver indicator line is visible.
2. Press the " ⌂ " button to power on the unit.
 - The indicator on front panel is solid on when the unit is powered on.
3. Press the **PAIR** button on top of unit to put Sound Kick in pairing mode.
 - The indicator starts blinking at a fast rate.

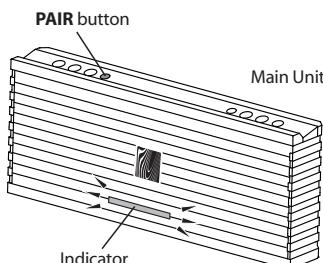

- If you hold the **PAIR** button for more than 5 seconds during the process of pairing, the operation will be cancelled.
- 4. During this period, you can operate the mobile phone, iPad or Bluetooth-enabled device to pair with the unit within a 33 feet (10m) range.
- Please check the user manual of the iPad or Bluetooth-enabled device with which you are initiating pair to learn about Bluetooth connection with any other devices.
- 5. Once the unit is detected and its name "**Sound Kick**" appears on the display of your Bluetooth-enabled device, key in the default password "**1234**" if a prompt requests it.

- The indicator on front panel starts blinking quickly to indicate that the unit and your device have entered into the connection mode.
 - After a Bluetooth connection is established successfully, the indicator will be solid on.
 - Select the desired music and press "Play" button on your device. The unit automatically starts playing back the music.
 - Ensure that the audio cable has been removed from the **AUX jack** of Sound Kick when you do not use App.
 - Try again above steps 3 to 5 if the pair indicator turns solid after blinking for 3 minutes, the pair was unsuccessful.
3. Once completed, the pairing success screen will come out.
- Note:** Don't quit the page immediately. You may notice that the previous dialog screen still shows the device not connected. Just ignore it. It's confusing to the user. In fact, it's connected already.
4. Open iTune, play a song. Then use the mouse to click the Bluetooth icon at the top right hand corner of the desktop screen, select the "Sound Kick" option and then select the "Use as Audio Device (Stereo)". After a while (a few seconds), the music will come out from the SFQ-O4. If not, select the "Use as Audio Device (Stereo)" once again. The Sound Quality should be good.

Using Multiple Bluetooth Devices

Only one device can be used at a time, but you can switch between different Bluetooth devices. Make sure each device you want to use has already been paired, to switch devices:

- On Sound Kick, press the pair button.
- On Bluetooth device, select the connection to Sound Kick.

This device is now the connected device to Sound Kick, (the previous connected device is now disconnected). Repeat those steps to switch the connected device again.

Note: If the unit has no sound output, please check if the volume level of your Bluetooth device connected to the unit is set to the minimum, or the Bluetooth device is muted.

Playing back from Macbook or Macbook Pro

- In the desktop screen, Select the "Open Bluetooth Preference".
- If there is any old "Sound Kick" records, remove them. Click the "Continue" button to proceed pairing process.


Playing back from PC/Notebook

- Press the "Start" button to open the "Device and Printers" dialog box.
- Turn on the SFQ-O4 system and press the **PAIR** button on the unit to put the unit into the pair mode.
- Select the "Add a device" in the "Device and Printer" dialog box. The "Sound Kick" icon will appear on the display.
- Double click the "Sound Kick" icon and wait until the device has been added successfully.
- Click the "Close" button to close the "Device and Printer" dialog box. A "Sound Kick" icon appears in the dialog box.
- Double click the "Sound Kick" icon and the device connection screen will be shown.
- Click the "Connect" button in the "Music and Audio" option.
- Once connected, the pair indicator on the unit will be solid on and the connection success screen will be shown.

Playing back from External Source

You can enjoy the sound from an optional component such as a digital music player through the speakers of this unit. Be sure to turn off the power of each component before making any connections. For details, refer to the instruction manual of the component to be connected.

Connect an external device to the **AUX IN** jack on the back panel of the unit using a stereo audio cable.

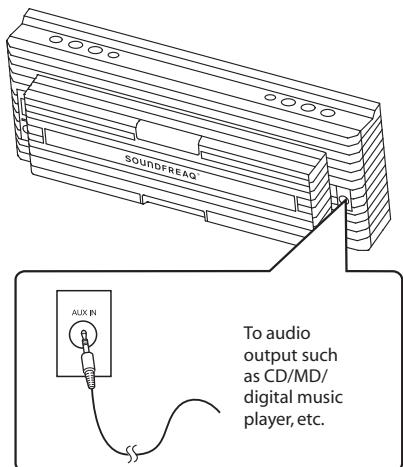

Note: When the stereo audio cable is connected to the **AUX IN** jack, the system will enter to the AUX mode automatically. But, if using the App via Bluetooth connection, press the **SOURCE** button to switch to AUX mode.

1. Pull out the X-Kick™ Chamber using the finger notches until the silver indicator line is visible.
2. Turn the unit power on.
3. Set the volume to the minimum position.
4. Start playback on the external device.
5. Adjust the volume or activate "UQ3" sound effect to meet your listening requirement.

Optimizing Sound Quality

UQ³TM "U-Cubed" is a proprietary technology designed to create an ultra wide stereo sound field in digital music systems. With exceptional natural sound reproduction of high definition and fidelity, we create a listening experience where you feel like your speakers are separated much more than they are.

To activate UQ3 on:

- The unit, press the " **UQ³** " button to activate, press again to deactivate.
- On the Remote App, press the " **UQ³** " button to activate and deactivate.

Note: When the U-Cubed sound effect is deactivated, the indicator will blink twice.

Tip: Sound Kick has been tuned to a balanced acoustic profile. You can use the EQ settings on your playback device to customize the EQ balance to suit your personal preference. Note: Some custom EQ settings when combined with UQ3 enhancement may cause distortion.

Tip: The output volume is set by both the volume setting on Sound Kick and the source device. Both may be adjusted to set your preferred listening volume. Typically, sound quality is best when the volume of the source device is between 70-90%. **Note:** As with any speaker system, if the volume on both your source device and the speaker are at maximum output, it may cause distortion. When using an iOS device or other device that offers a "volume limit" feature, turn this setting off for higher volume listening.

Tip: Using high quality digital music files with low compression will improve acoustic performance.

Troubleshooting

Check this list for a possible troubleshooting solution before calling for service.

In These Cases	Check the Following Points
Power does not come on.	<ul style="list-style-type: none">The built-in lithium battery is no power. Charge the battery.
No sound output.	<ul style="list-style-type: none">Check if the volume level is set to the minimum.Check if the volume level of your Bluetooth device connected to the system is set to the minimum.Check if the volume level is muted. Press MUTE button on the Remote App again to restore the sound output.Check to make sure your Bluetooth device is not muted.Check if your stereo audio cable is connected to the AUX IN jack of the unit. Unplug the cable.
The system is powered off automatically.	<ul style="list-style-type: none">The system enters the saving energy mode. The unit does not connect with any audio source for more than 30 minutes. Turn on the system again and play back an audio source.The internal battery is exhausted. First, the LED indicator on the front panel of the unit starts blinking, then the unit is powered off. Charge the battery or connect the AC adapter and turn on the unit again.
No sound output is via Bluetooth or Bluetooth connection cannot be restored automatically.	<ul style="list-style-type: none">The unit may be powered off and powered on when playing back a track over Bluetooth connection. You need to make the connection again.
If you find USB charging cannot perform after connecting your device to the USB jack on the unit.	<ul style="list-style-type: none">Maybe your USB cable is not supported by the system, please try to use another USB cable.During battery mode, if the volume setting is higher than the threshold value, the USB jack power will be off.
Bluetooth connection cannot be established.	<ul style="list-style-type: none">When making a Bluetooth connection between the unit and your device for the first time, if the connection is fail, you need to power off your device and power on again to clear the device name, and make the connection again.

Technical Specifications

Model	SFQ-O4	
Type	Sound Kick	
Support Bluetooth	Bluetooth 1.2, 2.0 and 2.1 compliant	
Support Profile	A2DP	
Input Sensitivity	AUX Input	1200 mV
Input Terminal	External DC IN (for AC adapter), AUX IN	
Power Source	DC 9 V == 2 A (External DC IN)	
AC Adapter	Input: AC 100-240V, 50/60Hz	
	Output: DC 9 V == 2 A	
Dimensions (Approx.)	267mm (W) * 106mm (H) * 42mm (D)	
Weight	704 g	

Design and specifications are subject to change without notice.

SOUNDFREAQ®
Consignes de sécurité

Version Canada

 ATTENTION <small>NE PAS OUVRIR. RISQUE D'ÉLECTROCUTION</small>	
<p>AVERTISSEMENTS :</p> <p>POUR RÉDUIRE LE RISQUE D'INCENDIE OU D'ÉLECTROCUTION, NE PAS EXPOSER CET APPAREIL À LA PLUIE OU À L'HUMIDITÉ. N'ENLEVEZ PAS LE COUVERCLE ET N'OUVREZ PAS LE BOÎTIER. Des tensions élevées dangereuses sont présentes à l'intérieur. Non réparable par l'utilisateur. Toutes les réparations doivent être effectuées par un personnel qualifié.</p>	
<p>IMPORTANTES INSTRUCTIONS DE SÉCURITÉ</p> <ol style="list-style-type: none"> 1. Lisez attentivement ces instructions. 2. Conservez ces instructions. 3. Respectez tous les avertissements. 4. Suivez toutes les instructions. 5. N'utilisez pas cet appareil près de l'eau. 6. Nettoyez-le avec un linge sec uniquement. 7. Ne bloquez pas les fentes d'aération. Installez l'appareil conformément aux instructions du fabricant. 8. N'installez pas l'appareil près de sources de chaleur telles que radiateurs, registres de chaleur, poêles ou autres appareils (y compris les amplificateurs) produisant de la chaleur. 9. Ne détruisez pas la fonction de sécurité de la prise polarisée ou avec mise à la terre. Une prise polarisée comporte deux broches, l'une étant plus large que l'autre. Une prise avec mise à la terre comporte trois broches, la troisième étant la broche de terre. La broche plus large, ou la broche de terre, sont là pour votre sécurité. Si la prise fournie ne correspond pas à vos prises secteur, demandez à un électricien de la remplacer. 10. Protégez le cordon d'alimentation pour qu'il ne soit pas écrasé ou pincé, particulièrement au niveau de la prise de courant et au point où il sort de l'appareil. 	

11. Utilisez uniquement les accessoires spécifiés par le fabricant.

12. Utilisez uniquement avec le chariot, le pied, le trépied, le support ou la table spécifiés par le fabricant ou vendus avec l'appareil. Quand vous utilisez un chariot, soyez prudent lorsque vous déplacez l'ensemble chariot / appareil pour éviter les blessures en cas de renversement.

13. Débranchez l'appareil en cas d'orage ou si vous ne l'utilisez pas pendant une période prolongée.

14. Toutes les réparations doivent être effectuées par un personnel qualifié. Un entretien est requis lorsque l'appareil a été endommagé de quelque manière que ce soit, par exemple cordon d'alimentation ou prise de courant endommagés, liquide renversé sur l'appareil, objets tombés dans l'appareil, exposition de l'appareil à la pluie ou à l'humidité, ou si l'appareil ne fonctionne pas normalement ou est tombé.

15. L'appareil ne doit pas être exposé aux éclaboussures et aucun objet rempli de liquide ne doit être posé sur l'appareil.

16. La prise secteur est utilisée comme dispositif de déconnexion et doit rester facilement accessible pendant l'utilisation. Pour couper l'alimentation électrique de l'appareil, débranchez la fiche de la prise murale.

17. Les piles ne doivent pas être exposées à une chaleur excessive (soleil, feu, etc.).

18. Ne placez aucune source de flamme nue, telle que des bougies allumées, sur l'appareil.

19. La pile utilisée dans ce produit doit être correctement recyclée ou éliminée. Veuillez vous adresser à votre centre local de recyclage pour des instructions concernant la manipulation correcte et l'élimination de la pile.

Pour assurer la compatibilité entre le système SFQ-O4 et un autre appareil avec la technologie Bluetooth, consultez la documentation de l'appareil et renseignez-vous auprès du concessionnaire. Certains pays peuvent imposer des restrictions sur l'utilisation des appareils Bluetooth. Veuillez vous renseigner auprès des autorités locales.

Bluetooth est une marque déposée de Bluetooth SIG, Inc.

Veuillez lire l'étiquette apposée sous le système pour la tension d'entrée et d'autres informations de sécurité.

Avertissement : Tout changement ou modification apportés à cet appareil sans l'approbation expresse de l'entité responsable de la conformité pourrait annuler le droit de l'utilisateur à se servir l'appareil.

Size: 6.35" * 4.74"

Informations FCC (Commission fédérale des communications U.S.) et IC (Industrie Canada) :

Cet appareil est conforme à l'article 15 du règlement de la FCC. Son utilisation est soumise aux deux conditions suivantes : (1) cet appareil ne doit pas provoquer d'interférences préjudiciables, et (2) il doit accepter toute interférence reçue, y compris celles risquant d'engendrer un fonctionnement indésirable.

Déclaration de la FCC et d'IC sur l'exposition aux irradiations :

Cet équipement est conforme aux limitations prévues par la FCC pour l'exposition aux irradiations dans le cadre d'un environnement d'accès libre et est en conformité avec l'exemption d'évaluation de routine des limitations de la section 2.5 de la CNR-210.

1. Cet émetteur ne doit pas être situé à proximité ou fonctionner simultanément avec une autre antenne ou émetteur.
2. Cet équipement est conforme aux limitations prévues par la FCC pour l'exposition aux irradiations RF dans le cadre d'un environnement d'accès libre. Cet équipement doit être installé et mis en fonctionnement à une distance minimale de 20 cm de l'utilisateur et des personnes qui l'entourent.

Remarque : ce matériel a été testé et trouvé conforme aux limites de l'article 15 de la réglementation FCC pour les appareils numériques de classe B. Ces limites sont conçues pour fournir une protection raisonnable contre les interférences nuisibles dans une installation résidentielle. Ce matériel génère, utilise et peut émettre des fréquences radio et, s'il n'est pas installé et utilisé conformément aux instructions, peut causer des interférences nuisibles aux communications radio. Toutefois, il n'existe aucune garantie que des interférences ne se produisent pas dans une installation particulière. Si ce matériel cause des interférences nuisibles à la réception radio ou télévision, ce qui peut être déterminé en éteignant l'appareil, l'utilisateur est encouragé à essayer de corriger l'interférence par une ou plusieurs des mesures suivantes :

- Réorienter ou déplacer l'antenne de réception.
- Augmenter la distance entre l'appareil et le récepteur.
- Brancher l'appareil à une prise de courant sur un circuit différent de celui auquel le récepteur est branché.
- Consulter le revendeur ou un technicien radio/ télévision expérimenté.

Avertissements : L'appareil répond à l'exemption de l'évaluation de routine des limites de la section 2.5 de la norme CNR-102 et les utilisateurs peuvent obtenir des informations canadiennes sur l'exposition aux radiofréquences et la conformité auprès du représentant canadien Burnport Holdings Ltd 72MT Belcher, East, Calgary, Alberta, T2Z 2G1, CANADA. Téléphone : 403-257-4961

ATTENTION - Installation correcte

- Installez le système sur une surface horizontale, dans un endroit sec et ni trop chaud ni trop froid. La température d'utilisation se situe entre 5°C et 35°C.
- Installez le système dans un lieu bien aéré pour éviter qu'il ne surchauffe.
- Laissez une distance suffisante entre le système et le téléviseur.
- Eloignez le système du téléviseur afin d'éviter les interférences avec ce dernier.

ATTENTION - Ventilation correcte

Pour prévenir tout risque de choc électrique, d'incendie, ou tout autre dommage, placez l'appareil comme suit :

Face avant / dessus / arrière : aucun obstacle dans les zones indiquées ci-dessous.

Dessous : posez l'appareil sur une surface horizontale. Maintenez une circulation d'air suffisante pour la ventilation en plaçant l'appareil sur un support de 10 cm (3-15/16") de haut ou plus.

Vue de face :

Vue de côté :

QDID: B020153

Size: 6.35" * 4.74"

Save this manual