


SOUNDFREQ[®]

Sound Rise

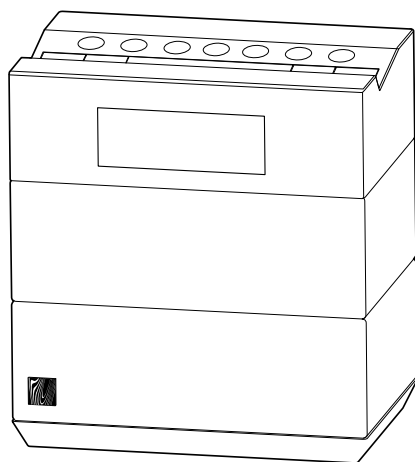




SFQ-08



 **Bluetooth[®]**

User Manual

Safety Information

  
 <p>The lightning flash with arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.</p>
 <p>The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.</p>
<p>WARNINGS:</p> <p>TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.</p> <p>DO NOT REMOVE COVER or OPEN THE CABINET. Dangerous high voltages are present inside the enclosure. No user serviceable parts inside. Leave all servicing to qualified service personnel.</p>

IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions.
2. Keep these Instructions.
3. Heed all Warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding - type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an

electrician for replacement of the obsolete outlet.

10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



PORTABLE CART WARNING (Symbol provided by RETAC)

13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vase, shall not be placed on the apparatus.
16. The mains plug is used as disconnect device and it shall remain readily operable during intended use. In order to disconnect the mains plug from the mains completely, the mains plug should be disconnected from the mains socket outlet completely.
17. The batteries (battery pack & batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.

18. Do not place any naked flame sources, such as lighted candles, on the apparatus.
19. The battery used in this product must be properly recycled or disposed of. Please contact your local recycling center for proper battery handling and disposal instructions.

FCC and IC Information:

This device complies with Part 15 of the FCC Rules and RSS-210 of the IC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Canada IC statements

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes: (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is

encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio TV technician for help.


Warnings: The device meets the exemption from the routine evaluation limits in section 2.5 of RSS 102 and users can obtain Canadian information on RF exposure and compliance from the Canadian Representative Burnport Holdings Ltd. 72MT Belcher Pls, East, Calgary, Alberta, T2Z 2G1, CANADA. Tel: 403-257-4961

FCC&IC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment and meets the exemption from the routine evaluation limits in section 2.5 of RSS 102.

1. This Transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.
2. This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 centimeters from user and bystanders.

For compatibility between the system and another device with Bluetooth technology, consult the device's documentation and dealer. In some countries, there may be restrictions on using Bluetooth devices. Check with your local authorities.

 **Bluetooth** is a registered trademark of Bluetooth SIG, Inc

Please read rating label at the bottom of system for power input and other safety information.

CAUTION - Proper Installation

- Install the system in a place which is level, dry and neither too hot nor too cold. The appropriate temperature is between 5°C and 35 °C.
- Install the system in a location with adequate ventilation to prevent internal heat from building up inside the unit.
- Leave sufficient distance between the system and TV.
- Keep the system away from TV to avoid interference with TV.

CAUTION - Proper Ventilation


To avoid risk of electric shock and fire, and to prevent damage, locate the apparatus as follows:

Front: No obstructions and open spacing.


Sides / Top / Back: No obstructions should be placed in the areas shown by the dimensions below.

Bottom: Place on the level surface. Maintain an adequate air path for ventilation by placing on a stand with a height of 10 cm (3-15/16") or more.

Front View:

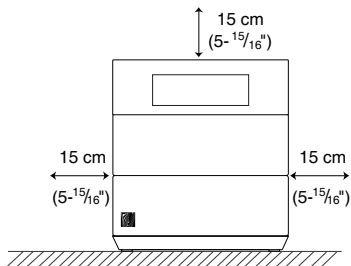

Side View:

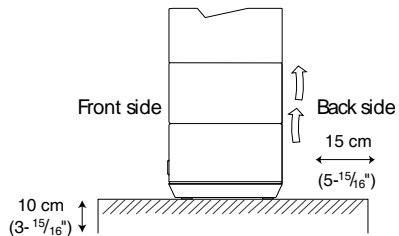

Information for Users on Disposal of Old Equipment



[European Union]

This symbol indicates that the electrical and electronic equipment should not be disposed as general household waste at its end-of-life. Instead, the product should be handed over to the applicable collection point for the recycling in accordance with your national legislation.

Attention:
This symbol is only valid in the European Union.

By disposing of this product correctly, you will help to conserve natural resources and will help prevent potential negative effects on the environment and human health that could otherwise be caused by inappropriate waste handling of this product. For more information about collection point and recycling of this product, please contact your local municipal office, your household waste disposal service or the shop where you purchased the product. Penalties may be applicable for incorrect disposal of this waste, in accordance with national legislation.

[Other Countries outside the European Union]

If you wish to dispose of this product, please do so in accordance with applicable national legislation or other rules in your country for the treatment of old electrical and electronic equipment.

QDID: XXXXXXX


Contents

Getting Started	6
Package Contents	6
Using the Backup Battery	6
Installing/Replacing the Backup Battery	6
Connecting the AC Power Adapter	7
System Overview	8
Top View	8
Back View	9
Bottom View	9
Display Window	10
Basic Operation	11
Turning on/off the System	11
Setting the Clock and Day	11
Adjusting the Volume	11
Adjusting the Brightness Level	11
Selecting a Sound Mode	11
Playing back via Bluetooth	12
Establishing a Bluetooth Connection	12
Using Multiple Bluetooth Devices	12
Playing back from Macbook or Macbook Pro	13
Playing back from PC/Notebook	13
Listening to the Radio	14
Tuning to a Radio Station	14
Presetting a Radio Station	14
Playing back from External Device	15
Charging an External Device	16
Using the Alarm Function	17
Setting the Alarm	17
Turning On/Off the Alarm	17
Silencing the Alarm Momentarily	17
Using the Sleep Timer	18
Setting the Sleep Timer	18
Checking or Changing the Remaining Time	18
Canceling the Sleep Timer	18
Troubleshooting	19
Technical Specifications	20


Getting Started

Package Contents

Examine whether the following package contents are all included:

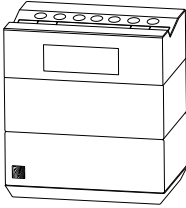

Main Unit

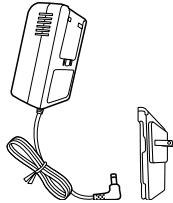

AC Power Adapter and Adapter Plug




Lithium Coin Battery CR2025
**It is loaded on the battery compartment of the system at the factory.*



FM Antenna



Quick Start Guide

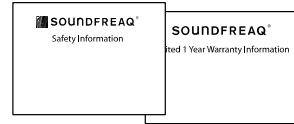

Safety Card

Using the Backup Battery


The backup battery is used to keep the time, alarm, and other personal settings, when the AC power adapter is unplugged.

When you begin to use this system for the first time, please remove the plastic sheet from the battery compartment on the bottom of the system.

Installing/Replacing the Backup Battery

CAUTION: Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

When the backup battery becomes weak, the  icon appears on the screen, and you need to replace the battery. Please follow the below steps to replace the backup battery while keeping the AC power adapter connected to the power outlet.

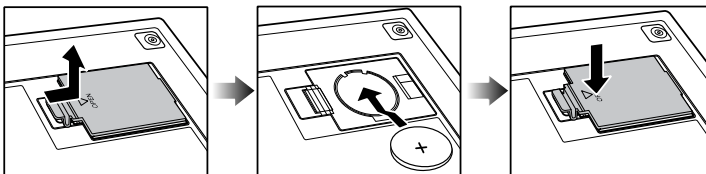

1. Open the compartment cover.
2. Remove the old battery. Then insert a new one, and ensure the polarity mark of the battery matches with the mark in the battery compartment.
3. Close the compartment cover.


Notes:

- Store the battery in a place where children cannot reach. If a child accidentally swallows the battery, consult a doctor immediately.
- Do not recharge, short circuit, disassemble, heat the battery, or dispose of the battery in fire. Doing any of these things may cause the battery to give off heat, crack, or start a fire.
- Do not leave the battery with other metallic materials. Doing this may cause the battery to give off heat, crack, or start a fire.
- When throwing away or saving the battery, wrap it in tape and insulate; otherwise, the battery may start to give off heat, crack, or start a fire.
- Do not poke the battery with tweezers or similar tools. Doing this may cause the battery to give off heat, crack, or start a fire.
- Dispose of battery in the proper manner, according to federal, state, and local regulations.
- The batteries (battery pack or batteries installed) shall not be exposed to excessive heat source such as sunshine, fire or the like.
- This product contains a CR Coin Cell Lithium Battery that contains Perchlorate Material, so that special handling may apply.

Connecting the AC Power Adapter


WARNING! For optimal performance, use only the supplied AC power adapter. Ensure that power supply outlet matches with the unit AC's input 100V~240V, 50/60Hz before connection.

1. Install the adapter plug to the AC power adapter.
2. Connect the AC power adapter to DC IN jack and an electrical outlet only after all other connections are completed.

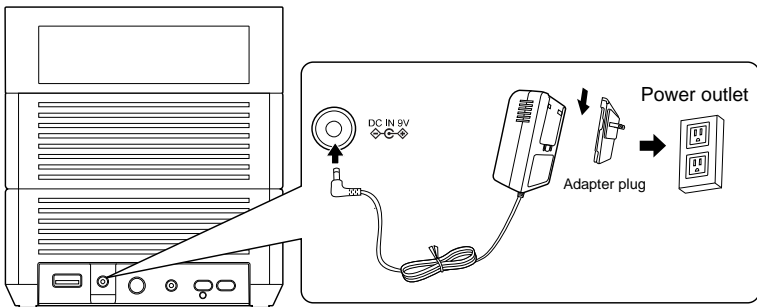

System Overview

Top View

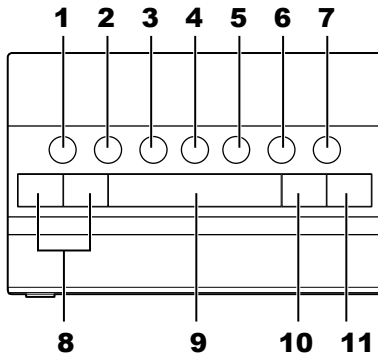


- 1. 🎵 button**
 - Press to turn on the system.
 - When powering on, press repeatedly to toggle the sound sources.
 - Press and hold for 2 seconds to turn off the system.
- 2. PAIR button**

In Bluetooth mode, press to put the system into pairing mode.
- 3. ⏮ (Previous/Rewind) button**
 - In Bluetooth mode, press to skip to the start of the current track or skip to previous track. Hold to rewind a track fast.
 - In Radio mode, press to decrease the frequency.
 - Adjust the time and alarm.
- 4. ▶ (Play/Pause) button**
 - In Bluetooth mode, press to play or pause a track.
 - In Radio mode, press to select a preset station.
- 5. ⏭ (Next/fast forward) button**
 - In Bluetooth mode, press to skip to next track. Hold to fast-forward a track.
 - In Radio mode, press to increase the frequency.
 - Adjust the time and alarm.
- 6. - button**
 - Press to decrease volume level.
 - Adjust the time and alarm.
 - Press to decrease the brightness of backlight in standby mode.
- 7. + button**
 - Press to increase volume level.
 - Adjust the time and alarm.
 - Press to increase the brightness of backlight in standby mode.
- 8. 🕒/🕒 buttons**
 - Activate or change the alarm settings.
 - Stop temporarily the alarm or turn off the alarm, when the alarm is sounding.
- 9. SNOOZE button**
 - Press to turn on/off the system.
 - Stop temporarily the alarm sound when the alarm is sounding.
- 10. SET button**
 - In FM tuner mode, switch the frequency and preset number.
 - In clock and alarm setting mode, confirm the setting
- 11. 🌙 button**

Press repeatedly to set the sleep timer.

Back View

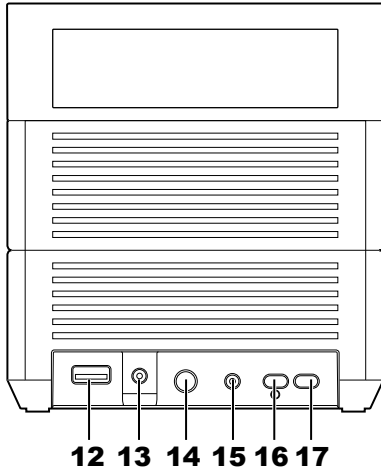

12. **POWER OUT** jack

Charges your external USB devices.

13. **DC IN** jack

14. **AUX IN** jack

Inputs audio signals from an external device.

15. **ANTENNA** jack

16. **DIMMER** button

Press repeatedly to adjust the brightness of the display.


17. **TONE** button

- When powering on, press repeatedly to select an EQ settings between **WARM** and **BRIGHT**.


- In standby mode, press repeatedly to adjust the brightness of the display.

18. Backup Battery Compartment

Bottom View

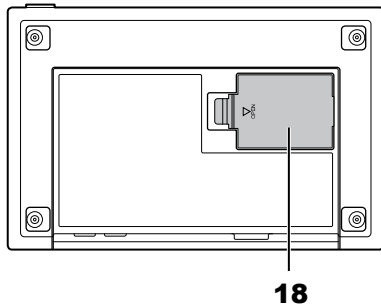


Display Window

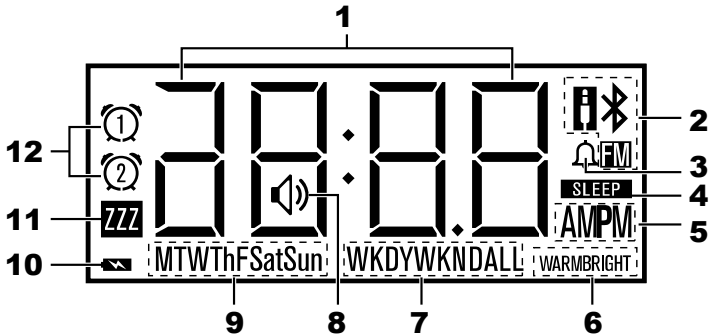


1. Multi-functional display
Indicates the current time, alarm time, volume level, channel, frequency, etc.
2. Sound source indicator
Indicates the currently selected sound source.
3. Bell indicator
Appears when the beeper sound is selected to wake up you.
4. Sleep indicator
Appears when the sleep timer is set.
5. AM/PM indicator
6. Bright/Warm sound effect indicator
7. Weekday/Weekend/All days indicator
8. Speaker indicator
Appears when adjusting the volume level.
9. Day of the week indicator
10. Backup battery indicator
Appears when the backup battery power is low.
11. Snooze indicator
Blinks while snoozing, indicating that the alarm is paused.
12. Alarm indicator
 - Appears when the alarm is on.
 - Disappears when the alarm is off.

Basic Operation

Turning on/off the System

When the system is in standby mode, press the  or **SNOOZE** button to turn on the system.

When the system is powering on, press and hold the  button for 2 seconds or press **SNOOZE** button to turn off the system.

Note:

- If the system is idle for more than 45 minutes, it will turn off automatically.

 
Setting the Clock and Day

1. Press and hold **SET** button for 2 seconds to enter the clock setting mode. The "Hour digit" starts blinking.
 2. Press the **+/-** (or **<</>>**) buttons to adjust the hour.
 3. Press **SET** button to confirm the setting.
 4. Repeat 2 and 3 to adjust minutes, AM/PM (12-hour or 24-hour), and the day of week.
- During adjusting the day of week: **M** means Monday, **T** means Tuesday, **W** means Wednesday, **Th** means Thursday, **F** means Friday, **Sat** means Saturday, **Sun** means Sunday.

Adjusting the Volume

When the system is powering on, press the **+/-** buttons to adjust the volume level. Press and hold the **+/-** buttons to increase/decrease the volume level continuously.

Note:

- During the process of adjusting, the indicator  will appear on the display.

Adjusting the Brightness Level

Press **DIMMER** button repeatedly to adjust the brightness level of the display.

The system has a special dimmer feature for alarms with **DAWN** mode and **VAMPIRE** mode, when the display brightness has been set to level 0. Press the **+** and the **-** buttons simultaneously to switch between **DAWN** mode and **VAMPIRE** mode (**ON** means **DAWN** mode, **OFF** means **VAMPIRE** mode). When the alarm arrives, the display brightness will be switched on in level 3 temporarily, and turned off back to level 0 during the snooze period. After you turn off the alarm:

- In **DAWN** mode, the display brightness will be switched on in level 3 permanently.
- In **VAMPIRE** mode, the display brightness will be off in level 0.

Notes:

- In the standby mode, you can press the **+/-** buttons to increase/decrease the brightness level of the display.
- In the standby mode, you can also adjust the brightness level of the display by pressing **TONE** button.

Selecting a Sound Mode



 



Sound modes can be selected to enhance the type of music being played.


 
When the system is powering on, press **TONE** button repeatedly to select one sound mode among flat, warm, and bright. The corresponding icon will appear on the display. **WARM** means warm setting, **BRIGHT** means bright setting, none means flat setting.

Playing back via Bluetooth

Establishing a Bluetooth Connection

Notes:

- If your mobile phone supports A2DP, AVRCP profiles, its music will play through the system.
 - You can make a Bluetooth connection with a mobile phone, an iPhone/iPad/iPod touch or any other Bluetooth-enabled devices.
1. Press the  or **SNOOZE** button to turn on the system.
 2. Press the  button repeatedly until the  icon appears on the display to select Bluetooth mode.
 3. Press **PAIR** button to put the system into pairing mode.
 - The  icon starts blinking at a fast rate.
 - If you hold **PAIR** button for more than 2 seconds during the process of pairing, the operation will be cancelled.
 4. During this period, you can operate the mobile phone, iPad or Bluetooth-enabled device to pair with the system within a 33 feet (10m) range.
 - Please check the user manual of the iPad or Bluetooth-enabled device with which you are initiating pair to learn about Bluetooth connection with any other devices.
 5. Once the system is detected and its name **Sound Rise** appears on the display of your Bluetooth-enabled device, then select the system on the display. Key in the default password **1234** if a prompt requests it.
 - The  icon starts blinking quickly to indicate that the system and your device have entered into the connection mode.
 - After a Bluetooth connection is established successfully, the  icon will remain on.

6. Select the desired music and press the **▶** button to start playback.
 - During Bluetooth playback, press and hold **PAIR** button for 2 seconds, the Bluetooth connection will interrupt, and the system enter pairing mode with the  icon blinking fast; then you can establish Bluetooth connection with other Bluetooth-enabled device.
 - Try again above steps 2 to 5 if the  icon blinks slowly after blinking quickly for 3 minutes, the pair was unsuccessful.

Using Multiple Bluetooth Devices

Only one device can be used at a time, but you can switch between different Bluetooth devices.

Make sure each device you want to use has already been paired, to switch devices:

1. On Sound Rise, press and hold **PAIR** button for 2 seconds.
2. On Bluetooth device, select the connection to Sound Rise.

This device is now the connected device to Sound Rise, (the previous connected device is now disconnected). Repeat those steps to switch the connected device again.

Note:

- If the system has no sound output, please check if the volume level of your Bluetooth device connected to the system is set to the minimum, or the Bluetooth device is muted.

Playing back from Macbook or Macbook Pro


1. In the desktop screen, select the **Open Bluetooth Preference**.
2. If there are any old **Sound Rise** records, remove them. Click the **Continue** button to continue pairing process.
3. Once completed, the pairing success screen will come out.

Note:

- Don't quit the page immediately. You may notice that the previous dialog screen still shows the device not connected. Just ignore it. It's confusing to the user. In fact, it's connected already.
4. Open iTunes, play a song. Then use the mouse to click the Bluetooth icon at the top right hand corner of the desktop screen, select the **Sound Rise** option and then select the **Use as Audio Device (Stereo)**. After a while (a few seconds), the music will come out from the system. If not, select the **Use as Audio Device (Stereo)** once again. The Sound Quality should be good.


Playing back from PC/Notebook

1. Press **Start** button to open the **Device and Printers** dialog box.
2. Turn on the system, then press **PAIR** button to put it into the pairing mode.
3. Select the **Add a device** in the **Device and Printer** dialog box. The **Sound Rise** icon will appear on the display.
4. Double click the **Sound Rise** icon and wait until the device has been added successfully.
5. Click **Close** button to close the **Device and Printer** dialog box. A **Sound Rise** icon appears in the dialog box.

6. Double click the **Sound Rise** icon and the device connection screen will be shown.
7. Click **Connect** button in the **Music and Audio** option.
8. Once connected, the  icon on the display of the system will be solid on and the connection success screen will be shown.

Listening to the Radio

Before listening, connect the supplied FM antenna to the **ANTENNA** jack located on the back of the system. Extend the antenna to its full length for best reception.

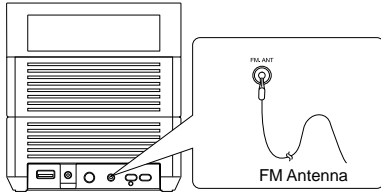

Note:

- Locate the antenna as far away as possible from the AC adapter, a TV, or other radiation source.

Tuning to a Radio Station

1. Press the **🎵** or **SNOOZE** button to turn on the system.
2. Press the **🎵** button repeatedly until the **FM** icon appears on the display to select Radio mode.
3. Press the **<</>>** buttons to tune a desired frequency.
 - **Manual Tuning** - Briefly press the **<</>>** buttons repeatedly to move frequency to frequency (from 87.5 MHz to 108.0 MHz) until you find the desired station.
 - **Auto Scanning** - Press and hold the **<</>>** buttons until the frequency starts to change continuously. The frequency will be scanned automatically until a station is found.

Notes:

- During listening, you can adjust the volume level by pressing the **+/-** buttons.
- To improve the reception, extend the antenna to its full length and reorient it.

Presetting a Radio Station


1. Press the **🎵** or **SNOOZE** button to turn on the system.
2. Press the **🎵** button repeatedly until the **FM** icon appears on the display to select Radio mode.
3. Tune to an unsaved radio station by pressing **<</>>** button.
4. Press **SET** button repeatedly until the preset number appears on the display.
5. Press the **+/-** buttons to select a desired preset number (P01~P06).
6. Press **SET** button again to store the current radio station to the specified preset number.




Note:

- You can press the **▶** button to cycle through all preset radio stations to select and enjoy your desired station.

Playing back from External Device

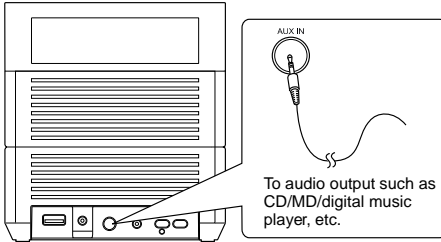You can enjoy the sound from an optional component such as a digital music player through this system. Be sure to turn off the power of each component before making any connections. For details, refer to the instruction manual of the component to be connected.



1. Connect an external device to the **AUX IN** jack on the back panel of the system using a stereo audio cable (not supplied).
2. Press the  or **SNOOZE** button to turn on the system.
3. Press the  button repeatedly until the  icon appears to select **AUX IN** mode.
4. Set the volume to the minimum position.
5. Start playback on the external device.
6. Adjust the volume to meet your listening requirement.


Note:

- In order to save the energy, please plug off the AUX-IN cable when do not use.

Charging an External Device

The USB power jack can be used to charge most devices that allow for USB charging (including many mobile phones, smart phones and wireless headsets), when Sound Rise is connected to the AC power adapter.

Connect one end of USB power cord to **POWER OUT** jack of the system, and the other end to your USB device.

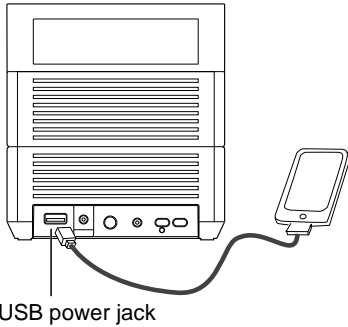

Note:

- Please use the USB power cord that came with your device to connect to Sound Rise for charging.

 
 
 
Using the Alarm Function

Using the alarm, you can wake up to your favorite music.

 
 

 
Notes:

- Set the clock before setting the alarms.
- Connect a Bluetooth device, tune into a station and connect an external device to the system, and make sure that the source works properly beforehand.
- Perform each setting within 10 seconds. Otherwise, setting will be cleared and the procedure must be repeated from the beginning.

 

 
 
Setting the Alarm

1. Use either of the following two methods to put the system into alarm setting mode, the  icon and "Hour digit" will blink on the display correspondingly.
 - Press and hold the  button for 2 seconds.
 - Press the  button, then press **SET** button.
2. Press the **+/-** (or **<</>>**) button to adjust the hour.
3. Press **SET** button to confirm the setting.
4. Repeat 2 and 3 to adjust the minute, AM/PM (in 12-hour system), day of the week, sound source and the volume.
5. If need, you can turn off the system. The alarm will still sound at the set time.

Turning On/Off the Alarm

- If the alarm is on before, press the  button twice to turn off the alarm. The  icon will disappear.
- If the alarm is off before, press the  button once to turn on the alarm and check the alarm time. The corresponding alarm settings and the  icon will appear on the display.

Silencing the Alarm Momentarily

- When the alarm time arrives, press **SNOOZE** or the  button to silence the alarm momentarily. The  icon will blink after snooze function is activated, and the alarm will sound again when the snooze period is over. The snooze period is 10 minutes with 6 repeating times. During the snooze period, you can press the  button to turn off the alarm, and the alarm will sound at the set time of the following day.
- When the alarm time arrives, you can press and hold the  button for 2 seconds to turn off the alarm directly. The alarm will sound at the set time of the following day.



Note:

- If the alarm sound source is unavailable when the alarm arrives, the system will wake up to beeper mode instead.

Using the Sleep Timer



You can use the sleep timer to set a certain period of time to turn off the system automatically, when you are enjoying music in Bluetooth mode, AUX IN mode, or Radio mode.

Setting the Sleep Timer



Press the  button repeatedly to cycle and select the desired one among available sleep time. The **SLEEP** icon will appear on the display, and the time digital will blink. The sleep time (in minutes) changes as follows by each pressing the  button.

15 → 30 → 60 → 90 → 120 → OFF


Notes:

- When the system is powering off, press the  button to turn on the system and enter sleep timer setting. The system will play the last sound source before the system was turned off.
- If the desired sleep time is selected, it will be activated about 5 seconds later.
- If you press the  button repeatedly to select **OFF**, this will only turn off the sleep timer function. The system will not be turned off.

Checking or Changing the Remaining Time

- Press the  button once to check the remaining time.
- Press the  button repeatedly to select another sleep time.

Canceling the Sleep Timer

- Press the  button repeatedly to select **OFF**, the **SLEEP** icon will disappear from the display.

Troubleshooting

Check this list for a possible troubleshooting solution before calling for service.

In These Cases	Check the Following Points
Power does not come on	<ul style="list-style-type: none"> AC power adapter is not inserted securely. Plug in securely.
Time is not correct after unplugging the AC power adapter	<ul style="list-style-type: none"> Ensure the time is set correctly before unplugging the AC power adapter. The backup battery is low. Replace the backup battery with a new one.
Hard to listen to broadcasts because of noise	<ul style="list-style-type: none"> The antenna is not properly extended or positioned. Tune to the correct radio channel/frequency. Ensure the antenna is further away from any equipment that may be causing the noise or interference.
No sound output	<ul style="list-style-type: none"> Check if the volume level of the system is set to the minimum. When in Bluetooth mode, check if the volume level of your Bluetooth device is set to the minimum or muted. When in AUX IN mode, check if your external device is set to the minimum or muted.
The system does not respond when the buttons are pressed.	<ul style="list-style-type: none"> Remove and reconnect the AC power adapter and turn on the system again.
The system is powered off automatically	<ul style="list-style-type: none"> The system enters the saving energy mode. The system does not connect with any audio source for more than 45 minutes. Turn on the system again and play back an audio source.
Bluetooth connection cannot be restored automatically	<ul style="list-style-type: none"> The system may be powered off and powered on when playing back a track over Bluetooth connection. You need to make the connection again.
Bluetooth connection cannot be established	<ul style="list-style-type: none"> When making a Bluetooth connection between the system and your device for the first time, if the connection is fail, you need to power off your device and power on again to clear the device name, and make the connection again.
If you find USB charging cannot perform after connecting your device to the POWER OUT jack on the system	<ul style="list-style-type: none"> Maybe your USB cable is not supported by the system, please try to use another USB cable.

Technical Specifications

Model	SFQ-08	
Type	Sound Rise	
Support Bluetooth	Bluetooth 1.2, 2.0 and 2.1 compliant	
Support Profile	A2DP, AVRCP	
Input Sensitivity	AUX Input	TBD
Tuner	Band	FM
	Tuning Range	87.5 MHz~108.0MHz
	Frequency Step	100KHz
	Preset Stations	6
Input Terminal	External DC IN (for AC power adapter), AUX IN	
Power Source	DC 9V/2A (External DC IN)	
AC Adaptor	Input: AC 100-240V, 50/60Hz	
	Output: DC 9V/2A	
Dimensions (Approx.)	132mm (W) x 142mm (H) x 85mm (D)	
Weight	0.59kg	

Design and specifications are subject to change without notice.

Save this manual