

PRELUDE ES1

32-bit PCI Sound Card

Quick Installation Guide


System Requirements

Sound Card Prelude ES1 has the following requirements :

- ◆ Computer with Pentium processor.
- ◆ At least one empty PCI slot for installing the sound card.
- ◆ 16 MB RAM or more.
- ◆ At least 4 MB of free hard-disk space for installation files.
- ◆ Microsoft Windows 95 or Windows NT 4.0.
- ◆ DirectX 5.0 or later is recommended.

Hardware Installation

1. Switch your PC off and detach the power cord.
2. Open your PC casing and locate a free 32-bit PCI slot.
3. Remove the slot cover screw and slot cover.
4. Place the sound controller over the slot and push the card gently into the socket.
5. Check to make sure all connections of the Sound Card make contact with the slot.
6. Reinstall the slot cover screw.
7. Attach all necessary connectors, speakers, microphone, joystick, etc., to the Sound Card.

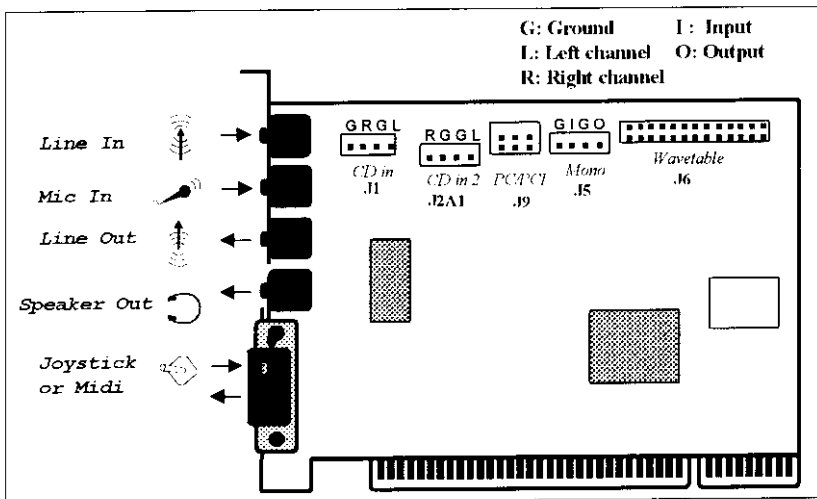

P.S. The colors for each channel: L, R, G are white, red, and black.

8. Reattach the power cord to your PC and turn the power switch on.

Software Installation

** In order to deliver the correct message, the steps below with italic indicate the dialogue boxes or the descriptions in the boxes.*

To Install under Windows 95

1. Plug on the sound card and start up Windows 95.
2. *New Hardware Found* → *PCI Multimedia Audio Device*.
3. *Update Device Driver Wizard* → insert the installation CD → click on **Next**.
4. Click on **Other Locations**. → key in **E:\Win95Drv** → **OK**

5. *Update Device Driver Wizard* → *Windows found the following update driver for this device: ES 1938 PCI AudioDrive Device Manager.*
→ Click on **Finish**.
6. Follow the on-screen instructions.

Note: If this is the first time you install a sound card, Windows 95 will ask you to install Windows 95 CD-ROM. Just follow the instructions.

To install under Windows NT

1. Plug on the sound card and insert the Installation CD.
2. Start up Windows NT.
3. Click on | **My Computer** | → | **Control Panel** | → | **Multimedia** |.
4. *Multimedia Properties* → Choose **Device** and click on **Add**.
5. Select **Unlisted or Updated Driver** → **OK**.
6. *Install Driver*, key in D:\WinNT40 (Assuming your CD ROM drive is D:) → **OK**.
7. *Add Unlisted or Updated Driver, ES 1938 PCI Driver 4.xx.xx* → **OK**.
8. Select **Restart now** and finish installing.

3100540163
Version 1.0
April 30, 1998
Printed in China

The information in this document is subject to change without notice and does not represent a commitment on the part of the vendor.

No warranty of representation, either expressed or implied, is made with respect to the quality, accuracy or fitness for any particular purpose of this document. The manufacturer reserves the right to make changes to the content of this document and/or the products associated with it at any time without obligation to notify any person or organisation of such changes.

In no event will the manufacturer be liable for direct, indirect, special, incidental or consequential damages arising out of the use or inability to use this product or documentation, even if advised of the possibility of such damages.

Microsoft Windows is a trademark of Microsoft Corporation.

All product names are trademarks or registered trademarks of their respective owners.

FCC Compliance Statement

This device complies with Part 15 and 68 of the FCC Rules. Operation is subject to the following two conditions:

1. this device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation

FCC Warning Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 and 68 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can emit radio frequency energy and, if not installed or used in accordance with the instructions, may cause interference to radio communications. However, television reception interference can be determined by turning the equipment off and on, the user is encouraged to correct the interference by one or more of the following measures.

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and the receiver
- Connect the equipment into an outlet different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help.

** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment*