


Notice before reporting trouble

故障及处理方法

Customer can check and solve out, if it has same trouble after checking, please contact service center.

检查后有相同的问题，请联系服务中心，服务中心将为您检查和解决。

Amplifier 音箱

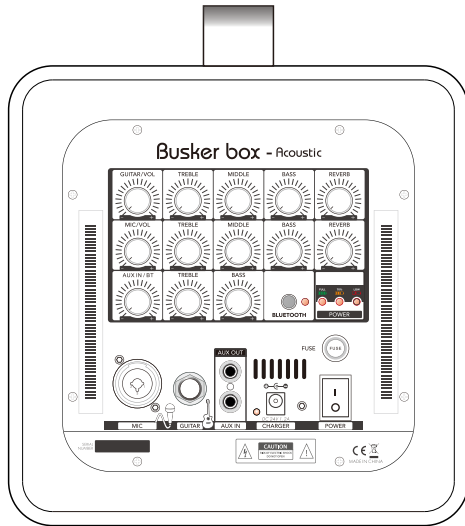

If it does not power on.

当发现没有通电

- 01** Please re-check power switch.
请重新检查电源开关有没有打开。
- 02** Please check if FUSE is cut, exchange it, If Fuse is cut.
请检查保险丝没有被烧坏，如烧坏，请更换相同规格的保险丝。

If it does not have sound.

如果没有声音

- 01** Please check battery remains.
请检查电池剩余量（电源指示灯红色亮起，或三个指示灯熄灭）。
- 02** Please check if the volume adjustment is wrong or not.
请检查音量旋钮是否调到最小处。

Precaution (Player Deck)

安全警告(用户指引)



Warning mark (In the case of violating warning / indication, it may happen a minor injury or property damage.)

警告标志（在违反警告/指示的情况下，可能发生轻微的伤害或财产损失。）

Precaution 预防

01 Common precaution 常见预防措施

- * Please do not press button and volume strongly.
请非专业维修人士不要拆除任何旋钮和按钮。
- * Please do not repair and disassemble arbitrarily.
请非专业维修人士不要拆卸和修理。
- * Please use when the around temperature is in 0°C~40°C.
使用温度范围：0度~40度。
- * It will cause the product trouble, if using in high and low temperature by constraint.
如果在高温低温（高于40度和低于0度）条件下使用，会造成产品故障。
- * Please do not use the abnormal medium.
请不要把产品放在异常介质上面。

Precaution

Below is to protect a property damage, please read and use correctly.
为了避免您的财产受到损失，请认真阅读下面内容及正确使用。

安全警告



In the case of violating warning / indication . it may happen a serious injury or death.
In the case of violating warning / indication, it may happen a minor injury or property damage.

*在违反警告/指示的情况下使用，它可能造成严重的伤害或死亡。
*在违反警告/指示的情况下使用，它可能造成轻微的伤害或财产损失。

01 Precaution to prevent from damage and fire. 注意防止损坏和发生火灾。

- * Please do not use a damaged power cord and loose-socket when charging.
充电时请勿使用破损的电源线和松动的插座。
- * Please do not bend charger cord by force and put a heavy good on it.
请妥善保管好充电适配器，不能用力拉扯充电适配器器电缆，以免发生断路引起火灾。
- * Please do not spread water and do not clean with benzene, thinner, alcohol after clean after detaching charger.
勿用苯、天那水、稀释剂、酒精等化合物擦拭充电适配器及音箱，以免机器受损。
- * Please do not install it on the place with much humid, dust and water.
切勿在高温、潮湿、污浊、强烈震动处保用机器。
- * Please do not put a candle flame, cigarette lighter on it and do not install close to a hot-device.
切勿在音箱周围摆放蜡烛、点烟器、及电热等易发生火灾设备。
- * Please do not disassemble, repair and modify carelessly.
切勿擅自拆卸、改装、修理机器，以免发生断路产生火灾。
- * Please do not keep close to combustible substance.
请勿靠近易燃易爆等物质。
- * Please clean out dust, water on the connection to the plug pin.
请及时清除连接插头插座上的灰尘和水。
- * Please do not put bowl with water, chemicals, metals.
不要在音箱充电适配器上摆放水、化学品、金属等。
- * When lighting occurs, doing not use long time, please detach power adaptor plug and battery.
在打雷请拔下充电适配器和关闭音箱电源开关。
在不使用时请拔下充电适配器和关闭音箱电源开关，避免影响电池的寿命和性能。
- * When amplifier smokes and has strange sound, please plug out the power adaptor plug.
在使用的过程中，音箱及充电适配器出现异味、异样声音、冒烟等异常情况，请立即停止使用，并马上关闭电源，及切断一切相关电源。

Precaution

Below is to protect a property damage, please read and use correctly.

安全警告

02 Machine damage prevention 预防机器损坏

- * Please use the offered charger AC / DC.
请用我们所提供的DC/AC专用充电适配器。
- * When exchanging fuse, please use a proper fuse.
更换保险丝时，请使用同规格保险丝。
- * This product is very sensitive, so please do not impact on the product strongly.
勿将音箱摔落，或落在坚硬物体表面，以免音箱受损。
- * Please do not force too much when using button and volume.
在调节音量音色时请不要暴力方向旋转旋钮按钮。

03 Method of operation when charging the internal battery 充电注意事项

- * When battery remains is under 30%, please charge.
当电源电量红色指示灯亮起时（电量低于30%），请进行充电。
当绿色LED亮起，充电完成，在不使用的情况下请拔下充电器。
- * It should connect a charger AC plug to AC power after connecting the offered AC/DC charger with the product's DC adaptor jack.
请先将所提供的AC/DC充电适配器DC插头与音箱的DC适配器插孔连接后，再将充电适配器AC插头连接到AC电源上。
- * Before doing a quick charging, turn power switch off.
在为音箱进行快速充电时，请关闭音箱的电源开关。
（本音箱可以在充电过程中使用，同时在使用过程中也会为锂电池充电）
- * In the case of product trouble caused by another AC/DC which is not offered, A/S is not available, so please do not use other company's adaptor.
请用我们所提供的专用充电适配器为音箱充电，如所提供的充电适配器出现故障时，请联系客户服务中心或销售商进行维修及更换，不能私自使用其它的产品代替。
因使用非所提供的充电适配器导致音箱损坏的，将不能享受本公司的售后及维修服务。

Guarantee Condition

保修-规则与条款

We try to do our best to keep product quality. If it happen the product trouble, please contact with service agent or A/S.

非常感谢您购买及使用本公司的产品，自购买日起将为您提供一年免费保修服务。为维护您的权益，明确保修义务，请索取正规购物发票，并注明原始购买日期，妥善保存。如果在使用过程中发生故障，请与销售商或客户服务中心联系。

01 Free service 免费保修

* Product trouble is occurred by manufacturing defects.
因生产制造时缺陷所导致产品故障的。

* Function and operation has trouble inartificially.
在正常使用下出现功能缺陷的。

* If happening same problem 3 times, free service is available in a year after purchasing. (If it does not correspond with guarantee condition, actual expense will be happened.)
自购买日起，一年内同一部件出现3次故障的。(如果不符合上述条件，将收取维修费用)

02 Cost service 成本维修

* In the case of passing the guarantee period.
保修期后出现的技术性能故障的。

* Product trouble is caused by user careless handling.
由使用者使用操作不当引起的。

* In the case of a damage and modification after repairing at service center which is not appointed out by us.
私自拆卸修理或修改及非本公司授权的维修中心维修后的。

* Material life is passed.
部件使用寿命过期的。

* In the case of disorder caused by external device.
外界因素引起的。

* In the case of the natural disaster.
自然灾害引起的。

* If it does present guarantee letter.
提供不了产品保修卡的。

Guarantee Condition

保修-规则与条款

03 Exchange goods and Refund 更换产品或退款

If happening below situation, exchange goods and refund are available.
出现以下情况，可以免费更换产品或退款。

* If happening same trouble 3 times and happen again in the guarantee period, exchange goods is available.

在质保期内，同一设备、同一质量问题连续三次维修仍无法正常使用的，我方承诺更换同品牌、同型号新设备，并对产品质量实行“三包”服务。在质保期外，提供设备的更换、维修只收取零配件成本费用，不收取人工技术和服务费用。

* If we loss requested goods in guarantee period, exchange goods and refund is available.
在产品保修过程中因本公司疏忽导致产品遗失的，可以更换相同型号的产品或退款。

* If it is impossible to repair due to manufacturing defective.
因生产过程中出现无法维修的。

* The product has functional trouble in 10 days after purchasing
怎购买起10天内，发生功能故障的。

Guidance service 服务指引

* When requesting to repair, it should present guarantee letter, when getting it back after repairing, please check the free and cost service on guarantee letter. In the case of free service, it can avoid unnecessary payment.
接受售后服务时，您需要向本公司授权维修站同时出示产品保修卡连同购物发票原件（其它购买凭据不能使用）才能享有免费的修理或成本维修。

* When purchasing product, please get guarantee letter and sign from store.
购买产品时，请索取正规购物发票，并注明原始购买日期，妥善保存。

* If it does not present guarantee letter, service is not available, so please keep it carefully.
产品保修卡及发票是售后服务的有效凭证，请妥善保管。

* If A/S is not processed rapidly and have any incommodity, please call to customer support center (0752)355-7545 .
如果在本公司授权维修站维修时出现冲突或无法解决，请致本公司电客户服务中心 (0752) 355-7545。

Product Warranty

产品保修

Product Warranty

产品保修

1. This product is manufactured by strict quality control and inspection.
本产品通过严格的质量控制和检验合格。
2. If happening trouble in normal use, customer support center will repair in free during guarantee period.
如果在保修期内正常使用情况下发生故障，请联系客户服务中心进行免费维修。
3. If it is related to cost service, even though it passes or not passes the guarantee period, it needs the repair cost.
如果在保修期内及保修期外因非正常使用情况下发生故障，请联系客户服务中心进行成本维修。
4. If need a repair, please present a guarantee letter.
如果需维修，请出示本产品质量保修卡（产品质量保修卡为本说明书的第16页）。
5. It does not re-issue guarantee letter again, please keep it carefully.
产品保修卡及发票是售后服务的凭证，请妥善保管。
6. This guarantee is available only in the domestic.
此产品质量保修卡只限国内使用。

Warranty Information

质量保修卡

Warranty Information

质量保修卡

Product Name	AMPLIFIER		Model No	BUSKER BOX			
Purchase date	Year	Month	Day	Guarantee Period	1Year	Holding period for repairing part	1 year after the product is discontinued
Customer	Name					Tel	
	Address						
Manufacturer	Name		BELCAT CO.,LTD		Tel		(0752) 355-7545
	Address						
Seller	Company					Tel	
	Address					Name	

产品名称	充电式蓝牙民谣吉他音箱		型号	BUSKER BOX			
购买日期	年	月	日	保修期	一年	失效期	自购买日起一年后
顾客	姓名					电话	
	地址						
制造商	姓名		惠阳倍铃乐器配件有限公司		电话		(0752) 355-7545
	地址						
销售商	公司名称					电话	
	地址					联系人	

FCC Notice

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING:
Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement.

The device can be used in portable condition without restriction.

MEMO

备忘录

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....