 




**Southwestern Bell**  
Freedom Phone®

**5.8GHz**  
**Cordless Telephone With Call Waiting Caller ID**

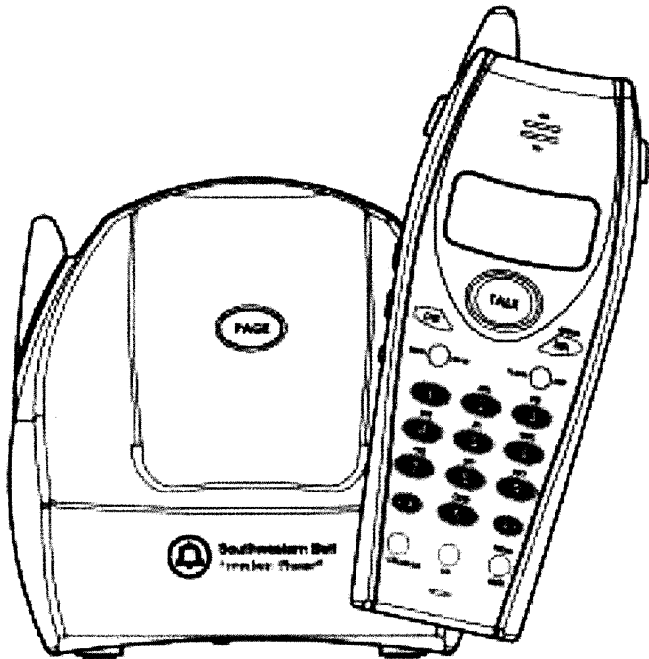

**GH5810US Owner's Manual**

**Toll Free Helpline 1-800-366-0937**

**<http://www.swbfreedomphone.com>**

# Table of Contents

<b>Controls and Features</b> .....	3-4
LCD Display .....	4
<b>Telephone Setup</b> .....	5
Tone/Pulse Switch .....	5
Battery Installation .....	5
Battery Duration .....	5
When the Battery Needs Charging .....	5
The Headset Jack .....	5
<b>Basic Operation</b> .....	6
Making Calls .....	6
Receiving Calls .....	6
Redialing .....	6
Additional Options .....	6
<b>Settings</b> .....	7-9
Handset Settings .....	7
Changing the Language .....	7
Turning the First Ring On or Off .....	8
Setting the Time and Date .....	8
Setting the Area Code .....	8
Adjusting the Contrast .....	8
Setting the PBX Number .....	8
Turning PBX Mode On or Off .....	9
Changing the Pause Time .....	9
Deleting Message Waiting Indication .....	9
Turning Auto Answer On or Off .....	9
Disabling the Ring for Private Calls .....	10
Disabling the Ring for Unavailable Calls .....	10

Speed dialing .....	11-12
Storing Phone Numbers .....	11
Letter Table .....	11
Viewing the Phone Book .....	11
Making Calls from the Phone Book .....	12
Deleting a Stored Number .....	12
Editing a Stored Number .....	12
Priority (VIP) Calls .....	12
Blocked (REJ) Calls .....	12
<b>Caller ID .....</b>	<b>13-15</b>
When You Receive a Call .....	3
Viewing the Caller ID List .....	13
Caller ID Displays .....	13-14
Caller ID with Call Waiting Service .....	14
Storing Caller ID Records .....	14
Deleting Caller ID Records .....	14
Returning Caller ID Calls .....	15
Message Waiting .....	15
New Call Light .....	15
<b>Other Features .....</b>	<b>5</b>
Using the Handset Finder (PAGE) .....	15
Out-of-Range Warning .....	15
Channel Changing .....	15

## IMPORTANT SAFETY INSTRUCTIONS

BEFORE USING YOUR TELEPHONE EQUIPMENT, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK AND INJURY TO PERSONS, INCLUDING THE FOLLOWING:

1. Read and understand all instructions.
2. Follow all warnings and instructions marked on the product.
3. Unplug this product from the wall telephone jack and power outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
4. Do not use this product near water, for example, near a bath tub, wash bowl, kitchen sink, laundry tub, swimming pool, or in a wet basement.
5. Do not place this product on an unstable cart, stand or table. The product may fall, causing serious damage.
6. Slots or openings in the cabinet and the back and bottom are provided for ventilation, to protect it from overheating. These openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, or other similar surface. This product should never be placed near or over a radiator or heat register.
7. This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your dealer or local power company.
8. Do not allow anything to rest on the power cord. Do not place this product where the cord will be damaged by persons stepping on it.
9. Do not overload wall outlets and extension cords, as this can result in fire or electric shock.
10. Never push objects of any kind into this product through cabinet slots, as they may touch dangerous voltage points or short out parts. This could result in fire or electric shock. Never spill liquid of any kind on the product.
11. To reduce the risk of electric shock, do not disassemble this product. Instead, when service or repair work is required, take it to a qualified service technician. Opening or removing covers may expose you to dangerous voltages or other risks. Incorrect reassembly can cause electric shock when the appliance is subsequently used.
12. Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
  - a. When the power supply cord or plug is damaged or frayed.
  - b. If liquid has been spilled into the product.
  - c. If the product has been exposed to rain or water.
  - d. If the product does not operate normally, and proper operating instructions have been followed, adjust only those controls that are covered by the operating instructions. Improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to normal operation.
  - e. If the product has been dropped or the cabinet has been damaged.
  - f. If the product exhibits a distinct change in performance.
13. Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electric shock from lightning.
14. Do not use the telephone to report a gas leak in the vicinity of the leak.
15. Use only the power cord and batteries indicated in this manual. Do not dispose of batteries in a fire. They may explode. Check with local codes for possible special disposal instructions.

### CAUTION

Risk of explosion if battery is replaced by incorrect type.

Replace only with the same or equivalent type recommended by the manufacturer. Dispose of used batteries according to the manufacturer's instructions.

# CONSIGNES DE SÉCURITÉ IMPORTANTES

**Pour réduire les risques de blessure, d'incendie et d'électrocution, chaque fois que vous utilisez ce produit, appliquez les règles élémentaires de sécurité, notamment les suivantes :**

1. Lisez attentivement toutes les instructions.
2. Respectez tous les avertissements et toutes les instructions apparaissant sur le produit.
3. Avant de nettoyer ce produit, débranchez la prise murale. N'utilisez pas de nettoyant liquide ni en aérosol. Pour nettoyer, utilisez simplement un chiffon humide.
4. N'utilisez jamais ce produit près d'un point d'eau (par exemple, près d'une baignoire, d'une cuvette de lavage, d'un évier de cuisine ou d'un lavabo), dans un sous-sol humide ou près d'une piscine.
5. Ne placez pas ce produit sur une table, un meuble ou un chariot instable. Si le produit tombe, il risque d'être gravement endommagé.
6. Les fentes et les ouvertures qui se trouvent derrière ou dessous l'appareil servent à la ventilation. Pour éviter toute surchauffe, ces ouvertures ne doivent jamais être couvertes ou obstruées. Pour éviter qu'elles soient bloquées, ne placez pas le produit sur un lit, un sofa, une moquette ou une autre surface molle. Ce produit ne devrait jamais être placé près d'un radiateur ou d'un autre appareil de chauffage.
7. Ne laissez jamais d'objet posé sur le cordon d'alimentation. Ne placez pas ce produit à un endroit où le cordon risque d'être abîmé par des animaux de compagnie ou des personnes pouvant l'écraser en marchant.
8. Ne surchargez jamais les prises murales et les rallonges car vous risqueriez alors de provoquer un incendie ou une électrocution.
9. Ne faites jamais entrer des objets par les fentes du boîtier de cet appareil car vous pourriez toucher des points de tension dangereux ou causer un court-circuit pouvant entraîner un incendie ou une électrocution. Il ne faut jamais verser de liquide sur ce produit.
10. Pour réduire les risques d'électrocution, ne tentez pas de démonter ce produit. Lorsqu'une réparation semble nécessaire, apportez-le plutôt chez un technicien qualifié. Si vous ouvrez ou enlevez une pièce du boîtier, vous vous exposez à des tensions électriques dangereuses et à d'autres risques. Si l'appareil est mal assemblé, une électrocution pourrait survenir lors de la prochaine utilisation.
11. Dans les situations suivantes, débranchez tous les cordons d'alimentation et consultez un technicien qualifié.
  - A. Lorsque le cordon d'alimentation est endommagé ou effiloché.
  - B. Lorsqu'un liquide a été renversé sur le produit.
  - C. Lorsque le produit a été exposé à la pluie à l'eau.
  - D. Lorsque le produit ne fonctionne pas normalement et que toutes les instructions ont été suivies. Ne réglez les commandes décrites dans le guide d'utilisation. Un mauvais réglage des autres commandes peut causer des dommages, et l'intervention d'un technicien qualifié pourrait être nécessaire pour remettre le produit en état.
12. Évitez d'utiliser un téléphone (sauf un téléphone sans fil) durant un orage électrique. Il existe alors des risques faibles d'électrocution par un éclair.
13. S'il y a une fuite de gaz, n'avisez pas les autorités avec un téléphone situé près de la fuite.
14. Utilisez uniquement le type de pile indiqué dans votre guide d'utilisation. Ne jetez jamais des vieilles piles dans un feu. Elles risqueraient d'exploser. Vérifiez la réglementation locale pour savoir comment en disposer.
15. ATTENTION- Il y a danger d'explosion s'il y a un remplacement incorrect de la batterie. Remplacez uniquement avec une batterie du même type ou d'un type équivalent recommandé par le constructeur. Mettre au rebut les batteries usagées conformément aux instructions du fabricant.

# SAFETY INSTRUCTIONS FOR BATTERIES

## Safety Instructions for Batteries

### Handset Battery Pack

#### CAUTION:

Use only a Southwestern Bell Freedom Phone approved battery pack in the handset of your GH5810 Cordless Telephone. To reduce the risk of fire or injury, always do the following when replacing, discarding or charging batteries. When handling the batteries, be careful not to short the battery with conducting materials such as rings, bracelets, and keys. The battery or conducting material may overheat and cause burns.

Use only the following type and size of battery pack:

#### FOR HANDSET UNIT :

3.6V 600mAh Nickel-Metal Hydride (Ni-MH) Battery, JB60AAAH3BMX, JB Energy (HK) Ltd.

- Do not dispose of the battery pack in a fire. The cell may explode. Check with local codes for possible special disposal instructions.
- Do not attempt to open or mutilate the battery pack. The chemicals are dangerous and may cause damage to the eyes or skin, and may be toxic if swallowed.
- Follow the charging instructions outlined in this manual.

 
The EPA certified RBRC®\* Battery Recycling Seal on the Nickel-Metal Hydride (Ni-MH) battery indicates that Southwestern Bell Freedom Phone Retail Sales is voluntarily participating in an industry program to collect and recycle these batteries at the end of their useful life, when taken out of service in the United States or Canada. The RBRC® program provides a convenient alternative to placing used Ni-MH batteries into the trash or the municipal waste stream, which may be illegal in your areas. Please call 1-800-8-BATTERY for information on Ni-MH battery recycling and disposal bans/restrictions in your area. Southwestern Bell Freedom Phone Retail Sales's involvement in this program is part of our commitment to preserving our environment and conserving our natural resources.

\*RBRC is a trademark of the Rechargeable Battery Recycling Corporation.

## Save These Instructions

# NAME OF CONTROLS AND INDICATIONS

## Handset Controls, Indicators

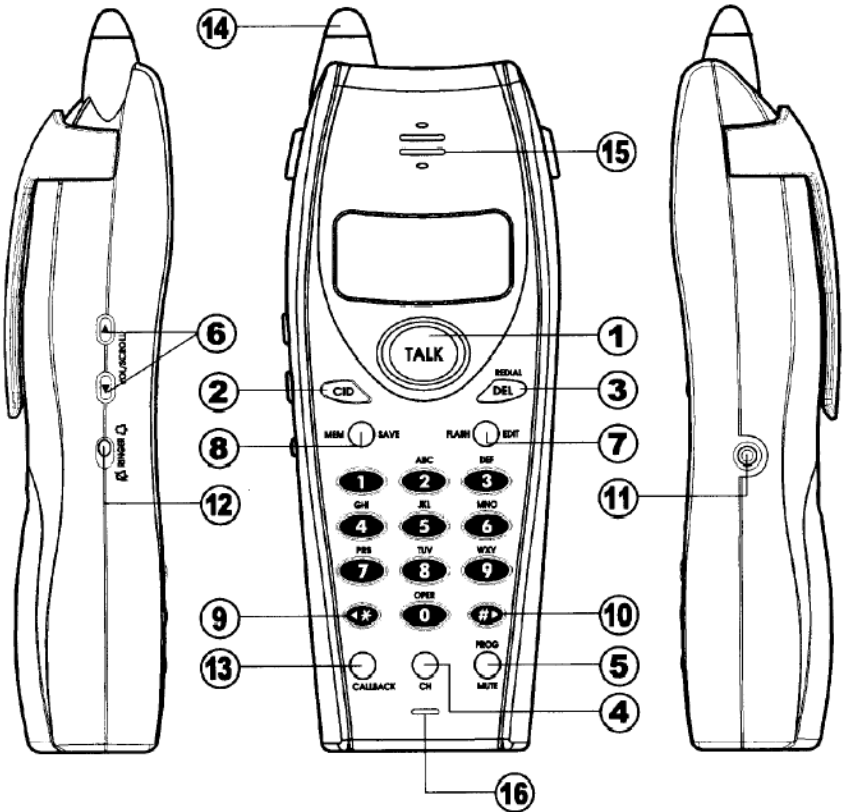


## Key controls and Features

- 1 Talk**  
The **Talk** key is used to access the telephone line or end a call.
- 2 Caller ID Key(CID)**  
The **CID** key is used to review Caller ID information stored in memory.
- 3 Redial Key(REDIAL/DELETE)**  
When the phone is idle or off-hook, press **REDIAL** to redial the last number dialed. When viewing or editing menus and logs, the **REDIAL/DELETE** key is used to erase digits and single or multiple entries from the phone book and Caller ID directories. **REDIAL** is also used to insert a programmable pause into a number stored in the phone book.
- 4 Channel Key(CH)**  
The **CH** key, if pressed when the line is off-hook, will scan up to 50 channels and select the clearest one to provide the best possible reception.
- 5 MUTE/PROG Key**  
The **MUTE/PROG** key is used to temporarily mute the handset microphone. This key is also used to access the programmable functions of your phone.
- 6 VOL/SCROLL**  
The **▲▼** key lets you scroll through menus and logs, and adjust the handset volume.
- 7 FLASH/EDIT Key**  
The **FLASH/EDIT** key is used to access telephone company services, like call waiting. It is also used to create and edit phone book entries.
- 8 MEM/SAVE Key**  
Use **MEM/SAVE** to program and retrieve the numbers in the speed dial directory. The **MEM/SAVE** key is also used to save numbers into the phone book and other settings.
- 9 Temporary Tone/View Left key(⏪)**  
If the base is set to pulse dialing, pressing **⏪** causes subsequent digits to be dialed out using tone until the line is put back on hook. Also used to view the left part of the display and move the cursor left when editing.
- 10 View Right Key(⏩)**  
Used to view the right part of the display and move the cursor right when editing.
- 11 Headset Jack**  
Allows using a headset (not included) for hands-free convenience.
- 12 RINGER Switch (ON/OFF)**  
Adjust the switch to select the ringer volume-choose between on and Off.
- 13 CALLBACK Key**
- 14 New Call Indicator**  
Flashes to indicate there are calls that have not been reviewed
- 15 Earpiece**
- 16 Microphone**


 
## LCD Display Indicator

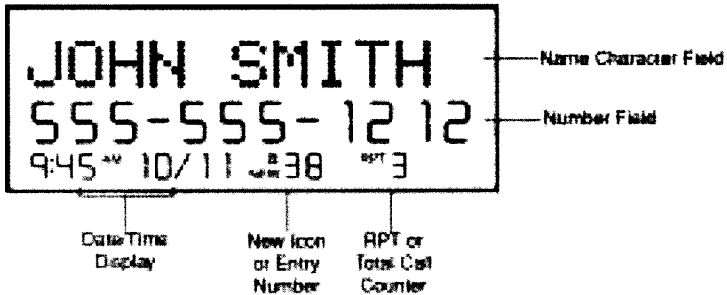

### Name Character Field

Displays caller's name and operational menus.

### Number Field

The number field will display numbers when dialing, viewing Caller ID, and when viewing the phone book.

### Date/Time Display

Shows the date and time of Caller ID calls or current date & time when idle.

### NEW Icon

When in idle mode, the **NEW** call icon will flash slowly when a new Caller ID call has been received. The number of new caller ID calls is listed next to the icon.

### Call/Entry Number

When in any of the menus, a number is listed here, next to the # sign. This number indicates the place in the list, such as the 38th caller ID call or the 7th setting in the menu.

### RPT Counter

 
When viewing caller ID entries, the **RPT** icon indicates that the same Caller ID number has called more than one time since Caller ID memory has last been reviewed.

Next to the **RPT** icon is a counter that indicates how many times that caller has called since the last review.

### Total Call Counter

The Total Call Counter will show the total number of Caller ID messages received, the total number of phone numbers stored in the phone book, etc., depending on the menu.

# Base Unit Controls and Indicators

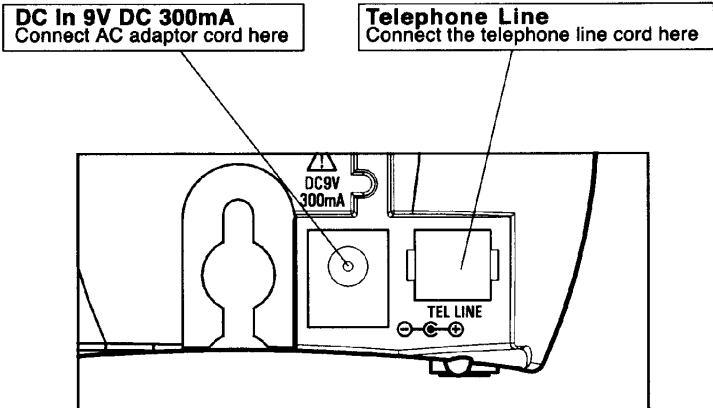

**Page Button**  
Used to locate the handset

**In Use/Charge LED**  
Lights when the handset is in TALK mode or the handset is on the cradle and the battery is being charged. Flashes when an incoming call is received.



## FCC WANTS YOU TO KNOW

This equipment complies with Part 68 of the FCC rules and the requirements adopted by the ACTA. On the bottom of this equipment is a label that contains, among other information, a product identifier in the format US: XXXXXXXXXXXXXXXX. If required, This number must be provided to the telephone company .

An FCC compliant telephone cord and modular plug is provided with this equipment. This equipment is designed to be connected to the telephone network or premises wiring using a compatible modular jack which is Part 68 compliant. See Installation Instructions for details.

The REN is used to determine the number of devices that may be connected to a telephone line. Excessive RENs on a telephone line may result in the devices not ringing in response to an incoming call. In most but not all areas, the sum of the RENs should not exceed five (5.0). To be certain of the number of devices that may be connected to a line, as determined by the total RENs, contact the local telephone company (For products approved after July 23, 2001, the REN for this product is part of the product identifier that has the format US: XXXXXXXXXXXXXXXX. The digits represented by 02 are the REN without a decimal point (e.g., 03 is a REN of 0.3). For earlier products, the REN is separately shown on the label.

If your telephone equipment causes harm to the telephone network, the telephone company may discontinue your service temporarily. If possible, they will notify you in advance. But if advance notice isn't practical, you will be notified as soon as possible. You will be informed of your right to file a complaint with the FCC. Your telephone company may make changes in its facilities, equipment, operations, or procedures that could affect the proper functioning of your equipment. If they do, you will be notified in advance to give you an opportunity to maintain uninterrupted telephone service. If you experience trouble with this telephone equipment, disconnect from the network until the problem has been corrected or until you are sure that the equipment is not malfunctioning.

This equipment may not be used on coin service provided by the telephone company. Connection to party lines is subject to state tariffs.

The USOC number of the registration jack for the equipment is RJ11C.

This equipment is hearing aid compatible.

**Warning:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio TV technician for help.

**NOTICE:** If your home has specially wired alarm equipment connected to the telephone line, ensure the installation of this GH5810 does not disable your alarm equipment. If you have questions about what will disable alarm equipment, consult your telephone company or qualified installer .

## About the GH5810

The GH5810 is a 5.8GHz Cordless Phone with Caller Identifier . It is designed and engineered to strict standards for reliability, long life, and outstanding performance.

### FEATURES

- **Caller ID (40 call data memory locations) with call waiting**
- **40 Channels (auto or manual selection)**
- **20-Number One-touch Dial Memory**
- **Direct dialing from caller list**
- **Extended battery life**
- **Digital security coding**

The GH5810 features include AutoTalk™ and AutoStandby™ . AutoTalk™ allows you to answer a call by just removing the Handset from the Base so you don't have to waste time pushing buttons or flipping switches. AutoStandby™ allows you to hang up by simply returning the handset to the Base. The Ultra Clear Plus™ true compander circuitry virtually eliminates background noise. This innovative technology, together with 40 different channels, provides you with the best possible reception during all your conversations.

TO PROTECT YOU AGAINST MISBILLED CALLS, THE GH5810 HAS RANDOM CODE™ DIGITAL SECURITY WHICH AUTOMATICALLY SELECTS ONE OF OVER 65,000 DIGITAL SECURITY CODES FOR THE HANDSET AND BASE UNIT. ALSO, THE AUTOSECURER™ FEATURE ELECTRONICALLY LOCKS YOUR PHONE WHEN THE HANDSET IS IN THE BASE. TO GET THE MOST FROM YOUR GH5810, PLEASE READ THIS OPERATING GUIDE THOROUGHLY.

# INTRODUCTION (CONT.)

## Box Contents

- 1 Base unit
- 1 Handset with rechargeable batteries
- Quick installation guide
- Registration card
- AC adaptor with cord (9V 300mA)
- Memory card
- Telephone line cord

## NOTE:

- a. Keep the shipping carton and packaging, in case you need to transport your phone.
- b. If any of these items are missing or damaged, contact your place of purchase.

## Preliminary Preparation / Telephone Line Installation

1. Never install telephone jacks during a lightning storm.
2. Never install telephone jacks in wet locations unless the jack is specifically designed for wet locations.
3. Never touch uninsulated telephone wires or terminals unless the telephone line has been disconnected at the network interface.
4. Use caution when installing or modifying telephone lines.

## Modular Outlet

The GH5810 cordless telephone operates from a standard 110/120 volt outlet. The handset is powered by a rechargeable battery pack. Batteries are charged automatically when the handset is placed in the cradle of the base unit.

# INSTALLATION

 
## Desk or Table Installation

1. The GH5810 base unit has built-in wall mount hanger holes. There is no bracket to assemble. Simply take the base unit out of the box.
2. Plug the AC adaptor cord into the 9V DC-300mA input jack on the Base unit.
3. Plug one end of the telephone cord into the TEL LINE jack on the Base unit.
4. Plug the other end of the telephone cord into the telephone wall jack.
5. Plug the AC adaptor into a standard 120V AC wall outlet.



**NOTE:**

Use only with class(class)e 2 9V DC 300mA adaptor supplied with GH5810.

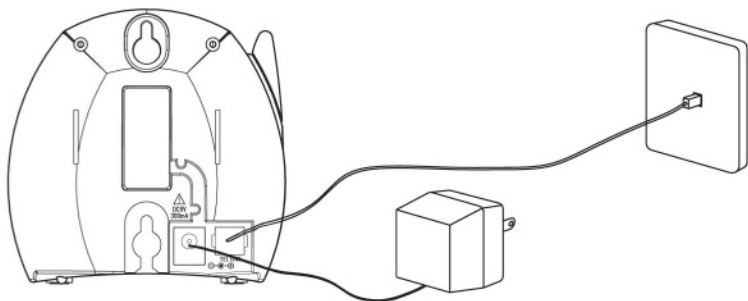


Place the telephone and power cords where they will not create a trip hazard, or where they could become chafed and create a fire or other electrical hazards.

## INSTALLATION(CONT.)
 
### Wall Mounting

1. If using a standard wall plate, this step is not necessary. Place the Desk/ Wall bracket on the wall and mark the location of the screws. Install the screws leaving 3/16" extending out from the wall. Use anchors to secure screws.
2. To connect the Desk/Wall bracket in the wall mount position, simply align the bracket with the slots on the base until it is securely in place.

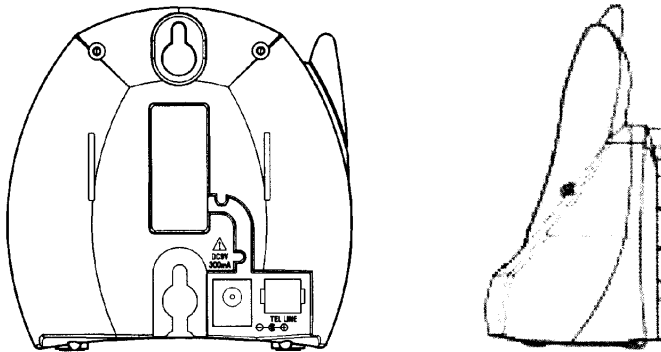

3. Insert the AC adaptor into the back of the unit.
4. Plug one end of the telephone line cord into the TEL LINE jack on the Base unit.
5. Thread the adaptor cord and telephone line cord through the grooves in the back of the unit. The cord will exit from the bottom.  
**DO NOT CONNECT THE AC ADAPTOR TO THE WALL POWER OUTLET YET.**
6. Plug the other end of the line cord into the wall jack.
7. Mount the phone on the wallplate studs or on the screws as in step 1, and press until the unit locks in place.
8. Plug the AC adaptor into the power outlet.



## INSTALLATION(CONT.)

### Handset Battery Charging

The battery pack in the handset must be fully charged for about 10-14 hours before using the telephone.

 
After connecting to AC power, leave the handset unused in the cradle for ten to fourteen hours. Later, it will take less time for the battery to recharge. The IN USE/CHARGE LED on the base will be lit when the handset is in the cradle.

#### NOTE:

- a. When the battery gets low, the LCD will show "BATTERY LOW" indicator, and the unit will beep every 15 seconds.
- b. If the battery becomes low while you are on a call, you will be disconnected after about 3 minutes. Terminate the call quickly, and put the handset in the base to recharge the battery.

The battery will hold its charge for several days out of the cradle, depending on use.

### To Replace Batteries

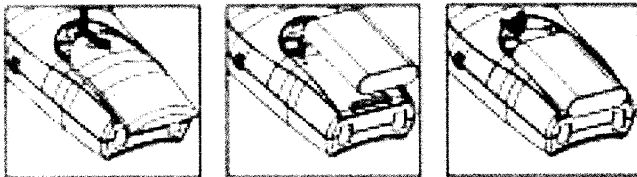


1. Remove battery cover.
2. Remove battery.
3. Plug the cord of the battery pack into the handset and place the battery in the case.
4. Slide battery cover until it clicks in place. Charge 10-14 hours before first use.

To maximize your battery's life, we recommend that you periodically fully discharge the battery, and then recharge it. To do this, unplug your phone line cord from the wall phone jack. Press the TALK button, and allow the handset to remain on for 10 to 12 hours. Reconnect the phone cord to the wall phone jack. Return the handset to the base and allow it to fully charge for 12 hours. If this process is completed monthly, it will reduce the memory buildup that occurs from frequent partial charging.

## Telephone Setup
 
### Tone/Pulse Switch

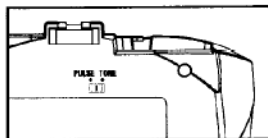

1. Choose the correct dialing mode.
2. Select the dialing mode Tone or Pulse by setting the switch at the back of the base unit.



**Note:** Changes to the switch position during a call do not take effect until the call has ended.

**Tip:** If you are unsure of the proper dialing mode, make a trial call with the dial mode setting to **TONE**. If the call connects, leave the switch as is (**TONE** mode), otherwise, set to **PULSE**.

### Handset Ringer Volume

Adjust the handset ringer volume using the **RINGER** switch on the left side of the handset. Select between on  ringer, and ringer Off .

### Battery Installation

To install the 3.6V 600mAh cordless handset battery pack:

1. Slide open the battery compartment door on the back of the handset.
2. Plug the battery connector into the 2-pin connector in the battery compartment, and then insert the battery.
3. Close the battery compartment door.
4. Place the handset on the base unit cradle.
5. Once you have installed the battery pack and placed the handset on the base you will hear a tone indicating the handset has connected with the base and will successfully charge.
6. **IMPORTANT:** Charge the battery pack for at least 12 hours before using the handset the first time.
7. The **CHARGE LED** on the base illuminates when the handset is properly making contact with the charge terminals.

 
### Battery Duration

A fully charged battery lasts for approximately:

- 6 hours when you use the handset continuously (talk time).
- 6 days when the handset is not in use (standby).

### When the Battery Needs Charging

- The display will show "LOW BATTERY."



### The Headset Jack

The headset jack is located on the side of the handset and is a standard 2.5mm plug. Simply plug the headset (not included) into the jack and the headset will be active.

**Note:** When the headset is plugged into the telephone, the microphone and earpiece on the handset are not active.

- You can purchase a suitable headset through service center or retailer shop. For servicing or replacement please contact us for suitable headset.

 
SOUTHWESTERN BELL FREEDOM PHONE®

7475 N. Glen Harbor Blvd., Glendale, AZ 85307 Tel : 1-800-366-0937

# Basic Operation

## Making Calls

1. Pick up the handset from the base and press **Talk**.
2. Wait until you hear a dial tone, and then dial the number you wish to dial.
3. When you are finished talking, press the **Talk** key or place the unit back into the base to end the call.





**Note:** The IN USE/CHARGE light on the base will illuminate when the line is active.

## Receiving Calls

  
When you hear the phone ring:

1. If the handset is in the base, lift the handset from the base. The handset will turn on. There is no need to push the **Talk** key if the unit is on the base when the call comes in. This auto-answer feature can be programmed off (see "Settings").
2. If the handset is off the base, you will need to press **Talk** to answer the call. The display will show the Caller ID information after the first ring.
3. When you are finished, push **Talk** or place the handset back on the base.




## Redialing

 1. Press **Talk**.
2. Wait until you hear a dial tone, and then press **REDIAL** to redial the number last dialed (up to 32 digits).



**Note:** You can also press **REDIAL/DELETE** first to display the number and then press **Talk** to dial the number displayed.

## Additional Options

TO:	Do This
Adjust the volume in the earpiece	Press ▲▼ during a call until the desired volume level is reached.
Switch to temporary tone dialing	Press the  key after the phone is in use. The phone will remain in tone dialing mode for the duration of the call.
Receive a call waiting call	Press <b>Flash</b> to go to the new caller Press <b>Flash</b> again to go back to the original caller
Mute a call	Press the <b>Mute</b> key. Press <b>Mute</b> to continue speaking to the caller

# SETTING

## Handset Settings

You can change the setting on the handset in the options menu. Access the options menu by pressing and holding the **Mute/MENU** key until **"ENGLISH"** is displayed.

There are 12 settings in the options menu which can be changed. You can scroll through the option menu in the listed order by pressing the **▲** key. Settings which have a listed number can be reached directly by pressing that number on the keypad.

To edit most settings, press the **Flash/EDIT** key, use the **▲▼** key to toggle between the setting options, and then press **MEM/SAVE** to save changes. You can continue programming options by using the dial pad keys or the **▲▼** key to go to a new setting. Press **Mute/MENU** to exit the options menu.

### Key Function

- 1** **Language:** Change the language that appears on the display. Choose among English, French, and Spanish.
  - 2** **First Ring On/Off:** Turn the first ring of the phone off so that it does not ring until caller ID information has been displayed. Particularly useful when using the priority and blocked call features or the private and unavailable ring settings.
  - 3** **Time Set:** Change the time and date.
  - 4** **Area Code:** Allows the programming of a home area code where 7-digit dialing is used for ease of callback and other features (do not program if you use 10-digit dialing to call numbers in your area).
  - 5** **Contrast:** Adjust the brightness of the display for optimum viewing.
  - 6** **PBX Number:** Number used to access PBX dialing options. The default setting is "9."
  - 7** **PBX Mode On/Off:** Determines if the "PBX Number" is used before an outgoing number is dialed. When "On," automatically dials the PBX number and a pause, before any speed dial or caller ID callback number. Default setting is "Off."
  - 8** **Pause Time:** Allows you to adjust the number of seconds that a pause lasts such as during programmed pauses in your speed dial numbers or after your PBX number is dialed.
  - 9** **MSG Waiting Delete:** Clears any current message waiting indication.
  - 0** **Auto Answer On/Off:** Turns on and off the feature which makes the phone automatically go off-hook when the handset is picked up from the base while the phone is ringing.
  - \*X** **Private Ring On/Off:** Turns on and off the ring for all calls where the caller has blocked their caller ID. Please note that the phone will ring once even when set to "Off" unless First Ring is also programmed "Off" .
- Unavailable Ring On/Off:** Turns on and off the ring for all calls where caller ID information is unavailable. Please note that the phone will ring once even when set to "Off" unless First Ring is also programmed "Off" .