

bellissimo Colour Digital Video Entry System

Bell System (Telephones) Ltd.

bellissimo

Colour Video Door Entry System

Multi - dwelling

User Instructions

Bell System (Telephones) Ltd

Presley Way

Crownhill

Milton Keynes


Buckinghamshire

MK8 0ET

www.bellsystem.co.uk


bellissimo Colour Digital Video Entry System

Video Phone Operation

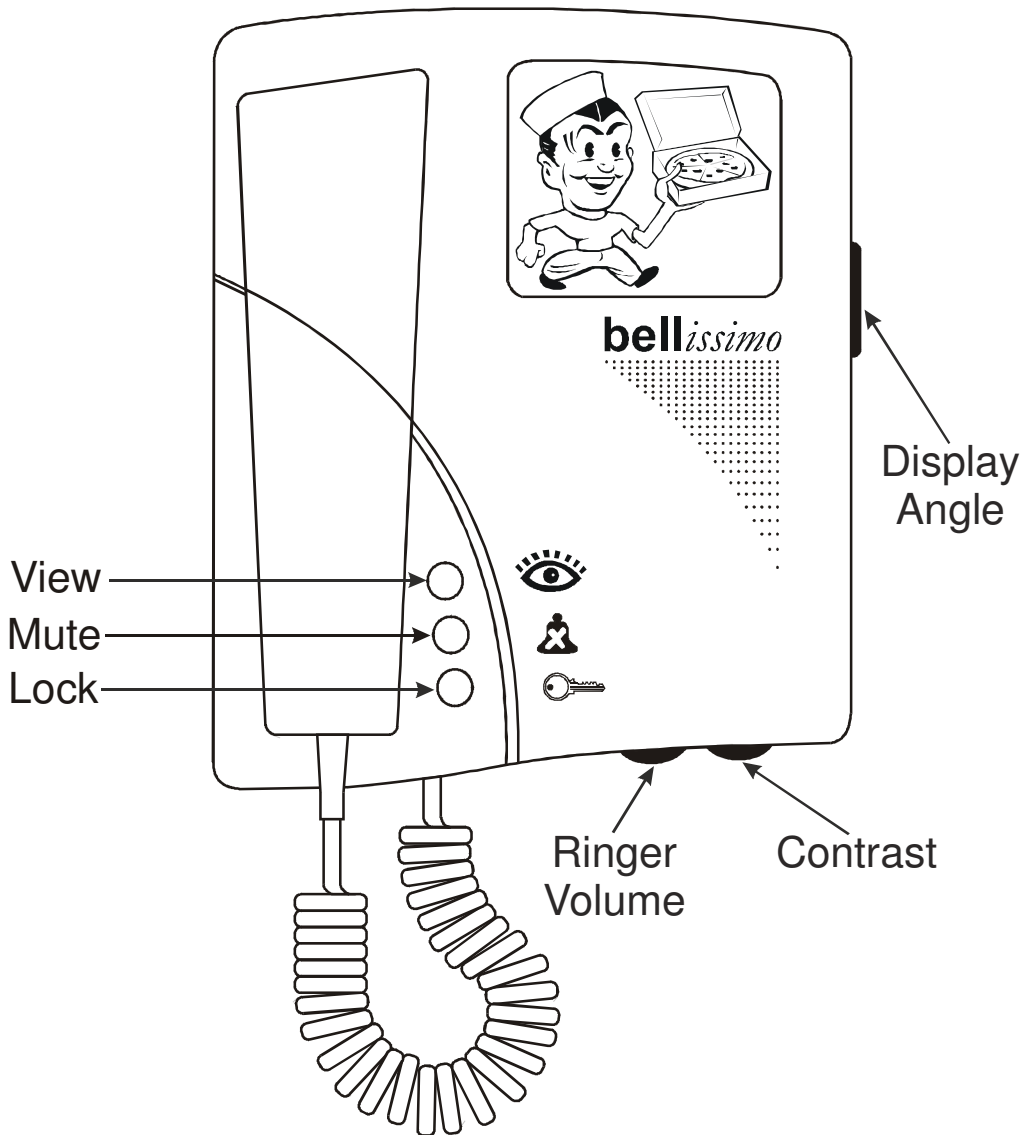

Button	Lamp	Steady	Flashing
View / camera select	Amber	Call in progress	There is a call, push for silent answer/view
Mute on/off	Red	Videophone is muted	Videophone is off-hook
Lock	Green	Door is open	Press to release lock

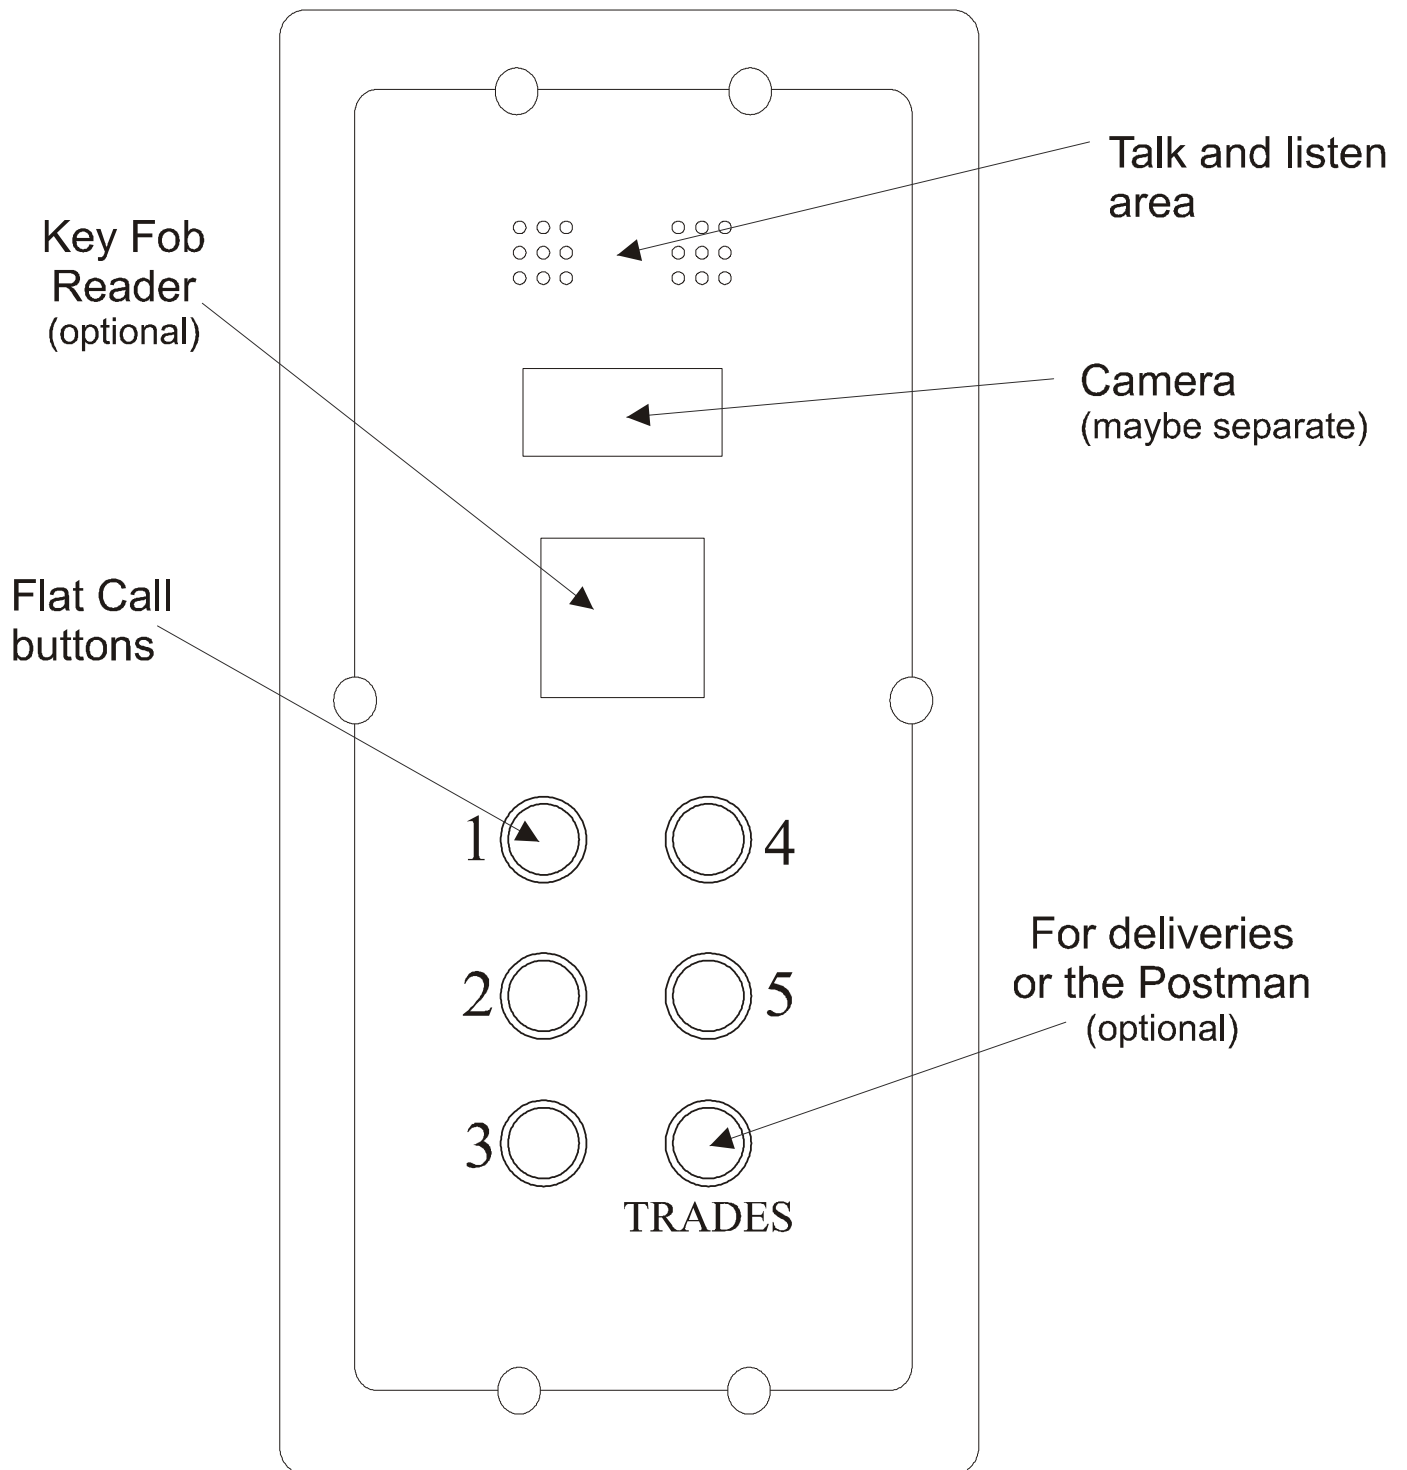

bellissimo Colour Digital Video Entry System




Entrance Panel



bellissimo Colour Digital Video Entry System

Call sequence



When the visitor pushes the appropriate call button a ringing tone (optional) will be heard at the entrance. The videophone in the flat / dwelling will ring, with a flashing  amber light, and the screen activate (optional). The videophone will continue to ring for a period or until the handset is picked up. The visitor can now be seen on the videophone and 2-way conversation is now possible; at the same time the green door lamp will flash to highlight the  unlock button.

The call may be terminated by replacing the handset or more usually by pressing the  button to allow the visitor access through the entrance at which time an audible tone will be heard and the door unlocked.


Silent viewing

When the videophone is ringing the  button on the videophone can be pressed instead of lifting up the handset; this will stop the Video phone ringing and enable the visitor to be viewed for a period or until the  button is pressed to release the door. If you wish to converse with the caller the handset can be picked up and operation is then the same as the above section.

Call Mute

The videophone ringer can be muted when you do not wish to be disturbed. Caller mute is activated by pressing the  button on the videophone, which then illuminates in red as a reminder. The handset must be on the hook for this to work. Pressing the  button a second time will disengage the mute function. The Mute button can be used to turn the ring on or off, or off for a timed period depending on installation settings.

Door Status Indication (optional)

The green  lamp on the videophone will stay on for as long as the door is left open.

Key Fob Access (optional)

An optional Key Fob reader can be used for resident's to gain access. To unlock the door the Key Fob should be placed, briefly, almost touching, the reader window.

Trades button operation (optional)

Pressing the trades button during an allowed period will instantly unlock the door.