



INSTRALLATION GUIDE

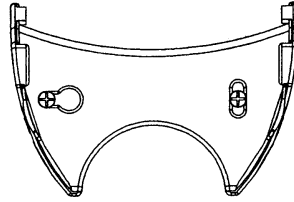


1

Use a screwdriver to Fix the pedestal on the wall .

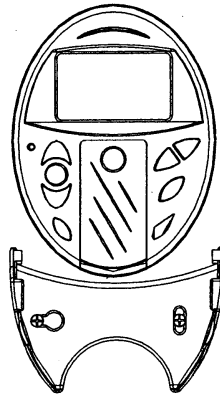

2

Fix the unit into the pedestal.

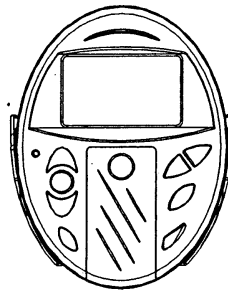

3

The finished product.

- The control is for installed by expert technician and in accordance with the wiring diagram, during installation the applicable electrical safety regulation and the local electricity supply company regulations must be observed.
- Not to be exposed to dripping or splashing.
- For installation, no metal conduit or of cable provided with a metal sheath.
- The thermostat must be mounted on clean, dry indoor place.
- Instruction manual shall be provided to the user for proper use of the control.
- In case of doubt ask your electrician

Battery replacement:

-----Disconnect the supply before battery replacement


-----Replace only with the same or equivalent type of batteries.

-----Do not dispose the used up battery with the household waste. refer to your local area for the proper disposal




You can help protect the environment!
Please remember to respect the local regulations: hand in the non-working electrical equipments to an appropriate waste disposal center.


BEL-3388R BATTERY REPLACEMENT

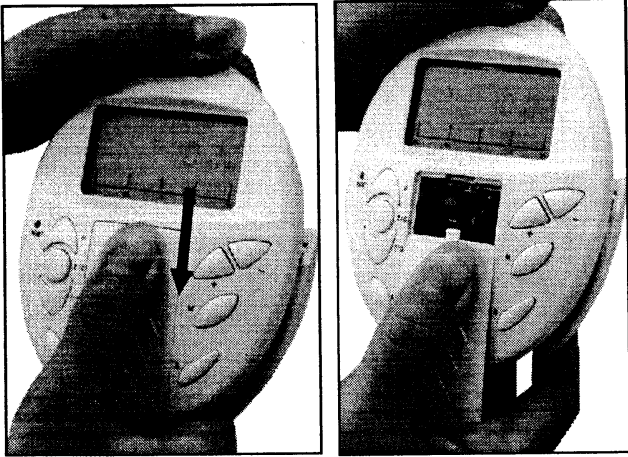


A OPEN THE BATTERY COMPARTMENT

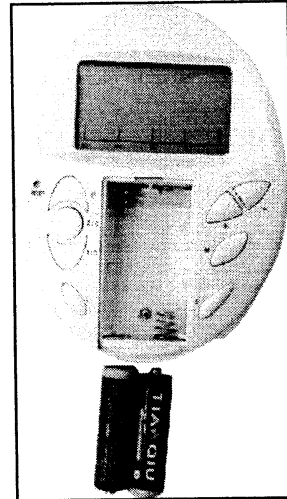

B TAKE AWAY THE OLD BATTERY

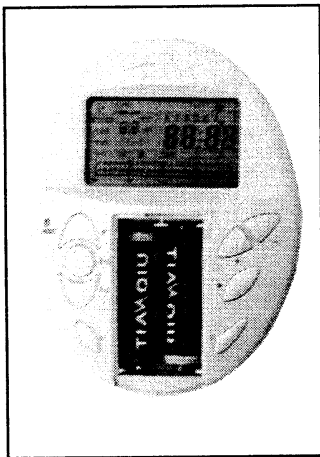

C PLACE THE NEW BATTERY

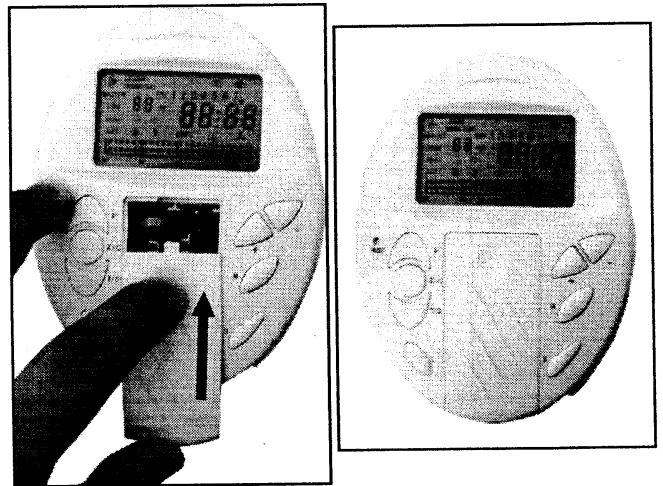

D COLSE THE BATTERY COMPARTMENT