1. appearance and button:



1.1 Touch panel

'Capacitive touch panel: In The Operation, to click, drag on the touch panel.

Start up: Long Press and hold the power button, the system will enter the main interface

shut down: In the main menu interface, Press the

c. Device charging should be in standby status for

it may cause longer charging time.

notification menu similar to this:

2.2 Connection with PC

Because with device and screen power consumption,

Use USB cable to connect device to PC. The unit is a

"generic USB Device" and does not need any extra software drivers to connect to your PC. After your PC has recognized the unit, you will see a message on the bottom of your PC screen informing you. (If your

To complete the connection, you need to reveal the Notifications Screen on the unit. You will see the

PC warns: Drivers not installed, ignore this)

Saturday March 10, 2012 8:1

power button about 5 seconds to shut down. The system will hint "power off" option, Click "ok". You can safely shut it down.

Lock screen: Short press power button to lock screen or unlock screen.

[Remark]

a. When power is used, system will shut down automatically.

b. Illegally turn off the device, restart will scan and restore the disk. It may take longer time to enter into system or cause system crash.

1.3 DC port

Charging through DC charger.

1.4 Micro USB

Micro USB jack: Charging through USB charger or you can use it to connect the computer for data transmission and external connection USB flash drive through OTG cable.

Select USB connected.



3. Equipment operation interface

After start-up, it will enter the home



4.3 Sound: Volume, Default notification sound, Touch sounds. Screen lock sound.

4.4 Display: Brightness, wallpaper, auto-rotate screen, sleep, Daydream, front size, Cast screen, Sensors, HDMI, output screen resize.



4.5 Storage

Remove TF card, view the available storage space. [Remark]: please touch option " Unmount Removable SD card", so that you can remove SD

4.6 Application Management How to Install Android Applications:

4.8 Backup & reset

Backup &RESTORE: Back up my data, Backup account, Automatic restore, Factory data reset. Personal Data: Erases all data on tablet.



4.9 Date & timeSelect time zone and select date format, time format.





In the load mode, you can copy, delete the file on the device and the file on the memory card

3.1 Main interface



Purchased or free Android applications that you have downloaded to your computer can be installed quickly & easily on the unit by using the **File Manager**

a. Copy the .apk files that you want to install onto a SD card or USB device, then

insert or connect it to your Device.

Tap the File Manager application icon o to reveal this screen:

b. Tap or and locate the folder in which the .apk application files were saved.



c. Tap on an ${\bf .apk}$ file to start to install. Tap NEXT to continue the installation, and then see the confirmation of install.

1.5 MIC

Record microphone

1.6 earphone jack
3.5 mm standard earphone jack.

1.7 Volume +, Volume-The buttons Volume +, Volume- achieve changes in the volume.

1.8 TF card TF-CARD slot: external T-FLASH card

1.9 Camera There are front camera and rear camera to take photos.

2. First use

the interface

delete icon.

main interface

3.2 status bar

0

2.1 Battery management and charge
Before first use, please make sure the device is fully charged. If not, just need to connect the USB adaptor or connect to Computer by USB cable, then you can

In home screen, you can manage the software ICONS: long press the ICONS 3 seconds, after the

icons will be bigger, then you can drag anywhere in

Delete ICONS: long press the ICON for 3 seconds, drag the icons to the mark "X", after that you can

E 3 0

2

In the main interface, you can touch the icon to open

In the home screen, when you press " [____]', it will go to

0

8

n

The first two times please keep charging about 6 hours, after that you just need to charge 4 hours.

【Remark】: This tablet using Built-in polymer battery,

Charge must choose.

Charge must choose. standard adaptor (Input: AC110~240V 50/60Hz Max:180MA.. Output: DC5.0~5.5V/1.5-2A) During the charging, the battery icon will scroll or have flashing indicate in battery icon. When finish charging, battery icon will become green

and stop rolling.

In order to prolong the service life of the machine, you

are advised to use up the battery power to about 15% $\,$ before charging it.

[Remarks]:

a. If you don't to use this Tablet for long time, in order a. If you don't use this rather to form this, if for to avoid no power damage, please charge/play the device once a month.
b. After shut down for low battery, connect USB

adaptor, device will remind low battery, need to wait some time until the battery is enough power to enter

19:07

Top right corner display: battery charge icons, current

Bottom display: ESC button, Menu, Recent applications, Screenshot, Volume -, Volume +

4. Equipment basic setting

Setting: Click setting icons , enter setting interface



OFF" to "On", it will show the available Wi-Fi signal. Choose yours, then connect it by entering password. You can browse website then.

Tap Open to launch the application now, or tap Done to return to File Manager.

Manage and uninstall Application



[Remark]: Uninstall

enter "setting">"Apps">"ALL" And there will be all the program list

2. Click the application you want to uninstall, will enter the following interface



Select Language: multi languages are available Android keyboard: Android keyboard setting.

Warning:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -- Reorient or relocate the receiving antenna.
- -- Increase the separation between the equipment and receiver.
- -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -- Consult the dealer or an experienced radio/TV technician for help.

NOTE: This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter

RF Exposure Statement

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance of 5mm the radiator your body. This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter