


Wireless Microphone Transmitter

Model: X-037

How to use the lavalier wireless MIC

1. Open the battery door of the transmitter to make sure the AA battery were installed in correct + - polarity. Close the battery door.
2. Plug the lapel microphone or headset microphone into its port.
3. If you want to auto match the UHF frequency, open the battery cover and remove it to turn the transmitting infrared head near the AA battery towards to the receiving infrared head of the PA amplifier to do the auto match frequency.

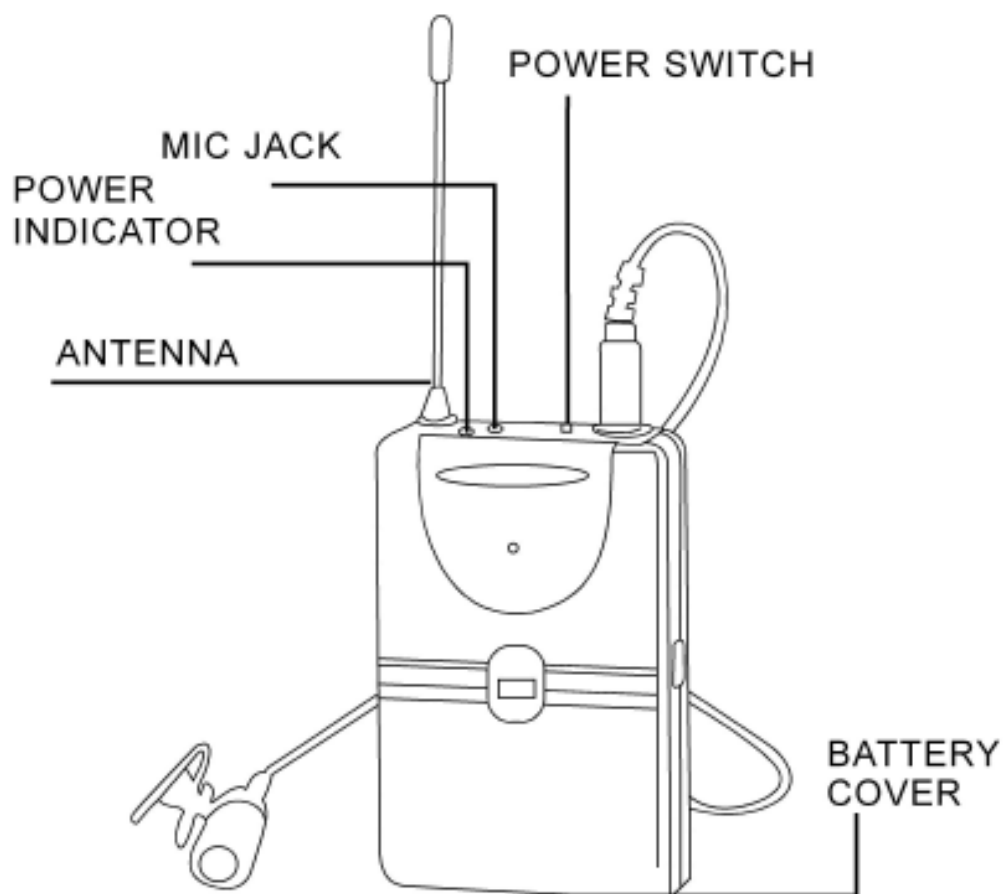

Technical data:

1. Frequency range: UHF 470.2-607.8MHz
2. Transmitter power without the audio input cable: 0.93 mW;
Transmitter power with the audio input cable: 15.49 mW.
3. Band width: 30MHz
4. Modulation Mode: FM
5. Frequency span: 0.3MHz

Warning Statement

§ 15.19 Labelling requirements.

This device complies with Part 15 of the FCC Rules. Operation is subject to the condition that this device does not cause harmful interference.

§ 15.21 Information to user.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

*** RF warning for Portable device:**

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.