

**Model: X-116** ( WIRELESS MICROPHONE TRANSMITTER )

### **How to use the wireless handheld Microphone**

1. Open the AA battery door by removing the cover.
2. Put the AA X 2pcs batteries into the batteries compartment with correct polarity and close the cover.
3. If you want to auto match the UHF frequency, open the battery cover and remove it to turn the transmitting infrared head near the AA battey towards to the receiving infrared head of the PA amplifier to do the auto match frequency.



**Cautions: Please take out the AA batteries after use to avoid its acid leaking.**

## **Technical data:**

1. Frequency range: UHF 470.2-607.8MHz
2. Transmitter power: 1.2 dBm
3. Band width: 28.8MHz
4. Modulation Mode: FM
5. Frequency span: 0.3MHz