
Quick Guide

Caution and Notes before using

- Due to using FM frequency, there may be some additional noise.
- This product does not include any onboard storage
- You need a USB storage device to play mp3 music

Product Shape

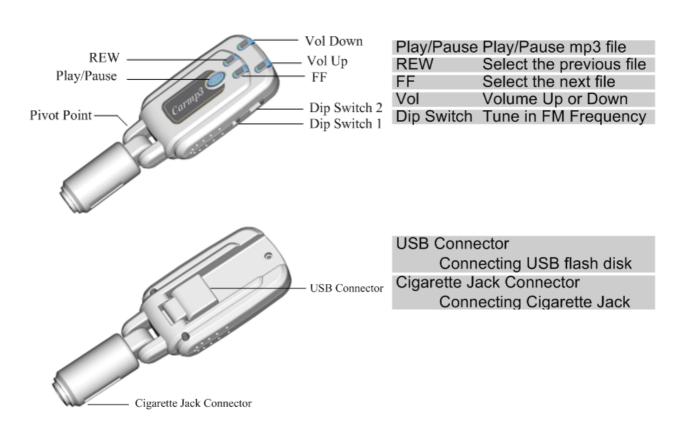

How to play mp3 File with removable USB flash disk device

- Plug the Carmp3 into the car cigarette jack, the Play/Pause Button of the Carmp3 will illuminate blue and the other buttons will illuminate orange to indicate that the power is on.
- 2. Plug your USB flash disk into the USB connector of the Carmp3 and the Carmp3 will launch the mp3 music in the USB flash disk automatically with orange blinking.
- 3. Set your desired FM frequency by switching Dip Switch 1 and 2.
 - * Caution : The method of switching Dip Switch refers to "How to tune in FM frequency of the Carmp3
- 4. Set the FM channel of the FM radio to the same as the Carmp3.
- 5. Adjust the volume control of the FM radio or the Carmp3 to the desired listening level.

How to tune in FM frequency of the Carmp3

Dip Switch 1	Dip Switch 2	
88 107	7 5 3 1	88.1MHz
88 107	7 5 3 1	88.3MHz
88 107	7 5 3 1	88.5MHz
88 107	7 5 3 1	88.7MHz
88 107	7 5 3 1	107.1MHz
88 107	7 5 3 1	107.3MHz
88 107	7 5 3 1	107.5MHz
88 107	7 5 3 1	107.7MHz

FEDERAL COMMUNICATIONS COMMISSION

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiated radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -Reorient or relocate the receiving antenna.
- -Increase the separation between the equipment and receiver.
- -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter.