

 
# Car MP3 player with FM Transmitter

## Quick Guide

### Caution and Notes before using

- Operating the MP3 player while vehicle is in motion can lead to a serious accident. Make selection only while stopped.
- Due to using FM frequency, there may be some additional noise.
- This product does not include any onboard storage.
- You need a SD/MMC memory card to play MP3 music.
- This unit only play/support the song in mp3 format.
- Do not disassemble, repair, or modify the unit. It may cause damage, or accident.
- Keep away from heat & flame or humid environment.
- To avoid risk of electrical shock, not do the plug and unplug operations with wet hands.
- Keep the unit out of the reach of young children. If a child swallows battery, cover, or screw, consult a doctor immediately.

### Product Shape

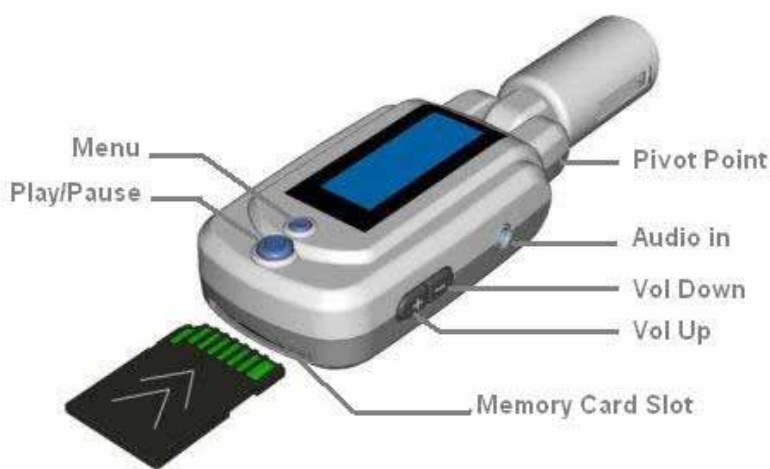



Menu	Main function select
Play/Pause	Play/Pause mp3 file
Audio in	Audio line in
Vol	Vol Volume Up or Down
Card Slot	SD/MMC Memory Card Slot



FWD. +	Select the next file
BWD. -	Select the previous file
Dip Switch	Tune in FM Frequency


## How to play MP3 File with removable USB flash disk device

 (The car MP3 player with FM transmitter is called “The MP3 player” for short.)

1. Plug the MP3 player into the car cigarette jack, the Play/Pause and Menu Button of the MP3 player will illuminate **green** to indicate that the power is on.
2. Plug your **SD/MMC/RS-MMC Memory Card into the Memory Card Slot** of the MP3 player and the MP3 player will launch the MP3 music in the memory card automatically with **green** orange blinking.
3. Set your desired FM frequency by switching Dip Switch 1 and 2.
- \* **Caution** : The method of switching Dip Switch refers to “How to tune in FM frequency of the MP3 player.
4. Set the FM channel of the FM radio to the same as the MP3 player.
5. Adjust the volume control of the FM radio or the MP3 player to the desired listening level.
6. Supports repeat song: one, all, normal, random. Push “Menu” button when  show on the LED screen, using FWD+/BWD- button to select your favor mode.
7. Supports 5 EQ modes: Jazz, Rock, Bass, Normal and Class. Push “Menu” button when  show on the LED screen, using FWD+/BWD- button to select your favor mode.

\* Note: Repeat/EQ function only stay in 3/sec for selection after that will back to main function if user didn't use select button.

## How to tune in FM frequency of the MP3 player

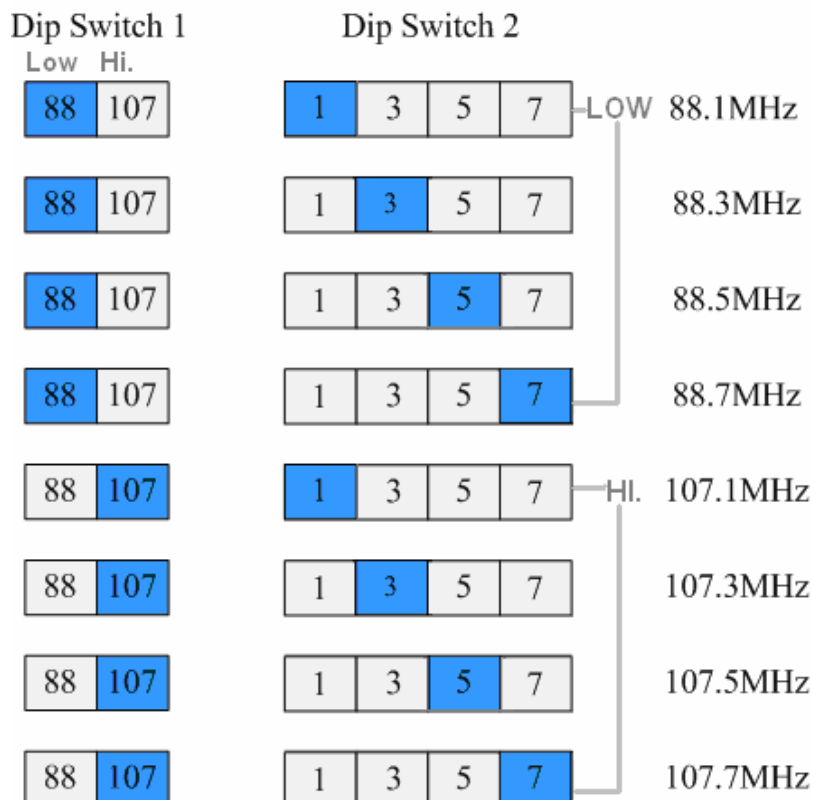


## Using the Cigarette Jack Connector Loop


The installation of the cigarette connector loop is only necessary when fixation of the MP3 player into the car cigarette jack fails.

Installing Cigarette jack connector loop:

 
1. Connector loop comes in 2 different sizes, one for North American/Euro cars and the other for Japanese cars.

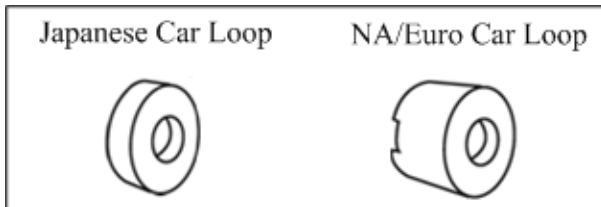

 
2. Turn the screw counterclockwise with the cigarette jack connector facing upward and then remove it.

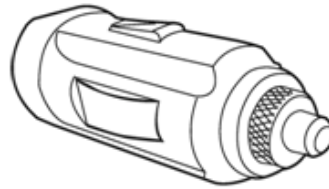

 3. Select the appropriate loop and attach it to the cigarette jack connector.

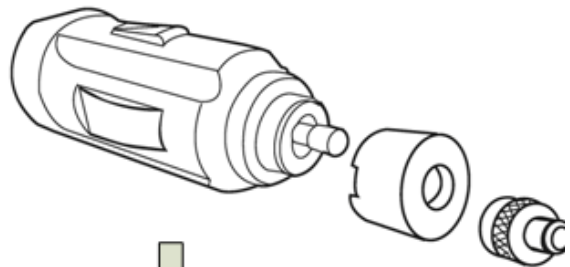

 4. Fasten the screw.

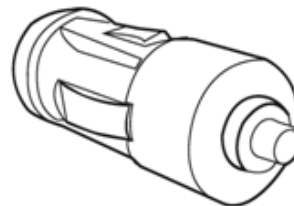

## **FEDERAL COMMUNICATIONS COMMISSION**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

### **NOTE**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiated radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter.

## FCC Caution

1. The device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:
  - (1) This device may not cause harmful interference.
  - (2) This device must accept any interference received, including interference that may cause undesired operation.
  
2. Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user authority to operate the equipment.