



**MOTOROLA**

## User's Guide

For L512C/L513C/L514C/L515C

DECT 6.0 Cordless / Coded  
Phones with Bluetooth® and  
Answering System

### **Warning**

*Use only the power adapters and  
telephone line cords provided in the box.*

# Welcome...

## *to your new Motorola Phone!*

Please retain your original dated sales receipt for your records. For warranty service of your Motorola product, you will need to provide a copy of your dated sales receipt to confirm warranty status. Registration is not required for warranty coverage.

For product-related questions, please call:

**US and Canada: 1-888-331-3383**

**On the Web: [www.motorola.com](http://www.motorola.com)**

---

- 30 name and number phonebook for cordless handset and corded base respectively.
- Answering machine with 15 minutes digital recording time.\*
- Caller ID shows you who's calling and you can see details of the last 30 callers in a calls list.\*\*  
Call log Capacity is 30, the same for cordless handset and corded base.
- Register up to 5 cordless handsets to the corded base.
- Make internal calls, transfer external calls, hold 3-way conversation between two internal callers and an external caller.

\*The recording time includes the pre-recorded voice menu and outgoing announcements.

\*\*You must subscribe to your network provider's Caller ID or Call Waiting service for these features to work.

Please note that only the Corded phone operates during power outage (with limited functions).



This ENERGY STAR<sup>®</sup> program ([www.energystar.gov](http://www.energystar.gov)) recognizes and encourages the use of products that save energy and help protect our environment. We are proud to mark this product with the ENERGY STAR<sup>®</sup> label indicating it meets the latest energy efficiency guidelines.

***This User's Guide provides you with all the information you need to get the most from your phone.***

***Before you make your first call you will need to set up your phone. Follow the simple instructions in 'Getting Started', on the next few pages.***

#### **IMPORTANT**

Only use the telephone line cords supplied.

#### **Got everything?**

- Cordless handset
- Cordless charger
- NiMH rechargeable battery pack
- Power adapter for the cordless charger
- Corded base
- Corded handset
- Telephone line cords (one for connecting the corded base and handset)
- Power adapter for the corded base
- Quick start guide
- User's guide

**In multihandset packs, you will find one or more additional cordless handsets, cordless chargers with power adapter units, additional rechargeable battery packs and battery doors.**



<b>1. Getting started</b> .....	<b>7</b>		
1.1 Install and charge the cordless handset battery pack .....	8		
1.2 Install the cordless charger .....	8		
1.3 Connect the corded base .....	9		
1.4 Wall mounting on corded base .....	9		
1.5 Set the display language .....	10		
1.6 Set date and time .....	10		
1.7 Your phone is now ready for use .....	10		
<b>2. Getting to know your phone</b> .....	<b>11</b>		
<i>Enjoy your corded base phone</i> .....	<b>19</b>		
<b>3. Using the phone</b> .....	<b>19</b>		
3.1 Introducing Bluetooth .....	19		
3.2 Bluetooth Setup .....	20		
3.2.1 Setup Cellular .....	20		
3.2.2 Replace a paired device .....	20		
3.2.3 Paired Devices .....	21		
3.3 Making a home call using your landline .....	21		
3.4 Making a cellular call using your corded base phone .....	21		
3.5 Speed dial calling .....	22		
3.6 Answering a home call .....	22		
3.7 Answering a cellular call .....	22		
		3.8 Receiving a cellular call while on a home call .....	22
		3.9 Receiving a home call while on a cellular call .....	23
		3.10 Ending a call .....	23
		3.11 Adjusting volume .....	23
		3.12 Dialing from the redial list .....	24
		3.13 Dialing from the calls list .....	24
		3.14 Muting a call .....	24
		3.15 Adding an entry to the phonebook .....	24
		3.16 Storing a phonebook entry as a one touch number .....	24
		3.17 Dialing from the phonebook .....	25
		3.18 Caller ID .....	25
		3.18.1 Calls List .....	25
		3.18.2 View the calls list .....	26
		3.18.3 Save a number from the calls list to the phonebook .....	26
		3.18.4 Delete a calls list entry .....	26
		3.18.5 Delete entire calls list .....	26
		3.19 Personal Settings .....	27
		3.20 To reset all settings .....	28
		3.21 Using your answering machine .....	28
		3.21.1 Play messages .....	28
		3.21.2 Turn on or off the answer machine .....	29
		3.21.3 Set the announcement mode .....	29



3.21.4 Set voicemail only .....29  
3.21.5 Set the number of rings .....30  
3.21.6 Announcement .....30  
3.21.7 Record a memo .....31  
3.21.8 Call screening on/off .....31  
3.21.9 Delete all old messages .....31  
3.21.10 Remote access .....32  
3.21.11 Set the security code .....32

**Enjoy your cordless handset ..... 33**

**4. Using the phone ..... 33**

4.1 Introducing Bluetooth ..... 33  
4.2 Bluetooth Setup ..... 34  
    4.2.1 Setup Cellular .....34  
    4.2.2 Replace a paired device .....34  
    4.2.3 Paired Devices .....35  
4.3 Making a home call using your landline ..... 35  
4.4 Making a cellular call using your cordless  
    DECT handset..... 35  
4.5 Speed dial calling ..... 36  
4.6 Answering a home call ..... 36  
4.7 Answering a cellular call ..... 36  
4.8 Receiving a cellular call while on a  
    home call ..... 36

4.9 Receiving a home call while on a  
    cellular call..... 37  
4.10 Ending a call ..... 37  
4.11 Adjusting volume ..... 37  
4.12 Muting a call ..... 37  
4.13 Dialing from the redial list ..... 37  
4.14 Dialing from the calls list..... 38  
4.15 Adding an entry to the phonebook ..... 38  
4.16 Storing a phonebook entry as a  
    one touch number ..... 38  
4.17 Dialing from the phonebook ..... 38  
4.18 Caller ID ..... 39  
    4.18.1 Calls List ..... 39  
    4.18.2 View the calls list ..... 39  
    4.18.3 Save a number from the calls list  
        to the phonebook ..... 40  
    4.18.4 Delete a calls list entry ..... 40  
    4.18.5 Delete entire calls list ..... 40  
4.19 Personal Settings ..... 41  
4.20 Registration ..... 42  
4.21 To reset all settings ..... 42  
4.22 Paging/Finding cordless handset ..... 43  
4.23 Using your answering machine ..... 43  
    4.23.1 Play messages ..... 43  
    4.23.2 Turn on or off the  
        answer machine ..... 44



4.23.3	Set the announcement mode .....	44
4.23.4	Set voicemail only .....	44
4.23.5	Set the number of rings .....	44
4.23.6	Announcement .....	45
4.23.7	Record a memo .....	45
4.23.8	Call screening on/off .....	46
4.23.9	Delete all old messages .....	46
4.23.10	Remote access .....	46
4.23.11	Set the security code .....	47
<b>5.</b>	<b>Help .....</b>	<b>48</b>
<b>6.</b>	<b>General information.....</b>	<b>50</b>



## 1. Getting started

### **WARNING**

- *Do not place your phone in the bathroom or other humid areas.*

### **Location**

When choosing a location for your new phone, here are some important guidelines you should consider:

- Avoid sources of noise and heat, such as motors, fluorescent lighting, microwave ovens, heating appliances and direct sunlight.
- Avoid areas of excessive dust, moisture and low temperature.
- Avoid other cordless telephones or personal computers.
- Never install telephone wiring during a lightning storm.
- Never install telephone jacks in wet locations unless the jack is specifically designed for wet locations.
- Never touch non-insulated telephone wires or terminals unless the telephone line has been disconnected at the network interface.
- Use caution when installing or modifying telephone lines.

### **HANDSET RANGE**

*Optimal range is reached when there are no other electrical appliances working within the range area. Any obstruction between the corded base and cordless handset will also reduce the range significantly.*

### **SIGNAL STRENGTH**

*When out of range of the corded base, the screen shows SEARCHING.... If you are on a call, the line will hang up. Move back within in range. The cordless handset will automatically re-connect to the corded base.*

### **Setting up**


#### **IMPORTANT**


*The corded base must be plugged into the electrical outlet at all times. Do not connect the telephone line cord into the wall jack until the cordless handset is fully charged. Only use the power adapter and telephone line cord supplied with the product.*

#### **WHICH POWER ADAPTER**


*The power adapter with the smaller pin plug is for the corded base unit and the power adapter with the bigger pin plug is for the cordless charger unit.*

## 1.1 Install and charge the cordless handset battery pack

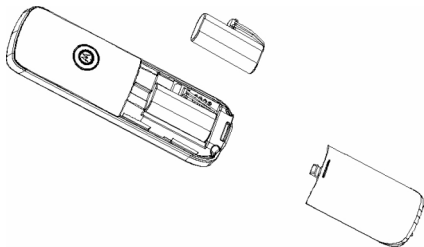

1. Slide out the battery compartment cover.
2. Place the supplied rechargeable battery pack in the battery compartment, with the battery connector plugged in, as shown.
3. Slide the battery compartment cover back.
4. Put the cordless handset on the cordless charger to charge for at least 24 hours. When the cordless handset is fully charged the  will indicate that it is fully charged.
5. Use only the rechargeable battery pack provided.


## 1.2 Install the cordless charger

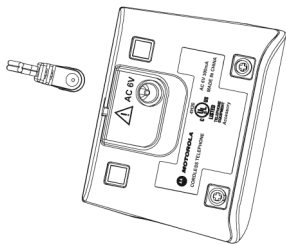

1. Plug the power adapter with bigger pin plug into the cordless charger.
2. Plug the other end of the power adapter into the wall jack.
3. Use only the provided power adapter.



### 1.3 Connect the corded base

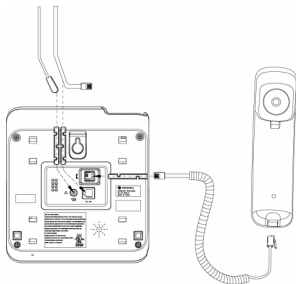


1. Connect the corded handset to the corded base with the provided coiled line cord.
2. Plug the power adapter with smaller pin plug & telephone line cord into the corded base.
3. Plug the other end of the power adapter & telephone line cord into the wall jack.
4. Always use the telephone line cord provided in the box.
5. Use only the provided adapter.

### 1.4 Wall mounting on corded base

This phone can be mounted on any standard wall plate.

1. Plug the power adapter with smaller pin plug & telephone line cord into the corded base.
2. Snap the wall mount adapter into the notches on the corded base's back.

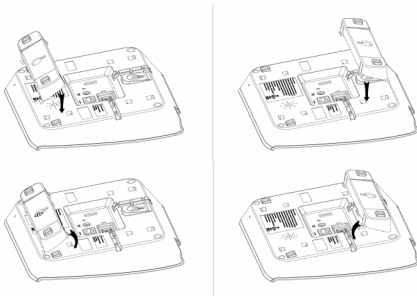
 


3. Plug the other end of the power adapter & telephone line cord into the wall jack.
4. Align the mounting slots on the corded base with the mounting posts on the wall. Then push in and down until the phone is firmly seated.



## 1.5 Set the display language

On corded base:


 

 
1. Press  and  $\Delta$ /VOL+ or  $\nabla$ /REDIAL/VOL- to select **Settings**.
2. Repeat to select **Language**.
3. Repeat to select language.
4. Press  to save.

On cordless handset:

1. Press **MENU** and **VOL+** or **REDIAL/VOL-** to select **SETUP HS**.
2. Repeat to select **Language**.
3. Repeat to select language.
4. Press **MENU** to save.

## 1.6 Set date and time

On corded base:

1. Press  to select **Date & Time**.
2. Press  and edit the time in 12 hour format.
3. Press  $\Delta$ /VOL+ or  $\nabla$ /REDIAL/VOL- to toggle **AM/PM** settings.
4. Press  to continue entering the date.
5. Press  to save the settings.

On cordless handset:

1. Press **MENU** to select **DATE & TIME**.
2. Repeat to edit the year and date.
3. Press **VOL+** or **REDIAL/VOL-** to move between the input fields **YEAR** and **DATE**.
4. Press **MENU** and edit the time in 12 hour format. Press **VOL+** or **REDIAL/VOL-** to toggle **AM/PM** settings.
5. Press **MENU** to save the settings.


### **NOTE**

If you have subscribed to your network's Caller ID service, the date and time is set automatically when a call is received.

## 1.7 Your phone is now ready for use.

## 2. Getting to know your phone

### Overview of the corded base

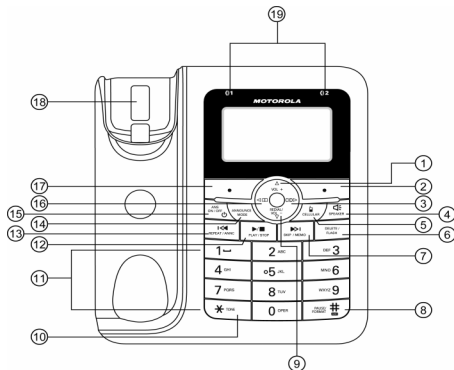

- 1 **SCROLL UP/ VOLUME UP**
  - a) **In menu mode:** press to scroll up.
  - b) **During a call:** press to increase volume.
  - c) **Calls list/phonebook/redial list entry:** press to scroll up the list.
  - d) **In answering machine mode:** press to increase message playback volume.
- 2 **RIGHT SOFT KEY**
  - a) **In idle mode:** press to access menu list.
  - b) **In menu/editing mode:** press to confirm and save the settings.
  - c) **During a call:** press to hold or make intercom call.
  - d) **In calls list entry:** press to save the entry to the phonebook.
  - e) **In phonebook entry:** press to go to phonebook editing mode.
- 3 **RIGHT/ CALLS LIST**
  - a) **In idle mode/during a call:** press to access calls list.
  - b) **In editing mode:** press to move the cursor to the right.
- 4 **SPEAKER**
  - a) **In idle/menu/pre-dial mode/during a call:** press to turn on/off the speakerphone.



- b) **Calls list/phonebook/redial list entry:** press to make a call with speakerphone.
  - c) **During ringing:** press to answer a call with speakerphone.
  - d) **In answering machine mode:** press to make a call with speaker
- 5 CELLULAR**
- a) **In idle mode:** press to make a cellular call.
  - b) **During an incoming cellular call:** press to answer the cellular call.
- 6 DELETE/ FLASH**
- a) **During message playback:** delete the current message.
  - b) **In idle:** press and hold to erase all read messages (applicable only when all answering machine messages are read, new message(s) will not be deleted).
  - c) **During a call:** press to insert a flash.
- 7 SKIP/ MEMO**
- a) **During message playback:** press to skip to play the next message.
  - b) **In idle:** press and hold to hear a voice prompt for recording a memo and then start to record a memo. Press **SAVE** key to stop memo recording.
- 8 SCROLL DOWN/ VOLUME DOWN/ REDIAL LIST**
- a) **In idle:** press to access redial list.
  - b) **In menu mode:** press to scroll down.
  - c) **During a call:** press to decrease volume.
  - d) **Calls list/phonebook/redial list entry:** press to scroll down the list.
  - e) **In answering machine mode:** press to decrease volume.
- 9 #/ PAUSE/ ABC/ FORMAT**
- a) **In idle/pre-dial/number editing mode/during a call:** press to insert a "#", press and hold to insert a pause.
  - b) **In name editing mode:** toggle ABC/Abc/abc.
  - c) **In calls list entry:** press to toggle the Caller ID display format between 7, 8, 10 and 11 digits.
- 10 \*/ TONE**
- a) **In idle/pre-dial/editing mode:** press to insert a "".
  - b) **During a call:** press to switch from pulse to tone dialing temporarily if pulse mode was selected before. After the call is ended, the dial mode will change back to pulse.
- 11 ALPHANUMERIC KEYPAD**
- a) **In idle/pre-dial/editing mode/during a call:** press to enter characters/numbers. Press and hold to activate speed dial.

**12 PLAY/ STOP**

- a) **In idle:** press to playback answering machine messages.
- b) **In message playback mode:** press to stop playing messages. Press again to resume message playback.

**13 REPEAT/ ANNC**

- a) **In idle:** short press to play the current announcement or the current announcement mode.
- b) **In idle:** press and hold to hear a voice prompt of how to record the personalized announcement of the current answer mode, press **SAVE** key to stop recording.
- c) **During message playback mode:** press to replay current message from the beginning.

**14 ANNOUNCE MODE**

- a) **In idle:** press to toggle between **Announce & Record / Announce Only / Answer Off** mode.

**15 ANS ON / OFF**

- a) **In idle mode:** Press to turn on or off the answer machine.

**16 LEFT/ PHONEBOOK**

- a) **In idle mode/during a call:** press to access the phonebook.
- b) **In editing mode:** press to move the cursor to the left.


**17 LEFT SOFT KEY**

- a) **In idle mode:** press to access intercom, press and hold to enter registration mode.
- b) **In pre-dial/editing mode:** press to delete one character/digit. Long press to delete all characters/digits.
- c) **During a call:** press to mute/unmute the call.
- d) **In calls list/phonebook entry:** press to back to the previous level.
- e) **In answering machine mode:** press to delete the current message playback.

 
**18 Base Cradle****19 BLUETHOOOTH LED 1 and BLUETOOTH LED 2**

 
- a) On when Bluetooth device 1 or 2 is connected with the telephone base.
- b) Off when Bluetooth device(s) is (are) disconnected with the telephone base.


## Corded base LCD display

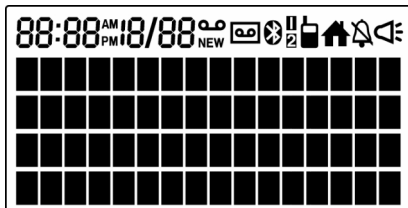



### Display icons


 In idle mode, the current time is displayed.  
In Caller ID mode, the time of call is displayed.


 In idle mode the current date is displayed.  
In Caller ID mode, the date of the call is displayed.


 On when there is new voice mail not yet listened to. Off when new voice mail has been listened to.


 On when answering machine is turned on.  
Flashes when new answering machine message is received.


 On when a Bluetooth device is connected.  
Off when Bluetooth feature is disabled.

 On when Bluetooth device 1 or 2 is connected with the telephone base.  
Off When Bluetooth device(s) is (are) disconnected with the telephone base.


 On when the Cellular line is in use.  
Flashes when the Cellular line is put on hold.  
Off when the Cellular line is idle.

 On when the Home line is in use.  
Flashes when the Home line is put on hold.  
Off when the Home line is idle.

 On when ringer volume is turned off.

 On when speakerphone is turned on.

## Overview of your cordless handset

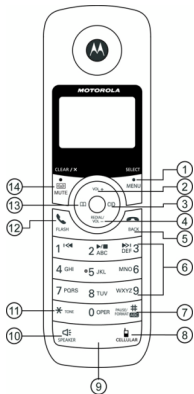

Get acquainted with the following 14 buttons on your handset and their multi-function tasks.

### 1 Menu / Select

- a) **In idle mode:** press to access menu list.
- b) **In menu/editing mode:** press to confirm and save the settings.

- c) **During a home call:** press to transfer a call to a second handset.
- d) **In calls list entry:** press to save the entry to the phonebook.
- e) **In phonebook entry:** press to go to phonebook editing mode.

### 2 Scroll up / Volume up

- a) **In menu mode:** press to scroll up.
- b) **In editing mode:** press to move cursor to the left.
- c) **During a call:** press to increase volume.
- d) **Calls list/phonebook/redial list entry:** press to scroll up the list.
- e) **In answering machine mode:** press to increase volume.

### 3 Right / Calls list

- a) **In idle mode/during a call:** press to access calls list.
- b) **In editing mode:** press to move the cursor to the right.

### 4 Scroll down / Volume down / Redial list

- a) **In idle/pre-dial mode:** press to access redial list.
- b) **In menu mode:** press to scroll down.
- c) **In editing mode:** press to move cursor to the right.
- d) **During a call:** press to decrease volume.



- e) **Calls list/phonebook/redial list entry:** press to scroll down the list.
  - f) **In answering machine mode:** press to decrease volume.
- 5 Talk off / Back**
- a) **In menu/editing mode/phonebook entry:** press to exit to previous level.
  - b) **In pre-dial mode/calls list/redial list entry/ answering machine mode:** press to exit to idle.
  - c) **During ringing:** press to silent the incoming ringer temporarily.
  - d) **During a call:** press to end a call, either home call or cellular call.
- 6 Alphanumeric keypad**
- a) **In idle/pre-dial/editing mode/during a call:** press to enter characters/numbers. Press and hold to activate speed dial.
- 7 # / Pause / ABC / Format**
- a) **In idle/pre-dial/number editing mode/during a call:** press to insert a #, press and hold to insert a space.
  - b) **In name editing mode:** toggle ABC/abc.
  - c) **In calls list entry:** press to toggle between 7, 10 and 11 digit formats when returning calls from Caller ID list.
- d) **In phonebook list entry:** if the number is more than 15 digits, press to view the next page of remaining digits.
- 8 Cellular**
- a) **In idle mode:** press to make a cellular call.
  - b) **During an incoming cellular call:** press to answer the cellular call.
- 9 Microphone**
- 10 Speaker**
- a) **In idle/menu/pre-dial mode/during a call:** press to turn on/off the speakerphone.
  - b) **Call List/phonebook/redial list entry:** press to make a call with speakerphone.
  - c) **During ringing:** press to answer a call with the speakerphone.
  - d) **In answering machine mode:** press to toggle the message playback via the earpiece or speakerphone.
- 11 \* / Tone**
- a) **In idle/pre-dial/editing mode:** press to insert a \*.
  - b) **During a call:** press to switch from pulse to tone dialing temporarily if pulse mode was selected before. After the call has ended, the dial mode will change back to pulse.



c) **In phonbook list entry:** if the number is more than 15 digits, press to view the previous page of remaining digits.

## 12 Talk on/ Flash

- a) **In idle/menu/pre-dial mode:** press to make a call.
- b) **Call List/phonebook/redial list entry:** press to make a call to the selected entry.
- c) **During an incoming call:** press to answer the call.
- d) **During a home call:** press flash to switch to another call.


## 13 Left/ Phonebook

- a) **In idle mode/during a call:** press to access the phonebook.
- b) **In editing mode:** press to move the cursor to the left.





## 14 Answering Machine/ Mute/ Clear/ X

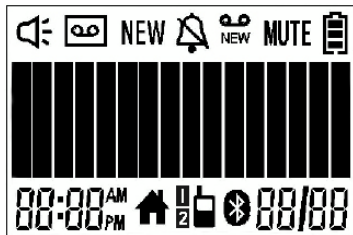- a) **In idle mode:** press to play the message in answering machine.
- b) **In pre-dial/editing mode:** press to delete one character/digit. Long press to delete all characters/digits.
- c) **During a call:** press to mute/unmute the call.
- d) **In calls list/phonebook entry:** press to delete the entry.
- e) **In answering machine mode:** press to delete the current message playback.

## Cordless handset LCD display



### Display icons

-  On when speakerphone is turned on.
-  On when answering machine is turned on. Flashes when a new message is received.
- NEW** Indicates that a new call has been received. Off after all new call been reviewed.
-  Indicates that the ringer volume is off.
-  If a voice mail service is being used, on for new voice mail message. Off after all new voice mails have been reviewed. (For home line only)



**MUTE** On when a call is muted.



Full battery power level.



2/3 battery power level.



1/3 battery power level.



Flashes when low battery level is detected, needs charging.



Animation in motion. Battery is charging.



In idle mode, the current time is displayed.  
In Caller ID mode, the time of call is displayed.



On when the Home line is in use.  
Flashes when the Home line is put on hold.  
Off when the Home line is idle.



On when the Cellular line is in use.  
Flashes when the Cellular line is put on hold.  
Off when the Cellular line is idle.



On when a Bluetooth device is connected.  
Off when Bluetooth feature is disabled.



On when Bluetooth device **1** or **2** is connected with the telephone base.  
Off When Bluetooth device(s) is (are) disconnected with the telephone base.



In idle mode the current date is displayed.  
In Caller ID mode, the date of the call is displayed.

## Enjoy your corded base phone

### 3. Using the phone

#### 3.1 Introducing Bluetooth

Your new telephone system with Bluetooth wireless technology has the following features:

- Pairing Bluetooth enabled mobile phone with the telephone base. Two Bluetooth devices can be paired up and connected in maximum.
- Connecting Bluetooth enabled mobile phone to make and receive **CELLULAR** calls. Two mobile phones can be connected but only one of them can be used at a time.
- Making and receiving calls using your Bluetooth enabled mobile phone plan while benefiting from the ease and comfort of your home telephone system.

#### Glossary of terms

Below are some terms used in this user's guide to help you become familiar with using your Bluetooth devices and your new telephone system.

**Bluetooth mobile phone** - Refers to a Bluetooth enabled mobile telephone.

**CELLULAR** line - The communications service provided through your Bluetooth enabled mobile telephone.

**HOME** line - Your conventional telephone land line.

**Pairing** - This refers to the process of two Bluetooth devices registering device information with each other. The telephone base must be paired with a Bluetooth enabled mobile phone before the Bluetooth device can be used.

#### **IMPORTANT INFORMATION**

- Refer to your mobile phone user's guide for more information about its Bluetooth function.
- Make sure that your Bluetooth enabled mobile phone is between one to twelve feet away from the telephone base in order to maintain a clear and consistent connection between your Bluetooth mobile phone, telephone base and cell tower.
- Make sure that your Bluetooth enabled mobile phone has sufficient signal strength. You may need to move the Bluetooth enabled mobile phone and telephone base to a location where the cellular signal may be stronger.
- Charge your Bluetooth mobile phone while it is connected to the telephone base because your mobile phone's battery will discharge faster while it is connected wirelessly to the telephone base.



 


- Monitor your mobile phone's usage because airtime is deducted from your cellular plan for the duration of the **CELLULAR** calls.

## 3.2 Bluetooth Setup

### 3.2.1 Setup Cellular

To pair and connect a Bluetooth enabled mobile phone:





- Place your cell phone near the corded base phone.
- Press  and  $\Delta$ /VOL+ or  $\nabla$ /REDIAL/VOL- to select **Setup Cellular**.
- Press  and display will show **Cellular Ready?**
- Press  and display will show **Discoverable Mode**. The Bluetooth feature will be activated.
- Using your Bluetooth enabled mobile phone, turn on the Bluetooth feature and search for a new device.
- Once your Bluetooth enabled mobile phone has found the **Motorola L512CBT/L513CBT/L514CBT/L515CBT** telephone, select it.
- Using your Bluetooth enabled mobile phone, enter the PIN code of the telephone (the default PIN code is 0000) to continue the pairing process.
- Pairing will be confirmed when you hear a tone and the Bluetooth icon appears on the handset. Refer to the user's manual of your Bluetooth enabled mobile phone to learn how to search for or add new Bluetooth devices.

### NOTE

- Paired device(s) will be connected automatically and stored into the Paired Devices list.
- When a device is successfully connected, corresponding device **1** or **2** will be displayed.
- If you would like to pair up another Bluetooth device, please repeat the steps as above.

### 3.2.2 Replace a paired device

If you have already paired up two Bluetooth devices, you will need to replace one of them if you would like to pair up another device. Follow the below steps to replace and pair up a new device.


- Press  and  $\Delta$ /VOL+ or  $\nabla$ /REDIAL/VOL- to select **Setup Cellular**.
- Display will show the two Cellular names of the paired devices.
- Press  and  $\Delta$ /VOL+ or  $\nabla$ /REDIAL/VOL- to select the cellular device you would like to replace.
- Press  to confirm. Display will show **Replace the Cellular?**
- Press  to confirm. Display will show **Cellular Ready?**
- Refer to section 3.2.1 to proceed with the next steps.

**NOTE**

During pairing up new cellular, the connected cellular will be disabled temporarily.


**3.2.3 Paired Devices**

The cellular(s) paired up will be displayed in the paired devices list, no matter it (they) is (are) connected or not. You can choose to connect, or remove the cellular from this menu.



1. Press  and  $\Delta$ /VOL+ or  $\nabla$ /REDIAL/VOL- to select Paired Devices.
2. Display will show the Cellular name of paired device(s).

**NOTE**

Display will show **No Paired Device** if there is no device paired up.


 
3. Press  and  $\Delta$ /VOL+ or  $\nabla$ /REDIAL/VOL- to select the desired cellular device.

For the connected cellular device:

4. Press  to remove the cellular device.
5. Press  to confirm.

For the not connected cellular device:


4. Press  and  $\Delta$ /VOL+ or  $\nabla$ /REDIAL/VOL- to select **Connect** or **Remove Cellular**.

5. Press  to confirm. If you select **Remove Cellular**, press  again to confirm.

**NOTE**


- When the connected cellular is removed, corresponding device **1** or **2** will be off.
- When the disconnected cellular is connected, corresponding device **1** or **2** will be on.
- When the cellular is removed, the device name will be removed and display **Empty** instead in the paired device list.

**3.3 Making a home call using your landline**

1. Enter the number and pick up the corded handset or press /SPEAKER (Base) to dial the phone number.

**3.4 Making a cellular call using your corded base phone**

If there is only one Bluetooth enabled mobile phone paired up and connected,

1. Enter the phone number, and then press /CELLULAR (Base) to dial out.

OR



1. Press /CELLULAR (Base), and then enter the phone number.
2. Press /CELLULAR (Base) again to dial out.  
If there are two Bluetooth enabled mobile phones paired up and connected,

1. Enter the phone number, and then press /  
CELLULAR (Base) and  $\Delta$ /VOL+ or  $\nabla$ /REDIAL/  
VOL- to select the desired cellular device.
2. Press or /CELLULAR (Base) to dial out.  
OR

1. Press /CELLULAR (Base) and  $\Delta$ /VOL+ or  $\nabla$ /  
REDIAL/VOL- to select the desired cellular.
2. Press or /CELLULAR (Base), and then  
enter the number.
3. Press /CELLULAR (Base) to dial out.

#### NOTE

If the cellular device just be paired up but not connected, you should connect the cellular device before make an external Bluetooth call.

### 3.5 Speed dial calling

1. Press and hold a key from  $\text{1-9}$  to WXYZ/9 until the number is displayed and dialed.

### 3.6 Answering a home call

1. Pick up the corded handset or press /  
SPEAKER (Base) to answer the incoming home call.

### 3.7 Answering a cellular call

1. Pick up the corded handset to answer the incoming cellular call.

OR


Press /CELLULAR (Base) or /SPEAKER (Base) on corded base to answer the incoming cellular call.

### 3.8 Receiving a cellular call while on a home call


A short beep during a HOME call indicates that there is an incoming CELLULAR call and the screen will display the caller ID.

To answer the incoming cellular call:


- Press /CELLULAR (Base) on the corded base.  
OR
- If you are in speakerphone mode, pick up the corded handset.

- The home call will automatically be placed on hold and  will start flashing.

To swap the cellular line to a home call:

- While talking on a cellular call, press **DELETE/FLASH** on the corded base to swap to the home call. The cellular call will automatically be placed on hold and  will start flashing.


To end the cellular call:

- Put the corded handset on the corded base cradle.  
OR
- If you are in speakerphone mode, press /**SPEAKER (Base)** on corded base. The home call will be resumed automatically.



### 3.9 Receiving a home call while on a cellular call

A short beep during a **CELLULAR** call indicates that there is an incoming **HOME** call and the screen will display the caller ID.


To answer the incoming home call:

- Press **DELETE/FLASH** to answer the home call. The cellular line call will automatically be placed on hold and  will start flashing.


To swap the line to a cellular call:

- While talking on a home call, press /**CELLULAR (Base)** on the corded base to swap to the cellular call. The home call will automatically be placed on hold and  will start flashing.



To end the home call:

- Put the corded handset on the corded base cradle.  
OR
- If you are in speakerphone mode, press /**SPEAKER (Base)** on corded base. The cellular call will be resumed automatically.

### 3.10 Ending a call

1. During either a home or cellular call, put the corded handset on the corded base cradle or press /**SPEAKER (Base)** if you are in speakerphone mode.

### 3.11 Adjusting volume

1. During a call, press /**VOL+** or /**REDIAL/VOL-** to adjust the volume.



## 3.12 Dialing from the redial list

1. Press  $\nabla$ /REDIAL/VOL- and then scroll  $\Delta$ /VOL+ or  $\nabla$ /REDIAL/VOL- to the entry you want to redial.
2. Pick up the corded handset or press  $\square$ /SPEAKER (Base) to dial the number from home line.

OR

3. Press  $\square$ /CELLULAR (Base) to dial the number from cellular line.

## 3.13 Dialing from the calls list

1. Press CID/▷ and then scroll  $\Delta$ /VOL+ or  $\nabla$ /REDIAL/VOL- to the entry you want to dial.
2. Toggle #/ABC/PAUSE/FORMAT key to format the dialing number.
3. Pick up the corded handset or  $\square$ /SPEAKER (Base) to dial the number from the home line.

OR

4. Press  $\square$ /CELLULAR (Base) to dial the number from the cellular line.

## 3.14 Muting a call

1. During a call, press  $\square$  to mute the microphone, so that you can talk to someone else in the room without your caller hearing you.
2. Press  $\square$  again to unmute.

## 3.15 Adding an entry to the phonebook

1. Press  $\square$  and press  $\square$  to select Add.
2. Press  $\square$  and enter the name.
3. Press  $\square$  and enter the number.
4. Press  $\square$  to save.




### NOTE

Numbers can be up to 24 digits long and names up to 16 characters long. Entries are stored in alphabetical order.


## 3.16 Storing a phonebook entry as a one touch number

1. Press  $\square$ .
2. Press  $\square$  and  $\Delta$ /VOL+ or  $\nabla$ /REDIAL/VOL- to select Speed Dial.




3. Press  and  $\Delta$ /VOL+ or  $\nabla$ /REDIAL/VOL- to select the speed dial key from  $\text{L}/1$  to WXYZ/9.
4. Press  and  $\Delta$ /VOL+ or  $\nabla$ /REDIAL/VOL- to scroll to the entry to want.
5. Press  to save.

### 3.17 Dialing from the phonebook

1. Press  $\triangleleft$ / and then scroll  $\Delta$ /VOL+ or  $\nabla$ /REDIAL/VOL- to select the entry you want to dial.
2. Pick up the corded handset or press  $\triangleleft$ /SPEAKER (Base) to dial the number from the home line.

OR

3. Press /CELLULAR (Base) to dial the number from the cellular line.

#### TIPS

*Instead of scrolling to browse the phonebook entries, press the numeric key corresponding to the first letter of the entry you wish to locate. For example, pressing 2 will show the entries starting with A. Pressing 2 again will show the entries starting with B, etc.*

### 3.18 Caller ID

If you have subscribed to Caller ID, and provided the identity of the caller is not withheld, the number of the

caller will be displayed together with the date and time of the call (if provided by the network).

#### NOTE

- If the telephone number is not available for incoming calls, the handset will display **Unavailable**.
- If the incoming call is from a withheld telephone number, the handset will display **Private**.
- Information about incoming calls will vary by country and network operator. Some operators may charge a subscription for their Caller ID service.

#### 3.18.1 Calls List

The calls list contains details of missed and received calls. Details include the date and time of the call. Entries are displayed in chronological order with the most recent call at the top of the list.

#### NOTE

- When the calls list is full, a new call replaces the oldest in the list.
- The received and missed calls log holds details of up to 30 calls.
- If you receive more than one call from the same number, only the most recent call is kept in the calls list. When you have missed calls (incoming calls that you haven't answered) the **NEW** icon will be displayed in the display on all handsets registered to the base. If one handset is used to view the calls log,



the icon on the other handsets remains on (For multi-pack use only).

### 3.18.2 View the calls list

1. Press **CID/▷** to enter the calls list.
2. Scroll **△/VOL+** or **▽/REDIAL/VOL-** through the calls list.

#### NOTE

- When reviewing an entry from the calls list, press **#/ABC/PAUSE/FORMAT** repeatedly to display the number in a different format.

For example, if a caller number is displayed as 888-331-3383, the various formats will be:

331-3383

1-331-3383

888-331-3383


1-888-331-3383


User can choose the desired number format for local and long distance numbers before dialing or saving it into the phonebook.

- The **NEW** icon is removed once the new call has been viewed.

### 3.18.3 Save a number from the calls list to the phonebook



1. Press **CID/▷** to enter the calls list.
2. Press **△/VOL+** or **▽/REDIAL/VOL-** to the entry you want.

3. Press  and enter the name.




4. Press  and edit the number.

5. Press  to save.

### 3.18.4 Delete a calls list entry

1. Press **CID/▷** to enter the calls list.
2. Press **△/VOL+** or **▽/REDIAL/VOL-** to scroll to the entry you want.
3. Press  and **△/VOL+** or **▽/REDIAL/VOL-** to select **Delete**.
4. Press  to confirm and the entry is deleted.

### 3.18.5 Delete entire calls list

1. Press **CID/▷** to enter the calls list.
2. Press  and **△/VOL+** or **▽/REDIAL/VOL-** to select **Delete ALL**.
3. Press  and then **Delete All?** is displayed.
4. Press  to confirm and all entries are deleted.

#### NOTE

You need to review the particular call before you delete the record from the call list.

 

 


## 3.19 Personal Settings

### Menu map




Main Menu	Date & Time	Phonebook	Ringer Setup	Settings	Setup Cellular	Paired Devices	Answer Machine	Reset Settings
<b>Sub menu</b>	Set Date & Time	Add View Edit Delete Delete All PB Capacity Speed Dial	Ringer Tone Ringer Volume Key Tone	Dial Mode Flash Time Area Code Base Name Language			Answerer On (if answer machine is off). Answerer Off (if answer machine is on). Answerer mode Voicemail Only Rings to Answer Announcement Record Memo Call Screening Del All Old Msg Remote Access Security Code	Clr Voice Mail All Settings



1. Press .
2. Press  $\Delta$ /VOL+ or  $\nabla$ /REDIAL/VOL- to scroll through the menu.
3. Press  to open a sub-menu or validate an option. Press  to go back to previous menu level or cancel an action.

*If you do not press any button on the handset for 30 seconds, the display will automatically return to standby. It will also return to standby when the handset is placed on the base or charger.*

## 3.20 To reset all settings

1. Press  and  $\Delta$ /VOL+ or  $\nabla$ /REDIAL/VOL- to select **Reset Settings**.
2. Press  and  $\Delta$ /VOL+ or  $\nabla$ /REDIAL/VOL- to select **All Settings**.
3. Press  to select **Yes**. Then all the personalized settings will be reset to default.

### NOTE

All of your phonebook entries, calls list and redial list will remain unchanged.

## 3.21 Using your answering machine

The answering machine records unanswered calls when it is activated.

### 3.21.1 Play messages

 


1. Press  $\blacktriangleright$ /■/PLAY/STOP from idle mode. New messages will be played followed by any older messages.
2. During message playback, press the keys below to perform the following functions:

$\blacktriangleleft$ /REPEAT/ ANNC	Repeats the current message. Press twice to playback the previous message.
$\blacktriangleright$ /■/PLAY/ STOP	Stop message playback.
$\blacktriangleright$ /I/SKIP/ MEMO	Skip to play the next message.
$\Delta$ /VOL+	Increase the volume.
$\nabla$ /REDIAL/ VOL-	Decrease the volume.
DELETE/ FLASH	Delete the current message and the next message will be played.


**NOTE**

For multiple handset models when you are on either a cellular call or a home call, the answering system will not answer the second incoming call.




**3.21.2 Turn on or off the answer machine**

1. Press  and  $\Delta$ /VOL+ or  $\nabla$ /REDIAL/VOL- to select **Answering Machine**.
2. Press  and  $\Delta$ /VOL+ or  $\nabla$ /REDIAL/VOL- to select **Answerer On** or **Answerer Off**. If the answer machine is turned on originally, **Answerer Off** will be displayed. If the answer machine is turned off originally, **Answerer On** will be displayed.
3. Press  to confirm.

 
OR

4. Press **ANS ON/OFF** /  to toggle between answering machine on and answering machine off.

**3.21.3 Set the announcement mode**

1. Press  and  $\Delta$ /VOL+ or  $\nabla$ /REDIAL/VOL- to select **Answer Machine**.
2. Press  and  $\Delta$ /VOL+ or  $\nabla$ /REDIAL/VOL- to select **Answerer Mode**.
3. Press  and  $\Delta$ /VOL+ or  $\nabla$ /REDIAL/VOL- to select the announcement modes:

- **Ann & Record** invites your callers to leave a message.
- **Announce Only** lets callers hear your announcement but they cannot leave a message.

4. Press  to save.

 
 


**3.21.4 Set voicemail only**

This function will be useful when you have subscribed the voicemail service from your local service provider.

If **Voicemail Only** is set **On**, your answer machine will be disabled. Your call will only be answered by the voicemail service.

If **Voicemail Only** is set **Off**, your answer machine will function normally as your personalized settings.

**Turn on/ off Voicemail Only:**

1. Press  and  $\Delta$ /VOL+ or  $\nabla$ /REDIAL/VOL- to select **Answer Machine**.
2. Press  and  $\Delta$ /VOL+ or  $\nabla$ /REDIAL/VOL- to select **Voicemail Only**.
3. Press  and  $\Delta$ /VOL+ or  $\nabla$ /REDIAL/VOL- to select **On** or **Off**.
4. Press  to confirm.



### 3.21.5 Set the number of rings

1. Press and  $\Delta$ /VOL+ or  $\nabla$ /REDIAL/VOL- to select Answer Machine.
2. Press and  $\Delta$ /VOL+ or  $\nabla$ /REDIAL/VOL- to select Rings To Answer.
3. Press and  $\Delta$ /VOL+ or  $\nabla$ /REDIAL/VOL- to select the rings to answer. (4 options are available: Toll Saver, 3 Rings, 4 Rings, and 5 RINGS).

#### NOTE

If Toll Saver setting is selected, the answering machine will pick up after two rings if there are new messages, and after four rings if there are no messages.

4. Press to save.

### 3.21.6 Announcement

This is the message your callers hear on the answering machine. There are two pre-recorded outgoing messages, or you can record your own.

#### 3.21.6.1 Record the announcement

1. Press and  $\Delta$ /VOL+ or  $\nabla$ /REDIAL/VOL- to select Answer Machine.
2. Press and  $\Delta$ /VOL+ or  $\nabla$ /REDIAL/VOL- to select Announcement.
3. Press to select Record.

4. Press and  $\Delta$ /VOL+ or  $\nabla$ /REDIAL/VOL- to select the answer mode AnnC & Record or Announce Only.
5. Press to start recording after a "beep" sound is heard.
6. Press again to stop recording and save the message. The just saved message is played automatically.

You can also record the announcement by pressing and holding **1<</REPEAT/ANNC** to start recording after a "beep" sound is heard. Press to stop recording and save the message.

#### NOTE

When playing the message, pressing or **DELETE/FLASH** will delete it and the pre-recorded message will be played automatically.

#### 3.21.6.2 Play the announcement

1. Press and  $\Delta$ /VOL+ or  $\nabla$ /REDIAL/VOL- to select Answer Machine.
2. Press and  $\Delta$ /VOL+ or  $\nabla$ /REDIAL/VOL- to select Announcement.
3. Press and  $\Delta$ /VOL+ or  $\nabla$ /REDIAL/VOL- to select Play.



4. Press and  $\Delta$ /VOL+ or  $\nabla$ /REDIAL/VOL- to select the answer mode **Ann & Record** or **Announce Only**.
5. Press and the message is played.

### 3.21.7 Record a memo

You can record a memo which is stored on your answering machine and played back like a normal message.

1. Press and  $\Delta$ /VOL+ or  $\nabla$ /REDIAL/VOL- to select **Answer Machine**.
2. Press and  $\Delta$ /VOL+ or  $\nabla$ /REDIAL/VOL- to select **Record Memo**.
3. Press to start recording.
4. Press again to stop recording and save the message. The just saved message is played automatically.

You can also record memo by pressing and holding **▶>I/SKIP/MEMO** to start recording after a "beep" sound is heard. Press to stop recording and save the message.

#### **NOTE**

When playing the message, pressing **DELETE/FLASH** will delete it.

### 3.21.8 Call screening on/off

You are able to hear a caller leaving a message. You can then choose to ignore the caller or pick up the call. The caller is automatically heard through the corded base speaker at the volume set, and the screen displays **Screening**.

This can be turned off if you want, as follows:

1. Press and  $\Delta$ /VOL+ or  $\nabla$ /REDIAL/VOL- to select **Answer Machine**.
2. Press and  $\Delta$ /VOL+ or  $\nabla$ /REDIAL/VOL- to select **Call Screening**.
3. Press and  $\Delta$ /VOL+ or  $\nabla$ /REDIAL/VOL- to turn on/off call screening.
4. Press to save.

### 3.21.9 Delete all old messages

1. Press and  $\Delta$ /VOL+ or  $\nabla$ /REDIAL/VOL- to select **Answer Machine**.
2. Press and  $\Delta$ /VOL+ or  $\nabla$ /REDIAL/VOL- to select **Del All Old Msg**.
3. Press and display will show **Delete All Old Messages?**.
4. Press to confirm.



### 3.21.10 Remote access

Remote access allows you to operate your answering machine and listen to your messages by calling your phone from another phone.

Turn the remote access on/off

1. Press and  $\Delta$  /VOL+ or  $\nabla$  /REDIAL/VOL- to select **Answer Machine**.
2. Press and  $\Delta$  /VOL+ or  $\nabla$  /REDIAL/VOL- to select **Remote Access**.
3. Press and  $\Delta$  /VOL+ or  $\nabla$  /REDIAL/VOL- to select **On** or **Off**.
4. Press to confirm.

To enter the remote access mode, dial your phone number from another phone, when you hear the announcement, press **TONE**/\* and then enter the 4-digit remote security code (default code is 0000).

The correct sequence of the 4 security PIN digits needs to be detected before entering remote access mode. Random digits detected prior to the correct 4 digits sequence are ignored, and answering machine recording continues until the complete PIN is detected. There is no system prompt to enter the remote access code.

Press the following keys on your corded base to perform the following functions, after entering your remote access mode.

Press...	To...
1	Repeat message
2	Play/Stop message
3	Skip forward to the next message
4	Toggle Answer Off/Announce Only/ Announce and Record modes
7	Listen to the Main Menu (for Full Voice prompts only)
0	Delete message

### 3.21.11 Set the security code

This is used to change the remote access PIN if necessary.

1. Press and  $\Delta$  /VOL+ or  $\nabla$  /REDIAL/VOL- to select **Answer Machine**.
2. Press and  $\Delta$  /VOL+ or  $\nabla$  /REDIAL/VOL- to select **Security Code**.
3. Press and enter the 4-digit security code.
4. Press to save.



## Enjoy your cordless handset

### 4. Using the phone

#### 4.1 Introducing Bluetooth

Your new telephone system with Bluetooth wireless technology has the following features:

- Pairing Bluetooth enabled mobile phone with the telephone base. Two Bluetooth devices can be paired up and connected in maximum.
- Connecting Bluetooth enabled mobile phone to make and receive **CELLULAR** calls. Two mobile phones can be connected but only one of them can be used at a time.
- Making and receiving calls using your Bluetooth enabled mobile phone plan while benefiting from the ease and comfort of your home telephone system.

#### Glossary of terms

Below are some terms used in this user's guide to help you become familiar with using your Bluetooth devices and your new telephone system.

**Bluetooth mobile phone** - Refers to a Bluetooth enabled mobile telephone.

**CELLULAR** line - The communications service provided through your Bluetooth enabled mobile telephone.

**HOME** line - Your conventional telephone land line.

**Pairing** - This refers to the process of two Bluetooth devices registering device information with each other. The telephone base must be paired with a Bluetooth enabled mobile phone before the Bluetooth device can be used.

#### **IMPORTANT INFORMATION**

- Refer to your mobile phone user's guide for more information about its Bluetooth function.
- Make sure that your Bluetooth enabled mobile phone is between one to twelve feet away from the telephone base in order to maintain a clear and consistent connection between your Bluetooth mobile phone, telephone base and cell tower.
- Make sure that your Bluetooth enabled mobile phone has sufficient signal strength. You may need to move the Bluetooth enabled mobile phone and telephone base to a location where the cellular signal may be stronger.
- Charge your Bluetooth mobile phone while it is connected to the telephone base because your mobile phone's battery will discharge faster while it is connected wirelessly to the telephone base.



- Monitor your mobile phone's usage because airtime is deducted from your cellular plan for the duration of the **CELLULAR** calls.

## 4.2 Bluetooth Setup

### 4.2.1 Setup Cellular

To pair and connect a Bluetooth enabled mobile phone:

- Place your cell phone near the handset and base unit.
- Press **MENU** and **VOL+** or **REDIAL/VOL-** to select **SETUP CELLULAR**.
- Press **MENU** and display will show **CELLULAR READY?**.
- Press **MENU** and display will show **DISCOVERABLE MODE**.

The Bluetooth feature will be activated.

- Using your Bluetooth enabled mobile phone, turn on the Bluetooth feature and search for a new device.
- Once your Bluetooth enabled mobile phone has found the **Motorola L511BT/L512BT/L513BT/L514BT/L515BT** telephone, select it.
- Using your Bluetooth enabled mobile phone, enter the PIN code of the telephone (the default PIN code is 0000) to continue the pairing process.
- Pairing will be confirmed when you hear a tone and the Bluetooth icon appears on the handset.

Refer to the user's manual of your Bluetooth enabled mobile phone to learn how to search for or add new Bluetooth devices.

#### **NOTE**

- Paired device(s) will be connected automatically and stored into the Paired Devices list.
- When a device is successfully connected, corresponding device **1** or **2** will be displayed.
- If you would like to pair up another Bluetooth device, please repeat the steps as above.

### 4.2.2 Replace a paired device

If you have already paired up two Bluetooth devices, you will need to replace one of them if you would like to pair up another device. Follow the below steps to replace and pair up a new device.

- Press **MENU** and **VOL+** or **REDIAL/VOL-** to select **SETUP CELLULAR**.
- Display will show the two Cellular names of the paired devices.
- Press **MENU** and **VOL+** or **REDIAL/VOL-** to select the cellular device you would like to replace.
- Press **MENU** to confirm. Display will show **REPLACE THE CELLULAR?**
- Press **MENU** to confirm. Display will show **CELLULAR READY?**
- Refer to section 3.2.1 to proceed with the next steps.

**NOTE**

During pairing up new cellular, the connected cellular will be disabled temporarily.

**4.2.3 Paired Devices**

The cellular(s) paired up will be displayed in the paired devices list, no matter it(they) is(are) connected or not. You can choose to connect, or remove the cellular from this menu.

1. Press **MENU** and **VOL+** or **REDIAL/VOL-** to select **PAIRED DEVICES**.
2. Display will show the Cellular name of paired device(s).

**NOTE**

Display will show **NO PAIRED DEVICE** if there is no device paired up.

3. Press **MENU** and **VOL+** or **REDIAL/VOL-** to select the desired cellular device.

For the connected cellular device:

4. Press **MENU** to remove the cellular device.
5. Press **MENU** to confirm.

For the not connected cellular device:



4. Press **MENU** and **VOL+** or **REDIAL/VOL-** to select **CONNECT** or **REMOVE CELLULAR**.

5. Press **MENU** to confirm. If you select **REMOVE CELLULAR**, press **MENU** again to confirm.

**NOTE**


- When the connected cellular is removed, corresponding device **1** or **2** will be off.
- When the disconnected cellular is connected, corresponding device **1** or **2** will be on.
- When the cellular is removed, the device name will be removed and display **EMPTY** instead in the paired device list.

**4.3 Making a home call using your landline**

1. Enter the phone number and press /**FLASH** or /**SPEAKER** to dial the phone number.

**4.4 Making a cellular call using your cordless DECT handset**

If there is only one Bluetooth enabled mobile phone paired up and connected,

1. Enter the phone number, and then press /**CELLULAR** to dial out.

OR



1. Press /CELLULAR, and then enter the phone number.
  2. Press /CELLULAR again to dial out.
- If there are two Bluetooth enabled mobile phones paired up and connected,

1. Enter the phone number, and then press /CELLULAR and VOL+ or REDIAL/VOL- to select the desired cellular device.

2. Press MENU or /CELLULAR to dial out.
- OR

1. Press /CELLULAR and VOL+ or REDIAL/VOL- to select the desired cellular.
2. Press MENU or /CELLULAR, and then enter the number.
3. Press /CELLULAR to dial out.

### NOTE

If the cellular device just be paired up but not connected, you should connect the cellular device before make an external Bluetooth call.

## 4.5 Speed dial calling

1. Press and hold a key from /1 to WXYZ/9 until the number is displayed and dialed.

## 4.6 Answering a home call

1. Press /FLASH or /SPEAKER to answer the incoming home call.

## 4.7 Answering a cellular call

1. Press /CELLULAR or /SPEAKER to answer the incoming cellular call.

## 4.8 Receiving a cellular call while on a home call

A short beep during a HOME call indicates that there is an incoming CELLULAR call and the screen will display the caller ID.


To answer the incoming cellular call:

- Press /CELLULAR on the handset. The home call will automatically be placed on hold and will start flashing.

To swap the line to a home call:

- While talking on a cellular call, press /FLASH on the handset to swap to the home call. The cellular call will automatically be placed on hold and will start flashing.



To end the cellular call:

- Press /**BACK** on the handset. The home call will be resumed automatically.



## 4.9 Receiving a home call while on a cellular call

A short beep during a **CELLULAR** call indicates that there is an incoming **HOME** call and the screen will display the caller ID.


To answer the incoming home call:

- Press /**FLASH** on the handset. The cellular line call will automatically be placed on hold and  will start flashing.


To swap the line to a cellular call:

- While talking on a home call, press /**CELLULAR** on the handset to swap to the cellular call. The home call will automatically be placed on hold and  will start flashing.

To end the home call:

- Press /**BACK** on the handset. The cellular call will be resumed automatically.



## 4.10 Ending a call

1. During either a home or cellular call, press /**BACK** or put the handset on the base.



## 4.11 Adjusting volume

1. During a call, press **VOL+** or **REDIAL/VOL-** to adjust the volume.

## 4.12 Muting a call

1. During a call, press /**MUTE** to mute the microphone, so that you can talk to someone else in the room without your caller hearing you.
2. Press /**MUTE** again to unmute.

## 4.13 Dialing from the redial list

1. Press **REDIAL/VOL-** and then scroll **VOL+** or **REDIAL/VOL-** to the entry you want to redial.
2. Press /**FLASH** or /**SPEAKER** to dial the number from home line.

OR

3. Press /**CELLULAR** to dial the number from cellular line.



## 4.14 Dialing from the calls list

1. Press **CID** and then scroll **VOL+** or **REDIAL/VOL-** to the entry you want to dial.
2. Toggle **#/ABC/PAUSE/FORMAT** key to format the dialing number.
3. Press **📞/FLASH** or **🔊/SPEAKER** to dial the number from the home line.

OR

4. Press **📶/CELLULAR** to dial the number from the cellular line.

## 4.15 Adding an entry to the phonebook

1. Press **📖** and press **MENU** to select **ADD**.
2. Press **MENU** and enter the name.
3. Press **MENU** and enter the number.
4. Press **MENU** to save.

### NOTE

Numbers can be up to 24 digits long and names up to 16 characters long. Entries are stored in alphabetical order.

## 4.16 Storing a phonebook entry as a one touch number

1. Press **📖**.
2. Press **MENU** and **VOL+** or **REDIAL/VOL-** to select **SPEED DIAL**.
3. Press **MENU** and **VOL+** or **REDIAL/VOL-** to select the speed dial key from **1<</>1 to WXYZ/9**.
4. Press **MENU** and **VOL+** or **REDIAL/VOL-** to scroll to the entry to want.
5. Press **MENU** to save.

## 4.17 Dialing from the phonebook

1. Press **📖** and then scroll **VOL+** or **REDIAL/VOL-** to select the entry you want to dial.
2. Press **📞/FLASH** or **🔊/SPEAKER** to dial the number from the home line.

OR

3. Press **📶/CELLULAR** to dial the number from the cellular line.

### TIPS

*Instead of scrolling to browse the phonebook entries, press the numeric key corresponding to the first letter of the entry you wish to locate. For example, pressing 2 will show the entries starting with A. Pressing 2 again will show the entries starting with B, etc.*



## 4.18 Caller ID

If you have subscribed to Caller ID, and provided the identity of the caller is not withheld, the number of the caller will be displayed together with the date and time of the call (if provided by the network).

### NOTE

- If the telephone number is not available for incoming calls, the handset will display **UNAVAILABLE**.
- If the incoming call is from a withheld telephone number, the handset will display **PRIVATE**.
- Information about incoming calls will vary by country and network operator. Some operators may charge a subscription for their Caller ID service.

### 4.18.1 Calls List

The calls list contains details of missed and received calls. Details include the date and time of the call. Entries are displayed in chronological order with the most recent call at the top of the list.

### NOTE

- When the calls list is full, a new call replaces the oldest in the list.
- The received and missed calls log holds details of up to 30 calls.

- If you receive more than one call from the same number, only the most recent call is kept in the calls list. When you have missed calls (incoming calls that you haven't answered) the **NEW** icon will be displayed in the display on all handsets registered to the base. If one handset is used to view the calls log, the icon on the other handsets remains on (For multi-pack use only).

### 4.18.2 View the calls list

1. Press **CID** to enter the calls list.
2. Scroll **VOL+** or **REDIAL/VOL-** through the calls list.

### NOTE

- When reviewing an entry from the calls list, press **#/ABC/PAUSE/FORMAT** repeatedly to display the number in a different format. For example, if a caller number is displayed as 888-331-3383, the various formats will be:

331-3383

1-331-3383

888-331-3383

1-888-331-3383

User can choose the desired number format for local and long distance numbers before dialing or saving it into the phonebook.

- The **NEW** icon is removed once the new call has been viewed.



### 4.18.3 Save a number from the calls list to the phonebook

1. Press **CID** to enter the calls list.
2. Press **VOL+** or **REDIAL/VOL-** to the entry you want.
3. Press **MENU** and enter the name.
4. Press **MENU** and edit the number.
5. Press **MENU** to save.

### 4.18.4 Delete a calls list entry

1. Press **CID** to enter the calls list.
2. Press **VOL+** or **REDIAL/VOL-** to scroll to the entry you want.
3. Press **[∞]/MUTE** to delete the entry.

### 4.18.5 Delete entire calls list

1. Press **CID** to enter the calls list.
2. Press and hold **[∞]/MUTE**. **DELETE ALL CALL LOG ENTRIES?** is displayed.
3. Press **MENU** to confirm and all entries are deleted.

#### **NOTE**

You need to review the particular call before you delete the record from the call list.




## 4.19 Personal Settings

### Menu map

MAIN MENU	DATE & TIME	PHONEBOOK	INTERCOM	SETUP HS	SETUP BS	SETUP CELLULAR	PAIRED DEVICES	ANSWER MACHINE	RESET SETTINGS
SUB MENU	DATE TIME	VIEW ADD EDIT DELETE DELETE ALL PB CAPACITY SPEED DIAL		RINGER TONE RINGER VOLUME KEY TONE LOW BATT TONE OUT RANGE TONE HANDSET NAME LANGUAGE LCD CONTRAST REGISTRATION	DIAL MODE FLASH TIME AREA CODE			ANSWERER ON (If answer machine is off) or ANSWERER OFF (If answer machine is on) ANSWERER MODE VOICEMAIL ONLY RINGS TO ANSWER ANNOUNCEMENT RECORD MEMO CALL SCREENING DEL ALL OLD MSG REMOTE ACCESS SECURITY CODE	CLR VOICE MAIL ALL SETTINGS



1. Press **MENU**.
2. Press **VOL+** or **REDIAL/VOL-** to scroll through the menu.
3. Press **MENU** to open a sub-menu or validate an option.

Press  /**BACK** to go back to previous menu level or cancel an action.


*If you do not press any button on the handset for 30 seconds, the display will automatically return to standby. It will also return to standby when the handset is placed on the base or charger.*

## 4.20 Registration

Up to 5 handsets can be registered to one corded base. The original cordless handset is pre-registered to use. Additional cordless handsets must be registered to the corded base before you can use them.

To register an additional cordless handset,

1. Press **MENU** and **VOL+** or **REDIAL/VOL-** to select **SETUP HS**.
2. Press **MENU** and **VOL+** or **REDIAL/VOL-** to select **REGISTRATION**.
3. Press **MENU** and **VOL+** or **REDIAL/VOL-** to select **YES** or **NO**.

4. Select **YES** and press **MENU** to enter the registration procedure as below:
  1. Press and hold  /**MUTE** for 4 seconds on corded base, and then release.
  2. Place the unregistered cordless handset on the charger.
  3. A confirmation tone is generated if registration is successful. **HANDSET X** is displayed where **X** denotes the number of handsets and the phone goes back to idle.

To register an originally unregistered cordless handset, follow steps 1 through 3 above.

## 4.21 To reset all settings

1. Press **MENU** and **VOL+** or **REDIAL/VOL-** to select **RESET SETTINGS**.
2. Press **MENU** and **VOL+** or **REDIAL/VOL-** to select **ALL SETTINGS**.
3. Press **MENU** to select **YES**. Then all the personalized settings will be reset to default.

### **NOTE**

All of your phonebook entries, calls list and redial list will remain unchanged.



## 4.22 Paging/Finding cordless handset

1. Press /MUTE on the corded base.
2. Press **VOL+** or **REDIAL/VOL-** to select the destination cordless handset from **HANDSET 1** to **HANDSET 5**, and **ALL HANDSETS**.
3. Selecting **ALL HANDSETS** will page all the registered cordless handsets.
  - Destination cordless handset or all cordless handsets ring.
4. Press /MUTE again, place the cordless handset on the cradle or press /FLASH/ /BACK/ /SPEAKER on the cordless handset to stop the paging call.

## 4.23 Using your answering machine

The answering machine records unanswered calls when it is activated.

### 4.23.1 Play messages

Through the handset:

1. Press /MUTE from idle mode. New messages will be played followed by any older messages.
2. During message playback, press the keys below to perform the following functions:

/1	Repeats the current message. Press twice to playback the previous message.
/ABC/2	Stop message playback.
/DEF/3	Skip to play the next message.
<b>VOL+</b>	Increase the volume.
<b>REDIAL/VOL-</b>	Decrease the volume.
/MUTE	Delete the current message and the next message will be played.
/SPEAKER	Toggle the message playback via earpiece/speakerphone.
/BACK	Exit to idle.

### NOTE

For multiple handset models when you are on either a cellular call or a home call, the answering system will not answer the second incoming call.



### 4.23.2 Turn on or off the answer machine

1. Press **MENU** and **VOL+** or **REDIAL/VOL-** to select **ANSWER MACHINE**.
2. Press **MENU** and **VOL+** or **REDIAL/VOL-** to select **ANSWERER ON** or **ANSWERER OFF**. If the answer machine is turned on originally, **ANSWERER OFF** will be displayed. If the answer machine is turned off originally, **ANSWERER ON** will be displayed.
3. Press **MENU** to confirm.

### 4.23.3 Set the announcement mode

1. Press **MENU** and **VOL+** or **REDIAL/VOL-** to select **ANSWER MACHINE**.
2. Press **MENU** and **VOL+** or **REDIAL/VOL-** to select **ANSWERER MODE**.
3. Press **MENU** and **VOL+** or **REDIAL/VOL-** to select the announcement modes:
  - **ANNC & RECORD** invites your callers to leave a message.
  - **ANNOUNCE ONLY** lets callers hear your announcement but they cannot leave a message.
4. Press **MENU** to save.

### 4.23.4 Set voicemail only

This function will be useful when you have subscribed the voicemail service from your local service provider.

If **VOICEMAIL ONLY** is set **ON**, your answer machine will be disabled. Your call will only be answered by the voicemail service.

If **VOICEMAIL ONLY** is set **OFF**, your answer machine will function normally as your personalized settings.

#### Turn on/ off VOICEMAIL ONLY:

1. Press **MENU** and **VOL+** or **REDIAL/VOL-** to select **ANSWER MACHINE**.
2. Press **MENU** and **VOL+** or **REDIAL/VOL-** to select **VOICEMAIL ONLY**.
3. Press **MENU** and **VOL+** or **REDIAL/VOL-** to select **ON** or **OFF**.
4. Press **MENU** to confirm.

### 4.23.5 Set the number of rings

1. Press **MENU** and **VOL+** or **REDIAL/VOL-** to select **ANSWER MACHINE**.
2. Press **MENU** and **VOL+** or **REDIAL/VOL-** to select **RINGS TO ANSWER**.



3. Press **MENU** and **VOL+** or **REDIAL/VOL-** to select the rings to answer. (4 options are available: **TOLL SAVER**, **3**, **4**, or **5 RINGS**).

**NOTE**

If Toll Saver setting is selected, the answering machine will pick up after two rings if there are new messages, and after four rings if there are no messages.

4. Press **MENU** to save.

**4.23.6 Announcement**

This is the message your callers hear on the answering machine. There are two pre-recorded outgoing messages, or you can record your own.

**4.23.6.1 Record the announcement**

1. Press **MENU** and **VOL+** or **REDIAL/VOL-** to select **ANSWER MACHINE**.
2. Press **MENU** and **VOL+** or **REDIAL/VOL-** to select **ANNOUNCEMENT**.
3. Press **MENU** to select **RECORD**.
4. Press **MENU** and **VOL+** or **REDIAL/VOL-** to select the answer mode **ANNC & RECORD** or **ANNOUNCE ONLY**.
5. Press **MENU** to start recording after a "beep" sound is heard.

6. Press **MENU** again to stop recording and save the message. The just saved message is played automatically.

**NOTE**

When playing the message, pressing **[MUTE]** will delete it and the pre-recorded message will be played automatically.

**4.23.6.2 Play the announcement**

1. Press **MENU** and **VOL+** or **REDIAL/VOL-** to select **ANSWER MACHINE**.
2. Press **MENU** and **VOL+** or **REDIAL/VOL-** to select **ANNOUNCEMENT**.
3. Press **MENU** and **VOL+** or **REDIAL/VOL-** to select **PLAY**.
4. Press **MENU** and **VOL+** or **REDIAL/VOL-** to select the answer mode **ANNC & RECORD** or **ANNOUNCE ONLY**.
5. Press **MENU** and the message is played.

**4.23.7 Record a memo**


You can record a memo which is stored on your answering machine and played back like a normal message.

1. Press **MENU** and **VOL+** or **REDIAL/VOL-** to select **ANSWER MACHINE**.






2. Press **MENU** and **VOL+** or **REDIAL/VOL-** to select **RECORD MEMO**.
3. Press **MENU** to start recording.
4. Press **MENU** again to stop recording and save the message. The just saved message is played automatically.

### NOTE

When playing the message, pressing /MUTE will delete it permanently.

### 4.23.8 Call screening on/off


You are able to hear a caller leaving a message. You can then choose to ignore the caller or pick up the call.

1. When the answering machine is recording, the cordless handset displays **SCREENING?**.
2. Press **MENU** to listen to the caller through the handset earpiece, the handset displays **CALL SCREENING**.
3. Press /SPEAKER to listen via the handset loudspeaker.
4. Press /MUTE to stop screening and leave the answering machine to record the message.
5. Press /FLASH to talk to the caller and stop recording.

### 4.23.9 Delete all old messages

1. Press **MENU** and **VOL+** or **REDIAL/VOL-** to select **ANSWER MACHINE**.
2. Press **MENU** and **VOL+** or **REDIAL/VOL-** select **DEL ALL OLD MSG**.
3. Press **MENU** to confirm.

### NOTE

When answering machine is full,  will flash if there are new messages. **ERASE SOME ANSWERER MSG** will toggle within 2 seconds with **MEMORY FULL** in idle to alert user to delete some answering machine messages to free up the memory.

### 4.23.10 Remote access

Remote access allows you to operate your answering machine and listen to your messages by calling your phone from another phone.

Turn the remote access on/off

1. Press **MENU** and **VOL+** or **REDIAL/VOL-** to select **ANSWER MACHINE**.
2. Press **MENU** and **VOL+** or **REDIAL/VOL-** to select **REMOTE ACCESS**.
3. Press **MENU** and **VOL+** or **REDIAL/VOL-** to select **ON** or **OFF**.
4. Press **MENU** to confirm.



To enter the remote access mode, dial your phone number from another phone, when you hear the announcement, press **TONE/\*** and then enter the 4-digit remote security code (default code is 0000).

The correct sequence of the 4 security PIN digits needs to be detected before entering remote access mode. Random digits detected prior to the correct 4 digits sequence are ignored, and answering machine recording continues until the complete PIN is detected. There is no system prompt to enter the remote access code.

Press the following keys on your handset to perform the following functions, after entering your remote access mode.

<b>Press...</b>	<b>To...</b>
1	Repeat message
2	Play/Stop message
3	Skip forward to the next message
4	Toggle Answer Off/Announce Only/ Announce and Record modes
7	Listen to the Main Menu (for Full Voice prompts only)
0	Delete message

#### **4.23.11 Set the security code**

This is used to change the remote access PIN if necessary.

1. Press **MENU** and **VOL+** or **REDIAL/VOL-** to select **ANSWER MACHINE**.
2. Press **MENU** and **VOL+** or **REDIAL/VOL-** to select **SECURITY CODE**.
3. Press **MENU** and enter the 4-digit security code.
4. Press **MENU** to save.



## 5. Help

### ***I cannot pair my mobile phone to the telephone base***

- Make sure the Bluetooth function of your Bluetooth enabled mobile phone is turned on. See your mobile phone user's manual for more information.
- Make sure the cordless handset, corded base and cell phone are located near each other.
- Remove the **Motorola L512CBT/L513CBT/L514CBT/L515CBT** from your mobile phone's Bluetooth device history list (see your mobile phone user's manual for more information).
- Carefully follow the pairing instructions in the user's guide, making sure that your mobile phone is not connected to any other Bluetooth device(s).
- Turn off your mobile phone, and then turn it on again.
- Reset the telephone base. Unplug the unit's electrical power. Wait for approximately 15 seconds, and then plug it back in. Repeat the above suggestions.

### ***The icon is not scrolling when the cordless handset is placed on the charger***

- Incomplete battery contact - adjust the cordless handset on the charger.
- Dirty contact - clean the battery contact by wiping with an alcohol moistened cloth.
- Battery is full - charging is not necessary at this time.

### ***No dial tone***

- If there is no base power, check the connections. Reset the phone by unplugging then plugging it back into an electrical outlet.
- If the cordless handset batteries are empty, recharge the battery pack for at least 24 hours.
- Move the cordless handset closer to the corded base if it is too far away.
- Be sure to use the provided telephone cords.

### ***Poor audio quality***

- If the corded base is too close to electrical appliances, reinforced concrete walls, or metal door frames, move the corded base from these areas.

### ***No ring tone***

- The ring tone may be deactivated.
- The volume may need to be increased.





### ***Caller ID does not work***

- Check your subscription with your network operator.
- If you subscribe to high-speed internet service (Digital Subscriber Line - DSL) through your telephone lines, you must install a DSL filter between the telephone base and the telephone wall jack. The filter will prevent noise and caller ID problems caused by DSL interference. Please contact your DSL service provider for more information about DSL filters.

### ***A phonebook entry cannot be stored***

- The phonebook is full. Delete an entry to free memory.

### ***No display***

- Try recharging or replacing the rechargeable battery pack.
- Reset the corded base. Unplug the unit's electrical, then plug it back in.
- If LED is not lit up, then try to unplug the unit's electrical power, and then plug it back in.

### ***If the cordless handset disconnects from the corded base during a phone call***

- Check that the power cord is connected properly into the corded base.
- Check that the power adapter is connected properly into the electrical outlet.
- Move the cordless handset closer to the corded base. It may be out of range.
- Reset the corded base by unplugging the unit's electrical power. Wait for around 15 seconds and re-plug the power again. Allow up to one minute for the cordless handset to synchronize with the registered corded base again.

### ***Noise interference on your radio or television***

- Your corded base or cordless charger may be too close. Move it as far away as possible.



## 6. General information

### If your product is not working properly...

1. Read this User's Guide.
2. Visit our website: [www.motorola.com](http://www.motorola.com)
3. Contact Customer Service in the US and Canada at 1-888-331-3383.

To order a replacement battery pack contact customer service or visit our website.

### Important safety instructions

Follow these safety precautions when using your phone to reduce the risk of fire, electric shock, and injury to persons or property:

1. Keep all vents and openings of the phone unblocked. Do not set the phone on a heating register or over a radiator. Ensure that proper ventilation is provided at the installation site.
2. Do not use while wet or while standing in water.
3. Do not use this product near water (for example, near a bath tub, kitchen sink, or swimming pool).
4. Do not allow anything to rest on the power cord. Place the power cord so that it will not be walked on.

5. Never insert objects of any kind into the product vents as that may result in fire or electric shock.
6. Unplug this product from the electrical outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
7. Do not disassemble this product. If service or repair work is required, contact the customer service helpline found in this user's guide.
8. Do not overload wall outlets and extension cords.
9. Avoid using during an electrical storm. Use a surge protector to protect the equipment.
10. Do not use this phone to report a gas leak, especially if you are in the vicinity of the gas line.

#### CAUTION

*To reduce the risk of fire, use only No. 26 AWG or larger UL Listed or CSA Certified Telecommunication Line Cord.*

### Unplug this cordless phone immediately from an outlet if:

- The power cord or plug is damaged or frayed.
- Liquid has been spilled on the product.
- The product has been exposed to rain or water. Do not retrieve the handset or base until after you have unplugged the power and phone from the wall. Then retrieve the unit by the unplugged cords.



- The product has been dropped or the cabinet has been damaged.
- The product exhibits a distinct change in performance.

## Installation Guidelines

1. Read all instructions and save them for future reference.
2. Follow all warnings and instructions marked on the product.
3. Do not install this product near a bath tub, sink, or shower.
4. Operate this phone using only the power source that is indicated on the marking label. If you are unsure of the power supply to your home, consult with your dealer or local power company.
5. Do not place this product on an unstable cart, stand, or table. This product may fall, causing serious damage to the product.
6. Adjust only those controls that are covered by the operating instructions. Improper adjustment of other controls may result in damage and will often require extensive work to restore the product to normal operation.
7. Clean this product with a soft, damp cloth. Do not use chemicals or cleaning agents to clean this phone.
8. Use only the power supply that came with this unit. Using other power supplies may damage the unit.
9. Because this phone operates on electricity, you should have at least one phone in your home that operates without electricity in case the power in your home goes out.
10. To avoid interference to nearby appliances, do not place the base of the phone on or near a TV, microwave oven, or VCR.

### CAUTION

*To maintain compliance with the FCC's RF exposure guidelines, place the base unit at least 20 cm from nearby persons.*

## Battery Safety Instructions

- Do not burn, disassemble, mutilate, or puncture the battery. The battery contains toxic materials that could be released, resulting in injury.

### CAUTION

*There is a risk of explosion if you replace the battery with an incorrect battery type. Use only the battery pack that came with your phone or an authorized replacement recommended by the manufacturer.*

- Keep battery packs out of the reach of children.
- Remove battery packs if storing over 30 days.



- Do not dispose of battery packs in fire, which could result in explosion.
- The rechargeable battery packs that power this product must be disposed of properly and may need to be recycled. Refer to the battery label for battery type. Contact your local recycling center for proper disposal methods.

### **SAVE THESE INSTRUCTIONS**

## **Consumer Products and Accessories purchased in the United States or Canada**

### ***What Does this Warranty Cover?***

Subject to the exclusions and limitations contained below, Binatone Electronics International LTD. warrants the Motorola branded consumer products that it manufactures ("Products") and the Motorola branded or certified accessories sold for use with these Products that it manufactures ("Accessories") to be free from defects in materials and workmanship under normal consumer usage for the period(s) outlined below. This limited warranty is a consumer's exclusive remedy, and only applies as follows to new Motorola branded Products and Accessories manufactured by Binatone Electronics International LTD., and purchased by consumers in the United States or Canada, which are accompanied by this written warranty:

### ***Who is covered?***

This warranty covers only the first consumer purchaser, and is not transferable.

### ***What will BINATONE ELECTRONICS INTERNATIONAL LTD. do?***

BINATONE ELECTRONICS INTERNATIONAL LTD., at its sole option, will at no charge repair, replace or refund the purchase price of any Products or Accessories that does not conform to this warranty. Binatone Electronics International LTD. may use functionally equivalent reconditioned/ refurbished/ pre-owned or new Products, Accessories or parts in such repair or replacement and any Products, Accessories or parts removed or being replaced under this warranty become the property of Binatone Electronics International LTD.

### ***What Other Limitations Are There?***

ANY IMPLIED WARRANTIES OR CONDITIONS IRRESPECTIVE OF WHETHER THEY ARE IMPOSED BY LAW OR OTHERWISE, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY, OTHERWISE THE REPAIR, REPLACEMENT, OR REFUND AS PROVIDED UNDER THIS EXPRESS

LIMITED WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER, AND IS PROVIDED IN LIEU OF ALL WARRANTIES AND MOTOROLA AND BINATONE ELECTRONICS INTERNATIONAL LTD. MAKES NO OTHER WARRANTIES OR CONDITIONS, EXPRESS OR IMPLIED. IN NO EVENT SHALL MOTOROLA OR BINATONE ELECTRONICS INTERNATIONAL LTD. BE LIABLE, WHETHER UNDER THIS LIMITED WARRANTY OR IN CONTRACT OR TORT (INCLUDING NEGLIGENCE OR STRICT PRODUCT LIABILITY) OR OTHERWISE FOR DAMAGES OR CLAIMS IN EXCESS OF THE PURCHASE PRICE OF THE PRODUCT OR ACCESSORY, OR FOR ANY INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES OF ANY KIND, OR LOSS OF REVENUE, SAVINGS OR PROFITS, LOSS OF BUSINESS, LOSS OF PROGRAMS DATA INFORMATION (WHETHER CONFIDENTIAL PROPRIETARY OR PERSONAL IN NATURE OR OTHERWISE) OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE ABILITY OR INABILITY TO USE THE PRODUCTS OR ACCESSORIES AND BINATONE ELECTRONICS INTERNATIONAL LTD. SHALL UNDER NO CIRCUMSTANCES BE LIABLE FOR ANY CLAIMS OR DEMANDS MADE BY ANY THIRD PARTY OR MADE

BY YOU ON BEHALF OF ANY THIRD PARTY TO THE FULL EXTENT THESE DAMAGES OR CLAIMS MAY BE DISCLAIMED BY LAW.

Some states, countries or jurisdictions do not allow the limitation or exclusion of incidental or consequential damages, or limitation on the length of an implied warranty, so the above limitations or exclusions may not apply to you in such states, countries or jurisdictions. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state or from one country/jurisdiction to another.

<b>Products or Accessories Covered</b>	<b>Length of Coverage</b>
<b>Consumer Products</b>	<b>One (1) year</b> from the date of purchase by the first consumer purchaser of the product.
<b>Consumer Accessories</b>	<b>Ninety (90) days</b> from the date of purchase by the first consumer purchaser of the accessory.
<b>Consumer Products and Accessories that are Repaired or Replaced</b>	<b>The balance of the original warranty or for ninety (90) days</b> from the date returned to the consumer, whichever is longer.



## Exclusions

**Normal Wear and Tear.** Periodic maintenance, repair and replacement of parts due to normal wear and tear are excluded from coverage.

**Batteries.** Only batteries whose fully charged capacity falls below 80% of their rated capacity and batteries that leak are covered by this limited warranty. Battery life and the changes in battery capacity with time or use are excluded from this warranty.

**Abuse & Misuse.** Defects or damage that result from: (a) improper or unreasonable use, operation, storage, misuse or abuse, accident or neglect or other external cause, such as physical damage (cracks, scratches, etc.) to the surface of the product resulting from misuse; (b) your failure to follow or operation outside the usage parameters stated in the user instructions that came with the Products or Accessories; (c) contact with liquid, water, rain, extreme humidity or heavy perspiration, sand, dirt or the like, extreme heat, or food; (d) use of the Products or Accessories for commercial purposes or subjecting the Product or Accessory to abnormal usage or conditions; or (e) other acts or omissions which are not the fault or neglect of Motorola or Binatone Electronics International LTD., are excluded from coverage.

## Use of Non-Motorola branded Products and Accessories.

Defects or damage that result from the use of Non-Motorola branded or certified Products or Accessories or other peripheral equipment are excluded from coverage.

**Unauthorized Service or Modification.** Defects or damages resulting from service, testing, adjustment, installation, maintenance, alteration, or modification in any way by someone other than Motorola, Binatone Electronics International LTD. or its authorized service centers, are excluded from coverage.

**Altered Products.** Products or Accessories with (a) serial numbers or date tags that have been removed, altered or obliterated; (b) broken seals or that show evidence of tampering; (c) mismatched board serial numbers; or (d) nonconforming or non-Motorola branded housings, or parts, are excluded from coverage.

**Communication Services.** Defects, damages, or the failure of Products or Accessories due to any communication service or signal you may subscribe to or use with the Products or Accessories is excluded from coverage.

### ***How to Obtain Warranty Service or Other Information?***

To obtain service or information, please call:

**US and Canada: 1-888-331-3383**

You will receive instructions on how to ship the Products or Accessories, the shipment of which shall be at your own risk and expense, to a BINATONE ELECTRONICS INTERNATIONAL LTD. Authorized Repair Center. To obtain service, you must include: (a) a copy of your receipt, bill of sale or other comparable proof of purchase of the Products or Accessories showing the date of purchase; (b) a written description of the problem; and, most importantly; (c) your address and telephone number.

These terms and conditions constitute the complete warranty agreement between you and BINATONE ELECTRONICS INTERNATIONAL LTD. regarding the Products or Accessories purchased by you, and supersede any prior agreement or representations, including representations made in any literature publications or promotional materials issued by BINATONE ELECTRONICS INTERNATIONAL LTD. or representations made by any agent employee or staff of BINATONE ELECTRONICS INTERNATIONAL LTD., that may have been made in connection with the said purchase.

### **FCC, ACTA and IC regulations**

#### **FCC Part 15**

This equipment has been tested and found to comply with the requirements for a Class B digital device under Part 15 of the Federal Communications Commission (FCC) rules. These requirements are intended to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



Changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Privacy of communications may not be ensured when using this telephone.

To ensure safety of users, the FCC has established criteria for the amount of radio frequency energy that can be safely absorbed by a user or bystander according to the intended usage of the product. This product has been tested and found to comply with the FCC criteria. The handset may be safely held against the ear of the user. The telephone base shall be installed and used such that parts of the user's body other than the hands are maintained at a distance of approximately 20 cm (8 inches) or more.

This Class B digital apparatus complies with Canadian ICES-003.

## **FCC Part 68 and ACTA**

This equipment complies with Part 68 of the FCC rules and with technical requirements adopted by the Administrative Council for Terminal Attachments (ACTA). The label on the back or bottom of this equipment contains, among other things, a product identifier in the format US: AAAEQ##TXXXX. This identifier must be provided to your local telephone company upon request.

The plug and jack used to connect this equipment to premises wiring and the telephone network must comply with applicable Part 68 rules and technical requirements adopted by ACTA. A compliant telephone cord and modular plug is provided with this product. It is designed to be connected to a compatible modular jack that is also compliant. An RJ11 jack should normally be used for connecting to a single line and an RJ14 jack for two lines. See Installation Instructions in the user's manual.

The Ringer Equivalence Number (REN) is used to determine how many devices you may connect to your telephone line and still have them ring when you are called. The REN for this product is encoded as the 6th and 7th characters following the US: in the product identifier (e.g., if ## is 03, the REN is 0.3). In most, but



not all areas, the sum of all RENs should be five (5.0) or less. For more information, please contact your local telephone company.

This equipment may not be used with Party Lines. If you have specially wired alarm dialing equipment connected to your telephone line, ensure the connection of this equipment does not disable your alarm equipment. If you have questions about what will disable alarm equipment, consult your telephone company or a qualified installer.

If this equipment is malfunctioning, it must be unplugged from the modular jack until the problem has been corrected. Repairs to this telephone equipment can only be made by the manufacturer or its authorized agents. For repair procedures, follow the instructions outlined under the Limited Warranty.

If this equipment is causing harm to the telephone network, the telephone company may temporarily discontinue your telephone service. The telephone company is required to notify you before interrupting service. If advance notice is not practical, you will be notified as soon as possible. You will be given the opportunity to correct the problem and the telephone company is required to inform you of your right to file a complaint with the FCC. Your telephone company may

make changes in its facilities, equipment, operation, or procedures that could affect the proper functioning of this product. The telephone company is required to notify you if such changes are planned.

If this product is equipped with a corded or cordless handset, it is hearing aid compatible.

If this product has memory dialing locations, you may choose to store emergency telephone numbers (e.g., police, fire, medical) in these locations. If you do store or test emergency numbers, please:

- Remain on the line and briefly explain the reason for the call before hanging up.
- Perform such activities in off-peak hours, such as early morning or late evening.

### **Industry Canada**

Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference, including interference that may cause undesired operation.

The term "IC: " before the certification/registration number only signifies that the Industry Canada technical specifications were met.

The Ringer Equivalence Number (REN) for this terminal equipment is 0.5. The REN is an indication of the



maximum number of devices allowed to be connected to a telephone interface. The termination on an interface may consist of any combination of devices subject only to the requirement that the sum of the RENs of all the devices does not exceed five.

This product meets the applicable Industry Canada technical specifications.

## **RENSEIGNEMENTS RELATIFS AUX RÈGLEMENTS DE LA COMMISSION FÉDÉRALE DES COMMUNICATIONS 'FCC', DU CONSEIL ADMINISTRATIF DES UNITÉS DE CONNEXION 'ACTA' ET D'INDUSTRIE Canada 'IC'**

### **Article 15 des règlements du FCC**

Cet appareil a été testé et s'avère conforme aux restrictions relatives aux équipements numériques de classe B, d'après l'article 15 des règlements de la FCC. Ces restrictions ont été instaurées pour offrir une protection raisonnable contre les interférences nuisibles au sein d'une installation résidentielle. Cet appareil génère, utilise et peut émettre des fréquences radio et s'il n'est pas installé selon les instructions, peut nuire aux radiocommunications. Toutefois, rien ne garantit que des parasites ne surviendront pas dans une

installation particulière. Si cet appareil cause des interférences nuisibles à la réception du téléviseur ou de la radio, ce que vous pouvez déterminer en mettant votre appareil en et hors fonction, nous vous invitons à essayer l'une des mesures correctives suivantes :

- Réorientez l'antenne de réception.
- Éloignez l'appareil du composant qui reçoit les ondes.
- Branchez l'appareil dans une prise de courant CA différente de celle du composant qui reçoit les ondes.
- Au besoin, consultez votre marchand électronique ou un technicien spécialisé dans le service des radios/ téléviseurs pour des suggestions supplémentaires.

Toute modification ou changement effectué à cet appareil sans l'accord des parties responsables de l'homologation peut retirer à l'utilisateur son droit d'utiliser l'appareil.

Cet appareil est conforme à l'article 15 de la FCC. Le fonctionnement est soumis aux deux conditions suivantes: (1) Cet appareil ne doit pas causer d'interférences nuisibles et; (2) Il doit pouvoir supporter les parasites qu'il reçoit, incluant les parasites pouvant nuire à son fonctionnement. La confidentialité des communications peut ne pas être assurée avec ce téléphone.

Afin de garantir la sécurité des utilisateurs, la FCC a établi les critères relatifs à l'énergie générée par les



fréquences radio pouvant être absorbée en toute sécurité par un utilisateur ou par quelqu'un se trouvant à proximité, dépendamment de l'utilisation prévue du produit. Ce produit a été testé et s'avère conforme aux normes de la FCC. Le combiné produit si peu de puissance qu'il n'a pas besoin d'être testé. Il peut être déposé contre l'oreille de l'utilisateur en toute sécurité. Il peut être appuyé en toute sécurité sur l'oreille de l'utilisateur. Le socle doit être installé et utilisé de façon à ce qu'une distance d'environ 20 cm (8 po.) ou plus soit conservée entre celui-ci et les parties du corps de l'utilisateur, à l'exception des mains.

Cet appareil numérique de classe B est conforme aux normes canadiennes ICES-003.

### **Article 68 de la FCC et exigences de l'ACTA**

Cet appareil est conforme à l'article 68 de la réglementation de la Commission fédérale des communications 'FCC' aux États-Unis et aux exigences adoptées par le Conseil d'administration du matériel terminal 'ACTA'. Vous trouverez, sous l'appareil, une étiquette qui contient, entre autres renseignements, une plaque signalétique dans le format 'US: AAAEQ##TXXXX'. Si on vous le demande, vous devez fournir ce numéro à la compagnie de téléphone. Cette homologation doit vous être fournie par votre compagnie de téléphone locale, sur demande.

La fiche et la prise utilisées pour brancher cet appareil au filage du bâtiment et au réseau téléphonique doivent être conformes avec les règlements de l'article 68 et les exigences techniques adoptées par l'ACTA. Un cordon téléphonique et une fiche modulaire conformes sont fournis avec cet appareil. Celui-ci a été conçu pour être raccordé à une prise modulaire compatible qui est également conforme. Une prise RJ11 doit être utilisée pour le raccord à une ligne simple et une prise RJ14, pour le raccord à deux lignes. Consultez les instructions d'installation du guide d'utilisation.

Le numéro 'REN' sert à déterminer combien de dispositifs téléphoniques peuvent être raccordés à votre ligne téléphonique sans perdre leur capacité de sonner lorsqu'on vous appelle. Le numéro 'REN' de cet appareil est encodé entre le 6e et le 7e caractère après "US:" dans l'identification de l'appareil (par exemple, si les numéros sont 03, le REN sera 3.0). Dans la plupart, mais pas toutes les régions, la somme de tous les numéros 'REN' devrait être de cinq (5.0) ou moins. Pour plus de détails à ce sujet, nous vous suggérons de communiquer avec votre compagnie de téléphone locale.

Cet appareil ne peut pas être utilisé conjointement avec des lignes partagées. Si vous avez des composants de systèmes d'alarme connectés sur votre ligne



téléphonique, assurez-vous que le raccord de cet appareil ne désactive pas votre système d'alarme. Si vous avez des questions se rapportant à ce qui peut désactiver votre système d'alarme, consultez votre compagnie de téléphone ou un installateur qualifié.

Si l'appareil s'avérait défectueux, il doit être immédiatement débranché de la prise modulaire jusqu'à ce que le problème soit corrigé. Cet appareil ne doit être réparé que par son fabricant ou l'un des centres de service autorisés par celui-ci. Pour plus de détails sur les procédures de service, suivez les instructions décrites dans la Garantie limitée.

Si cet appareil nuit au réseau téléphonique, la compagnie de téléphone peut décider d'arrêter temporairement votre service téléphonique. Elle est tenue de vous avertir avant d'interrompre le service; si elle ne peut pas vous avertir d'avance, elle le fera dès qu'elle le pourra. On vous donnera l'opportunité de rectifier le problème et la compagnie doit vous informer de votre droit de porter plainte à la FCC. Votre compagnie de téléphone peut apporter des modifications à ses installations, ses équipements et ses procédures pouvant altérer le fonctionnement normal de votre appareil. Par contre, elle est tenue de vous avertir lorsque de tels changements sont prévus.

Si cet appareil est doté d'un combiné avec ou sans cordon, celui-ci est compatible avec les appareils auditifs pour malentendants.

Si cet appareil possède des adresses mémoire, vous pouvez y entrer les numéros de téléphone des services d'urgence de votre municipalité (police, incendie et services médicaux). Si vous entrez et testez des numéros d'urgence, veuillez procéder comme suit:

- Demeurez en ligne et expliquez brièvement la raison de votre appel avant de raccrocher.
- Procédez à ceci hors des heures de pointe, tel que tôt le matin ou tard en soirée.

### **Industrie Canada**

Le fonctionnement est soumis aux deux conditions suivantes : (1) Cet appareil ne doit pas causer d'interférences nuisibles et; (2) Il doit pouvoir supporter les parasites qu'il reçoit, incluant les parasites pouvant nuire à son fonctionnement.

L'abréviation 'IC' se trouvant avant cette homologation signifie que la certification fut effectuée selon une déclaration de conformité spécifiant que les normes d'Industrie Canada ont été rencontrées.

Le numéro d'équivalence de sonnerie 'REN' assigné à cet appareil est 0.5. Ce numéro attribué à chaque appareil détermine le nombre de dispositifs téléphoniques que l'on

peut brancher dans le circuit téléphonique de la maison sans surcharger le système. Le circuit téléphonique peut comporter n'importe quelle combinaison de dispositifs téléphoniques, à la seule condition que la somme du numéro 'REN' n'excède pas cinq.

Cet appareil est conforme aux spécifications techniques d'Industrie Canada.

### ***Technical Specifications***

RF frequency band	1921.536 MHz — 1928.448 MHz
Channels	5
Operating temperature	5°C to 45°C
Corded base voltage (AV voltage, 60Hz)	96 — 130 Vms
Corded base voltage (Adapter output)	6V DC, 600mA
Cordless handset voltage	2.4V 550mAh Ni-MH battery pack
Charge voltage (Adapter output)	6V AC, 300mA



**MOTOROLA**

Manufactured, distributed or sold by Binatone Electronics International LTD., official licensee for this product. MOTOROLA and the Stylized M Logo, and other Motorola trademarks and trade dress are owned by Motorola, Inc. and are used under license from Motorola, Inc. MOTOROLA and the Stylized M Logo are registered in the US Patent & Trademark Office. The Bluetooth trademarks are owned by their proprietor and used by Binatone Electronics International LTD. under license. All other product or service names are the property of their respective owners.

© Motorola, Inc. 2009. All rights reserved.



Version 1.0

Printed in China

