

Doc Title :	Product Data – User’s Guide	Revision :	R.00
Model :	Motorola L70×BT	Page(s) :	1 of 27

User’s Guide

Motorola L701BT / L702BT / L703BT / L704BT / L705BT

DECT 6.0 Digital Cordless Phone with Bluetooth® Wireless Technology
and Answering System

Warning

*Use only the adapter and telephone line cord
provided in the box.*

Doc Title :	Product Data – User’s Guide	Revision :	R.00
Model :	Motorola L70×BT	Page(s) :	2 of 27

REVISION HISTORY				
Revision	Changes	Section Affected	Prepared By	Date
R.00	New Release	--	Cindy Peng	2011/12/09

Doc Title :	Product Data – User’s Guide	Revision :	R.00
Model :	Motorola L70×BT	Page(s) :	3 of 27

Welcome to your new Motorola Phone!

Please retain your original dated sales receipt for your records. For warranty service of your Motorola product, you will need to provide a copy of your dated sales receipt to confirm warranty status. Registration is not required for warranty coverage.

For product-related questions, please call:

US and Canada: 1-888-331-3383

On the Web: www.motorola.com

- 30 name and number phonebook.
- Answering machine with 15 minutes digital recording time.
- Caller ID shows you who is calling and includes details of the last 30 callers in a calls list.
- Register up to 5 handsets to a single base.
- Make internal calls, transfer external home calls, hold 3-way conversation between two internal callers and an external caller.

*The recording time includes the pre-recorded voice menu and outgoing announcements.

**You must subscribe to your network provider’s Caller ID or Call Waiting service for these features to work.

Please note that this equipment is not designed for making emergency telephone calls when the power fails. Alternative arrangements should be made if emergency telephone call is necessary.



This ENERGY STAR® program (www.energystar.gov) recognizes and encourages the use of products that save energy and help protect our environment. We are proud to mark this product with the ENERGY STAR® label indicating it meets the latest energy efficiency guidelines.

Doc Title :	Product Data – User’s Guide	Revision :	R.00
Model :	Motorola L70×BT	Page(s) :	4 of 27

This User’s Guide provides you with all the information you need to get the most from your phone.

Before you make your first call you will need to set up your phone.

Follow the simple instructions in “Getting Started” , on the next few pages.

IMPORTANT

Only use the telephone line cord supplied.

This equipment is not designed to make emergency telephone calls during power failures. Alternative arrangements should be made for access to emergency services.

Got everything?

- Handset
- Base
- NiMH rechargeable battery pack
- Battery door
- Power adapter
- Telephone line cord
- User’s Guide
- Quick Start Guide

In multi-handset packs, you will find one or more additional handsets, chargers with power adapter units, additional rechargeable battery packs and battery doors.

Doc Title :	Product Data – User’s Guide	Revision :	R.00
Model :	Motorola L70×BT	Page(s) :	5 of 27

TABLE OF CONTENTS

1 GETTING STARTED.....7

1.1 CONNECTING THE BASE..... 7

1.2 INSTALLING AND CHARGING THE HANDSET BATTERY PACK 8

1.3 SETTING THE DISPLAY LANGUAGE 8

1.4 SETTING DATE AND TIME..... 8

2 GETTING TO KNOW YOUR PHONE..... 9

2.1 OVERVIEW OF YOUR HANDSET 9

2.2 HANDSET LCD DISPLAY 11

2.3 OVERVIEW OF THE BASE 12

3 USING THE PHONE..... 12

3.1 INTRODUCING BLUETOOTH..... 12

3.2 BLUETOOTH SETUP 13

3.2.1 SETUP CELLULAR..... 13

3.2.2 REPLACING A PAIRED DEVICE 13

3.2.3 PAIRED DEVICES..... 14

3.3 MAKING A HOME CALL USING YOUR LANDLINE 14

3.4 MAKING A CELLULAR CALL USING YOUR CORDLESS DECT HANDSET 14

3.5 SPEED DIAL CALLING 14

3.6 ANSWERING A HOME CALL..... 14

3.7 ANSWERING A CELLULAR CALL 14

3.8 RECEIVING A CELLULAR CALL WHILE ON A HOME CALL 14

3.9 RECEIVING A HOME CALL WHILE ON A CELLULAR CALL 15

3.10 ENDING A HOME CALL 15

3.11 ENDING A CELLULAR CALL 15

3.12 ADJUSTING VOLUME..... 15

3.13 MUTING A CALL 15

3.14 DIALING FROM THE REDIAL LIST..... 15

3.15 DIALING FROM THE CALLS LIST 15

3.16 ADDING AN ENTRY TO THE PHONEBOOK..... 15

3.17 STORING A PHONEBOOK ENTRY AS A ONE TOUCH NUMBER..... 16

3.18 DIALING FROM THE PHONEBOOK 16

3.19 CALLER ID 16

3.19.1 CALLS LIST..... 16

3.19.2 VIEWING THE CALLS LIST..... 16

3.19.3 SAVING A NUMBER FROM THE CALLS LIST TO THE PHONEBOOK..... 17

3.19.4 DELETING A CALLS LIST ENTRY 17

3.19.5 DELETING THE ENTIRE CALLS LIST 17

3.20 PERSONAL SETTINGS..... 17

3.21 INTERCOM 17

3.21.1 CALLING ANOTHER HANDSET 18

3.21.2 TRANSFERRING AN EXTERNAL HOME CALL TO ANOTHER HANDSET 18

3.21.3 THREE-PARTY CONFERENCE CALL 18

3.22 SETTING THE DIAL MODE 18

3.23 SETTING THE FLASH TIME 18

3.24 SETTING THE AREA CODE..... 18

Doc Title :	Product Data – User’s Guide	Revision :	R.00
Model :	Motorola L70×BT	Page(s) :	6 of 27

3.25 REGISTRATION..... 18

3.26 RESETTING ALL SETTINGS 19

3.27 PAGING/FINDING HANDSET 19

3.28 USING YOUR ANSWERING MACHINE 19

3.28.1 PLAYING MESSAGES 19

3.28.2 TURNING ON OR OFF THE ANSWERING MACHINE 19

3.28.3 SETTING THE ANNOUNCEMENT MODE..... 19

3.28.4 SETTING THE NUMBER OF RINGS 20

3.28.5 ANNOUNCEMENT 20

3.28.5.1 Recording the announcement..... 20

3.28.5.2 Playing the announcement 20

3.28.6 RECORDING A MEMO..... 20

3.28.7 CALL SCREENING ON/OFF..... 20

3.28.8 DELETING ALL OLD MESSAGES 21

3.28.9 REMOTE ACCESS 21

3.28.10 SETTING THE SECURITY CODE..... 21

4 HELP 21

5 GENERAL INFORMATION..... 22

Doc Title :	Product Data – User’s Guide	Revision :	R.00
Model :	Motorola L70×BT	Page(s) :	7 of 27

1 GETTING STARTED

WARNING

Do not place your phone in the bathroom or other humid areas.

Location

When choosing a location for your new phone, here are some important guidelines you should consider:

- Avoid sources of noise and heat, such as motors, fluorescent lighting, microwave ovens, heating appliances and direct sunlight.
- Avoid areas of excessive dust, moisture, and low temperature.
- Avoid other cordless telephones or personal computers.
- Never install telephone wiring during a lightning storm.
- Never install telephone jacks in wet locations unless the jack is specifically designed for wet locations.
- Never touch non-insulated telephone wires or terminals unless the telephone line has been disconnected at the network interface.
- Use caution when installing or modifying telephone lines.

HANDSET RANGE

Optimal range is reached when there are no other electrical appliances working within the range area. Any obstruction between the base and handset will also reduce the range significantly.

SIGNAL STRENGTH

When out of range of the base, the screen shows OUT OF RANGE. If you are on a call, the line will disconnect. Move back within in range of the base. The handset will automatically re-connect to the base.

Setting up


IMPORTANT

The base must be plugged into an electrical outlet at all times. Do not connect the telephone line cord into a power outlet until the handset is fully charged. Only use adapter and telephone line cord supplied with the product.

WHICH POWER ADAPTER

The power adapter with the smaller pin is for the base unit and the power adapter with the larger pin is for the charger unit (only for multi-handset packs).


1.1 Connecting the base

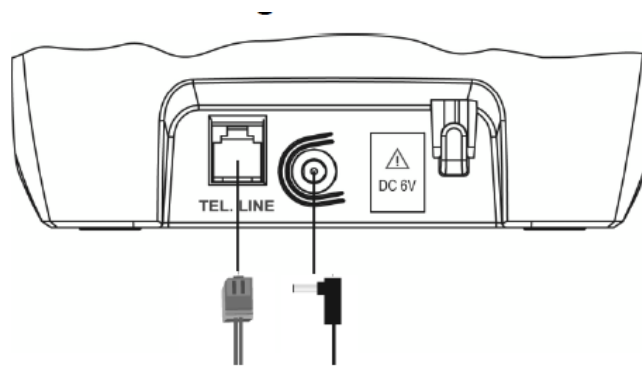

1. Plug the power adapter with smaller round pin plug and the telephone line cord into the base. The power adapter with bigger round pin plug is for the charger (only in multi-handset packs).
2. Plug the other end of the power adapter into a power outlet and the telephone line cord into a telephone wall jack.
3. Use only the provided power adapter.

Doc Title :	Product Data – User’s Guide	Revision :	R.00
Model :	Motorola L70×BT	Page(s) :	8 of 27

1.2 Installing and charging the handset battery pack

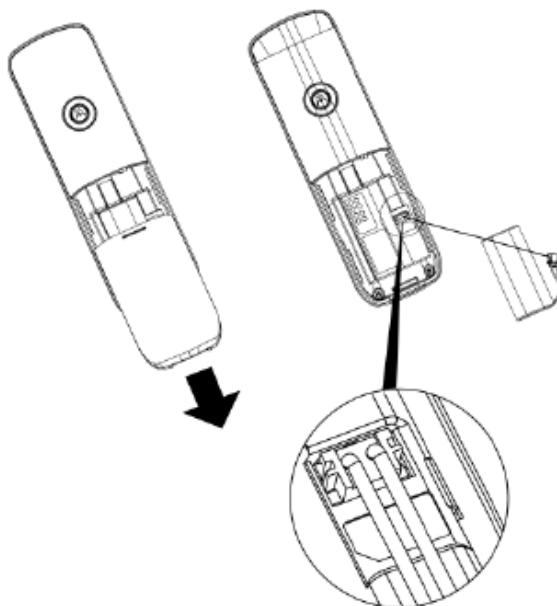

1. Slide off the battery compartment cover to remove it. Place the supplied rechargeable battery pack in the battery compartment, with the battery connector plugged in, as shown.
2. Slide the battery compartment cover back on.
3. Put the handset on the base to charge for at least 24 hours. Once charged, the <Batter full icon> will indicate that the handset is fully charged.

IMPORTANT

Use only the rechargeable battery pack provided with the product.

1.3 Setting the display language

1. Press <MENU> and then <VOL+> or <REDIAL/VOL-> to select SETUP HS.
2. Repeat to select LANGUAGE.
3. Repeat to select the desired language.
4. Press <MENU> to save.


1.4 Setting date and time

1. Press <MENU> to select DATE & TIME. If you're a subscriber to your network's Caller ID service, date and time is automatically set when a call is received.
2. Press <MENU> and then use the keypad to edit the year and the date.
3. Press <VOL+> or <REDIAL/VOL-> or <PHONEBOOK> or <RIGHT/CALLS LIST> to move between the input fields YEAR and DATE.
4. Press <MENU> and then use the keypad to edit the time in 12hr format. Press <VOL+> or <REDIAL/VOL-> to toggle AM/PM settings. And use <PHONEBOOK> or <RIGHT/CALLS LIST> to move the cursor to the target input field.
5. Press <MENU> to save the settings.

Your phone is now ready for use.

2 GETTING TO KNOW YOUR PHONE

2.1 Overview of your handset

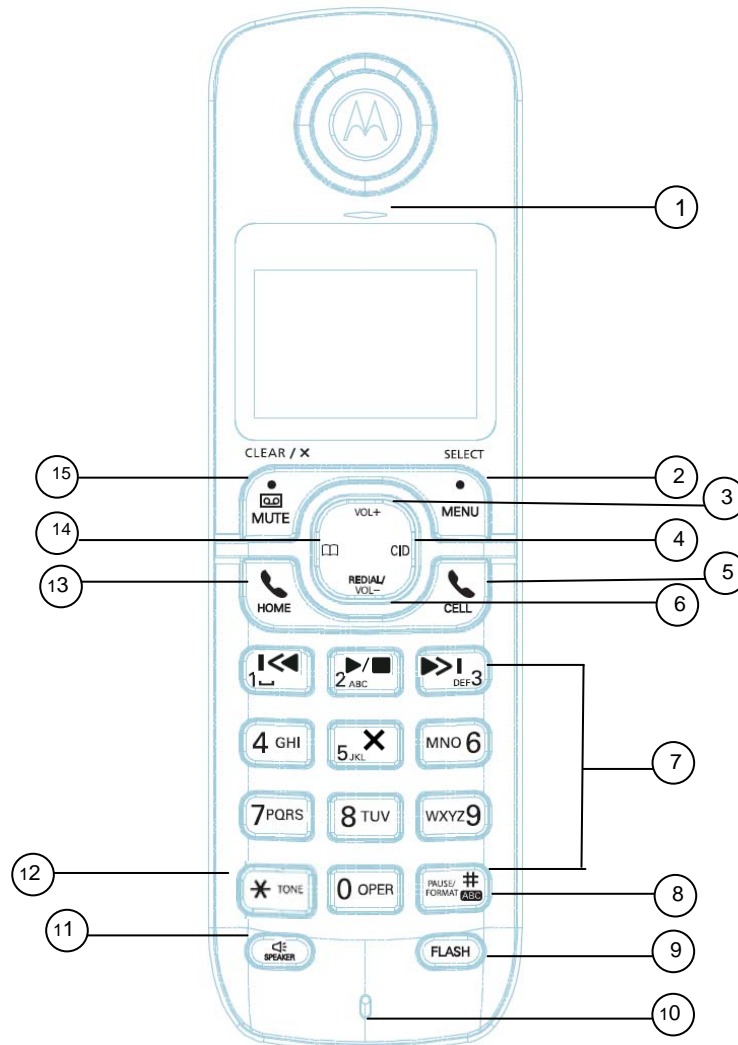

Doc Title :	Product Data – User’s Guide	Revision :	R.00
Model :	Motorola L70×BT	Page(s) :	10 of 27

Get acquainted with the following 15 buttons on your handset and their multi-function tasks.


1	EARPIECE
2	MENU/ SELECT a) In idle mode: press to access menu list. b) In menu/editing mode: press to confirm and save the settings. c) During a home call: press to transfer the call to another handset. d) In Calls List entry: press to save the entry to the phonebook. e) In phonebook entry: press to go to sub-menus of phonebook.
3	SCROLL UP/VOLUME UP a) In menu mode: press to scroll up. b) In editing mode: press to move cursor to the left. c) During a call: press to increase the volume. d) In Calls List/phonebook/Redial List entry: press to scroll up the list. e) In answering machine mode: press to increase the volume.
4	RIGHT/CALLS LIST a) In idle mode/during a call: press to access calls list. b) In editing mode: press to move the cursor to the right.
5	CELLULAR a) In pre-dial mode: press to make a cellular call. b) In Calls List/phonebook/Redial List entry: press to make a cellular call to the selected entry. c) During cellular ringing: press to answer the cellular call. d) During a cellular call: Press to end the cellular call.
6	SCROLL DOWN/VOLUME DOWN/REDIAL LIST a) In idle mode: press to access redial list. b) In menu mode: press to scroll down. c) In editing mode: press to move cursor to the right. d) During a call: press to decrease the volume. e) In Calls List/phonebook/Redial List entry: press to scroll down the list. f) In answering machine mode: press to decrease the volume.
7	ALPHANUMERIC KEYPAD a) In idle/pre-dial/editing mode/during a call: press to enter characters/numbers. Press and hold to activate speed dial.
8	#/ PAUSE/ ABC/ FORMAT a) In idle/pre-dial/number editing mode/during a call: press to insert a "#", press and hold to insert a pause (P). b) In name editing mode: toggle ABC/abc. c) In Calls List entry: press to toggle the Caller ID display format between 7, 8, 10 and 11 digits when returning calls from Caller ID list. d) In phonebook entry: If the number is more than 15 digits, press to view the next page of remaining digits.
9	FLASH a) In pre-dial/number editing mode: Press to insert a flash. b) During a call: Press to switch to another call
10	MICROPHONE
11	SPEAKER a) In idle/pre-dial mode: press to make a home call with speakerphone. b) During a call: press to toggle between the speakerphone and the earpiece. c) In Calls List/Phonebook/Redial List entry: press to make a home call to the selected entry with speakerphone. d) During ringing: press to answer a call with speakerphone. e) In answering machine mode: press to toggle the message playback via earpiece/speakerphone
12	*/ TONE a) In idle/pre-dial/editing mode: press to insert a "*". b) During a call: press to switch from pulse to tone dialing temporarily if pulse mode was selected before. After the call has ended, the dial mode will change back to pulse. c) In phonebook entry: If the number is more than 15 digits, press to view the previous page of remaining digits.
13	HOME a) In idle/pre-dial mode: press to make a home call via earpiece. b) In Calls List/phonebook/Redial List entry: press to make a home call to the selected entry in the list via earpiece. c) During home ringing: Press to answer the home call d) During a home call: Press to end the home call.
14	PHONEBOOK a) In idle mode/during a call: press to access the phonebook. b) In editing mode: press to move the cursor to the left.
15	ANSWERING MACHINE/ MUTE/ CLEAR/ BACK/ X a) In idle mode: press to play the message in answering machine. b) In menu mode/ Calls List/phonebook entry: Press to go back to the previous level. c) In menu/pre-dial mode/Calls List/phonebook entry: Press and hold to go back to idle screen. d) In pre-dial/editing mode: press to delete one character/digit. e) In editing mode: press and hold to delete all characters/digits. f) During a call: press to mute/unmute the call. g) In answering machine mode: press to delete the current message playback.

2.2 Handset LCD display



	On when speakerphone is turned on.
	On when the answering machine is turned on. Flashes when a new message is received.
NEW	On indicates that a new call has been received. Off when all new calls have been reviewed.
	On indicates that the ringer volume is off.
	If a voice mail service is being used, this icon on indicates that there is a new voice mail message not yet listened to. Off when all new voice mails have been reviewed. (For home line only)
MUTE	On when a call is muted.
	Full battery power level.
	2/3 battery power level.
	1/3 battery power level.
	Flashes when low battery level is detected, needs charging.
	Animation in cycle. Battery is charging.
	In idle mode, the current time is displayed. In Caller ID mode, the time of call is displayed.
	On when the Home line is in use. Flashes when the Home line is put on hold. Off when the Home line is idle.
	On when the Cellular line is in use. Flashes when the Cellular line is put on hold. Off when the Cellular line is idle.
	On when a Bluetooth device is connected. Off when Bluetooth feature is disabled.
1 / 2	On when Bluetooth device 1 or 2 is connected with the telephone base. Off when Bluetooth device(s) is (are) disconnected from the telephone base.
	In idle mode the current date is displayed. In Caller ID mode, the date of the call is displayed.

2.3 Overview of the base

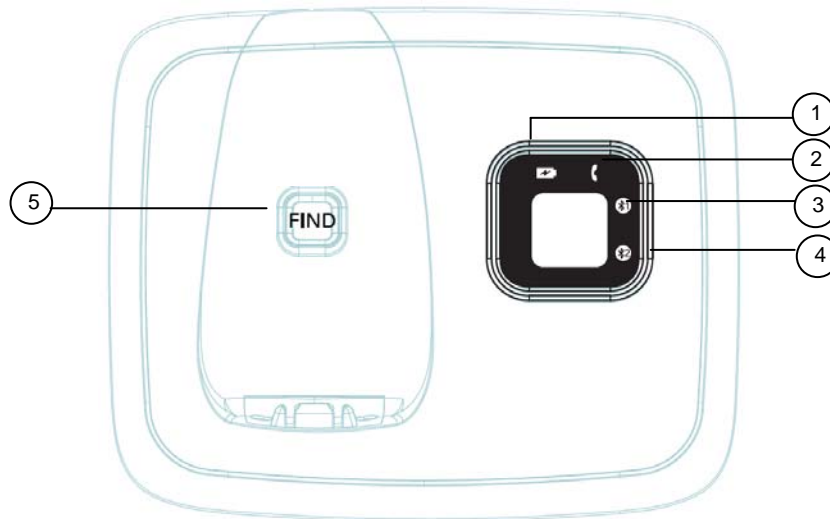

1	CHARGING LED-GREEN a) Steadily on when the handset is put into base cradle for charging.
2	IN USE LED-RED a) Steadily on: During a call or when an extension phone is engaged or the built-in answering machine is off hook. b) Flashing at a rate similar to the incoming ring pattern: During an incoming call. c) Flashing briefly on and off for 2 minutes: During paging or registration.
3	CELL 1 LED-BLUE a) Steadily on when Bluetooth device #1 is paired and connected to the base. b) Flashes when Bluetooth device #1 is in the pairing up process. c) Off when Bluetooth device #1 is disconnected.
4	CELL 2 LED-BLUE a) Steadily on when Bluetooth device #2 is paired and connected to the base. b) Flashes when Bluetooth device #2 is in the pairing up process. c) Off when Bluetooth device #2 is disconnected.
5	FIND a) Press to find/page all registered handsets. Press the button again, or any key on the handset, to turn off page signal. b) Press and hold to enter registration mode.

Base LED indicators

7-SEG LED DISPLAY	
--	Answering machine is OFF.
00	There is no voice message in the answering machine.
09	Flash in idle: Indicates the number of new answering machine messages. (e.g. there are 9 answering machine messages in total, with a capacity for 59.) Steadily On: All the new messages have been listened to and there are 9 answering machine messages in total.
FF	Flashing: The memory of the answering machine is full.
An/09	Flashing: Indicates an incoming call / recording of an incoming call. The number (e.g. 09) indicates the total number of new messages.
LA	Flashing: Indicates the handset or line remote access is in progress.

3 USING THE PHONE

3.1 Introducing Bluetooth

Your new telephone system with Bluetooth wireless technology has the following features:

- Pairing a Bluetooth enabled mobile phone with the telephone base. Two Bluetooth devices can be paired up and connected.
- Connecting a Bluetooth enabled mobile phone to make and receive CELLULAR calls. Two mobile phones can be connected but only one of them can be used at a time.
- Making and receiving calls using your Bluetooth enabled mobile phone plan while benefiting from the ease and comfort of your home telephone system.

Doc Title :	Product Data – User’s Guide	Revision :	R.00
Model :	Motorola L70×BT	Page(s) :	13 of 27

Glossary of terms

Below are some terms used in this User’s Guide to help you become familiar with using your Bluetooth devices and your new telephone system.

Bluetooth mobile phone - Refers to a Bluetooth enabled mobile telephone.

CELLULAR line - The communications service provided through your Bluetooth enabled mobile telephone.

HOME line - Your conventional telephone land line.

Pairing - This refers to the process of two Bluetooth devices registering device information with each other. The telephone base must be paired with a Bluetooth enabled mobile phone before the Bluetooth device can be used.

IMPORTANT INFORMATION

- Refer to your mobile phone user’s guide for more information about its Bluetooth function.
- Make sure that your Bluetooth enabled mobile phone is between one to twelve feet away from the telephone base in order to maintain a clear and consistent connection between your Bluetooth mobile phone, telephone base and cell tower.
- Make sure that your Bluetooth enabled mobile phone has sufficient signal strength. You may need to move the Bluetooth enabled mobile phone and telephone base to a location where the cellular signal may be stronger.
- Charge your Bluetooth mobile phone while it is connected to the telephone base because your mobile phone’s battery will discharge faster while it is connected wirelessly to the telephone base.
- Monitor your mobile phone’s usage because airtime is deducted from your cellular plan for the duration of the CELLULAR calls.

3.2 Bluetooth Setup

3.2.1 Setup Cellular

To pair and connect a Bluetooth enabled mobile phone:

- Place your cell phone near the handset and base unit.
- Press <MENU> and then <VOL+> or <REDIAL/VOL-> to select BLUETOOTH.
- Press <MENU> and then <VOL+> or <REDIAL/VOL-> to select SETUP CELLULAR.
- Press <MENU> and display will show CELLULAR READY?
- Press <MENU> and display will show DISCOVERABLE MODE. The Bluetooth feature will be activated.
- Using your Bluetooth enabled mobile phone, turn on the Bluetooth feature and search for a new device.
- Once your Bluetooth enabled mobile phone has found the **Motorola L701BT / L702BT / L703BT / L704BT / L705BT** telephone, select it.
- Using your Bluetooth enabled mobile phone, enter the PIN code of the telephone (the default PIN code is 0000) to continue the pairing process.
- Pairing will be confirmed when you hear a tone and the Bluetooth icon appears on the handset. The handset displays COMPLETED.

Refer to the user’s manual of your Bluetooth enabled mobile phone to learn how to search for or add new Bluetooth devices.

NOTE

- Paired device(s) will be connected automatically and stored into the Paired Devices list.
- When a device is successfully connected, corresponding device #1 or #2 will be displayed.
- If you would like to pair up another Bluetooth device, please repeat the steps as above.

3.2.2 Replacing a paired device

If you have already paired up two Bluetooth devices, you will need to replace one of them if you would like to pair up another device. Follow the below steps to replace and pair up a new device.

- Press <MENU> and then <VOL+> or <REDIAL/VOL-> to select BLUETOOTH.
- Press <MENU> and then <VOL+> or <REDIAL/VOL-> to select SETUP CELLULAR.
- Display will show the two cellular names of the paired devices.
- Press <VOL+> or <REDIAL/VOL-> to select the cellular device you would like to replace.

Doc Title :	Product Data – User’s Guide	Revision :	R.00
Model :	Motorola L70×BT	Page(s) :	14 of 27

- Press <MENU> to confirm. Display will show REPLACE THE CELLULAR?
- Press <MENU> to confirm. Display will show CELLULAR READY.
- Refer to section 3.2.1 to proceed with the next steps.

NOTE

When pairing a new cellular, the connected cellular will be disabled temporarily.

3.2.3 Paired devices

The cellular(s) paired up will be displayed in the paired devices list, no matter it(they) is(are) connected or not. You can choose to connect, or remove the cellular from this menu.

1. Press <MENU> and then <VOL+> or <REDIAL/VOL-> to select BLUETOOTH.
2. Press <MENU> and then <VOL+> or <REDIAL/VOL-> to select PAIRED DEVICES.
3. Display will show the cellular name(s) of paired device(s).

NOTE

Display will show NO PAIRED DEVICE if there is no device paired up.

4. Press <MENU> and then <VOL+> or <REDIAL/VOL-> to select the desired cellular device.

For connected cellular device:

5. Press <MENU> to remove the cellular device.
6. Press <MENU> to confirm.

For the cellular phone that is not connected:

5. Press <MENU> and then <VOL+> or <REDIAL/VOL-> to select CONNECT or REMOVE CELLULAR.
6. Press <MENU> to confirm. If you select REMOVE CELLULAR, press <MENU> again to confirm.

NOTE

- When the connected cellular is removed, corresponding device 1 or 2 will be off.
- When the disconnected cellular is connected, corresponding device 1 or 2 will be on.
- When the cellular is removed, the device name will be removed and EMPTY will be displayed instead in the paired device list.

3.3 Making a home call using your landline

1. Enter the phone number and press <HOME> or <SPEAKER> to dial the phone number.

3.4 Making a cellular call using your cordless DECT handset

If there is only one Bluetooth enabled mobile phones paired up and connected,

1. Enter the phone number, and then press <CELLULAR> to dial out.

If there are two Bluetooth enabled mobile phones paired up and connected,

1. Enter the phone number, press <CELLULAR> and then <VOL+> or <REDIAL/VOL-> to select the desired cellular device.
2. Press <CELLULAR> to dial out.

NOTE

If the cellular device is paired up but not connected, you should connect the cellular device before making an external Bluetooth call.

3.5 Speed dial calling

1. Press and hold a key from <1> to <9> until the number is displayed and dialed.

3.6 Answering a home call

1. Press <HOME> or <SPEAKER> to answer the incoming home call.

3.7 Answering a cellular call

1. Press <CELLULAR> or <SPEAKER> to answer the incoming cellular call.

3.8 Receiving a cellular call while on a home call

A short beep during a HOME call indicates that there is an incoming CELLULAR call and the screen will display the

Doc Title :	Product Data – User’s Guide	Revision :	R.00
Model :	Motorola L70×BT	Page(s) :	15 of 27

caller ID.

To answer the incoming cellular call:

- Press <CELLULAR> on the handset. The home call will automatically be placed on hold and <HOME LINE ICON> will start flashing.

To swap the line to a home call:

- While talking on a cellular call, press<HOME> on the handset to swap to the home call. The cellular call will automatically be placed on hold and <CELLULAR LINE ICON> will start flashing.

To end the cellular call:

- Press <CELLULAR> on the handset. The home call will be resumed automatically.

3.9 Receiving a home call while on a cellular call

A short beep during a CELLULAR call indicates that there is an incoming HOME call and the screen will display the caller ID.

To answer the incoming home call:

- Press <HOME> on the handset. The cellular line call will automatically be placed on hold and <CELLULAR LINE ICON> will start flashing.

To swap the line to a cellular call:

- While talking on a home call, press <CELLULAR> on the handset to swap to the cellular call. The home call will automatically be placed on hold and <HOME LINE ICON> will start flashing.

To end the home call:

- Press<HOME> on the handset. The cellular call will be resumed automatically.

3.10 Ending a home call

1. During a call connection, press <HOME> or put the handset on the base.

3.11 Ending a cellular call

1. During a call connection, press <CELLULAR> or put the handset on the base.

3.12 Adjusting volume

1. During a call, press <VOL+> or <REDIAL/VOL-> to adjust the volume.

3.13 Muting a call

1. During a call, press <MUTE> to mute the microphone and “**MUTED**” will be displayed on the LCD. You can talk to someone else in the room without your caller hearing you.
2. Press <MUTE> again to unmute the microphone.

3.14 Dialing from the redial list

1. Press <REDIAL/VOL-> and then scroll <VOL+> or <REDIAL/VOL-> to the entry you want to redial.
 2. Press <HOME> or <SPEAKER> to dial the selected redial entry from the home line.
- OR
3. Press <CELLULAR> to dial the selected redial entry from the cellular line.

3.15 Dialing from the calls list

1. Press <RIGHT/CALLS LIST> and then scroll <VOL+> or <REDIAL/VOL-> to the entry you want to dial.
 2. Toggle the <#/ABC/PAUSE/FORMAT> key to format the dialing number.
 3. Press <HOME> or <SPEAKER> to dial the selected call log entry from the home line.
- OR
4. Press <CELLULAR> to dial the selected call log entry from the cellular line.

3.16 Adding an entry to the phonebook

1. Press <PHONEBOOK>.

OR

Press <MENU> and then <VOL+> or <REDIAL/VOL-> to access the phonebook entry.

2. Press <MENU> and then <VOL+> or <REDIAL/VOL-> to select ADD.
3. Press <MENU> and then enter the name.
4. Press <MENU> and then enter the number.
5. Press <MENU> to save.

Doc Title :	Product Data – User’s Guide	Revision :	R.00
Model :	Motorola L70×BT	Page(s) :	16 of 27

NOTE

Numbers can be up to 24 digits long and names up to 16 characters long. Entries are stored in alphabetical order.

3.17 Storing a phonebook entry as a one touch number

1. Press <PHONEBOOK>.

OR

Press <MENU> and then <VOL+> or <REDIAL/VOL-> to access the phonebook entry.

2. Press <MENU> and then <VOL+> or <REDIAL/VOL-> to select SPEED DIAL.
3. Press <MENU> and then <VOL+> or <REDIAL/VOL-> to select the speed dial key from <KEY 1> to <KEY 9>.
4. Press <MENU> and then <VOL+> or <REDIAL/VOL-> to scroll to the entry you want.
5. Press <MENU> to save.

3.18 Dialing from the phonebook

1. Press <PHONEBOOK>

OR

2. Press <MENU> and then <VOL+> or <REDIAL/VOL-> to access the phonebook entry.
3. Press <MENU> and then <VOL+> or <REDIAL/VOL-> to select the entry you want to dial.
4. Press <HOME> or <SPEAKER> to dial the selected phonebook entry from the home line.

OR

5. Press <CELLULAR> to dial the selected phonebook entry from the cellular line.

TIPS

Instead of scrolling to browse the phonebook entries, press the numeric key corresponding to the first letter of the entry you wish to locate. For example, pressing <KEY 2> will show the entries starting with A. Pressing <KEY 2> again will show the entries starting with B, etc.

3.19 Caller ID

If you have subscribed to Caller ID, and provided the identity of the caller is not withheld, the number of the caller will be displayed together with the date and time of the call (if provided by the network).

NOTE

- If the telephone number is not available for incoming calls, the handset will display UNAVAILABLE.
- If the incoming call is from a withheld telephone number, the handset will display PRIVATE.
- Information about incoming calls will vary by country and network operator. Some operators may charge a subscription for their Caller ID service.

3.19.1 Calls List

The calls list contains details of missed and received calls. Details include the date and time of the call. Entries are displayed in chronological order with the most recent call at the top of the list.

NOTE

- When the calls list is full, a new call replaces the oldest one in the list.
- The received and missed calls log holds details of up to 30 calls.
- If you receive more than one call from the same number, only the most recent call is kept in the calls list. When you have missed calls (incoming calls that you haven’t answered) the <NEW icon> will be displayed in the display on all handsets registered to the base. If one handset is used to view the calls log, the icon on the other handsets remains on (For multi-pack use only).

3.19.2 Viewing the calls list

1. Press <RIGHT/CALLS LIST> to enter the calls list.
2. Scroll <VOL+> or <REDIAL/VOL-> to browse the calls list.

NOTE

- When reviewing an entry from the calls list, press <#/ ABC/PAUSE/FORMAT> repeatedly to display the number in a different format.

For example, if a caller number is displayed as 888-331-3383, the various formats will be:

331-3383
1-331-3383
888-331-3383
1-888-331-3383

User can choose the desired number format for local and long distance numbers before dialing or saving it into the phonebook.

- The <NEW icon> is removed once the new call has been viewed.

3.19.3 Saving a number from the calls list to the phonebook

1. Press <RIGHT/CALLS LIST> to enter the calls list.
2. Press <VOL+> or <REDIAL/VOL-> to select the entry you want.
3. Press <MENU> to select SAVE TO PB.
4. Press <MENU> and then enter the name.
5. Press <MENU> and then edit the number.
6. Press <MENU> to save.

3.19.4 Deleting a calls list entry

1. Press <RIGHT/CALLS LIST> to enter the calls list.
2. Press <VOL+> or <REDIAL/VOL-> to scroll to the entry you want.
3. Press <MENU> and then <VOL+> or <REDIAL/VOL-> to select DELETE.
4. Press <MENU> to confirm and the entry is deleted.

3.19.5 Deleting the entire calls list

1. Press <RIGHT/CALLS LIST> to enter the calls list.
2. Press <MENU> and then <VOL+> or <REDIAL/VOL-> to select DELETE ALL.
3. Press <MENU> and DELETE ALL CALL LOG ENTRIES? is displayed.
4. Press <MENU> to confirm. All entries will be deleted.

NOTE

You need to review the particular call before you delete the record from the calls list.

3.20 Personal Settings

Menu Map

MAIN MENU	DATE & TIME	PHONEBOOK	INTERCOM	SETUP HS	SETUP BS	BLUETOOTH	ANSWER MACHINE	RESET SETTINGS
SUB MENU	YEAR DATE TIME	VIEW ADD EDIT DELETE DELETE ALL PB CAPACITY SPEED DIAL		RINGER TONE RINGER VOLUME KEY TONE LOW BATT TONE OUT RANGE TONE HANDSET NAME LANGUAGE LCD CONTRAST REGISTRATION	DIAL MODE FLASH TIME AREA CODE	SETUP CELLULAR PAIRED LIST	ANSWERER ON (if answering machine is off) Or ANSWERER OFF (if answering machine is on) ANSWERER MODE RINGS TO ANSWER ANNOUNCEMENT RECORD MEMO CALL SCREENING DEL ALL OLD MSG REMOTE ACCESS SECURITY CODE	CLR VOICE MAIL ALL SETTINGS

1. Press <MENU>.
 2. Press <VOL+> or <REDIAL/VOL-> to scroll through the menu.
 3. Press <MENU> to open a sub-menu or validate an option.
- Press <MUTE/CLEAR / BACK/ X > to go back to previous menu level or cancel an action.

If you do not press any button on the handset for 30 seconds, the display will automatically return to standby. It will also return to standby when the handset is placed on the base or charger.

3.21 Intercom

This feature is only available when there are at least two registered handsets. It allows you to make internal calls, transfer external home calls from one handset to another and use the conference option.

NOTE

Cellular call cannot be transferred.

Doc Title :	Product Data – User’s Guide	Revision :	R.00
Model :	Motorola L70×BT	Page(s) :	18 of 27

3.21.1 Calling another handset

1. Press <MENU> and then <VOL+> or <REDIAL/VOL-> to select INTERCOM.
2. Press <MENU> and then <VOL+> or <REDIAL/VOL-> to select the handset you want to call.
3. Press <MENU> to call the handset.
4. Press <HOME> to hang up.

NOTE

If the handset is not within the valid operation range, this function may not be available.

During intercom call, you will hear an alert tone if there is an incoming external call. You need to press <HOME> to hang up the intercom call before answering the incoming external call.

3.21.2 Transferring an external home call to another handset

1. During an external home call, press <MENU>. Your caller is put on hold.
2. Press <VOL+> or <REDIAL/VOL-> to select the handset you want to call.
3. Press <MENU> to call the handset.
4. When the other handset answers by pressing <HOME> or <SPEAKER>, press <HOME> on the calling handset to transfer the call. If the other handset does not answer, press <MUTE/ CLEAR / BACK/ X > to talk to your caller again.

3.21.3 Three-party conference call

1. During an external home call, press <MENU>. Your caller is put on hold.
2. Press <VOL+> or <REDIAL/VOL-> to select the handset you want to call.
3. Press <MENU> to call the handset.
4. When the other handset answers the intercom call, press <MENU> on the calling handset to set up the conference call.
5. Press <HOME> on any handset to hang up three-party conference and leave the other handset in external line with the caller.

3.22 Setting the dial mode

The default dialing mode is suitable for your country and network operator. It is unlikely that you should need to change this setting unless advised to do so.

1. Press <MENU> and then <VOL+> or <REDIAL/VOL-> to select SETUP BS.
2. Press <MENU> to select DIAL MODE.
3. Press <MENU> and <VOL+> or <REDIAL/VOL-> to select TONE or PULSE.
4. Press <MENU> to save.

NOTE

If pulse mode is selected, press <*/TONE> to switch from pulse to tone dialing temporarily when dialing out. After the call is ended, the dial mode will change back to pulse.

3.23 Setting the Flash Time

The default flash time is 600MS. It is unlikely that you should need to change this setting unless advised to do so.

1. Press <MENU> and then <VOL+> or <REDIAL/VOL-> to select SETUP BS.
2. Press <MENU> and then <VOL+> or <REDIAL/VOL-> to select FLASH TIME.
3. Press <MENU> and then <VOL+> or <REDIAL/VOL-> to the flash time you want. (8 options are available: 90, 100, 110, 250, 300, 400, 600 and 700MS)
4. Press <MENU> to save.

3.24 Setting the Area Code

1. Press <MENU> and then <VOL+> or <REDIAL/VOL-> to select SETUP BS.
2. Press <MENU> and then <VOL+> or <REDIAL/VOL-> to select AREA CODE.
3. Press <MENU> and enter the area code.
4. Press <MENU> to save.

3.25 Registration

Up to 5 handsets can be registered to one base. The original handset is pre-registered to use. Additional handsets must be registered to the base before you can use them.

To register an additional handset,

1. Press <MENU> and then <VOL+> or <REDIAL/VOL-> to select SETUP HS.
2. Press <MENU> and then <VOL+> or <REDIAL/VOL-> to select REGISTRATION.
3. Press <MENU> and then <VOL+> or <REDIAL/VOL-> to select YES or NO.
4. Select YES and press <MENU> to enter the registration procedure as below:
 - 1) Press and hold <FIND> for 4 seconds on base. And then release once IN USE LED is flashing.
 - 2) Place the unregistered handset on the base or charger.
 - 3) A confirmation tone is generated if registration is successful. Handset X is displayed where X denotes the number of handsets and the phone goes back to idle.

To register an originally unregistered handset, follow steps 1 through 3 above.

3.26 Resetting all settings

1. Press <MENU> and then <VOL+> or <REDIAL/VOL-> to select RESET SETTINGS.
2. Press <MENU> and then <VOL+> or <REDIAL/VOL-> to select ALL SETTINGS.
3. Press <MENU> to select YES. Then all the personalized settings will be reset to default.

NOTE

All of your phonebook entries, calls list and redial list will remain unchanged.

3.27 Paging/Finding handset

Press <FIND> on the base. All handsets registered to the base will ring.

To stop the paging, press <FIND> again, or press any key on the handset, or place the handset on the base.





3.28 Using your answering machine

The answering machine records unanswered calls when it is activated.

3.28.1 Playing messages

Through the handset:

1. Press <ANSWERING MACHINE> from idle mode. New messages will be played followed by any older messages.
2. During message playback, press the keys below to perform the following functions:

	Repeats the current message. Press twice to playback the previous message.
	Stop message playback.
	Skip to play the next message.
<KEY 5> or <MUTE/ CLEAR / BACK/ X >	Delete the current message and the next message will be played.
VOL+	Increase the volume.
REDIAL/VOL-	Decrease the volume.
	Toggle the message playback via earpiece/speakerphone.

NOTE

For multiple handset models when you are on either a cellular call or a home call, the answering system will not answer the second incoming call.

3.28.2 Turning on or off the answering machine

1. Press <MENU> and then <VOL+> or <REDIAL/VOL-> to select ANSWER MACHINE.
2. Press <MENU> and <VOL+> or <REDIAL/VOL-> to select ANSWERER ON or ANSWERER OFF. If the answering machine is turned on originally, ANSWERER OFF will be displayed. If the answering machine is turned off originally, ANSWERER ON will be displayed.
3. Press <MENU> to confirm.

3.28.3 Setting the announcement mode

1. Press <MENU> and then <VOL+> or <REDIAL/VOL-> to select ANSWER MACHINE.
2. Press <MENU> and then <VOL+> or <REDIAL/VOL-> to select ANSWERER MODE.
3. Press <MENU> and then <VOL+> or <REDIAL/VOL-> to select the announcement modes:
 - ANNC & RECORD invites your callers to leave a message.
 - ANNOUNCE ONLY lets callers hear your announcement but they cannot leave a message.

Doc Title :	Product Data – User’s Guide	Revision :	R.00
Model :	Motorola L70×BT	Page(s) :	20 of 27

4. Press <MENU> to save.

3.28.4 Setting the number of rings

1. Press <MENU> and then <VOL+> or <REDIAL/VOL-> to select ANSWER MACHINE.
2. Press <MENU> and then <VOL+> or <REDIAL/VOL-> to select RINGS TO ANSWER.
3. Press <MENU> and then <VOL+> or <REDIAL/VOL-> to select the rings to answer. (4 options are available: TOLL SAVER, 3, 4, or 5 RINGS).

NOTE

If Toll Saver setting is selected, the answering machine will pick up after two rings if there are new messages, and after four rings if there are no messages.

4. Press <MENU> to save.

3.28.5 Announcement

This is the message your callers hear on the answering machine. There are two pre-recorded outgoing messages, or you can record your own.

3.28.5.1 Recording the announcement

1. Press <MENU> and then <VOL+> or <REDIAL/VOL-> to select ANSWER MACHINE.
2. Press <MENU> and then <VOL+> or <REDIAL/VOL-> to select ANNOUNCEMENT.
3. Press <MENU> to select RECORD.
4. Press <MENU> and then <VOL+> or <REDIAL/VOL-> to select the answer mode ANNC & RECORD or ANNOUNCE ONLY.
5. Press <MENU> to start recording after a "beep" sound is heard.
6. Press <MENU> again to stop recording and save the message. The message just saved is played automatically.

NOTE

When playing the message, pressing <MUTE/ CLEAR / BACK/ X > or <KEY 5> will delete it and the pre-recorded message will be played automatically.

3.28.5.2 Playing the announcement

1. Press <MENU> and then <VOL+> or <REDIAL/VOL-> to select ANSWER MACHINE.
2. Press <MENU> and then <VOL+> or <REDIAL/VOL-> to select ANNOUNCEMENT.
3. Press <MENU> and then <VOL+> or <REDIAL/VOL-> to select PLAY.
4. Press <MENU> and then <VOL+> or <REDIAL/VOL-> to select the answer mode ANNC & RECORD or ANNOUNCE ONLY.
5. Press <MENU> and the message is played.

3.28.6 Recording a memo

You can record a memo which is stored on your answering machine and played back like a normal message.

1. Press <MENU> and then <VOL+> or <REDIAL/VOL-> to select ANSWER MACHINE.
2. Press <MENU> and then <VOL+> or <REDIAL/VOL-> to select RECORD MEMO.
3. Press <MENU> to start recording.
4. Press <MENU> again to stop recording and save the message. The message just saved is played automatically.

NOTE

When playing the message, pressing <MUTE/ CLEAR / BACK/ X > or <KEY 5> will delete it permanently.

3.28.7 Call screening on/off

You are able to hear a caller leaving a message. You can then choose to ignore the caller or pick up the call.

1. When the answering machine is recording, the handset displays SCREENING?.
2. Press <MENU> to listen to the caller through the handset earpiece, the handset displays CALL SCREENING.
3. Press <SPEAKER> to listen via the handset loudspeaker.
4. Press <MUTE/ CLEAR / BACK/ X > to stop screening and leave the answering machine to record the message.
5. Press <HOME> or <CELLULAR> to talk to the caller and stop recording.

3.28.8 Deleting all old messages

1. Press <MENU> and then <VOL+> or <REDIAL/VOL-> to select ANSWER MACHINE.
2. Press <MENU> and then <VOL+> or <REDIAL/VOL-> to select DEL ALL OLD MSG.
3. Press <MENU> and the handset displays DELETE ALL OLD MESSAGES?
4. Press <MENU> to confirm.

NOTE

When the answering machine is full, <TAM Icon> will flash if there are new messages. ERASE SOME ANSWERER MSG will toggle within 2 seconds with MEMORY FULL in idle to alert user to delete some answering machine messages to free up the memory.

3.28.9 Remote access

Remote access allows you to operate your answering machine and listen to your messages by calling your phone from another phone.

Turn the remote access on/off

1. Press <MENU> and then <VOL+> or <REDIAL/VOL-> to select ANSWER MACHINE.
2. Press <MENU> and then <VOL+> or <REDIAL/VOL-> to select REMOTE ACCESS.
3. Press <MENU> and then <VOL+> or <REDIAL/VOL-> to select ON or OFF.
4. Press <MENU> to confirm.

To enter the remote access mode, dial your phone number from another phone, when you hear the announcement, press <*/TONE> and then enter the 4-digit remote security code (default code is 0000).

The correct sequence of the 4 security PIN digits needs to be detected before entering remote access mode. Random digits detected prior to the correct 4 digits sequence are ignored, and answering machine recording continues until the complete PIN is detected. There is no system prompt to enter the remote access code. Press the following keys on your handset to perform the following functions after entering remote access mode.

Press...	To...
1	Repeat message
2	Play/Stop message
3	Skip forward to the next message
4	Toggle Answer Off/Announce Only/Announce and Record modes
5	Delete message
7	Listen to the Main Menu (for Full Voice prompts only)

3.28.10 Setting the security code

This is used to change the remote access PIN if necessary.

1. Press <MENU> and then <VOL+> or <REDIAL/VOL-> to select ANSWER MACHINE.
2. Press <MENU> and then <VOL+> or <REDIAL/VOL-> to select SECURITY CODE.
3. Press <MENU> and then enter the 4-digit security code.
4. Press <MENU> to save.

4 HELP

I cannot pair my mobile phone to the telephone base

- Make sure the Bluetooth function of your Bluetooth wireless technology enabled mobile phone is turned on. See your mobile phone User’s Guide for more information.
- Make sure the handset, base unit and mobile phone are located near each other.
- Remove the **Motorola L701BT / L702BT / L703BT / L704BT / L705BT** from your mobile phone’s Bluetooth device history list (see your mobile phone User’s Guide for more information).
- Carefully follow the pairing instructions in the User’s Guide, making sure that your mobile phone is not connected to any other Bluetooth device(s).
- Turn off your mobile phone, and then turn it on again.
- Reset the telephone base. Unplug the unit’s electrical power. Wait for approximately 15 seconds, and then plug it back in. Repeat the above suggestions.

The <Battery> icon is not scrolling when the handset is placed on the base

Doc Title :	Product Data – User’s Guide	Revision :	R.00
Model :	Motorola L70×BT	Page(s) :	22 of 27

- Incomplete battery contact – adjust the handset on the base unit.
- Dirty contact – clean the battery contact by wiping with an alcohol moistened cloth.
- Battery is full –charging is not necessary at this time.

No dial tone

- If there is no base power, check the connections. Reset the phone by unplugging then plugging it back into an electrical outlet.
- If the handset batteries are empty, recharge the battery pack for at least 24 hours.
- Move the handset closer to the base if it is too far away.
- Be sure to use the telephone line cord provided.

Poor audio quality

• The base is too close to electrical appliances, reinforced concrete walls or metal doorframes, move the base away from these areas.

No ring tone

- The ring tone may be deactivated.
- The volume may need to be increased.

Caller ID does not work

- Check your subscription with your network operator.
- If you subscribe to high-speed internet service (Digital Subscriber Line – DSL) through your telephone lines, you must install a DSL filter between the telephone base and the telephone wall jack. The filter will prevent noise and caller ID problems caused by DSL interference. Please contact your DSL service provider for more information about DSL filters.

A phonebook entry cannot be stored

- The phonebook is full. Delete an entry to free memory.

No display

- Try recharging or replacing the rechargeable battery pack.
- Reset the base. Unplug the unit’s electrical, then plug it back in.
- If the LED is not lit up, then try to unplug the unit’s electrical power, and then plug it back in.

If the handset disconnects from the base during a phone call

- Check that the power cord is connected properly into the base.
- Check that the power adapter is connected properly into the electrical outlet.
- Move the handset closer to the base. It may be out of range.
- Reset the base by unplugging the unit’s electrical power. Wait for around 15 seconds and re-plug the power again. Allow up to one minute for the handset to synchronize with the registered base again.

Noise interference on your radio or television

- Your base or charger may be too close. Move it as far away as possible.

5 GENERAL INFORMATION

If your product is not working properly...

1. Read this User’s Guide.
2. Visit our website: www.motorola.com
3. Contact Customer Service in the US and Canada at 1-888-331-3383.

To order a replacement battery pack, contact customer service or visit our website.

Important safety instructions

Doc Title :	Product Data – User’s Guide	Revision :	R.00
Model :	Motorola L70×BT	Page(s) :	23 of 27

Follow these safety precautions when using your phone to reduce the risk of fire, electric shock, and injury to persons or property:

1. Keep all vents and openings of the phone unblocked. Do not set the phone on a heating register or over a radiator. Ensure that proper ventilation is provided at the installation site.
2. Do not use while wet or while standing in water.
3. Do not use this product near water (for example, near a bath tub, kitchen sink, or swimming pool).
4. Do not allow anything to rest on the power cord. Place the power cord so that it will not be walked on.
5. Never insert objects of any kind into the product vents as that may result in fire or electric shock.
6. Unplug this product from the electrical outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
7. Do not disassemble this product. If service or repair work is required, contact the customer service helpline found in this User’s Guide.
8. Do not overload wall outlets and extension cords.
9. Avoid using during an electrical storm. Use a surge protector to protect the equipment.
10. Do not use this phone to report a gas leak, especially if you are in the vicinity of the gas line.

CAUTION

To reduce the risk of fire, use only No. 26 AWG or larger UL Listed or CSA Certified Telecommunication Line Cord.

Unplug this cordless phone immediately from an outlet if:

- The power cord or plug is damaged or frayed.
- Liquid has been spilled on the product.
- The product has been exposed to rain or water. Do not retrieve the handset or base until after you have unplugged the power and phone from the wall. Then retrieve the unit by the unplugged cords.
- The product has been dropped or the cabinet has been damaged.
- The product exhibits a distinct change in performance.

Installation Guidelines

1. Read all instructions and save them for future reference.
2. Follow all warnings and instructions marked on the product.
3. Do not install this product near a bath tub, sink, or shower.
4. Operate this phone using only the power source that is indicated on the marking label. If you are unsure of the power supply to your home, consult with your dealer or local power company.
5. Do not place this product on an unstable cart, stand, or table. This product may fall, causing serious damage to the product.
6. Adjust only those controls that are covered by the operating instructions. Improper adjustment of other controls may result in damage and will often require extensive work to restore the product to normal operation.
7. Clean this product with a soft, damp cloth. Do not use chemicals or cleaning agents to clean this phone.
8. Use only the power supply that came with this unit. Using other power supplies may damage the unit.
9. Because this phone operates on electricity, you should have at least one phone in your home that operates without electricity in case of a power outage.
10. To avoid interference to nearby appliances, do not place the base of the phone on or near a TV, microwave oven, or VCR.

CAUTION

To maintain compliance with the FCC’s RF exposure guidelines, place the base unit at least 20 cm from nearby persons.

Battery Safety Instructions

- Do not burn, disassemble, mutilate, or puncture the battery. The battery contains toxic materials that could be released, resulting in injury.

CAUTION

There is a risk of explosion if you replace the battery with an incorrect battery type. Use only the battery pack that came with your phone or an authorized replacement recommended by the manufacturer.

- Keep battery packs out of the reach of children.
- Remove battery packs if storing over 30 days.
- Do not dispose of battery packs in fire, which could result in explosion.

Doc Title :	Product Data – User’s Guide	Revision :	R.00
Model :	Motorola L70×BT	Page(s) :	24 of 27

- The rechargeable battery packs that power this product must be disposed of properly and may need to be recycled. Refer to your battery label for battery type. Contact your local recycling center for proper disposal methods.

SAVE THESE INSTRUCTIONS

Consumer Products and Accessories purchased in the United States or Canada

What Does this Warranty Cover?

Subject to the exclusions and limitations contained below, Binatone Electronics International LTD. warrants the Motorola branded consumer products that it manufactures (“Products”) and the Motorola branded or certified accessories sold for use with these Products that it manufactures (“Accessories”) to be free from defects in materials and workmanship under normal consumer usage for the period(s) outlined below. This limited warranty is a consumer’s exclusive remedy, and only applies as follows to new Motorola branded Products and Accessories manufactured by Binatone Electronics International LTD., and purchased by consumers in the United States or Canada, which are accompanied by this written warranty:

Who is covered?

This warranty covers only the first consumer purchaser, and is not transferable.

What will BINATONE ELECTRONICS INTERNATIONAL LTD. do?

BINATONE ELECTRONICS INTERNATIONAL LTD., at its sole option, will at no charge repair, replace or refund the purchase price of any Products or Accessories that does not conform to this warranty. Binatone Electronics International LTD. may use functionally equivalent reconditioned/ refurbished/ pre-owned or new Products, Accessories or parts in such repair or replacement and any Products, Accessories or parts removed or being replaced under this warranty become the property of Binatone Electronics International LTD.

What Other Limitations Are There?

ANY IMPLIED WARRANTIES OR CONDITIONS IRRESPECTIVE OF WHETHER THEY ARE IMPOSED BY LAW OR OTHERWISE, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY, OTHERWISE THE REPAIR, REPLACEMENT, OR REFUND AS PROVIDED UNDER THIS EXPRESS LIMITED WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER, AND IS PROVIDED IN LIEU OF ALL WARRANTIES AND MOTOROLA AND BINATONE ELECTRONICS INTERNATIONAL LTD. MAKES NO OTHER WARRANTIES OR CONDITIONS, EXPRESS OR IMPLIED. IN NO EVENT SHALL MOTOROLA OR BINATONE ELECTRONICS INTERNATIONAL LTD. BE LIABLE, WHETHER UNDER THIS LIMITED WARRANTY OR IN CONTRACT OR TORT (INCLUDING NEGLIGENCE OR STRICT PRODUCT LIABILITY) OR OTHERWISE FOR DAMAGES OR CLAIMS IN EXCESS OF THE PURCHASE PRICE OF THE PRODUCT OR ACCESSORY, OR FOR ANY INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES OF ANY KIND, OR LOSS OF REVENUE, SAVINGS OR PROFITS, LOSS OF BUSINESS, LOSS OF PROGRAMS DATA INFORMATION (WHETHER CONFIDENTIAL PROPRIETARY OR PERSONAL IN NATURE OR OTHERWISE) OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE ABILITY OR INABILITY TO USE THE PRODUCTS OR ACCESSORIES AND BINATONE ELECTRONICS INTERNATIONAL LTD. SHALL UNDER NO CIRCUMSTANCES BE LIABLE FOR ANY CLAIMS OR DEMANDS MADE BY ANY THIRD PARTY OR MADE BY YOU ON BEHALF OF ANY THIRD PARTY TO THE FULL EXTENT THESE DAMAGES OR CLAIMS MAY BE DISCLAIMED BY LAW.

Some states, countries or jurisdictions do not allow the limitation or exclusion of incidental or consequential damages, or limitation on the length of an implied warranty, so the above limitations or exclusions may not apply to you in such states, countries or jurisdictions. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state or from one country/jurisdiction to another.

Doc Title :	Product Data – User’s Guide	Revision :	R.00
Model :	Motorola L70×BT	Page(s) :	25 of 27

Products or Accessories Covered	Length of Coverage
Consumer Products	One (1) year from the date of purchase by the first consumer purchaser of the product.
Consumer Accessories	Ninety (90) days from the date of purchase by the first consumer purchaser of the accessory.
Consumer Products and Accessories that are Repaired or Replaced	The balance of the original warranty or for ninety (90) days from the date returned to the consumer, whichever is longer.

Exclusions

Normal Wear and Tear. Periodic maintenance, repair and replacement of parts due to normal wear and tear are excluded from coverage.

Batteries. Only batteries whose fully charged capacity falls below 80% of their rated capacity and batteries that leak are covered by this limited warranty. Battery life and the changes in battery capacity with time or use are excluded from this warranty.

Abuse & Misuse. Defects or damage that result from: (a) improper or unreasonable use, operation, storage, misuse or abuse, accident or neglect or other external cause, such as physical damage (cracks, scratches, etc.) to the surface of the product resulting from misuse; (b) your failure to follow or operation outside the usage parameters stated in the user instructions that came with the Products or Accessories; (c) contact with liquid, water, rain, extreme humidity or heavy perspiration, sand, dirt or the like, extreme heat, or food; (d) use of the Products or Accessories for commercial purposes or subjecting the Product or Accessory to abnormal usage or conditions; or (e) other acts or omissions which are not the fault or neglect of Motorola or Binatone Electronics International LTD., are excluded from coverage.

Use of Non-Motorola branded Products and Accessories. Defects or damage that result from the use of Non-Motorola branded or certified Products or Accessories or other peripheral equipment are excluded from coverage.

Unauthorized Service or Modification. Defects or damages resulting from service, testing, adjustment, installation, maintenance, alteration, or modification in any way by someone other than Motorola, Binatone Electronics International LTD. or its authorized service centers, are excluded from coverage.

Altered Products. Products or Accessories with (a) serial numbers or date tags that have been removed, altered or obliterated; (b) broken seals or that show evidence of tampering; (c) mismatched board serial numbers; or (d) nonconforming or non-Motorola branded housings, or parts, are excluded from coverage.

Communication Services. Defects, damages, or the failure of Products or Accessories due to any communication service or signal you may subscribe to or use with the Products or Accessories is excluded from coverage.

How to Obtain Warranty Service or Other Information?

To obtain service or information, please call:

US and Canada: 1-888-331-3383

You will receive instructions on how to ship the Products or Accessories, the shipment of which shall be at your own risk and expense, to a BINATONE ELECTRONICS INTERNATIONAL LTD. Authorized Repair Center. To obtain service, you must include: (a) a copy of your receipt, bill of sale or other comparable proof of purchase of the Products or Accessories showing the date of purchase; (b) a written description of the problem; and, most importantly; (c) your address and telephone number.

These terms and conditions constitute the complete warranty agreement between you and BINATONE ELECTRONICS INTERNATIONAL LTD. regarding the Products or Accessories purchased by you, and supersede any prior agreement or representations, including representations made in any literature publications or promotional materials issued by BINATONE ELECTRONICS INTERNATIONAL LTD. or representations made by any agent employee or staff of BINATONE ELECTRONICS INTERNATIONAL LTD., that may have been made in connection with the said purchase.

FCC, ACTA and IC regulations

FCC Part 15

This equipment has been tested and found to comply with the requirements for a Class B digital device under Part 15 of the Federal Communications Commission (FCC) rules. These requirements are intended to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no

Doc Title :	Product Data – User’s Guide	Revision :	R.00
Model :	Motorola L70×BT	Page(s) :	26 of 27

guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Privacy of communications may not be ensured when using this telephone.

To ensure safety of users, the FCC has established criteria for the amount of radio frequency energy that can be safely absorbed by a user or bystander according to the intended usage of the product. This product has been tested and found to comply with the FCC criteria. The handset may be safely held against the ear of the user. The telephone base shall be installed and used such that parts of the user’s body other than the hands are maintained at a distance of approximately 20 cm (8 inches) or more.

This Class B digital apparatus complies with Canadian ICES-003.

FCC Part 68 and ACTA

This equipment complies with Part 68 of the FCC rules and with technical requirements adopted by the Administrative Council for Terminal Attachments (ACTA). The label on the back or bottom of this equipment contains, among other things, a product identifier in the format US: AA#EQ##TXXXX. This identifier must be provided to your local telephone company upon request.

The plug and jack used to connect this equipment to premises wiring and the telephone network must comply with applicable Part 68 rules and technical requirements adopted by ACTA. A compliant telephone cord and modular plug is provided with this product. It is designed to be connected to a compatible modular jack that is also compliant. An RJ11 jack should normally be used for connecting to a single line and an RJ14 jack for two lines. See Installation Instructions in the User’s Guide.

The Ringer Equivalence Number (REN) is used to determine how many devices you may connect to your telephone line and still have them ring when you are called. The REN for this product is encoded as the 6th and 7th characters following the US: in the product identifier (e.g., if ## is 03, the REN is 0.3). In most, but not all areas, the sum of all RENs should be five (5.0) or less. For more information, please contact your local telephone company. This equipment may not be used with Party Lines. If you have specially wired alarm dialing equipment connected to your telephone line, ensure the connection of this equipment does not disable your alarm equipment. If you have questions about what will disable alarm equipment, consult your telephone company or a qualified installer.

If this equipment is malfunctioning, it must be unplugged from the modular jack until the problem has been corrected. Repairs to this telephone equipment can only be made by the manufacturer or its authorized agents. For repair procedures, follow the instructions outlined under the Limited Warranty.

If this equipment is causing harm to the telephone network, the telephone company may temporarily discontinue your telephone service. The telephone company is required to notify you before interrupting service. If advance notice is not practical, you will be notified as soon as possible. You will be given the opportunity to correct the problem and the telephone company is required to inform you of your right to file a complaint with the FCC. Your telephone company may make changes in its facilities, equipment, operation, or procedures that could affect the proper functioning of this product. The telephone company is required to notify you if such changes are planned.

If this product is equipped with a corded or cordless handset, it is hearing aid compatible.

If this product has memory dialing locations, you may choose to store emergency telephone numbers (e.g., police, fire, medical) in these locations. If you do store or test emergency numbers, please:

- Remain on the line and briefly explain the reason for the call before hanging up.
- Perform such activities in off-peak hours, such as early morning or late evening.

Industry Canada

Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference, including interference that may cause undesired operation.

The term "IC: " before the certification/registration number only signifies that the Industry Canada technical specifications were met.

Doc Title :	Product Data – User’s Guide	Revision :	R.00
Model :	Motorola L70×BT	Page(s) :	27 of 27

The Ringer Equivalence Number (REN) for this terminal equipment is 0.0.(TBC) The REN is an indication of the maximum number of devices allowed to be connected to a telephone interface. The termination on an interface may consist of any combination of devices subject only to the requirement that the sum of the RENs of all the devices does not exceed five.

This product meets the applicable Industry Canada technical specifications.

Technical Specifications

RF frequency band	1921.536 MHz – 1928.448 MHz
Channels	5
Operating temperature	5°C to 45°C
Telephone base voltage (AC voltage, 60Hz)	96 – 130 Vms
Telephone base voltage (Adapter output)	6V DC, 400mA
Handset voltage	2.4V 500mAh Ni-MH battery pack
Charger voltage (Adapter output)	6V AC, 300mA

MOTOROLA

Manufactured, distributed or sold by Binatone Electronics International LTD., official licensee for this product. MOTOROLA and the Stylized M logo are trademarks or registered trademarks of Motorola Tradwmark Holdings, LLC. and are used under licenses. The Bluetooth trademarks and all other trademarks are the property of their respective owners.