



Digital Cordless Telephone



Motorola C100xLX
For C1001LX, C1002LX, C1003LX and C1004LX

Note: Charge the handset for 24 hours before initial use.

Manufactured, distributed or sold by Binatone Technologies Ltd., official licensee for this product. MOTOROLA and the Stylized M Logo are trademarks or registered trademarks of Motorola Trademark Holdings, LLC. and are used under license. All other trademarks are the property of their respective owners. © 2014 Motorola Mobility LLC. All rights reserved.

Version 7 (EN-US)



Date and time


If you have subscribed to a Caller ID Service and the Auto Clock is set on, the date and time will automatically for all handsets when you receive your first call.

If you do not have a Caller ID service, you can set the date and time manually, see section "5.3. Date and Time".

Your C100xLX is now ready for use.

2. Getting to know your phone

Underside of your base

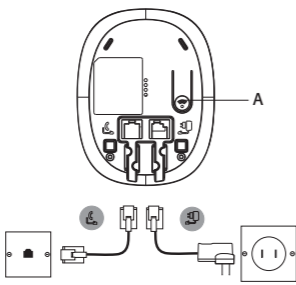

A Page In standby mode, press to ring the handset(s). Press and hold to enter registration mode when registering handsets.

- 6. If more than 2 handset are registered to the base press and hold and scroll to the handset that is to join the call and press.
7. When the other handset answers, press to connect all three callers to begin the conference call.
8. Press to end the call.

3.6 Hands-free

To talk to the caller without holding the handset or for other people in the room to listen to the conversation over the loudspeaker simply use the hands-free function.

3.6.1 Make a hands-free call

- 1. Dial the number and then press.
2. Press to end the call.

3.6.2 Answer a call hands-free

Press to answer the call in hands-free.

NOTE

Press to switch the call between the earpiece and the loudspeaker. During a hands-free call, press or to adjust the volume.

3.7 Redial

The last 10 entries dialed are stored in the redial list.

3.7.1 View or dial an entry

- 1. Press to open the Redial list.
2. Scroll or to the entry you want.
3. Press to dial the displayed entry or press to return to standby.

3.7.2 Copy a Redial list number to the phonebook

- 1. Press to open the Redial list.
2. Scroll or to the entry you want.
3. Press. The display shows Save number.
4. Press again. The display shows Enter name.
5. Enter the name and press. The number is displayed.

Welcome...

to your new Motorola C100xLX Digital Cordless Telephone!

- All handsets are completely cordless and easy to locate with paging system.
• Bright backlit display.
• Speakerphone for hands-free conversations.
• 50 Name and Number phonebook.
• Caller ID shows you who's calling and shows the details of the last 20 callers in a Calls list.
• Redial up to 10 of the last numbers called.
• Register up to 4 handsets to a single base.
• Make internal calls and transfer external calls between handsets.
• Choose from 10 different ringtones.

Please note that this equipment is not designed for making emergency telephone calls when the power fails. Alternative arrangements should be made for access to emergency services.


Need help?

If you have any problems setting up or using your C100xLX, please contact Customer Service at 1-888-331-3383.

Alternatively, you may find the answer in the 'Help' section at the back of this guide.

You must subscribe to your network provider's Caller ID or Call Waiting service for these features to work. A subscription fee may be applicable.

Overview of your handset

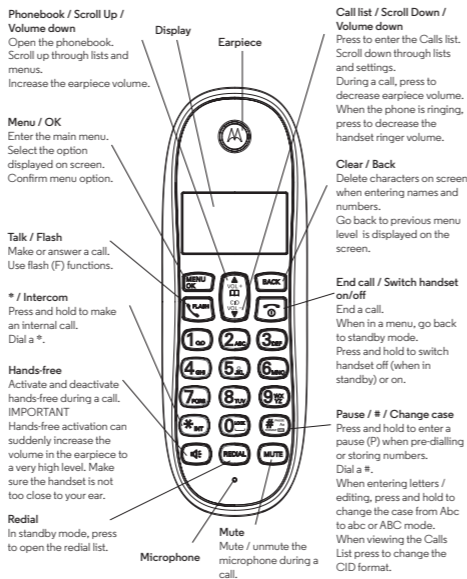

This user guide provides you with all the information you need to get the most from your phone.

To set up your phone, follow the simple instructions in 'Getting Started', on the next few pages.

IMPORTANT

Only use the telephone line cord supplied.

Got everything?

- C100xLX base & cordless handset

- 1 x rechargeable Ni-MH battery pack

- Power adapter for the base

- Telephone line cord

If you have purchased a C100xLX multiple pack you will also have the following items:

- Cordless handset & charger

- 1 x rechargeable Ni-MH battery pack

- Power adapter for the charger

Handset LCD Display

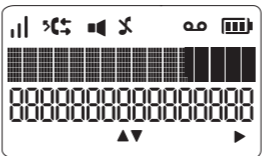


Table with 2 columns: Icon and Description. Includes signal strength, missed call, outgoing call, hands-free, ringer off, voicemail, scroll, battery status, and text indicators.

This feature is dependent on your Network Service provider supporting the service. A subscription fee may be payable.

4. Phonebook

You can store up to 50 names and numbers in the phonebook. Names can be up to 14 characters long and numbers up to 24 digits.

4.1 Store a name and number

If the C100xLX is connected to a PABX, you may need to enter a pause in a stored number. This gives the PABX time to find an outside line. A pause is normally stored after the PABX access code (e.g. 9). When storing a number, press and hold (#) until the display shows P. You can then continue storing the phone number.

If you have subscribed to Caller ID Service and wish to display the name of your caller as well as the number, save the full telephone number including the area code to your phonebook.

You can store multiple entries, a telephone number may only be saved once. However, to prevent unnecessary duplicated entries, you can only store the same number once.

- 1. Press. The display shows Phonebook.
2. Press. The display shows View.
3. Scroll down to Add new.
4. Press. The display shows Enter name.
5. Enter the name and press. The display shows Enter number.
6. Enter the number and press to save.

ENTERING NAMES

Use the keypad letters to enter names, e.g. to store TOM:

Press 8 once to enter T.
Press 6 three times to enter O.
Press 6 once to enter M.

1. Getting started

IMPORTANT

Do not place your C100xLX in the bathroom or other humid locations.

Location

You will need to place your C100xLX base within 4.9 feet of the electrical outlet and telephone wall outlet so that the cables will reach. The socket-outlet should be installed near the equipment and should be easily accessible.

Make sure that it is at least 3 feet away from other electrical appliances to avoid interference. Your C100xLX works by sending radio signals between the handset and base. The strength of the signal depends on where the base is placed. Placing the base at a higher location ensures a better signal.

HANDSET RANGE

The unit has a range of up to 650 feet outdoors when there is a clear line of sight between the base and handset. Any obstruction between the base and handset will reduce the range significantly. With the base indoors and the handset either indoors or outdoors, the range will normally be up to 98 feet. Thick concrete and stone walls can severely affect the range.

SIGNAL STRENGTH

The icon on your handset indicates that you are within range of the base. When out of range of the base, the icon disappears. If you are on a call, you will hear a warning beep.

The line will hang up if the handset moves out of range of the base. Move closer to the base. The handset will automatically reconnect to the base.

Setting up

IMPORTANT

The base station must be plugged into the electrical outlet at all times. Do not connect the telephone line cord into the wall outlet until the handset is fully charged. Use only the power adapter and telephone line cord supplied with the product.

Navigating the menus

Each menu has a list of options, which can be seen in detail on the menu map on the below list.

When the handset is switched on and in standby mode:

- 1. Press to open the main menu.
2. Then use or buttons to scroll through the available options.
3. Press to select an option. To return to the previous menu level, press. To exit the menu and return to standby, press.

NOTE

If buttons on the handset are not pressed within 30 seconds, the handset will go into standby mode.

Menu map

Menu map table with 3 columns: Phonebook, Ring tones, Area code. Lists options like View, Add new, Edit, Delete, Phone setup, Rings volume, Ring tones, Key tone, Docking tone, Battery tone, Phone name, Date & time, Language, Services, Call list type, Flash time, Dial mode, Auto clock, Register, Unregister, Reset.

Only available when a phonebook entry is already stored.

Connecting the base

- 1. Plug the telephone line cord into the socket marked on the underside of the base.
2. Plug the power adapter into the socket marked on the underside of the base and plug the other end into the electrical outlet wall outlet. Switch on the electrical outlet.

Installing and charging the handset

- 1. Remove the battery cover from the back of the handset and insert the rechargeable Ni-MH battery pack supplied. Please note the '+' and '-' markings inside the battery compartment and insert in the correct direction.
2. Slide the battery cover back into place.
3. If you are charging the battery for the first time, place the handset on the base to charge for at least 24 hours continuously.
4. When the handset is fully charged, icon will appear steady on the display. Plug the other end of the telephone line cord (make sure that one end is already plugged into the base) into the telephone wall outlet.

Connecting the handset and charger (for multi-pack only)

If you have purchased a multiple pack, you will need to carry out this process for all the handsets and chargers.

- 1. Plug the power adapter into the socket marked on the underside of the charger and plug the other end into the electrical outlet wall socket.
2. Remove the battery cover from the back of the handset and insert the AAA 2.4v 300mAh Ni-MH rechargeable battery supplied. Please note the '+' and '-' markings inside the battery compartment and insert in the correct direction.
3. Slide the battery cover back into place.
4. If you are charging the battery for the first time, place the handset on the charger to charge for at least 24 hours continuously.

3. Using the phone

NOTE

Your handset will automatically time the duration of all external calls. The call timer will display after the first 10 seconds of your call. When the call ends, the total duration of your talk time is shown for 3 seconds.

3.1 Switch the handset on / off

Press and hold to switch the handset on or off.

3.2 Calls

3.2.1 Make a call

- 1. Press.
2. Dialing a telephone number.

3.2.2 Preparatory dialling

- 1. Use the keypad to dial a number, if you make a mistake press to delete the last digit.
2. Press to dial.

3.2.3 End a call

Press, or place the handset back on the base or charger.

3.2.4 Receive a call

When you receive an external call, the phone rings and icon flashes on the display.

- 1. Press to answer the call.

3.3 Adjust the earpiece volume

During a call, press or to increase or decrease the volume. There are 5 levels to choose from.

3.4 Mute

You can mute your handset so that you can talk to someone nearby without your caller hearing.

- 1. During a call, press. The display shows Mute on and your caller cannot hear you.
2. Press again to resume your call.

4.5 Delete all entries

- 1. Press. The display shows Phonebook.
2. Press. The display shows View.
3. Scroll to Delete all and press.
4. The display shows Confirm?.
5. Press to confirm or to cancel.

5. Phone setup

5.1 Sounds

5.1.1 Ringer volume

You can adjust the ringer volume and set different volume levels. Choose from 5 volume levels or Off.

- 1. Press, scroll to Phone setup.
2. Press. The display shows Sounds.
3. Press. The display shows Ring volume.
4. Press, scroll or to select the volume (1-5 or OFF).
5. Press to confirm or to return to the previous menu.

5.1.2 Ringer tones

You can set different ringer melodies for your internal and external calls. Choose from 10 different ringer melodies.

NOTE

You will hear a sample ring as you setup to each ring melody.

- 1. Press, scroll to Phone setup.
2. Press. The display shows Sounds.
3. Press. Scroll to Ringer tones.
4. Press, scroll or to select the melody (1-10).
5. Press to confirm or to return to the previous menu.

5.1.3 Key tones on/off

When you press a button on the handset keypad, you will hear a beep. You can switch these beeps on or off.

- Press Ⓜ, scroll ▼ to Phone setup.
- Press Ⓜ. The display shows Sounds.
- Press Ⓜ. Scroll ▼ to Key tone.
- Press Ⓜ, ▲ or ▼ to select On or Off and press Ⓜ to confirm.

5.1.4 Docking tone on/off

When you replace the handset in the base you will hear a double beep. You can switch this beep on or off.

- Press Ⓜ, scroll ▼ to Phone setup.
- Press Ⓜ. The display shows Sounds.
- Press Ⓜ. Scroll ▼ to Docking tone.
- Press Ⓜ, ▲ or ▼ to select On or Off and press Ⓜ to confirm.

5.1.5 Battery tones

When you y the battery is running low you will hear a warning beep. You can switch this beep on or off.

- Press Ⓜ, scroll ▼ to Phone setup.
- Press Ⓜ. The display shows Sounds.
- Press Ⓜ. Scroll ▼ to Battery tone.
- Press Ⓜ, ▲ or ▼ to select On or Off and press Ⓜ to confirm.

5.2 Handset name

If you are using more than one handset with your C100xLX base, you can set a personalized name for each handset to easily distinguish between them.

A name can be up to 14 characters long.

- Press Ⓜ, scroll ▼ to Phone setup.
- Press Ⓜ. The display shows Sounds.
- Scroll ▼ to Phone name and press Ⓜ.

- Enter the new handset name and press Ⓜ to confirm. Delete the current name by pressing Ⓜ.

- Press Ⓜ, scroll ▼ to Services and press Ⓜ.
- Scroll ▼ to Area code is displayed. Press Ⓜ.
- Using the keypad enter the area code and press Ⓜ to confirm.

- Press Ⓜ, scroll ▼ to Phone setup.
- Press Ⓜ. The display shows Sounds.
- Press Ⓜ. Scroll ▼ to Date & time and press Ⓜ.
- Enter the date using the keypad (e.g. 08–12–14 for 12th of August 2014) and press Ⓜ to confirm.
- Enter the time using the 12 hour format hhmm, e.g. 02:45 for 2:45.
- Scroll ▲ or ▼ to select am or pm and press Ⓜ to confirm.

5.4 Language

- Press Ⓜ, scroll ▼ to Phone setup.
- Press Ⓜ. The display shows Sounds.
- Scroll ▼ to Language and press Ⓜ.
- Scroll ▲ or ▼ to select the required language and press Ⓜ to confirm.

- Press Ⓜ, the display shows View.
- Scroll ▼ to Save number and press Ⓜ.
- The display shows Enter name.
- Enter the name and press Ⓜ. The number is displayed.
- Edit the number if necessary, then press Ⓜ. The number is stored.

- Press Ⓜ, scroll ▼ to Services and press Ⓜ.
- The display shows Call list type, press Ⓜ.
- Scroll ▲ or ▼ to select All calls or Missed calls and press Ⓜ to confirm.

8. Help

No dial tone

- Use only the telephone line cord supplied.
- Check that the telephone line cord is connected properly.
- Check that the power adapter is connected and you have a working outlet.

No display

- Check that the battery is inserted correctly and fully charged. Use only the approved rechargeable battery supplied.
- Check that the handset is switched on. Press and hold Ⓜ.
- Reset the base by removing the battery and disconnecting the electrical outlet. Wait for around 15 seconds before connecting it again. Allow up to one minute for the handset and base to synchronize.

Products Covered	Length of Coverage
Consumer Products	One (1) year from the date of the products original purchase by the first consumer purchaser of the product.
Consumer Accessories	Ninety (90) days from the date of the accessories original purchase by the first consumer purchaser of the product.
Consumer Products and Accessories that are Repaired or Replaced	The balance of the original warranty or for ninety (90) days from the date returned to the consumer, whichever is longer.

Exclusions

Normal Wear and Tear. Periodic maintenance, repair and replacement of parts due to normal wear and tear are excluded from coverage.

Batteries. Only batteries whose fully charged capacity falls below 80% of their rated capacity and batteries that leak are covered by this Warranty.

Abuse & Misuse. Defects or damage that result from: (a) improper operation, storage, misuse or abuse, accident or neglect, such as physical damage (cracks, scratches, etc.)

to the surface of the product resulting from misuse; (b) contact with liquid, water, rain, extreme humidity or heavy perspiration, sand, dirt or the like, extreme heat, or food; (c)

use of the Products or Accessories for commercial purposes or subjecting the Product or Accessory to abnormal usage or conditions; or

(d) other acts which are not the fault of MOTOROLA or BINATONE., are excluded from coverage.

Use of Non-Motorola branded Products and Accessories. Defects or damage that result from the use of Non-Motorola branded or certified Products or Accessories or other peripheral equipment are excluded from coverage. Unauthorized Service or Modification. Defects or damages resulting from service, testing, adjustment, installation, maintenance, alteration, or modification in any way by someone other

5.3 Date & time

- Press Ⓜ, scroll ▼ to Phone setup.
- Press Ⓜ. The display shows Sounds.
- Scroll ▼ to Date & time and press Ⓜ.
- Enter the date using the keypad (e.g. 08–12–14 for 12th of August 2014) and press Ⓜ to confirm.
- Enter the time using the 12 hour format hhmm, e.g. 02:45 for 2:45.
- Scroll ▲ or ▼ to select am or pm and press Ⓜ to confirm.

5.4 Language

- Press Ⓜ, scroll ▼ to Phone setup.
- Press Ⓜ. The display shows Sounds.
- Scroll ▼ to Language and press Ⓜ.
- Scroll ▲ or ▼ to select the required language and press Ⓜ to confirm.

6. Services

6.1 Call List type

You can set the Call list to show All calls or Missed calls only. If All calls is selected, press ▼ key in idle and you can view all calls lists. If Missed calls is selected, press ▼ key in idle and you can view missed call only.

- Press Ⓜ, scroll ▼ to Services and press Ⓜ.
- The display shows Call list type, press Ⓜ.
- Scroll ▲ or ▼ to select All calls or Missed calls and press Ⓜ to confirm.

6.2 Area code

You can set your local area code into the phone. When a number from that area code calls only the local number will be displayed and stored. The area code can be up to 5 digits long.

****Notation if area code is stored in phone it will not display full number****

- Press Ⓜ, scroll ▼ to Services and press Ⓜ.
- The display shows Call list type, press Ⓜ.
- Scroll ▲ or ▼ to select All calls or Missed calls and press Ⓜ to confirm.

- Press Ⓜ, the display shows View.
- Scroll ▼ to Save number and press Ⓜ.
- The display shows Enter name.
- Enter the name and press Ⓜ. The number is displayed.
- Edit the number if necessary, then press Ⓜ. The number is stored.

7.2.4 Delete an entry

- Press ▼ to open the Calls list.
- Scroll ▲ or ▼ to the entry you want.
- Press Ⓜ, the display shows View.
- Scroll ▼ to Delete and press Ⓜ. The display shows Confirm?.
- Press Ⓜ to confirm or Ⓜ to cancel.

7.2.5 Delete the entire Calls list

- Press ▼ to open the Calls list.
- Press Ⓜ, the display shows View.
- Scroll ▼ to Delete all and press Ⓜ. The display shows Confirm?.
- Press Ⓜ to confirm or Ⓜ to cancel.

No Caller ID

• Check your subscription with your network operator.

- The caller may have withheld their number.
- The record cannot be found in your phonebook. Check that you have the correct name / number stored in your phonebook, with the full area code.

I have forgotten my PIN!

- Restore your C100xLX to its default settings, see "6.7 Restore default settings".

Cannot register a handset to the base

- You can register up to a maximum of 4 handsets to a C100xLX base. You must un-register a handset in order to register a new one.
- Check that you have entered the correct PIN code (default = 0000).
- Check that you are at least 3 feet away from other electrical equipment to avoid interference when registering.

- Press Ⓜ, scroll ▼ to Services and press Ⓜ.
- Scroll ▼ to Area code is displayed. Press Ⓜ.
- Using the keypad enter the area code and press Ⓜ to confirm.

6.3 Flash time

Depending on your country and network operator, your C100xLX has the flash time set as 600 ms (Long). It is unlikely that you need to change this setting unless advised to do so.

Enter the time using the 12 hour format hhmm, e.g. 02:45 for 2:45.

- Press Ⓜ, scroll ▼ to Services and press Ⓜ.
- Scroll ▼ to Flash time and press Ⓜ.
- Press ▲ or ▼ to select Short, Medium or Long and press Ⓜ to confirm.

6.4 Dial mode

Your C100xLX is set to tone dialing. You should only need to change this if connected to an older type of PABX / PBX which requires pulse dialing.

- Press Ⓜ, scroll ▼ to Services and press Ⓜ.
- Scroll ▼ to Dial mode and press Ⓜ.
- Press ▲ or ▼ to select Tone or Pulse and press Ⓜ to confirm.

6.5 Switch Auto clock on / off

If you have subscribed to a Caller ID Service, the date and time will be set on all your handsets whenever a call is received. This feature can be set to On or Off.

- Press Ⓜ, scroll to Services and press Ⓜ.
- Scroll ▼ to Auto clock and press Ⓜ.
- Scroll ▼ to On or Off then press Ⓜ to confirm.

6.6 Registration

Up to 4 handsets can be registered to one base station. Additional handsets must be registered to the base before you can use them.

- The instructions described below apply specifically to your C100xLX handset. If you wish to register another manufacturer’s handset, the instructions may vary. In this case, please refer to the manufacturer of the additional handset.

- Press Ⓜ, scroll ▼ to Services and press Ⓜ.
- Scroll ▼ to Unregister and press Ⓜ.
- Enter the 4 digit master PIN and press Ⓜ.

Display shows the first registered handset number.

- Scroll ▲ or ▼ to select the handset you want to delete and press Ⓜ.

Unregistered is displayed on the handset screen.

Unregistered is displayed on the handset screen.

9. General information

If your product is not working properly...

- Read this User’s Guide.
- Visit our website: www.motorola.com
- Contact Customer Service in the US and Canada at 1-888-331-3383

Email: motorola@encompass.com

Important safety instructions

Follow these safety precautions when using your phone to reduce the risk of fire, electric shock, and injury to persons or property:

- Keep all vents and openings of the phone unblocked. Do not set the phone on a heating register or over a radiator. Ensure that proper ventilation is provided at the installation site.
- Do not use while wet or while standing in water.
- Do not use this product near water (for example, near a bath tub, kitchen sink, or swimming pool).
- Do not allow anything to rest on the power cord. Place the power cord so that it will not be walked on.
- Never insert objects of any kind into the product vents as that may result in fire or electric shock.
- Unplug this product from the electrical outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.

requirements for a Class B digital device under Part 15 of the Federal Communications Commission (FCC) rules. These requirements are intended to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate

radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Privacy of communications may not be ensured when using this telephone.

To ensure safety of users, the FCC has established criteria for the amount of radio frequency energy that can be safely absorbed by a user or bystander according to the intended usage of the product. This product has been tested and found to comply with the FCC criteria. Both the Handset may be safely held against the ear of the user. The telephone base shall be installed and used such that parts of the user’s body other than the hands are maintained at a distance of approximately 20 cm (8 inches) or more.

This Class B digital apparatus complies with Canadian ICES-003. This device complies with Industry Canada licence-exempt RSS

- The Master PIN is required before you can register or unregister handsets. The PIN is 0000.

6.6.1 Register a handset

At the base:

- Press and hold the Ⓜ on the base until the base beeps. You have 120 seconds in which to register a handset.

At the handset:

- If the handset is not already registered to a base, press Ⓜ.
- Or if the handset is already registered to a base, press Ⓜ scroll ▼ to Services and press Ⓜ. Scroll ▼ to Register and press Ⓜ.
- When the display shows PIN, enter the base PIN and press Ⓜ. When the handset registers with the base, it is assigned a handset number.

6.6.2 Un-register a handset

Use one handset to delete another. You cannot delete the handset that you are using.

- Press Ⓜ, scroll ▼ to Services and press Ⓜ.
- Scroll ▼ to Unregister and press Ⓜ.
- Enter the 4 digit master PIN and press Ⓜ.
- Display shows the first registered handset number.
- Scroll ▲ or ▼ to select the handset you want to delete and press Ⓜ.

Unregistered is displayed on the handset screen.

6.7 Restore default settings

You can restore your C100xLX to its default (original) settings. All the handsets that are registered to the base will be retained.

IMPORTANT

Resetting your phone to its default setting will delete all entries in the Phonebook and Calls list. All handset and base settings will also be reset.

- Press Ⓜ, scroll ▼ to Services and press Ⓜ.
- Scroll ▼ to Restore default settings and press Ⓜ.
- Press Ⓜ. The display shows Confirm?
- Press Ⓜ to confirm or Ⓜ to cancel.

- Do not disassemble this product. If service or repair work is required, contact the customer service helpline found in this User’s Guide.
- Do not overload wall outlets and extension cords.
- Avoid using during an electrical storm. Use a surge protector to protect the equipment.
- Do not use this phone to report a gas leak, especially if you are in the vicinity of the gas line.

CAUTION
To reduce the risk of fire, use only No. 26 AWG or larger UL Listed or CSA Certified Telecommunication Line Cord.

Unplug this cordless phone immediately from an outlet if:

- The power cord or plug is damaged or frayed.
- Liquid has been spilled on the product.
- The product has been exposed to rain or water. Do not retrieve the handset or base until after you have unplugged the power and phone from the wall. Then retrieve the unit by the unplugged cords.
- The product has been dropped or the cabinet has been damaged.
- The product exhibits a distinct change in performance.

Installation Guidelines

- Read all instructions and save them for future reference.
- Follow all warnings and instructions marked on the product.
- Do not install this product near a bath tub, sink, or shower.
- Operate this phone using only the power source that is indicated on the marking label. If you are unsure of the power supply to your home, consult with your dealer or local power company.
- Do not place this product on an unstable cart, stand, or table. This product may fall, causing serious damage to the product.
- Adjust only those controls that are covered by the operating instructions. Improper adjustment of other controls may result in damage and will often require extensive work to restore the product to normal operation.

standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le present appareil est conforme aux CNR d’Industrie Canada applicables aux appareils radio exempts de licence. L’exploitation est autorisee aux deux conditions suivantes : (1) l’appareil ne doit pas produire de brouillage, et (2) l’uibilisateur de l’appareil doit accepter tout brouillage radioelectrique subi, meme si le brouillage est susceptible d’en compromettre le fonctionnement.

FCC Part 68 and ACTA
This equipment complies with Part 68 of the FCC rules and with technical requirements adopted by the Administrative Council for Terminal Attachments (ACTA). This Product Complies With 47CFR PART 68.

The plug and jack used to connect this equipment to premises wiring and the telephone network must comply with applicable Part 68 rules and technical requirements adopted by ACTA. A compliant telephone cord and modular plug is provided with this product. It is designed to be connected to a compatible modular jack that is also compliant. An RJ11 jack should normally be used for connecting to a single line and an RJ14 jack for two lines. See Installation Instructions in the User’s Guide.

The Ringer Equivalence Number (REN) is used to determine how many devices you may connect to your telephone line and still have them ring when you are called. The REN for this product is encoded as the 6th and 7th characters following the US: in the product identifier (e.g., if ## is 03, the REN is 0.3). In most, but not all areas, the sum of all RENs should be five (5.0) or less. For more information, please contact your local telephone company.

This equipment may not be used with Party Lines. If you have specially wired alarm dialing equipment connected to your telephone line, ensure the connection of this equipment does not disable your alarm equipment. If you have questions about what will disable alarm equipment, consult your telephone company or a qualified installer.

- Scroll ▼ to Reset and press Ⓜ.
- Confirm? is displayed. Press Ⓜ.

6.8 Default settings

Handset name	HANDESET	Phonebook	Empty
Low battery beeps	ON	Calls list	Empty
Docking tone	ON	Redial list	Empty
Key tone	ON	PIN code	0000
Ringer melody	1	Dial mode	Tone
Ringer volume	3	Flash mode	Long (600 ms)
Ear volume	1	Keypad lock	OFF

7. Caller ID and the Calls list

IMPORTANT

To use Caller ID, you must first subscribe to the service from your network provider. A subscription fee may be applicable.

To ensure that the caller’s name is displayed, make sure you have stored you the full telephone number, including the area code in the phonebook. If the call is blocked, Private will be displayed. If the number is unavailable, Unknown will be displayed. If the call is from the operator, Operator will be displayed. If the call is from a payphone, Payphone will be displayed. If the call is from a ringback request, Ringback will be displayed.

7.1 Caller ID

If you have subscribed to a Caller ID Service, you will be able to see your caller’s number on your handset (provided it is not withheld) prior to answering the call. The display can show the first 16 digits or 14 characters of the phone numbers.

If your caller’s name and number are stored in the phonebook and a number match is found, you will see the caller’s name on the display as well.

7.2 Calls list

The Calls list stores details of your last 50 received calls, including the phone number, date and time of call.

- Press ▼ to open the Calls list. If there are no calls in the list, the display shows List empty.
- The most recent number or name if stored in the phonebook is displayed.
- Press ▲ or ▼ to scroll through the list.
- If the call was answered, Ⓜ icon is displayed as you scroll to the entry. If the call was unanswered, Ⓜ icon is displayed as you scroll to the entry.
- If the telephone number is longer than 16 digits, ▶ icon is displayed. Press Ⓜ to see the remaining digits.
- Press Ⓜ to access the option to store the entry in your phonebook.
- Press Ⓜ twice to see the time and date of the call.
- When viewing a calls list number press Ⓜ to toggle the Calls List between different formats, e.g. YYYY-YYYY, AAA-YYY-YYYY or 1-AAA-YYY-YYY.

7.2.2 Dial a number in the Calls list

- Press ▼ to open the Calls list.
- Scroll ▲ or ▼ to the entry you want.
- Press Ⓜ to dial the displayed entry.

7.2.3 Copy a Calls list number to the phonebook

- Press ▼ to open the Calls list.
- Scroll ▲ or ▼ to the entry you want.

7.2.4 Save a Calls list number to the phonebook

- Press ▼ to open the Calls list.
- Scroll ▲ or ▼ to the entry you want.
- Press Ⓜ, the display shows View.
- Scroll ▼ to Save and press Ⓜ.
- The display shows Enter name.
- Enter the name and press Ⓜ. The number is displayed.
- Edit the number if necessary, then press Ⓜ. The number is stored.

7.2.5 Delete an entry

- Press ▼ to open the Calls list.
- Scroll ▲ or ▼ to the entry you want.
- Press Ⓜ, the display shows View.
- Scroll ▼ to Delete and press Ⓜ. The display shows Confirm?.
- Press Ⓜ to confirm or Ⓜ to cancel.

7.2.6 Delete the entire Calls list

7.2.7 Restore default settings

7.2.8 Transfer a Calls list number to the phonebook