



Earn BISSELL Rewards!

Register your
product today!
See details on
back page

STEAMmop™ DELUXE

USER'S GUIDE
31N1 SERIES

- 2 Thank You
- 3 Safety Instructions
- 4 Product View
- 5 Assembly
- 6 Special Features
- 6-8 Operations
- 9 Maintenance and Care
- 10 Troubleshooting
- 10 Replacement Parts
- 10 Additional Accessories
- 11 Warranty
- 12 Product Registration
- 12 Consumer Services




Thanks for buying a BISSELL Steam Mop™ Deluxe

We're glad you purchased a BISSELL Steam Mop Deluxe. Everything we know about floor care went into the design and construction of this complete, high-tech home cleaning system.

Your BISSELL Steam Mop Deluxe is well made, and we back it with a limited one year warranty. We also stand behind it with a knowledgeable, dedicated Consumer Services department, so, should you ever have a problem, you'll receive fast, considerate assistance.

My great-grandfather invented the floor sweeper in 1876. Today, BISSELL is a global leader in the design, manufacture, and service of high quality homecare products like your BISSELL Steam Mop Deluxe .

Thanks again, from all of us at BISSELL.

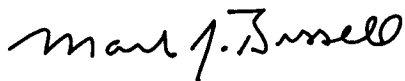

Mark J. Bissell
Chairman, President & CEO

Don't forget to register your product!

Registering is quick, easy and offers you benefits over the lifetime of your product. You'll receive:

BISSELL Rewards Points

Automatically earn points for discounts and free shipping on future purchases.

Faster Service

Supplying your information now saves you time should you need to contact us with questions regarding your product.

Product Support Reminders and Alerts

We'll contact you with any important product maintenance reminders and alerts.

Special Promotions

Optional: Register your email to receive notice of offers, contests, cleaning tips and more!

Visit www.bissell.com/registration now!

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should be observed, including the following:

Read all instructions before using your Steam Mop™ Max.

⚠ WARNING: To reduce the risk of fire, electric shock, or injury:

 
- Do not direct steam at people, animals, or at electrical outlets.
- Do not expose to rain.
- Store indoors.
- Unplug from outlet when not in use and before conducting maintenance or troubleshooting.
- Do not leave steam cleaner unattended.
- Do not expose hair, loose clothing, fingers or body parts to openings or moving parts.
- Do not service steam cleaner when it is plugged in.
- Do not handle steam cleaner with wet hands.
- Do not use steam cleaner if it has been dropped, damaged, left outdoors or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close door on cord, pull cord around sharp corners or edges, or expose cord to heated surfaces.
- Do not unplug by pulling on cord.
- Do not use appliance in an enclosed space filled with vapor given off by oil-base paint, paint thinner, some moth proofing substances, flammable dust, or other explosive or toxic vapors.
- Do not allow to be used as a toy.
- Do not use on leather, wax polished furniture or floors, synthetic fabrics, velvet or other delicate, steam-sensitive materials.
- Do not immerse.
- Do not use for any purpose other than described in this User's Guide.
- Use only manufacturer's recommended attachments - use of attachments not provided or sold by BISSELL may cause fire, electric shock or injury.
- Never put descaling, aromatic, alcoholic or detergent products into the steam cleaner, as this may damage it or make it unsafe for use.
- Unplug by grasping the plug, not the cord.
- Close attention is necessary when used by or near children.

SAVE THESE INSTRUCTIONS

Commercial use of this unit void the manufacturer's warranty.

GROUNDING INSTRUCTIONS

This appliance must be connected to a grounded wiring system. If it should malfunction or break down, grounding provides a safe path of least resistance for electrical current, reducing the risk of electrical shock. The cord for this appliance has an equipment-grounding conductor and a grounding plug. It must only be plugged into an outlet that is properly installed and grounded in accordance with all local codes and ordinances.

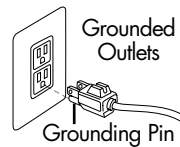


⚠ WARNING:

Improper connection of the equipment-grounding conductor can result in a risk of electrical shock. Check with a qualified electrician or service person if you aren't sure if the outlet is properly grounded. **DO NOT MODIFY THE PLUG.** If it will not fit the outlet, have a proper outlet installed by a qualified electrician. This appliance is designed for use on a nominal 120-volt circuit, and has a grounding attachment plug that looks like the plug in the drawing above. Make certain that the appliance is connected to an outlet having the same configuration as the plug. No plug adapter should be used with this appliance.

This model is for household use only.

 Product view

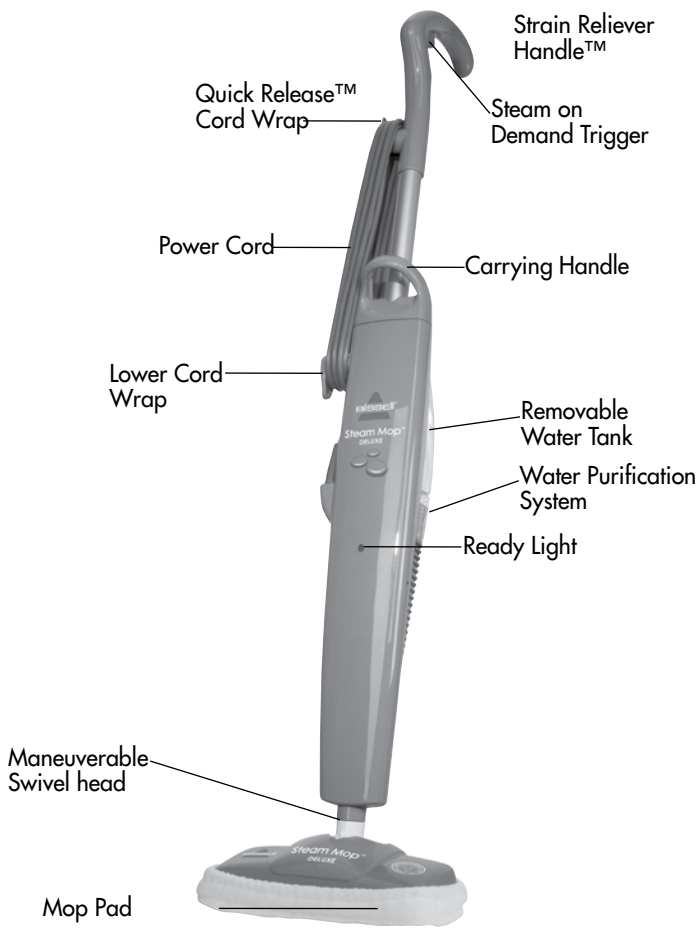

Optional Accessories:



Deluxe Mop Pads - 2 pack



Water Purification System



Steam Mop Scented Water-Eucalyptus Mint

Product view

Your Steam Mop Deluxe assembles quickly and easily. The only thing you will need for assembly is a Phillips head  screwdriver.

Your Steam Mop Max is packaged with the following items:

Handle Assembly

Lower Body with Water Purification System


 
Maneuverable Swivel Head

Removable Water Tank


1 large Phillips Head Screw taped to the handle

1 small Phillips Head Screw taped to the handle

2 Deluxe Mop Pads

1. Attach lower body to maneuverable swivel head.
2. Secure maneuverable swivel head with small Phillips head  screw. Tighten until secure.
3. Slide handle assembly down into lower body until it will go no further.
4. Secure the handle by placing the large Phillips head  screw through the screw opening in the lower body and into the rear of the handle assembly. Tighten with screwdriver until secure.
5. Slide water tank onto lower body by lining up vertical glides and gently sliding tank into place.

 
Steam Mop Deluxe assembly is now complete.

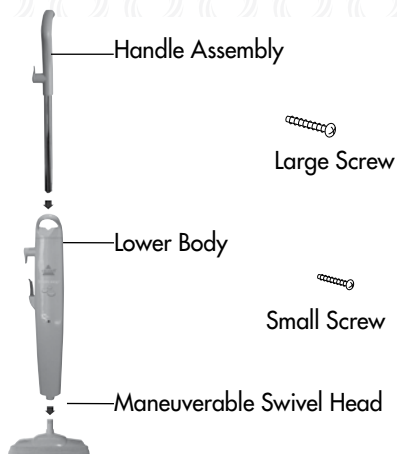

Removable Water Tank



 2 Deluxe Mop Pads

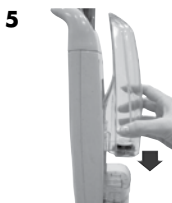

Special features

Removable water tank

The water tank is located on the back of the Steam Mop Deluxe. It can be refilled with water any time during use. Distilled or demineralized water may be used in place of tap water.

Do not use chemicals with your Steam Mop Deluxe.

Water purification system

This filter removes minerals and other impurities from tap water, preventing water deposits from damaging your Steam Mop Deluxe. It should be replaced when the bright green grains turn blue. To maximize performance of the filter, distilled water may be used.

Tip:

Do not attempt to use your Steam Mop Max without water in the tank.

Ready light

The ready light will glow when the Steam Mop Deluxe is ready to use.

Steam on demand trigger

Press to release steam.

Maneuverable swivel head

When cleaning in the manual mode, press the spray trigger to release water and formula onto the area to be cleaned.

Deluxe mop pads


Reuseable microfiber mop pad is machine washable and safe for all hard floor surfaces.

Operations

Getting ready

The mop pad may have already come attached to the swivel head, if not follow steps 1A and 1B below.

 
1. Attach mop pad
 - A. Set swivel head in mop pad, making sure toggle is located on the back
 - B. Tighten mop pad by pulling on elastic cord while pressing on toggle.

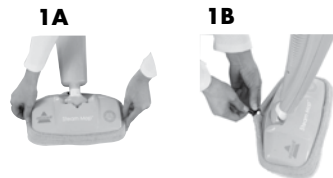

Operations

Getting ready continued

 2. Fill the water tank
 - A. Remove tank by lifting straight up and away from unit.
 - B. Unscrew cap at bottom of water tank and remove the insert assembly.
 - C. Fill water tank with water. For best results, water should be at room temperature.
 - D. Replace insert assembly and cap, tighten until snug.
 - E. Replace water tank by lining up vertical guides and gently sliding tank into place.
3. Twist the quick release cord wrap clockwise to unwrap the power cord completely and plug into a 120-Volt grounded outlet as described on the Important Safety Instructions, page 3.
4. The ready light will illuminate when the Steam Mop Deluxe is ready for use.

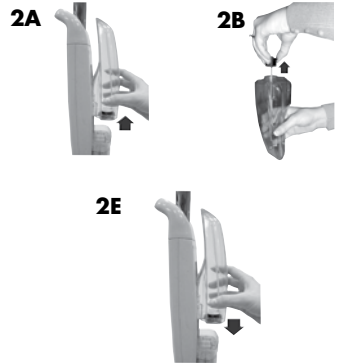

Before you clean

Thoroughly sweep or vacuum floor prior to cleaning with the Steam Mop Deluxe.

Cleaning hard floors

Your Steam Mop Deluxe is designed to clean hard flooring such as ceramic tile, vinyl, laminate, marble, stone and sealed hard wood floors. Use of your Steam Mop Max on waxed or some unwaxed floors may result in a diminished glossiness. The Steam Mop Deluxe is not for use on unsealed wood floors. For best results test in an inconspicuous area and check the care instructions from your flooring manufacturer.

Operations

Cleaning hard floors continued

1. When the ready light illuminates, begin cleaning by slowly passing over surface while pressing the steam on demand trigger to emit steam as needed.
2. To sanitize an area of your floor, (attack invisible germs and bacteria) place the center of the Steam Mop Deluxe over the spot for a minimum 15 seconds, but no longer than 20 seconds. For larger areas, overlap swivel head placement.
3. When the Steam Mop Deluxe stops emitting steam, simply remove the water tank, refill, and continue cleaning.

Carpet Refresher Attachment

This accessory is recommended for the refreshing of carpets. Once the steam mop is cradled in the carpet refresher attachment, it will easily glide over the carpet.

NOTE: Always be sure a mop pad is in place before placing in carpet refresher attachment. Only white mop pads should be used with the carpet attachment. Do not use carpet attachment on spots or stains, or glide it over the same spot for longer than 20 seconds.

1. Attach the mop pad to the swivel mop head. As directed in step 1 on page 6.
2. Place the swivel mop head, with mop pad attached, in the carpet refresher attachment.
Note: that the Steam Mop rests in the carpet refresher attachment and may not stay attached to the swivel mop head. It is meant to glide over the carpet.
3. Fill the water tank with water. Begin refreshing your carpet or rug by pushing the Steam Mop in a forward and backward motion, releasing steam as you go.
4. When you have finished refreshing your carpet or rug, unplug the steam mop and remove from the carpet or rug.

NOTE: Move the Steam Mop and carpet refresher attachment in a continuous motion until you are finished. This product is not intended to be used as a carpet cleaner, only a carpet refresher or deodorizer. Never attempt to use the Steam Mop on carpet without the carpet refresher attachment in place. DO NOT leave the mop in a stationary position.



WARNING:

Never put descaling, aromatic, alcoholic, or detergent products into the steam cleaner, as this may damage it or make it unsafe for use.

Tip:

During first use, it may take several seconds for the Steam Mop Deluxe to begin steaming. The water needs to flow through the filter to the heater. This delay will only occur during initial use or when using a new filter.



 
Maintenance and care

When you're done

1. Unplug power cord from outlet.
2. Carefully remove mop pad from swivel head, as mop pad and lower assembly will be hot.
3. Any water remaining in the water tank should be emptied prior to machine storage.
4. Mop pad can be machine washed in warm water. Use only liquid detergents. Do not use bleach or fabric softeners, For best results, air dry.
5. Wrap power cord around quick release cord wrap on side of Steam Mop Deluxe.
6. Wipe all surfaces of Steam Mop Deluxe with a soft cloth. Store upright in a protected, dry area.

NOTE: If steam output is reduced, the nozzle may be blocked. To remedy, unplug unit, remove swivel head from lower body and pour vinegar through center tube of swivel head "neck". Clear nozzle by inserting a paper clip into the brass spray tip located in bottom of lower body.

⚠ CAUTION:
Upright storage of the Steam Mop Deluxe with a wet mop pad may result in the formation of white marks on your floor. To remove the white marks, clean area with vinegar.

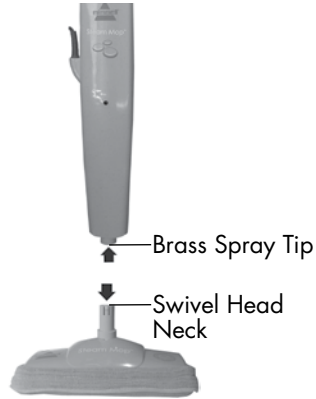

Replacing the water purification system

If you fill your Steam Mop Deluxe cleaner with normal tap water, it is essential to check the water purification system and replace it when it is no longer effective. Change the filter when the bright green grains turn blue. If the filter is not changed at the appropriate time, calcium deposits will accumulate on the heating element, causing damage or reduced performance.

Using distilled or demineralized water will maximize the performance of your filter.

To order a replacement water purification system refer to the replacement parts section on page 10.

Tip:

Using distilled or demineralized water will maximize the performance of your filter.

Tip:

Be sure to use only a BISSELL water filter in your Steam Mop Deluxe.

Troubleshooting

Reduced steam or no steam.

Possible Causes

1. Water tank empty
2. Depleted water filter
3. Blocked steam nozzle

Remedies

1. Fill tank
2. Replace filter
3. Refer to NOTE on bottom of page 9

Other maintenance or service not included in the manual should be performed by an authorized service representative.

Thank you for selecting a BISSELL product.

Please do not return this product to the store.

For any questions or concerns, BISSELL is happy to be of service. Contact us directly at 1-800-237-7691.

Replacement parts- BISSELL Steam Mop™ Deluxe

Item	Part No.	Part Name
1	3252-2	Water Filter
2	203-2167	Handle Assembly with Screw
3	203-2159	Water Tank with Cap and Insert
4	603-2046	Cap and Insert Assembly
5	203-2168	Storage Hook with Screws



Additional Accessories

**These items are available for purchase as accessories for your BISSELL Steam Mop Deluxe:
To purchase call 1-800-237-7691 or visit www.bissell.com.**

Item	Part No.	Part Name
1	3252-3	White Microfiber Mop Pads - 2 pack
2	3252-4	Carpet Refresher Attachment with Pad
3	3252-1	Eucalyptus Mint Natural Aroma
4	3252-5	Deluxe Mop Pads - 2 pack
5	59V4	Steam Mop Scented Water Eucalyptus Mint 32 FL oz



Warranty BISSELL Syeam Mop™ Deluxe

This warranty gives you specific legal rights, and you may also have other rights which may vary from state to state. If you need additional instruction regarding this warranty or have questions regarding what it may cover, please contact BISSELL Consumer Services by E-mail, telephone, or regular mail as described below.

Limited Two Year Warranty

Subject to the *EXCEPTIONS AND EXCLUSIONS identified below, upon receipt of the product BISSELL Homecare, Inc. will repair or replace (with new or remanufactured components or products), at BISSELL's option, free of charge from the date of purchase by the original

purchaser, for one year any defective or malfunctioning part.

See information below on "If your BISSELL product should require service".

This warranty applies to product used for personal, and not commercial or rental service. This warranty does not apply to fans or routine maintenance components such as filters, belts, or brushes. Damage or malfunction caused by negligence, abuse, neglect, unauthorized repair, or any other use not in accordance with the User's Guide is not covered.

If your BISSELL product should require service:

Contact BISSELL Consumer Services to locate a BISSELL Authorized Service Center in your area.

If you need information about repairs or replacement parts, or if you have questions about your warranty, contact BISSELL Consumer Services.

Website or E-mail:

www.bissell.com

Or Call:

BISSELL Consumer Services

1-800-237-7691

Monday - Friday 8 a.m. - 10 p.m. ET

Saturday 9 a.m. - 8 p.m. ET

Or Write:

BISSELL Homecare, Inc.

PO Box 3606

Grand Rapids, MI 49501

ATTN: Consumer Services

BISSELL HOMECARE, INC. IS NOT LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY NATURE ASSOCIATED WITH THE USE OF THIS PRODUCT. BISSELL'S LIABILITY WILL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT.

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

***EXCEPTIONS AND EXCLUSIONS FROM THE TERMS OF THE LIMITED WARRANTY**
THIS WARRANTY IS EXCLUSIVE AND IN LIEU OF ANY OTHER WARRANTIES EITHER ORAL OR WRITTEN. ANY IMPLIED WARRANTIES WHICH MAY ARISE BY OPERATION OF LAW, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE ONE YEAR DURATION FROM THE DATE OF PURCHASE AS DESCRIBED ABOVE.

Some states do not allow limitations on how long an implied warranty last so the above limitation may not apply to you.

NOTE: Please keep your original sales receipt. It provides proof of date of purchase in the event of a warranty claim.

Don't forget to register your product!

Registering is quick, easy and offers you benefits over the lifetime of your product. You'll receive:

BISSELL Rewards Points

Automatically earn points for discounts and free shipping on future purchases.

Faster Service

Supplying your information now saves you time should you need to contact us with questions regarding your product.

Product Support Reminders and Alerts

We'll contact you with any important product maintenance reminders and alerts.

Special Promotions

Optional: Register your email to receive notice of offers, contests, cleaning tips and more!

Visit www.bissell.com/registration now!

BISSELL consumer services

For information about repairs or replacement parts, or questions about your warranty, call:

BISSELL Consumer Services
1-800-237-7691

Monday - Friday 8 a.m. — 10 p.m. ET

Saturday 9 a.m. — 8 p.m. ET

Or write:

BISSELL Homecare, Inc.

PO Box 3606

Grand Rapids MI 49501

ATTN: Consumer Services

Or visit the BISSELL website - **www.bissell.com**

When contacting BISSELL, have model number of cleaner available.

Please record your Model Number: _____

Please record your Purchase Date: _____

NOTE: Please keep your original sales receipt. It provides proof of purchase date in the event of a warranty claim. See Warranty on page 11 for details.



©2010 BISSELL Homecare, Inc.
Grand Rapids, Michigan
All rights reserved. Printed in China
Part Number 120-4292
Rev 9/10
Visit our website at:
www.bissell.com