- 1. Register at blastgauge.com/software on a PC.
- 2. Follow email instructions to download. Click the software version box needed to install.
- 3. On a tablet, download **The Blast Gauge System Application** version based on the operating system of the device used.



If your gauges have a **grey** label **(Commercial)** you will download from either the **Google Play Store**, or the **Apple App Store**.







If your gauges have a **green** label (Interrogated Wireless™) download the software from **blastgauge.com/ software** using instructions provided from the downloaded PC software folder.





4. Open **BGSM** software on a PC. Go to the **Activate** tab.



5. Connect the gauges to a PC via the Micro-USB hub.



6. Connected gauges will show up in the side bar on the right with **Gauge Not Activated** below it.



7. Select **Personnel** for use on mobile people. This will enable sleep, allowing the gauge to go inactive after 30 min. of no movement.

Select **Structure** for use on static objects. This disables sleep, so gauges will never go inactive.

Note: Gauges left on in structure mode will constantly use battery.



8. If needed, unlock and change the pressure threshold values (advanced users only).

9. EDI-PI will be auto-filled with the ID number from your CAC Card. If you're not using a CAC Card Reader, manually enter identifying information.

Enter identifyin	g information:		
EDI-PI *:		Card Reader:	Y
Display Name:			<b>/</b>
Unit Name:			

10. Select the gauge state: Gauges must be **On** to record events.

Use **Off** to place them in a non-monitoring state.

Note: After activation, users can toggle state by holding the button with a 5.56 NATO round until all three LEDs light in sequence.

11. Click **Activate Gauges**. Gauges are ready for use and can be disconnected from PC when software displays in the side bar: **Gauge Attached...Ready**.

O Off


ACTIVATE GAUGES							
Commercial	USB	Gauge On	))) Wireless On				
Gauge Attach	ied Read	y					


12. On the tablet, test the Bluetooth connection by clicking **Start Scan**. Gauges must be within close proximity of the tablet and disconnected from the PC

Note: Bluetooth must be on but you do not need to connect to any devices.

**START SCAN** 

  13. Attach your gauges to personnel or to a structure.





14. Select either **Quick Scan** for summary data, or **Full** Scan for full waveform data.

Quick Scan Full Scan

15. Wirelessly retrieve data from the gauges by clicking **Start Scan** on the tablet.

## START SCAN

16. If there is not a tablet available, press the recessed button to check LFD status.

CHECK LLD Status.							
STATUS		BEFORE AND AFTER OPERATIONS					
0	WHAT IT MEANS	STEPS TO FOLLOW					
Steady Green Light	Blast event not detected.	No pressure measured     If TBI indicators or red flags, perform MACE     Those with no complaints are good to go					
Flashing Green Light	Blast event detected. See medic.	Low "Summary" pressure measured     If TBI indicators or red flags, perform MACE     Those with no complaints are good to go					
Flashing Yellow Light	Blast event detected. See medic!	Moderate pressure measured     Look for other TBI indicators or red flags     Evaluate with MACE as soon as possible     Recover and replace Blast Gauge					
Flashing Red Light	Serious blast event detected. See medic!	High pressure measured     Look for other TBI indicators or red flags     Evaluate with MACE immediately     Recover and replace Blast Gauge					
All Lights Flashing	Low battery or error condition.	No pressure measured     Recover and replace Blast Gauge					
No Lights Illuminate	Battery dead.	Recover and replace Blast Gauge					

17. To transfer Blast Gauge data from the tablet to your PC, refer to the Tablet to PC Data Transfer Guide.

> For more information, see What do I need to know?

Certifications

United States: FCC ID: 2AHN8BG711 Canada: IC ID: 21433-BG711

Australia: RCM000577









FCC/IC Statement

FCC § 15B

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation

Cet appareil est conforme à la partie 15 des règles de la FCC. Le fonctionnement est soumis aux deux conditions suivantes: (1) ce dispositif ne peut pas causer d'interférences nuisibles, et (2) cet appareil doit accepter toute interférence reçue, y compris les interférences qui peuvent causer un mauvais fonctionnement.

FCC § 15.21

Changes or modifications made to this equipment not expressly approved by BlackBox Biometrics Inc. could void the user's authority to operate the equipment

Note: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense

WARNING!

FCC and IC Radiation Exposure Statement:

This portable equipment with its antenna complies with FCC's and IC's RF radiation exposure limits set forth for an uncontrolled environment. To maintain compliance, follow the instructions below:

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. Avoid direct contact to the antenna, or keep contact to a minimum while using this equipment.

Cet équipement portable avec son antenne est conforme aux limites d'exposition aux rayonnements RF de la FCC et IC de définies pour un environnement non contrôlé. Pour maintenir la conformité, suivez les instructions

Cet émetteur ne doit pas être situé ou opérant en conjonction avec une autre antenne ou émetteur. Éviter tout contact direct à l'antenne, ou garder le contact à un minimum tout en utilisant cet équipement .

Radio Standards Procedure

This device complies with Industry Canada's license-exempt RSSs. Operation is subject to the following two conditions

This device may not cause interference; and

This device must accept any interference, including interference that may cause undesired operation of the device.

Cet appareil est conforme aux CNR exempts de licence d'Industrie Canada. Le fonctionnement est soumis aux deux conditions suivantes

Ce dispositif ne peut causer des interférences; et

Cet appareil doit accepter toute interférence, y compris les interférences qui peuvent causer un mauvais fonctionnement de l'appareil.

Declaration of Conformity

BlackBox Biometrics, Inc. of 125 Tech Park Drive, Rochester, NY declares under our sole responsibility the Wireless Blast Gauge® System 7.0 & 7.1 are in conformity with the following standards:

Low Voltage Directive - 2014/35/EU

EMC Directive - 2014/30/EU

RoHS (Restriction of Hazardous Substances) Directive - 2011/65/EU

R&TTF Directive - 1999/5/FC

which is indicated and affirmed by the applied CE marking

Intended use of equipment: Measure exposure to blast overpressure in range 0.5-110 psi, at resolution of 0.05 psi.

Precautions for Safe Handling: The Blast Gauge® System has been designed and manufactured for use by qualified personnel for the purpose of measuring exposures to blast overpressure.

Safety considerations are contained in the Safety Data Sheet (SDS) available by request.


Storage: Shelf life is greater than 5 years in cool (15 °C - 25°C), dry and ventilated areas, which are subject to little temperature change. Do not place the article near heating equipment, nor expose to direct sunlight for long periods. Elevated temperatures can result in shortened battery life and degrade performance.

Disposal: This Product contains a lithium battery that is not rechargeable or replaceable. Normally the article has no odor. Under normal conditions of use, the battery, its electrode materials and its hazardous liquid electrolyte are non-reactive provided the battery integrity is maintained. The battery will release a pungent corrosive odor if leaking.

There are no federal regulations for disposal of lithium batteries. Individual states or localities establish their own guidelines for battery disposal, and should be contacted for any disposal guidelines that they may have for a lithium

BlackBox Biometrics, Inc. 125 Tech Park Drive, Rochester, NY 14623

585.329.3399 BlastGauge.com P0012 4.6

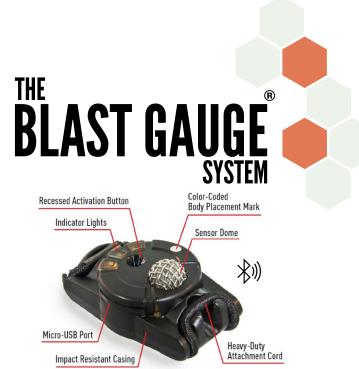

## WHAT YOU WILL NEED

 
D	120+	Gauges	
D	เสรเ	Gauges	

_				_	_		
ll	PC	with	Windows	/.	8	or	1(

Blast Gauge	System	Manager	software	(BGSM)
(steps 1-2)				

Micro-USB	cables	and	hub	for	activation	٦
- optional (	BGK7 k	(it)				

	ab	let	running	And	Iroid	™ or	iOS
--	----	-----	---------	-----	-------	------	-----



## Disclaimer

The Blast Gauge® System is not intended to diagnose or treat the blast victim's injuries. The first responder may use the Blast Gauge System data to characterize the blast overpressure and acceleration the subject sustained during an event, but will rely on standard diagnostic protocols to drive treatment of the subject's injuries.

Copyright © 2019 BlackBox Biometrics, Inc. All Rights Reserved.