

BLAUPUNKT

CAR MULTIMEDIA
SERIES 530




Enjoy it.

Bedienungsanleitung
Operating instructions
Notice d'utilisation
Istruzioni d'uso
Bedieningshandleiding
Bruksanvisning
Manual de instrucciones
Instruções de serviço

Betjeningsvejledning
Käyttöohjeet
Οδηγίες χειρισμού
Instrukcja obsługi
Használati útmutató
Инструкция по эксплуатации
Instrucțiuni de utilizare
Ръководство за работа


Controls – Device

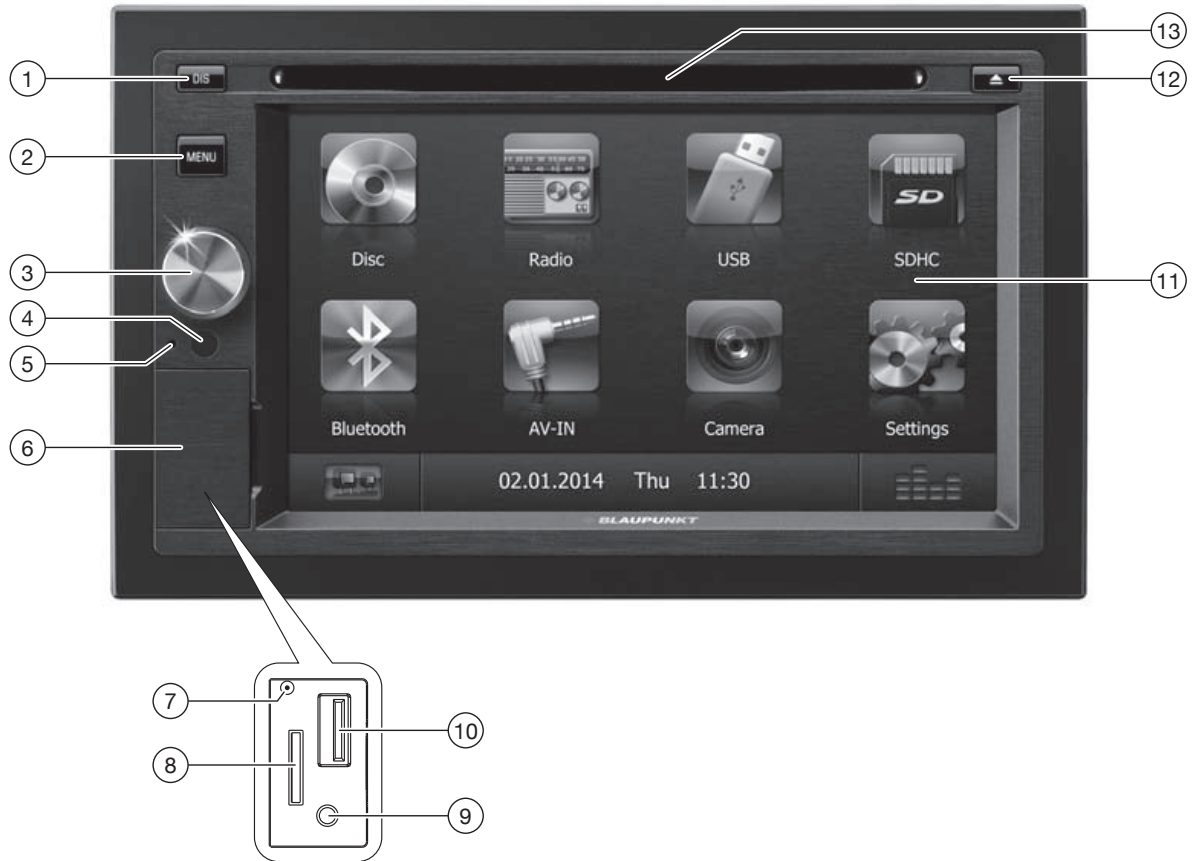

- ① **DIS** button
Short press: Adjust the display brightness
Long press: Switch off the display
 With inserted microSD card with navigation data:
Short press: Start the navigation
In navigation mode: Call up menu of active source
Long press: Switch off the display
- ② **MENU** button
Short press: Call up main menu
In the main menu: Call up menu of active source
Long press: Call up Bluetooth® function directly
- ③ Rotary/pushbutton
Short press: Switch on device
In operation: Mute audio source
Long press: Switch off device
Turn: Adjust volume
- ④ Infrared receiver for remote control
- ⑤ Microphone
- ⑥ Cover
- ⑦ Reset button
 Access only with open cover
 Restoring the original factory settings of the device.
 Caution! All personal settings will be lost!
- ⑧ microSD card reader
 Access only with open cover
 The card reader supports microSD cards on which either audio/video files or navigation data can be stored.
- ⑨ AV-IN socket
 Access only with open cover
- ⑩ USB socket
 Access only with open cover
- ⑪ Touchscreen user interface
- ⑫ ▲ button (Eject)
 Eject a DVD/CD
- ⑬ DVD/CD drive



Controls – Remote control

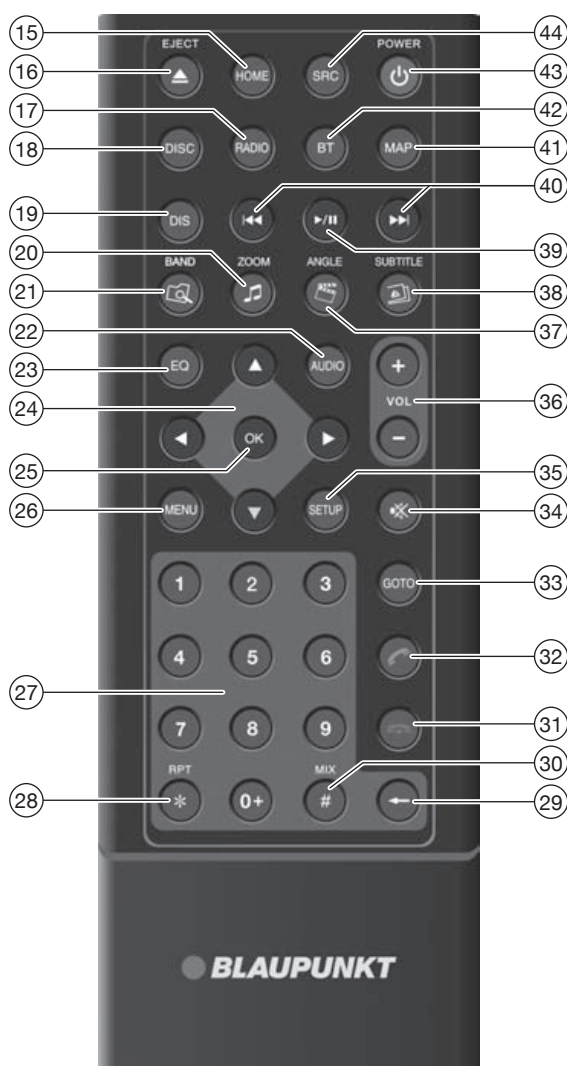

- ⑮ **HOME** button
Call up main menu
In the main menu: Call up menu of active source
- ⑯ **▲ / EJECT** button
Eject a DVD/CD
- ⑰ **RADIO** button
Start radio mode
- ⑱ **DISC** button
Starting DVD/CD mode
- ⑲ **DIS** button
Short press: Adjust the display brightness
Long press: Switch off the display
- ⑳ **🎵 / ZOOM** button
Call up overview of audio files
Zoom in on image area
- ㉑ **📁 / BAND** button
Call up folder overview
Select waveband/memory bank

- ㉒ **AUDIO** button
Select playback language (if available on DVD)
- ㉓ **EQ** button
Call up equaliser menu
- ㉔ **◀/▶ / ▲ / ▼** button
Navigate in menus/lists
Tuning into stations manually (▲ / ▼)
Calling stored stations (◀ / ▶)
- ㉕ **OK** button
Confirm selection
- ㉖ **MENU** button
Call up DVD menu
Display the folder/file list
- ㉗ Number buttons **0 - 9**
- ㉘ *** / RPT** button
Repeat function
- ㉙ **←** button
Delete last character of an entry
- ㉚ **# / MIX** button
Random track play
- ㉛ **📞** button
Ending/rejecting a phone call
- ㉜ **📞** button
Answer a call
- ㉝ **GOTO** button
Directly select title, chapter, movie or playtime
- ㉞ **🔇** button
Mute audio source
- ㉟ **SETUP** button
Call up settings menu
- ㊱ **VOL + / -** button
Adjusting the volume
- ㊲ **📺 / ANGLE** button
Call up overview of movies
Select camera viewing angle (if available on DVD)
- ㊳ **📺 / SUBTITLE** button
Call up overview of images
Select subtitle language (if available on DVD)
- ㊴ **▶/||** button
Start and interrupt playback
- ㊵ **◀◀/▶▶** button
Select title, chapter, movie
Fast searching
- ㊶ **MAP** button
Starting the navigation
- ㊷ **BT** button
Starting Bluetooth mode
- ㊸ **🔌 / POWER** button
Switching device on/off
- ㊹ **SRC** button
Select source

ENGLISH



Contents

Safety notes	25	DVD/CD/USB/microSDHC media playback.....	32
Symbols used	25	Basic information	32
Road safety	25	DVD/CD mode	32
General safety notes	25	USB data carrier	33
Declaration of conformity	25	microSDHC cards	33
Cleaning notes	25	DVD movie playback	33
Disposal notes.....	25	Audio playback from DVD/CD, USB or microSDHC ..	34
Scope of delivery	26	Video playback from DVD/CD, USB or microSDHC...	35
Placing the device in operation.....	26	Image playback from DVD/CD, USB or audioSDHC..	35
Switching on/off.....	26	Bluetooth mode.....	36
Volume.....	26	Starting Bluetooth mode	36
Main menu	26	Registering Bluetooth devices	36
Setting the reception area.....	26	Telephone mode - Bluetooth.....	36
Radio mode	27	Audio playback - Bluetooth.....	37
Start radio mode	27	Bluetooth settings	37
Select memory bank.....	27	External audio/video sources	38
Tuning into a station.....	27	AV-IN socket	38
Storing stations manually	27	Video input.....	38
Storing stations automatically (Travelstore)	27	External monitor.....	38
Scanning stations.....	27	Sound settings	38
Switching RDS on/off	27	Volume distribution (fader/balance)	38
Switching the REG function (regional programmes) on/off	28	Equalizer	39
Switching the AF (alternative frequencies) function on/off.....	28	Basic settings	39
Adjusting the seek tuning sensitivity	28	General	39
Selecting the programme type and starting seek tuning.....	28	Video.....	39
Switching priority for traffic announcements on/off.....	28	Sound.....	40
Navigation (only for devices with navigation)	28	Time	40
Loading navigation data	28	Language.....	40
Download of map data.....	28	Bluetooth	40
Starting the navigation.....	29	Volume.....	40
Initial startup	29	Useful information	40
Entering a destination.....	29	Warranty.....	40
Address	29	Service.....	40
Points of Interest	30	Connection diagram	312
Setting route options	31	Appendix.....	313
Map Settings.....	31		



Safety notes

The car sound system was manufactured according to the state of the art and established safety guidelines. Even so, dangers may occur if you do not observe the safety notes in these instructions.

These instructions are intended to familiarise you with the most important functions. Detailed information can be found on the Internet under www.blaupunkt.com.

- Read these instructions carefully and completely before using the car sound system.
- Keep the instructions at a location so that they are always accessible to all users.
- Always pass on the car sound system to third parties together with these instructions.

In addition, observe the instructions of the devices used in conjunction with this car sound system.

Symbols used

These instructions employ the following symbols:



DANGER!

Warns about injuries



CAUTION!

Warns about damages to the DVD/CD drive



DANGER!

Warns about high volume



The CE mark confirms the compliance with EU directives.

➔ Identifies a sequencing step

- Identifies a listing

Road safety

Observe the following notes about road safety:

- **Use your device in such a way that you can always safely control your vehicle.** In case of doubt, stop at a suitable location and operate your device while the vehicle is standing. As the driver, you may not use the applications that will distract you from traffic (depending on the scope of functions of the device, e.g. viewing videos, entering a destination).
- **Follow the driving recommendations during the route guidance only if you are not violating any traffic regulations!** Traffic signs and traffic regulations have always priority over driving recommendations.

- **Always listen at a moderate volume** to protect your hearing and to be able to hear acoustic warning signals (e.g. police sirens). During mute phases (e.g. when changing the audio source), changing the volume is not audible. Do not increase the volume during this mute phase.

General safety notes

Observe the following note to protect yourself against injuries:

Do not modify or open the device. The device contains a Class 1 laser that can cause injuries to your eyes.

Use as directed

This car sound system is intended for installation and operation in a vehicle with 12 V vehicle system voltage and must be installed in a DIN slot. Observe the output limits of the device. Repairs and installation, if necessary, should be performed by a specialist.

Installation instructions

You may only install the car sound system yourself if you are experienced in installing car sound systems and are very familiar with the electrical system of the vehicle. For this purpose, observe the connection diagram at the end of these instructions.

Declaration of conformity

The Blaupunkt Europe GmbH declares that the device complies with the basic requirements and the other relevant regulations of the directive 1999/5/EC.

The declaration of conformity can be found on the Internet under www.blaupunkt.com.

Cleaning notes

Solvents, cleaning and scouring agents as well as dashboard spray and plastics care product may contain ingredients that will damage the surface of the car sound system.

Use only a dry or slightly moistened cloth for cleaning the car sound system.

Disposal notes



Do not dispose of your old unit in the household trash!

Use the return and collection systems available to dispose of the old device, the remote control and exhausted batteries.



Scope of delivery

The scope of delivery includes:

- Car sound system
- Remote control (incl. battery)
- TMC tuner (only for devices with Europe navigation)
- microSD card with navigation data in the microSD card slot (only for devices with navigation)
- GPS antenna
- External Bluetooth microphone
- Getting started
- Support frame
- Small parts set
- Installation material
- Connecting cable

Placing the device in operation

Caution!

Transport securing screws

Ensure that the transport securing screws are removed before the startup of the device.

Switching on/off

Switching on/off with the rotary/pushbutton

- For switch-on, press the rotary/pushbutton ③.
- For switch-off, hold the rotary/pushbutton ③ pressed for more than 2 seconds.

Switching on/off via vehicle ignition

If the car sound system is connected with the vehicle ignition and it was switched off with the rotary/pushbutton ③, it is switched on or off with the ignition.

Volume

Adjusting the volume

You can adjust the volume in steps from 0 (off) to 50 (maximum).


- Turn the rotary/pushbutton ③ to change the volume.

Muting the car sound system (Mute)

- Briefly press the rotary/pushbutton ③ to mute the device or to reactivate the previous volume.

Main menu

In the main menu, you press the buttons on the touchscreen to call up the different sources and operating modes.

- Press the **MENU** button ②.
 - Or -
 - In the current source, press the [] button.
- The main menu is displayed.




As long as you do not select a new audio source, the last active audio source is played back.

Note:

The figures used in these instructions are intended to facilitate the explanations and details may deviate from your device.

Setting the reception area

This car sound system is designed for operation in different regions with different frequency ranges and station technologies. The factory default of the reception area is "Europe (FM/AM)". If you operate the car sound system outside of Europe, e.g. in the US or Asia, you may first have to set a suitable reception area in the menu:

- In the main menu, press the [**Settings**] button.
- The Settings menu is displayed.
- In the bottom area of the Settings menu, press the [**General**] button.
- The current setting is displayed behind "Radio region".
- Tap twice (double-click) on the [**Radio region**] button to display the list of available reception areas.
- Select the desired reception area by double-clicking. The list is hidden, the selected reception area is set.
- Press the [] button.
- The main menu is displayed again.



Radio mode

Start radio mode

- In the main menu, press the [**Radio**] button.
The radio playback menu is displayed.



Select memory bank

Different memory banks and wavebands are available. Up to 6 stations can be stored in each memory bank.

- Press the [**Radio**] button repeatedly until the desired memory bank is displayed.
FM1 → FM2 → FM3 → AM1 → AM2 → FM1

Tuning into a station

Tuning into stations manually

- Briefly press the [**Left Arrow**] or [**Right Arrow**] button once or several times to change the frequency in increments.

Enter broadcast frequency directly

If the frequency of the desired stations is known, it can be entered directly via the touchscreen.

- Press the [**More Options**] button to display additional operating options.
- Press the [**Keypad**] button.
A numeric keypad is displayed for the frequency input.
- Enter the frequency of the desired station with the numeric keypad.
- Press the [**OK**] button.
The radio playback menu is displayed, the station of the frequency entered is played back.

Starting station seek tuning

- Press the [**Left Arrow**] or [**Right Arrow**] button for approx. 2 seconds to start station seek tuning.
The radio tunes into the next receivable station.

Note:

For the reception area Europe: In the FM waveband, only traffic information stations are tuned into if the priority for traffic information is switched on.

Storing stations manually

- Select the desired memory bank with the [**Radio**] button.
- Set the desired station.
- Press one of the memory buttons [**P1**] - [**P6**] for approx. 2 seconds to store the current station at the button.
The station is stored.

Storing stations automatically (Travelstore)

With Travelstore, you can automatically search for and store the 6 FM stations offering the strongest reception in the region in the current memory bank. Any previously stored stations in this memory bank are deleted in the process.

- Select a memory bank.
- Press the [**More Options**] button to display additional operating options.
- Press the [**TS**] button.

The tuner starts the automatic station seek tuning. After the storing is completed, the radio plays the station at memory location 1 of the previously selected memory bank.

Note:

For the reception area Europe: With switched-on priority for traffic information, only traffic information stations are stored.

Scanning stations

You can use the scan function to play all the receivable stations of the current waveband for a few seconds.

- Press the [**Scan**] button.
The seek tuning searches for stations in the current waveband. Each receivable station is played for a few seconds in the process.
- Pressing the [**Scan**] button again selects the currently scanned station and plays it back.

Switching RDS on/off

Many FM stations broadcast an RDS (Radio Data System) signal in addition to their programme in the reception area Europe that allows additional functions, such as the display of the station name.

- Press the [**More Options**] button to display additional operating options.
- Press the [**RDS**] button to switch the RDS function on or off.
If the RDS function is switched on, **RDS** is displayed in white.
- Press the [**Hide Options**] button to hide the additional operating options, or wait until they are automatically hidden.



Switching the REG function (regional programmes) on/off

Some RDS stations divide their programmes into regional programmes with different contents at certain times. If the REG function is activated, the car sound system changes only to those alternate frequencies of the set station on which the same regional programme is being broadcast.

- Press the [**REG**] button to switch the REG function on or off.
If the REG function is switched on, **REG** is displayed in white.

Switching the AF (alternative frequencies) function on/off

If the AF function is activated, the car sound system automatically tunes into the best receivable frequency for the station that is currently set.

- Press the [**AF**] button to switch the AF function on or off.
If the AF function is switched on, **AF** is displayed in white.

Adjusting the seek tuning sensitivity

The seek tuning sensitivity decides whether the automatic station seek tuning finds only strong stations or also weaker stations that may be noisy.

- Press the [**LO**] or [**DX**] button to adjust the sensitivity of station seek tuning.
If **LO** is displayed, only stations with a strong signal are found during seek tuning.
If **DX** is displayed, stations with a strong and weak signal are found during seek tuning.

Selecting the programme type and starting seek tuning

You can select a programme type with the PTY function to purposefully search for stations, for example, that broadcast rock music or sport events.

- Press the [**••••**] button to display additional operating options.
- Press the [**PTY**] button to display the programme types.
- Scroll through the list with [**▼**] / [**▲**] and tap on the desired programme type to select it.
- Press the [**PTY**] button to start PTY seek tuning.
If a station broadcasts a programme with the selected programme type, this station is played back.

Switching priority for traffic announcements on/off

In the reception region Europe, an FM station can identify traffic announcements via an RDS signal. If priority for traffic reports is switched on, a traffic report is automatically switched through, even if the car sound system is currently not in radio mode.

- Press the [**TA**] button to switch the priority for traffic announcements on or off.
If the priority for traffic announcements is switched on, **TA** is displayed in white.

Navigation (only for devices with navigation)

Loading navigation data

The navigation software and map data are located on a microSD card. For devices with navigation, the device is delivered with the microSD card in the microSD card slot. To be able to use the navigation, the microSD card must be inserted in the card slot.

Important note:

The card reader supports microSD cards on which either audio/video files or navigation data can be stored. The microSD card for the navigation may not contain any other files besides the navigation data.

- Open the cover ^⑥ underneath the rotary/pushbutton.
- Insert the microSD card with its labelled side to the left (flattened corner to the top) and its contacts first into the card slot ^⑧ until it clicks into place.

Download of map data

To ensure that you have the latest version of the map data when you purchase the device, you have 30 days from the first GPS positioning to download the latest version of the map data once and free of charge to the standard microSD card from the Internet at www.naviextras.com.

You can always purchase map material from this site at a later time.

Important note:

If the microSD card is lost or damaged, the navigation map license associated with the card will be lost. In this case, the license must be purchased anew with a new microSD card.



Starting the navigation

- In the main menu, press [**Navigation**] to start the navigation mode.

The navigation menu is displayed. If you start the navigation for the first time, the setup wizard is displayed.

Initial startup

If you start the navigation for the first time, a setup wizard appears which performs the basic settings for the navigation.

- Adjust the language for the navigation. This can be a different language from the other functions of the device.
- Confirm the selection with [✓].
The end-user license agreement is displayed.
- Read the end-user license agreement. If you agree with the terms and conditions, press [✓].
The configuration wizard starts.
- Press [✓] to continue.
- Select a voice for the voice output of the navigation. Various voices are available for the languages.
- Confirm the selection with [✓].
- Specify the time format and the units for the navigation. Next, press [✓].
On the next screen, you can perform your preferred route settings.
- If necessary, change the entries by pressing the displayed menu entries.
- Press [✓], after you adjusted the settings.
- Touch [✓], to finish the configuration.

The navigation menu is displayed.



Entering a destination

Destinations can be entered in different ways: Via the address or as point of interest from the database of points of interest. Points of interest can be sights, museums, stadiums, petrol stations.

Address

- Open the navigation menu.
- Press on [**Find**].
The menu for the destination entry is displayed.




- Press [**Find Address**].
The menu for the address entry is displayed.



- Enter the country, city and street in succession as well as the intersection or house number. To do so, press the corresponding entry in the address entry menu.

A menu for text entry is displayed.

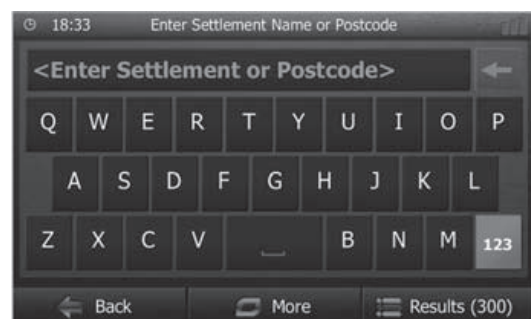

- Enter the desired destination via the keyboard.
With every character entered, the entry in the input line is automatically completed.






Navigation

- If the name of the desired destination is displayed in the address line, press the [✓] button.
The selected destination is displayed on the map.



- Press [Next] to start the route guidance.
The calculation of the route starts. Depending on the distance between start and destination, the route calculation may take some time.
After the route calculation is complete, the parameters of the route, such as distance and time, are displayed. In addition, the entire route is displayed on the map.

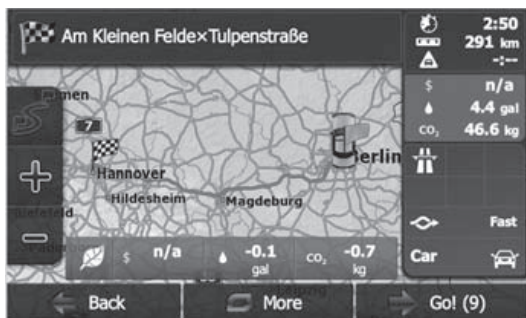

- Press [Go!] to start the route guidance.


Points of Interest

- Open the navigation menu.
- Press on [Find].
The menu for the destination entry is displayed.



- Press [Find Places].


The point of interest menu is displayed.

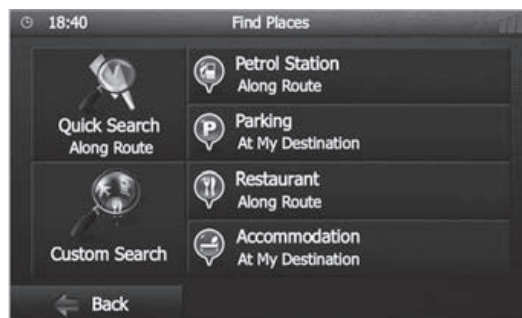

- You can select a point of interest from one of the four predefined categories **Petrol Station**, **Parking**, **Restaurant** and **Accommodation** or start a separate search.

- For example, press on [Petrol Station] to quickly find a petrol stations.

A list of petrol stations in the vicinity of the vehicle is displayed. The petrol stations are sorted by distance to vehicle.

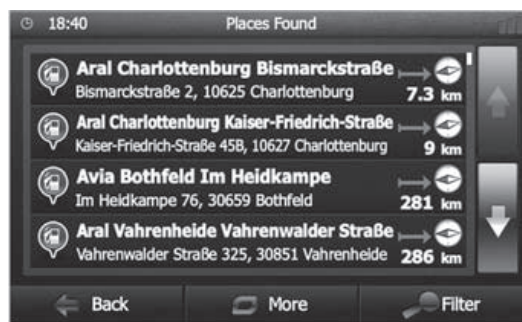

- Select a petrol station from the list by pressing on the list entry.

The petrol stations is displayed on the map.



- Press [Next].
The route course and the route data are displayed.
- Press [Go!] to start the route guidance.

