


OWNER'S MANUAL


Mobile Audio System

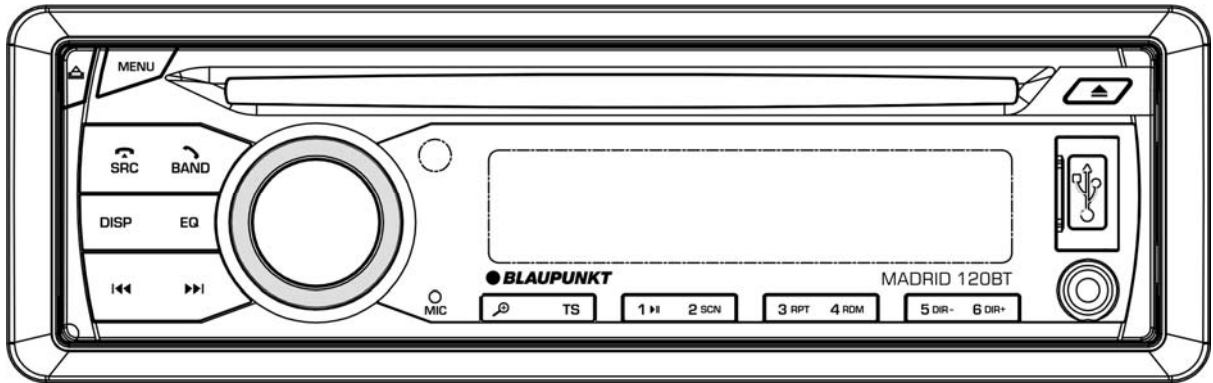

MADRID 120BT

- **PLL Synthesizer Stereo Radio**
- **CD/MP3/WMA Player**
- **Full Detachable Panel**
- **USB/ TF Interface**
- **3.5mm Jack Input**
- **Bluetooth function**
- **Electronic Shockproof (ESP) Function**


CONTENTS

Installation	3	RDS (Radio Data System)	
Take out screw before installation	3	operation	11
DIN Front-Mount (Method A).....	3	CD/ MP3/ WMA operation.....	12
Installing the unit	3	Switching to disc mode	12
Removing the unit	4	Selecting tracks/file	12
DIN Rear-Mount (Method B).....	5	Pausing playing.....	12
Using the detachable front panel	6	Scan play all tracks/files.....	12
Wiring Connection	7	Repeating the same track/file.....	12
Operation	8	Playing all tracks/files in random.....	12
Location of keys	8	Ejecting a disc.....	12
Turn on/off the unit.....	9	Select directory	
Mute.....	9	up/down.....	12
Faceplate release	9	Selecting files by  button	12
Sound adjustment.....	9	USB play operation	13
REG on/off	9	TF operation.....	13
TA volume	9	Disc notes	14
LOC on/off	9	Bluetooth operation.....	14
Stereo/mono	9	Remote control	17
Beep on/off	9	Specification	19
AREA.....	9	Trouble shooting	20
EQ	10		
XBASS.....	10		
Display information	10		
Set the time.....	10		
Liquid crystal display.....	10		
ESP function	10		
Auxiliary input	10		
Reset function.....	10		
Radio operation	10		
Switching to radio mode	10		
Selecting the frequency band.....	10		
Selecting station	10		
Automatic memory storing& program			
scanning.....	11		
Manually store station & recall preset			
station	11		

INSTALLATION

Notes:

 - Choose the mounting location where the unit will not interfere with the normal driving function of the driver.
- Before finally installing the unit, connect the wiring temporarily and make sure it is all connected up properly and the unit and the system work properly.
- Use only the parts included with the unit to ensure proper installation. The use of unauthorized parts can cause malfunctions.
- Consult with your nearest dealer if installation requires the drilling of holes or other modifications of the vehicle.
- Install the unit where it does not get in the driver's way and cannot injure the passenger if there is a sudden stop, like an emergency stop.
- If installation angle exceeds 30° from horizontal, the unit might not give its optimum performance.




- Avoid installing the unit where it would be subject to high temperature, such as from direct sunlight, or from hot air, from the heater, or where it would be subject to dust, dirt or excessive vibration.

DIN FRONT/REAR-MOUNT

This unit can be properly installed either from "Front" (conventional DIN Front-mount) or "Rear" (DIN Rear-mount installation, utilizing threaded screw holes at the sides of the unit chassis). For details, refer to the following illustrated installation methods.

TAKE OUT SCREW BEFORE INSTALLATION


Before install the unit, please remove the two screws.

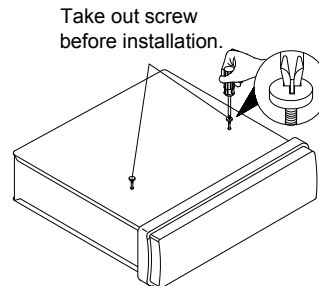

DIN FRONT-MOUNT (Method A)

Installation Opening

This unit can be installed in any dashboard having an opening as shown below:

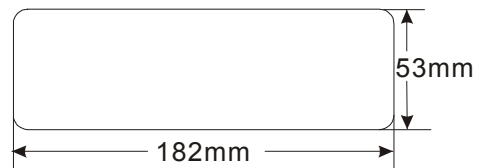


Installing the unit

Be sure you test all connections first, and then follow these steps to install the unit.


1. Make sure the ignition is turned off, and then disconnect the cable from the vehicle battery's negative (-) terminal.
2. Disconnect the wire harness and the antenna.
3. Press the release button on the front panel and remove the control panel (see the steps of "removing the front panel").
4. Lift the top of the outer trim ring then pull it out to remove it.
5. The two supplied keys release tabs inside the unit's sleeve so you can remove it. Insert the keys as far as

INSTALLATION

they will go (with the notches facing up) into the appropriate slots at the middle left and right sides of the unit. Then slide the sleeve off the back of the unit.

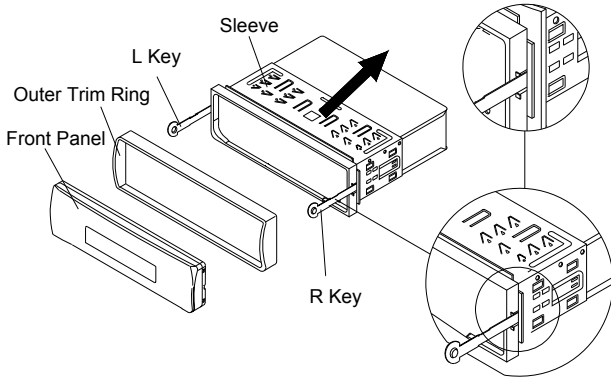


6. Mount the sleeve by inserting the sleeve into the opening of the dashboard and bend open the tabs located around the sleeve with a screwdriver. Not all tabs will be able to make contact, so examine which ones will be most effective. Bending open the appropriate tabs behind the dashboard to secure the sleeve in place.

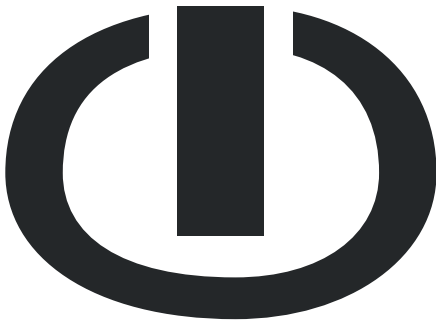

7. Reconnect the wire harness and the antenna and be careful not to pinch any wires or cables.
8. Slide the unit into the sleeve until it locks into place.
9. To further secure the unit, use the supplied metal strap to secure the

back of the unit in place. Use the supplied hardware (Hex Nut (M5mm) and Spring Washer) to attach one end of the strap to the mounting bolt on the back of the unit. If necessary, bend the metal strap to fit your vehicle's mounting area. Then use the supplied hardware (Tapping Screw (5x25mm) and Plain Washer) to attach the other end of metal strap to a solid metal part of the vehicle under the dashboard. This strap also helps ensure proper electrical grounding of the unit.

Note to install the short threading terminal of the mounting bolt to the back of the unit and the other long threading terminal to the dashboard.

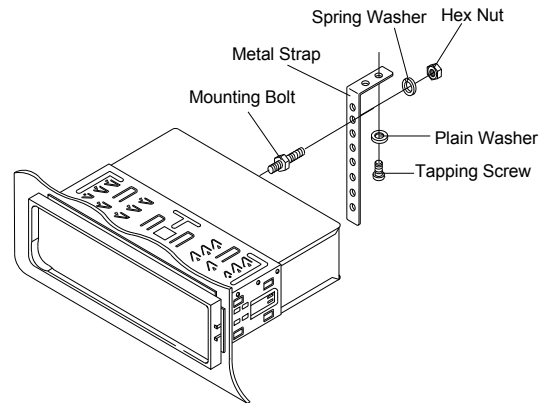

10. Reconnect the cable to the vehicle battery's negative (-) terminal. Then replace the outer trim ring and install the unit's front panel (see the steps of "installing the front panel").


Removing the unit

1. Make sure the ignition is turned off, then disconnect the cable from the vehicle battery's negative (-) terminal.
2. Remove the metal strap attached the back of the unit (if attached).
3. Press the release button to remove the

front panel.

INSTALLATION

4. Lift the top of the outer trim ring then pull it out to remove it.
5. Insert both of the supplied keys into the slots at the middle left and right sides of the unit, then pull the unit out of the dashboard.

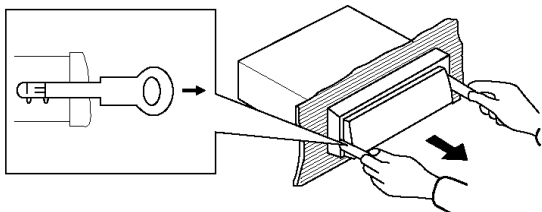



To fasten the unit to the factory radio mounting brackets.

Align the screw holes on the bracket with the screw holes on the unit, and then tighten the screws (5x5mm) on each side. Note: the outer trim ring, sleeve and the metal strap are not used for method B installation.

DIN REAR-MOUNT (Method B)

If your vehicle is a Nissan, Toyota, follow these mounting instructions.



Use the screw holes marked T (Toyota), N (Nissan) located on both sides of the unit to fasten the unit to the factory radio mounting brackets supplied with your vehicle.

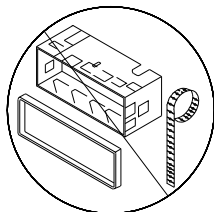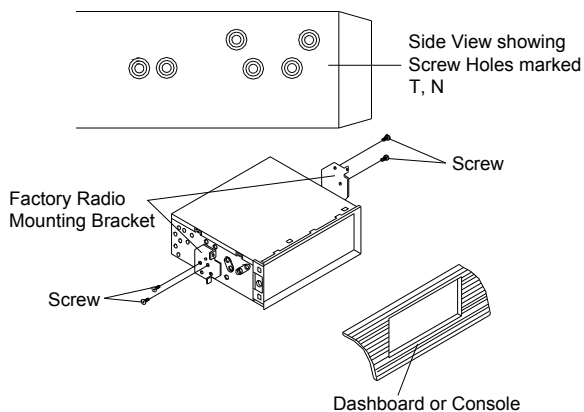


USING THE DETACHABLE FRONT PANEL

REMOVING THE FRONT PANEL

- Press the release button (▲) on the front panel and pull off the front panel.

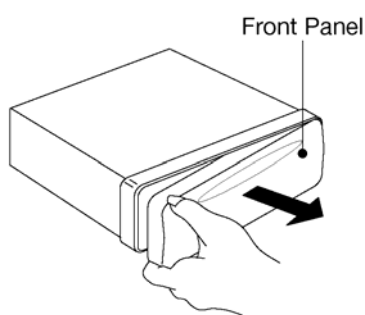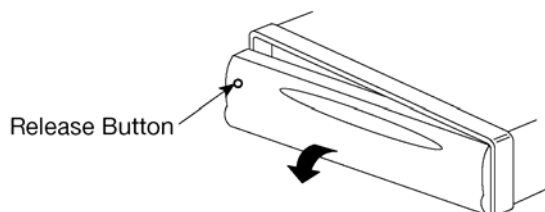


- Keep front panel into the case.

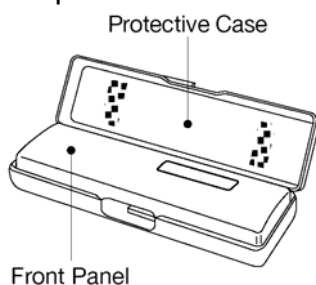

INSTALLING THE FRONT PANEL

To install the front panel, insert the panel into the housing and make sure the panel is properly installed. Otherwise, abnormality occurs on the display or some keys will not function properly.

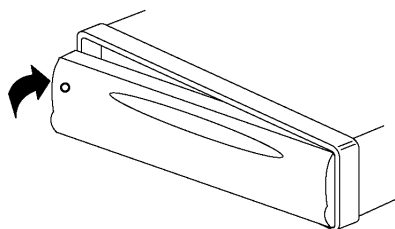


Precautions when handling

- Do not drop the front panel.
- Do not put pressure on the display or control buttons when removing or installing the front panel.
- Do not touch the contacts on the front panel or on the main unit body. It may result in poor electrical contact.
- If any dirt or foreign substances adhered on the contacts, they can be removed with a clean and dry cloth.
- Do not expose the front panel to high temperatures or direct sunlight in anywhere.
- Keep away any volatile agents (e.g. benzene, thinner, or insecticides) from touching the surface of the front panel
- Do not attempt to disassemble the front panel.


WIRING CONNECTION

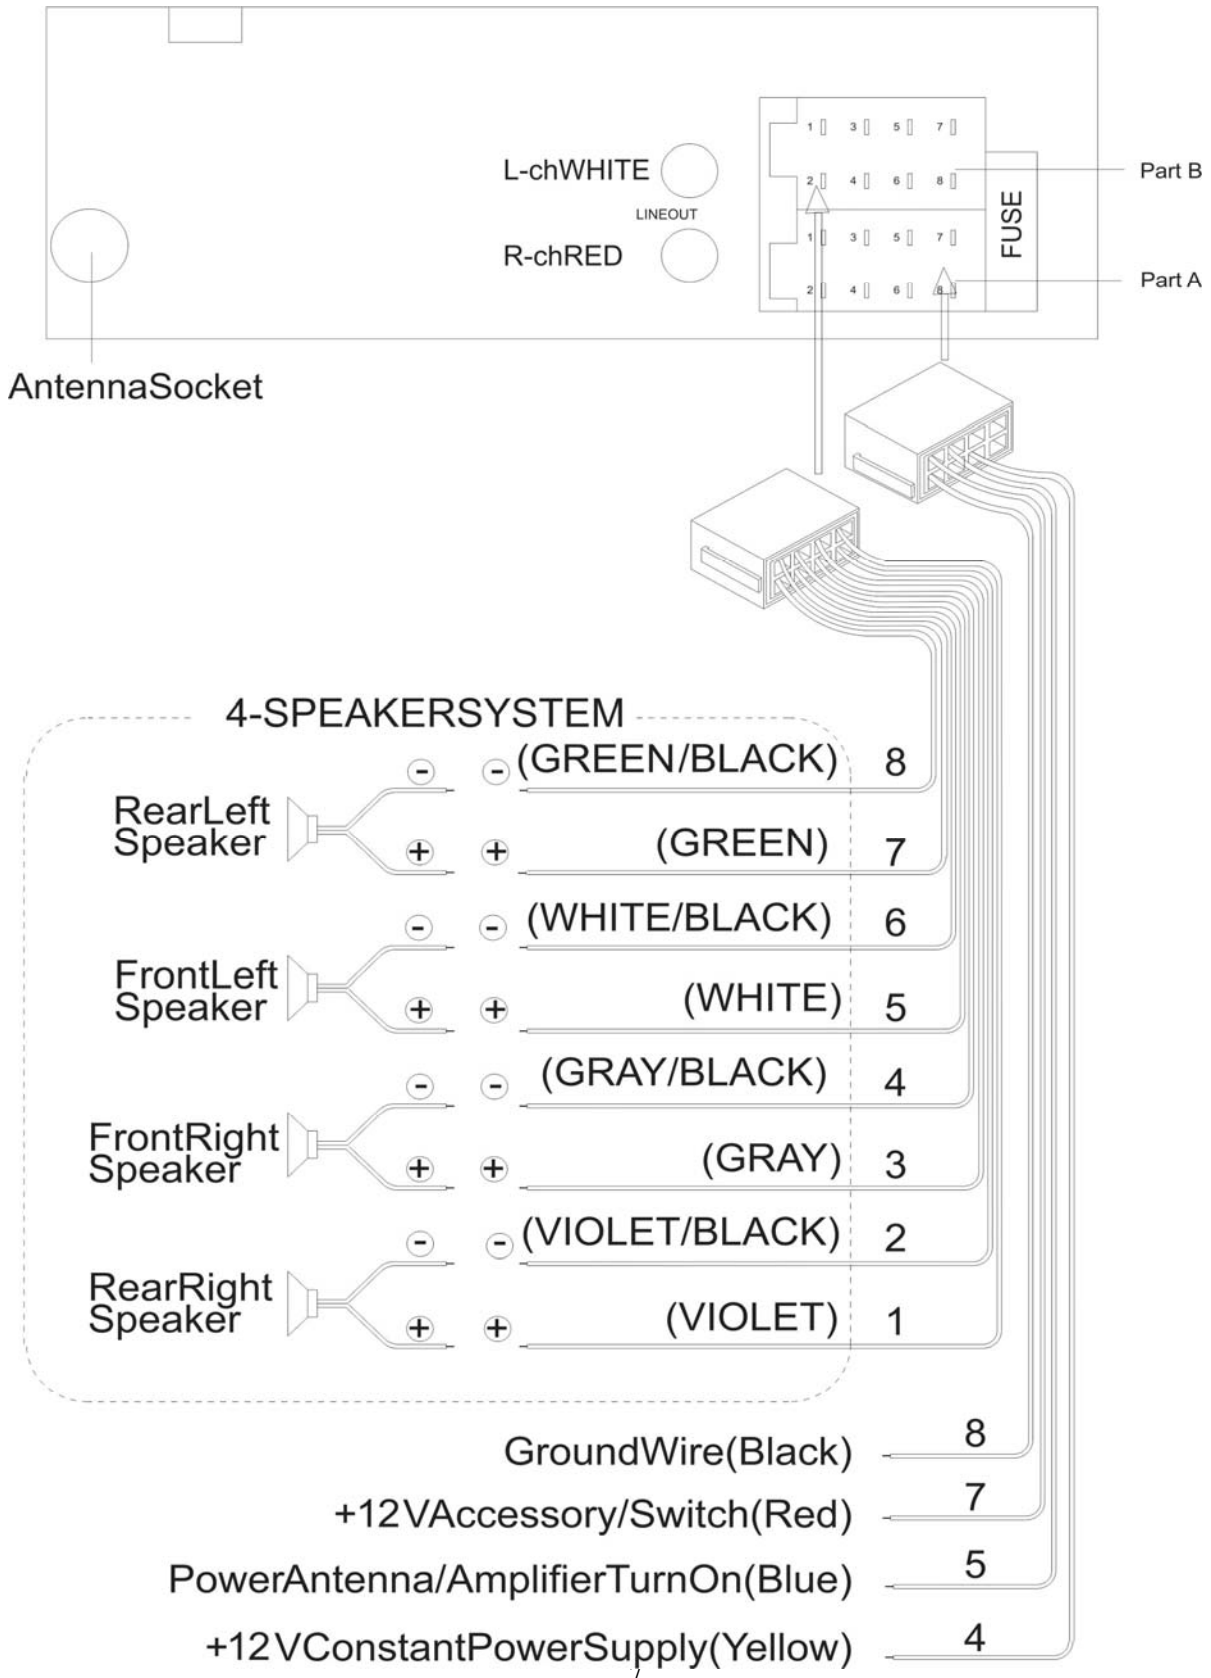


 



ISO CONNECTION

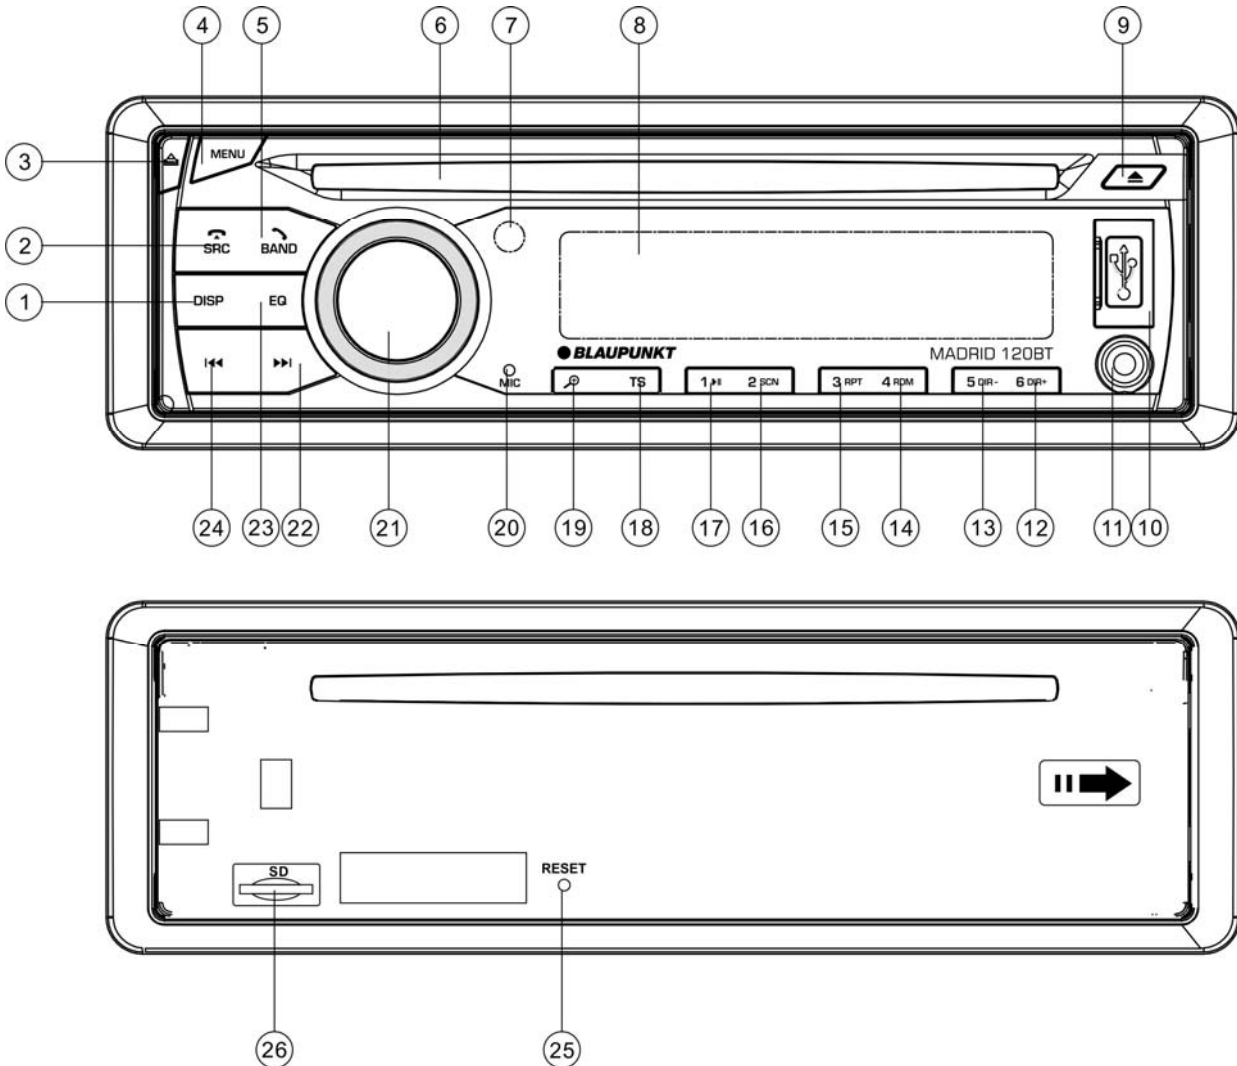

OPERATION

LOCATION OF KEYS



- | | |
|--|---|
| 1. “DISP” button. | 14. “4 RDM” button |
| 2. “SRC (source) ”/  button. | 15. “3 RPT ” button. |
| 3. “  ” (panel release) button. | 16. “2 SCN ” button. |
| 4. “MENU” button. | 17. “1  ” button. |
| 5. “BAND/  ” button.“ | 18. “TS” button. |
| 6. DISC SLOT | 19. “  ” (MP3 search)/BT menu button |
| 7. IR SENSOR | 20. Microphone. |
| 8. LCD ” display. | 21. “VOL / POWER/MUTE” button. |
| 9. EJECT button. | 22. “  ” (SEEK UP) button. |
| 10. USB port | 23. “EQ ” button. |
| 11. “AUX IN” jack. | 24. “  ” (SEEK DOWN) button. |
| 12. “6 DIR+” button. | 25. RESET button. |
| 13. “5 DIR-” button. | 26. TF card slot. |

OPERATION

TURN ON/OFF THE UNIT

Turn on the unit by pressing **⏻** button(21). When system is on. Press and hold **⏻** button (21) for 2 seconds to turn off the unit.

MUTE

Shortly press **MUTE** button(21) to muting the audio output. Press it again to recover output.

FACEPLATE RELEASE

Press release button **👉** (3) to detach the removable faceplate.

SOUND ADJUSTMENT

Press **MENU** button (4) shortly to select the desired adjustment mode. The adjustment mode will change in the following order:

-BAS-TRE-BAL-FAD- VOL-

BAS: bass

TRE: treble

BAL: balance

FAD: fader

VOL: volume

By rotating the audio knob (21) it is possible to adjust the desired sound quality.

Press and hold **MENU** button (4) for 2 seconds into the system menu as below:

AF– TA – REG – TAVOL – LOC – STEREO
– BEEP – AREA

AF: Alternative Frequencies

TA: Traffic Announcement

REG: region

TAVOL: TA volume

LOC: local

EUR: Europe

LAT: Latin

REG on/off

When AF function is on. In REG item of the system menu you can switch it on or off. Some broadcasting stations change their program from normal broadcasting to regional broadcasting for a certain time period. When region is on, the

current listening program remains unchanged.

TA volume

This function allows you to define the minimum volume for the traffic announcements. The adjustable range is 20~43. The defaulted value is 25. Rotate the volume knob to adjust the volume of the traffic.

LOC on/off

In this item rotating the audio knob (21) to turn on/off local function. In LOC ON mode the unit will reduce the receiving sensitivity when you search station. That means you can receive the station that sound is good. It will ignores the station that sound is not good. In LOC OFF mode it will increase the receiving sensitivity when you search the station. That means you can receive more stations.

STEREO/MONO

In this item rotating the audio knob (21) to choose STEREO or MONO mode. In STEREO mode you can receive FM stereo signal. In MONO mode the stereo station will be switched to monochrome. Sometimes when the signal is not good. If you change it to MONO mode. The noise will be reduced.

BEEP on/off

The car audio device is equipped with 2 beep tone modes. Rotate the volume knob to choose one.

- Beep on mode: The confirmation beep sound is heard whenever a button is pressed.

- Beep off mode: The confirmation beep is switched off whenever a key is pressed

AREA

In this item, rotate the volume to select

Europe/USA/LAT area.

OPERATION

EQ (Equalisation)

Press EQ button shortly to select the preset EQ mode as below:
FLAT-CLASSICS-POP-ROCK-EQ OFF

XBASS

Press and hold the EQ button for 2 seconds to active the XBASS function. Press it and hold it again to cancel this function.

DISPLAY INFORMATION

Press **DISP** button (1) to show the time for 5 seconds. Then it returns to show the information.

SET THE TIME

(1) Manual setting:

Press and hold **DISP** button for 2 seconds. The hour of the time will be flashing. Press **▶▶/◀◀** button to set the correct hour. Press **DISP** button shortly to change to minute. Also use **▶▶/◀◀** button to set the correct minute. After that press **DISP** button to confirm.

(2) Synchronize the time from the RDS station:

To receive a RDS station which has good signal(The AF symbol of the LCD does not flashing). Several minutes later the time will be synchronized to the correct time by the station' s signal. (Note: None RDS station does not have this function.)

LIQUID CRYSTAL DISPLAY

Exhibit current frequency and activated functions on the display.

ESP FUNCTION

The unit can be shockproof between ten seconds and twenty seconds.

AUXILIARY INPUT

The unit can be connected to a portable audio player through the **AUX IN** jack (11). Pressing **SRC** button to switch to **AUX** mode when inserted an audio source to the unit.

RESET FUNCTION

RESET button (25) must be activated with either a ballpoint pen or thin metal object.

The **RESET** button is to be activated for the following reasons:

- Initial installation of the unit when all wiring is completed.
- All the function buttons do not operate.
- Error symbol on the display.

Note: if press **RESET** button (25), the unit can't work yet, please use a cotton swab soaked in isopropyl alcohol to clean the socket on the front panel.

RADIO OPERATION

• SWITCHING TO RADIO MODE

Press **SRC** button (2) to select radio mode, the radio mode appears in the display together with the memory band and frequency.

• SELECTING THE RADIO BAND

At radio mode, press **BAND** button (5) to select the desired band.

The reception band will change in following order:

→FM1→ FM2→ FM3 → MW1(AM1)→ MW2(AM2)→

• SELECTING STATION

Press **▶▶** button (22) or **◀◀** button (24) shortly to activate automatic seek function. It will search up/down a station

automatically. Press for 2 seconds until "MANUAL" appears on the display, the manual tuning mode is selected. In this

OPERATION

mode you can turn up/down a step frequency one by one till searched a station. If both buttons have not been pressed for 5 seconds, it will return to seek tuning mode and "AUTO" appears on the display.

• **AUTOMATIC STORING & PROGRAM SCANNING**

- Automatic storing
- Press **TS** button (18) for 2 seconds the radio searches from the 87.5MHz frequency and checks the signal strength until one cycle search is finished. And then some strong stations are stored into the corresponding preset number button of the FM3 band. In the first cycle it will in LOCAL mode to receive the stronger station. If it is less than 6 pcs station it will searching stations in 2nd cycle in LOCAL OFF mode.
- Program scanning
Press **TS** button (18) shortly to scan preset station. The radio is holding at that preset number for 5 seconds with release mute.

• **MANUALLY STORE STATION & RECALL PRESET STATION**

To received a station, Press one of the preset button (1~6) for 2 seconds. The current station is stored into the number button. Shortly press the preset button (1~6) to directly listen the station that saved in the corresponding preset button.

RDS (RADIO DATA SYSTEM) OPERATION

- Setting RDS mode
In AF item of system menu. Rotating audio knob to switch on or off the AF

function.

Whenever AF is on, symbol "AF" appears on the display.

Program name is displayed on receiving a RDS station.

"AF" starts blinking if the broadcasting

signal getting worse.

"ALARM" will be displayed when an emergency broadcasting is received, meanwhile sound output level will be adjusted to the preset output level automatically when the volume control is set at minimum.

• **Regional Program Operation**

When AF function is on. In REG item of system menu. Rotating audio knob to turn the REG function on or off. When AF function is off. The REG function can't set to off.

Some broadcasting stations change their program from normal broadcasting to regional broadcasting for a certain time period. When region is on, the current listening program remains unchanged. When region is off, it allows the reception moves to the regional station.

• **Listening to Traffic Announcement**

In TA item of system menu. Rotating audio knob to switch on or off the TA function. When TA mode is on and a traffic announcement is transmitted: When the unit was in CD (MP3) or AUX mode, it will switch temporarily to radio mode.

Temporary switch over to an EON linked station when EON detects a traffic announcement on that other program.

If the volume level was under the threshold point it will be raised to the threshold point.

When TA mode is on, TA of individual segment is turned on. When a TP station is received, TP of individual

segment is turned on.

TA interruption function

The current traffic announcement is cancelled by turn the TA function to STOP (in TA item of **RDS** menu, when

the **TA** station is not received it only has on/off. But when received a TA station the TA item will have on/stop/off for your selection). But the **TA** mode will not be off.

OPERATION

unwanted **EON TA** switching, which **EON TA** information was received from current station and the radio switched to that **EON** linked station, but no Information could not be received because the **EON** linked station is located too far from that area. So the radio is switched back to current station again. In above operation, a customer listens to a wrong program or mute sound for a while. The RDS data used are the PI, PS, AF, TP, TA, EON and PTY data.

PS: Program Service Name

Broadcast station name data expressed in alphanumerically characters

AF: Alternative Frequencies

Frequency list of broadcasting stations transmitting the same program

TP: Traffic Program Identification

Identification data for traffic information-broadcasting station

TA: Traffic Announcement Identification Identification data showing traffic information is being transmitted or not.

EON: Enhanced Other Networks Information

Broadcasting information on PI, AF, TP, TA, etc, relating to networks other than the network used for current reception.

CD/MP3/WMA OPERATION

- **SWITCHING TO DISC MODE**

If there is no disc inserted in the driver:
Gently insert a disc with the printed

side uppermost into the disc compartment until you feel some resistance. The disc is drawn into the driver automatically. disc playback begins.

If a disc is already inserted in the driver:
Keep pressing **SRC** button (2) shortly until the DISC mode display appears.

- **SELECTING TRACKS/FILE**

Press **▶▶** button (22) or **◀◀** button (24) to move to the previous track/file or the following track/file. Track/file number

shows on the display.

Hold **▶▶** button (22) or **◀◀** button (24) to fast reverse or fast forward. disc play starts from when you release the button.

- **PAUSING PLAYING**

Press **▶||** button (17) to pause playing. Press it again to resume play.

- **SCAN PLAY ALL TRACKS/FILES**

Press **SCN** button (16) to play first several seconds of each track/file. Press again to stop intro play and listen to track/file.

- **REPEATING THE SAME TRACK/FILE**

Press **RPT** button (15) to continuously repeat the same track/file. Press it again to repeat all the tracks/files.

- **PLAYING ALL TRACKS IN RANDOM**

Press **RDM** button (14) to play all tracks /files in random order. Press it again to cancel the random function.



- **EJECTING A DISC**

Press **▲** button (9) to stop disc playing and eject the disc from the disc slot (6).

SELECT DIRECTORY UP/DOWN

Press **DIR-**button (13) or **DIR+** button (12) to select previous directory or next directory. If the MP3/WMA disc does not contain any directory, there is no function of pressing **DIR-** button (13) or


DIR+ button (12).

- **SELECTING FILES BY  BUTTON  (19)** is assigned as selection button in MP3/WMA operation.

When pressed, it is activated the selecting each mode as below:

Search from folder. => Search file number.


□ **Search From Folder**

Press  button for one time. It enter into “Searching from folder” mode. Rotating the VOL knob to select desired folder. After that press


OPERATION

MENU knob (4) to enter the folder.

Rotating knob (21) to select desired file. And then press MENU knob (4) again to play.

Press  button will back to previous folder.

□ **Search File number**

Press  button for two times. It is activated the “Search file number” mode. Rotating knob (21) to select the file number then press MENU knob (4) to confirm. The unit searches the selected file to play. You also can enter the file’s number. In front panel except there are 1~6 digit. please note 7/8/9/0 as below:

EQ: 7

 : 8

 : 9

DISP: 0.

If the file number was selected. The unit wait for seconds. The unit searches the track after few seconds, even if the **MENU** (4) button is not pressed.

USB PLAY OPERATION

In the front panel of the unit, there is an USB interface (10). You can connect an USB driver through this interface (10).

When you connect an USB driver through the interface, the unit will search the MP3/WMA files in the USB driver and start to play. If in other mode, you can also press

SRC button to select USB mode.

When playing the MP3/WMA files in the device, the operation is the same with the CD/MP3/WMA operation described above.

Note:

- The main unit can only support the standard USB-memory disc which is

approved by Microsoft.

- USB MP3 player is not a standard which means different brand name or different models have their own standard. So our product cannot support every MP3 player.
- When connecting an MP3 player which has normal battery (non rechargeable battery), you should remove the battery from the MP3 player then connect it to the USB interface. Otherwise, it may cause battery burst.

TF OPERATION

There is a TF interface (26) on the front panel of the unit.

When you insert a TF card in the TF interface, the unit will search the MP3/WMA files in the card and start to play. The operation is the same with the CD/MP3/WMA operation described above. If in other mode. You can also press **SRC** (1) button to select SD mode.

SUPPORTED MP3/WMA DECODING MODES

The main unit supports MP3/WMA

(Windows Media Audio) decoding modes as below.

Standard	Bit Rate (kbps)	Supports Mode
MPEG1 Audio Layer 3 (44.1kHz)	32,48,64,96,128,192,256,320	Stereo
Windows Media Audio (44.1kHz)	64,96,128,192	Stereo

The USB solution can support:

1. Folder: 500 max.
2. File: 999 max.
3. Depth of folder: 8 layers
4. Size: 32 GB

OPERATION

CAUTION

When there are important files in the USB device or TF card, do not connect it to the main unit to play. And don't play the CD-R/RW disc that has important files in it. Because any wrong operation may cause files loss. And our company assumes no responsibility for this.

DISC NOTES

A. Notes on discs:

Attempting to use non-standard shape

discs (e.g. square, star, heart) may

1. damage the unit. Be sure to use round shape CD discs only for this unit.
2. Do not stick paper or tape, etc, onto the label side or the recording side of any discs, as it may cause a malfunction.
3. Dirt, dust, scratches and warping discs will cause mis-operation.

B. Notes on CD-Rs (recordable CDs)/CD-RWs (rewritable CDs):

1. Be sure to use discs with following marks only for the unit to play:



2. The unit cannot play a CD-R and CD-RW that is not finalized. (Please refer to the manual of your CD-R/CD-RW recorder or

CD-R/CD-RW software for more information on finalization process).

3. Depending on the recording status, conditions of the disc and the

equipment used for the recording, some

CD-Rs/CD-RWs may not be played on this unit. (see *1)

- *1: To have more reliable play back, please 0

see following recommendations:

- a: Use CD-RWs with speed 1x to 4x and write with speed 1x to 2x.
- b. Use CD-Rs with speed 1x to 8x and write with speed 1x to 2x.
- c. Do not play a CD-RW which has been written for more than 5 times.

C. Notes on MP3 files (MP3 Version Only):

1. The disc must be in the ISO9660 level 1 or level 2 format, or Joliet or Romeo in the expansion format.
2. When naming a MP3 file, be sure the file name extension is ".MP3".
3. For a non-MP3 file, even though the file name extension is ".MP3", the unit cannot recognize it.

BLUETOOTH OPERATION

● PRE-PAIR FOR BLUETOOTH OPERATION

(i) When use Bluetooth, please make sure the mobile phone supports Bluetooth function.

(ii) For the different kind of mobile phone, Bluetooth emissive power has some difference. To get the best conversation quality, it is commended that the distance between the mobile phone and the unit is within 3m. And please don't put any metal object or any obstacle between the path of the mobile phone and the unit.

● PAIRING

1) On the mobile phone, select the Bluetooth set up. (Please refer to the instruction manual of your mobile phone on how to operate Bluetooth.)



2) "CAR KIT" should appear in the list on your

OPERATION


mobile phone, please select "CAR KIT" and then input password "0000". If it needs a password.

3) When successful paired, the BT mark will be displayed on LCD.


● Answering / rejecting an incoming call

When there is a phone is coming in. Press  key to answer the call. Press  key to reject the call.



● Hang up a call

When finished a conversation, press  key to hang up this call.

● Checking phone book / received / dialed / missed call (for Android and Iphone mobile)

Press **SRC** key it will show "PHONE" on the display. press  button it will show BOOK on the LCD. Then repeatedly press it will show items as below:

BOOK---RECEIVED---DIALED---MISSED---PHONE



In each item you can use  button or  button to check corresponding number.


Note: In the first time your mobile will receive a message that the unit will visit your mobile through Bluetooth. You have to agree and press "YES" to confirm.

(Note: It is necessary the phone number is in the phone not in the SIM card).

● Call out

1) Making an outgoing call by inputting the phone number manually.

Press **SRC** key it will show "PHONE" on the display. Press and hold  key. The LCD will become BLANK. Then you can enter phone number and press  key to confirm

the dialing. (Note: If you inputted wrong numbers. Press the  key to cancel wrong numbers.)

In front panel except there are 1~6 digit. please note 0/7/8/9/*/# as below:

0: DISP button.

7: EQ

8: 


9: 

*: press and hold 5 key for 2 seconds.


#: press and hold 6 key for 2 seconds.

1) Redialing an outgoing call

Press **SRC** key it will show "PHONE" on the


display. Press and hold  key for 2 seconds it will redial the last phone number.

2) Making an outgoing call from the phone book / received / dialed / missed call (for Android and Iphone mobile)

- Please reference “**Checking phone book / received / dialed / missed call**” item then select a phone number. Press  key to dial.

Note: If there are 2 pcs of SIM card in your mobile phone. When you dial out a call from the front panel of the unit. The call will be dialed out from the default card (or asking using which card each time dial out).




- **Transfer the call between mobile phone and unit**

During the talking mode, you can press  button (19) to transfer the phone call between the mobile phone and the unit.

- **Bluetooth audio (A2DP function)**

Press SRC button (2) it will show “PHONE” on the display. Then turn on the music player of your mobile phone and playing a song. The sound will come out from the speaker of the

OPERATION

unit. Press  key (22) of the front panel of the unit to pause/play the song. Press  button (22) or  button (24) to select next/previous song.




Connect/disconnect bluetooth

Press and hold SRC button for 2 seconds to connect/disconnect bluetooth.

REMOTE CONTROL HANDSET



FUNCTION KEY & CONTROL

1.  : Power ON/OFF Button.
2. VOL+ : Volume up button.
3. BAND: To select FM1/FM2/FM3/AM1/AM2 band in RADIO mode.
4.  :
In RADIO mode: Press it shortly for seek down function. Press and hold it for manual turn down.
In CD/MP3/WMA mode: Press it shortly for skip previous one track/file. Press and hold it for fast reverse.
5. VOL- : Volume down button.
6. EQ: It is EQ button.
7. 2 SCN: In RADIO mode: Number 2. See page 11 MANUALLY STORE STATION & RECALL PRESET STATION.
In CD/MP3/WMA mode: Press it turn on/off SCANNING function.
8. 1  : In RADIO mode: Number 1. See page 11 MANUALLY STORE STATION & RECALL PRESET STATION.
In CD/MP3/WMA mode: Press to pause/resume playing.
9. 4 RDM: In RADIO mode: Number 4. See page 11 MANUALLY STORE

STATION & RECALL PRESET STATION.



In CD/MP3/WMA mode: turn on/off random function.


10. 5 DIR-:

In RADIO mode: Number 5. See page 11 MANUALLY STORE STATION & RECALL PRESET STATION.

In MP3/WMA mode: Press it back to previous folder.

11. SRC:

It is SRC/  key. When no coming call, it is SRC function. When incoming a call or finish a call. It is  key.

12. 

Press it to mute/recover the sound.

13.  :

In RADIO mode: It is TS function. See page 11 AUTOMATIC STORING & PROGRAM SCANNING

REMOTE CONTROL HANDSET

In MP3/WMA mode: It is file searching function. (See page 12).

In PHONE mode. Its function seeing page 15 BLUETOOTH OPERATION

14. SEL:

Press it shortly for audio menu. Press and hold for system menu (See page 9). In MP3/WMA searching mode press it for confirm function (See page 13) .

15.  :

In RADIO mode: Press it shortly for seek down function. Press and hold it for manual turn up.

In CD/MP3/WMA mode: Press it shortly for skip next one track/file. Press and hold it for fast forward.

16. DISP:

Press DISP to show the time.

17. 3 RPT:

In RADIO mode: Number 3. See page 11 MANUALLY STORE STATION & RECALL PRESET STATION.

In CD/MP3/WMA mode: Press it turn on/off repeat function.

18. 6 DIR+:

In RADIO mode: Number 6. See page 11 MANUALLY STORE STATION & RECALL PRESET STATION.

In MP3/WMA mode: Press it to next folder.

SPECIFICATION

GENERAL

Power Supply Requirements	: DC 12 Volts, Negative Ground
Chassis Dimensions	: 178 (W) x 160 (D) x 50 (H)
Tone Controls	
- Bass (at 100 Hz)	: ±10 dB
- Treble (at 10 kHz)	: ±10 dB
- Maximum Output Power	: 4x40 watts
- Current Drain	: 10 Ampere (max.) (For Normal Power Version)

CD PLAYER

Signal to Noise Ratio	: More than 55 dB
Channel Separation	: More than 45 dB
Frequency Response	: 40Hz – 18 kHz

RADIO

FM

Frequency Coverage	87.5 to 108 MHz
IF	10.7 MHz
Sensitivity (S/N=30dB)	4µV
Stereo Separation	>25dB

AM(MW)

Frequency Coverage	522 to 1620 kHz
IF	450 kHz
Sensitivity (S/N=20dB)	36 dBuV

TROUBLE SHOOTING

Before going through the checklist, check wiring connection. If any of the problems persist after checklist has been made, consult your nearest service dealer.

Symptom	Cause	Solution
No power.	The car ignition switch is not on.	If the power supply is connected to the car accessory circuits, but the engine is not moving, switch the ignition key to "ACC".
	The fuse is blown.	Replace the fuse.
Disc cannot be loaded or ejected.	Presence of CD disc inside the player.	Remove the disc in the player, then put a new one.
	Inserting the disc in reverse direction.	Insert the compact disc with the label facing upward.
	Compact disc is extremely dirty or defective disc.	Clean the disc or try to play a new one.
	Temperature inside the car is too high.	Cool off or until the ambient temperature return to normal.
	Condensation.	Leave the player off for an hour or so, then try again.
No sound.	Volume is in minimum	Adjust volume to a desired level.
	Wiring is not properly connected.	Check wiring connection.
Sound skips.	The installation angle is more than 30 degree.	Adjust the installation angle less than 30 degree.
	The disc is extremely dirty or defective disc.	Clean the compact disc, then try to play a new one.
The operation keys do not	The built-in microcomputer is not operating properly	Press the RESET button. Front panel is not properly fix into

work.	due to noise.	its place.
The radio does not work. The radio station automatic selection does not work.	The antenna cable is not connected.	Insert the antenna cable firmly.
	The signals are too weak.	Select a station manually.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.