





Premises Pager System[®]

CommPass[®] Pagers

GuestPass[™] Pagers

MediPass[™] Pagers

ShopperPass[™] Pagers

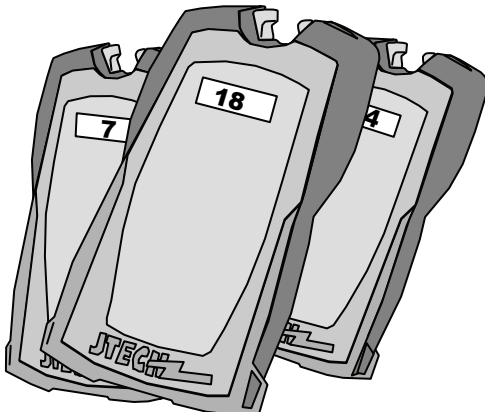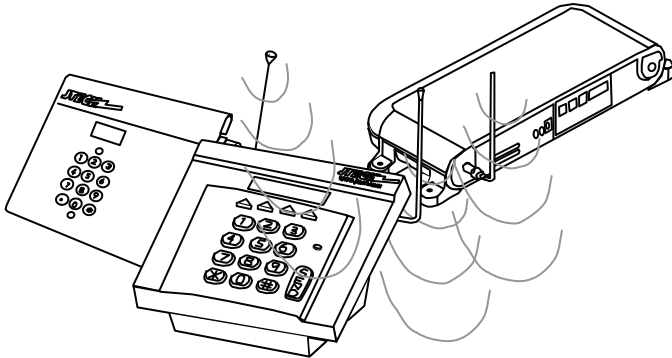


Introduction:

Congratulations on your purchase of the JTECH Paging System. Please take a few minutes to review this manual prior to installing and operating your system.

Please inspect the System upon receipt. If the contents appear to be damaged, notify the shipper immediately to file a claim and notify JTECH Customer Care. If any component is missing, please contact JTECH Customer Care.

If you have any questions or need assistance, please call JTECH Customer Care at 800-321-6221 or 561-997-0772, option 6.

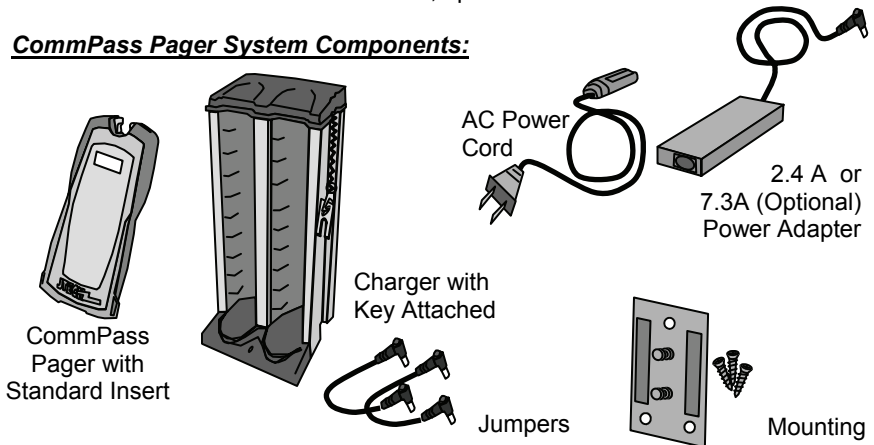CommPass Pager System Components:**Pager Certifications:****FCC statement:**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Caution:


Changes or modifications not expressly approved by the part responsible for compliance could void the user's authority to operate the equipment.

RSS-Gen:

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device. Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Pager Dimensions/Weight:

- LxWxH 5.4x 2.3x 0.9" (137x58x23mm)
- Weight 3.5oz (99gm)


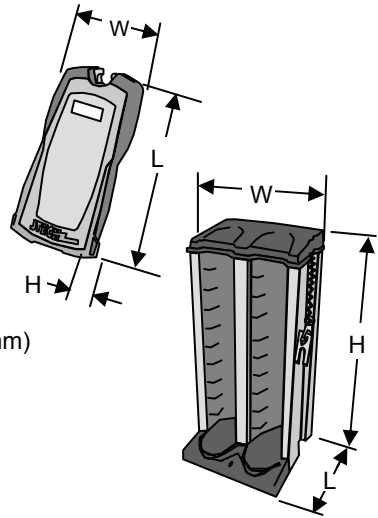


Charger Dimensions/Weight:

- LxWxH 7.3x 6.9x 13.1" (184x176x333mm)
- Weight (Empty) 6.6lbs (3.0Kg)
- Weight (With 20 Pagers) 11.0lbs (5.0Kg)



Multiple Chargers:

- A single *Charger* can hold up to 20 *Pagers*.
- Combine two or three *Chargers* using the optional *Jumpers* and 7.3A *Power Adapter*.

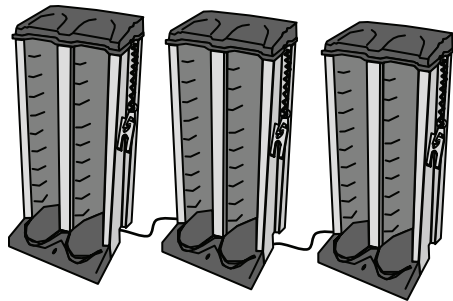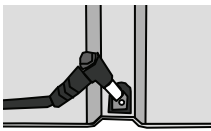

Mounting Chargers:


- *Chargers* can be wall or counter top mounted using the supplied *Mounting Plate*.
- *Wood screws* are include for table or shelf mounting.
- If mounted to a shelf or table, the four rubber feet on the bottom of the *Charger* must be removed.
- Wall anchor hardware is user supplied.

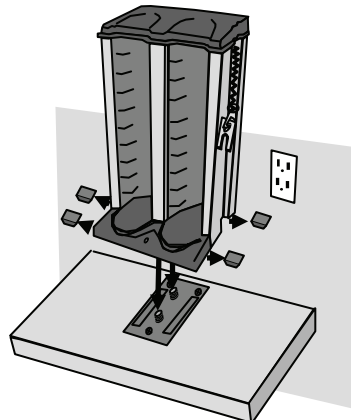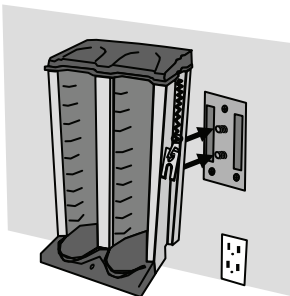


Connecting Power:

1. Insert the *Power Adapter* plug into the jack at the bottom of the *Charger*.


Power Adapter Plug

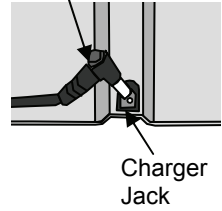

2. Connect the *Power Adapter* to the *Power Cord*.

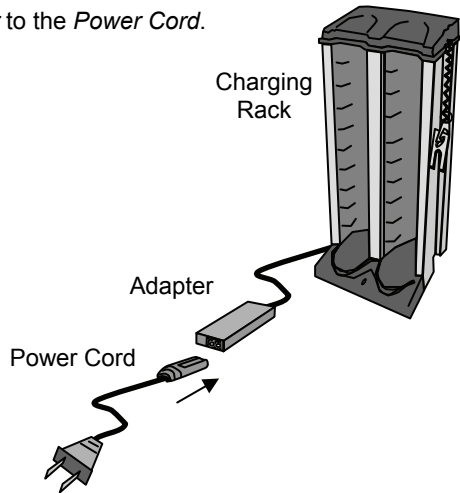

3. Plug the *Power Cord* into a 120VAC outlet.
4. The green LED on the *Charger* will light (ON).

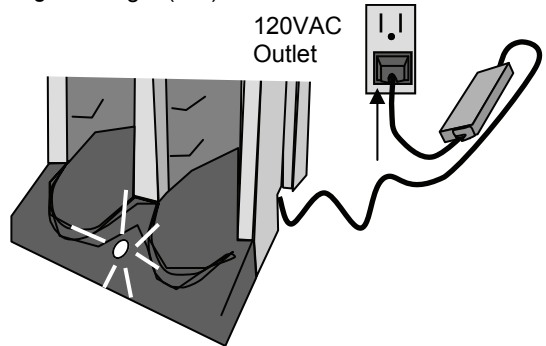


5. Once the *Charger* is ON, the *Pagers* can be inserted.

Charging Pagers:

- *Pagers* are turned OFF for shipment from JTECH.
- When first received, *Pagers* are to be charged for a minimum of 3 hours prior to use.
- This first charge will also turn ON the *Pagers*.
- To charge:

1. Insert *Pagers* into the empty *Charger* locations.
2. Once in the powered (ON) *Charger*, each *Pager's* LED will light:
3. The LED color indicates charging condition.


- ▶ Flashing yellow light = Battery charge very low. Charge needed. Do not use the *Pager*.
- ▶ Solid yellow light = Charge Needed.
- ▶ Solid green light = OK to use.

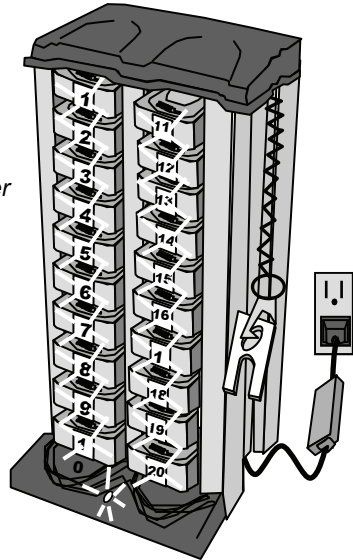

- The charging system is two stage, with a fast initial charge and then a final maintenance charge.
- *Pagers* in use and returned to the *Charger* within 24 hours will fully charge within three hours.
- If not returned within 24 hours, charging time of up to eight hours may be required to fully charge batteries.


Charging and Storing Pagers:

- ▶ To maintain maximum battery capacity, store *Pagers* in the powered (ON) *Charger*.
- ▶ If *Pagers* are left uncharged for more than 4 days, it is recommended to disconnect the batteries until their next use. See “*Replacing the Battery*” on page 10 for instructions.
- ▶ If left uncharged for extended periods of time, *Pager* batteries can damage beyond repair and will need to be replaced.
- ▶ When charged and stored properly, a battery life of 18-24 months can be expected before replacement is suggested.

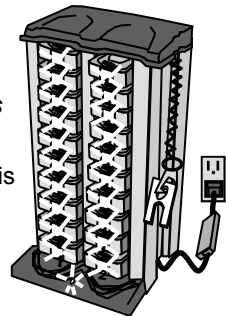


Paging Using a Desktop Transmitter:


1. Remove the *Pager* you wish to page from the *Charger*.

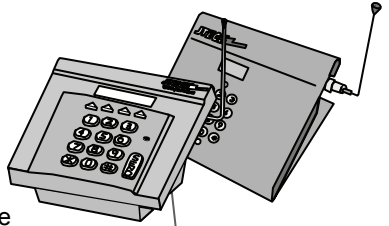

2. The *Pager* will flash and vibrate to confirm it is ready for use.

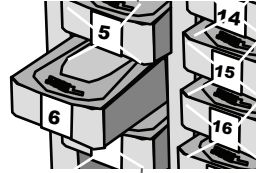

3. The *Pager* LED in the front of the *Pager* will continue to flash every 3-4 seconds to confirm the *Pager* is ON and ready to accept a page.

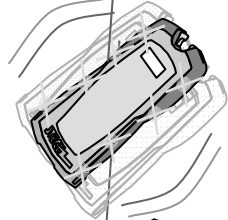


4. Enter the number of the *Pager* you wish to page on the *Transmitter* or *Remote Keypad*.



5. Press # to send the page. Press the # or SEND button if using an *IntelFlex Desktop Transmitter*.




6. The XMIT light on the *Transmitter* will turn ON, confirming the page is being sent. If using a *Remote Keypad*, the *Keypad* XMIT light does not ON.

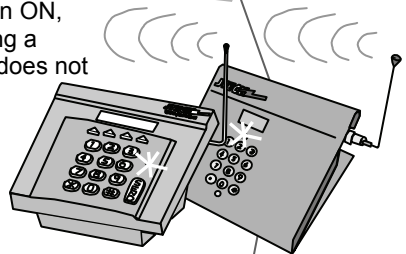


7. The *Pager* will vibrate, flash tone or speak as required.

8. See "Enter Pager #" Menu Functions in your *Transmitter* manual for more information.

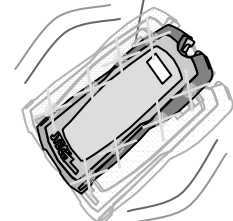


Paging Using a 8205 or 8214 SmartAlert with RS232 and Telephone Transmitter Paging using the Telephone:


1. Remove the *Pager* you wish to page from the *Charger*.

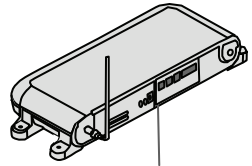

2. The *Pager* will flash and vibrate to confirm it is ready for use.

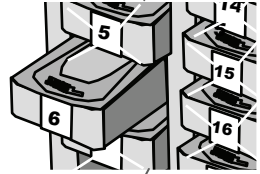

3. The *Pager* charge LED will continue to flash, confirming it is ready to receive a page.

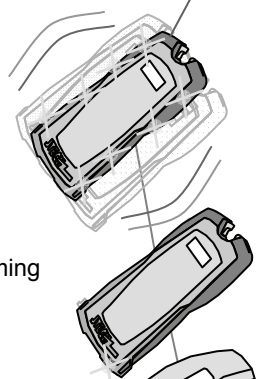

4. Pick up the telephone and listen for the dial tone.

5. Dial the telephone number that has been assigned to the *Transmitter*.

6. Listen for a beep from the telephone that confirms the *Transmitter* is ready.

7. Within 8-10 seconds, use the telephone keypad:


- a. Enter the *Pager* number (up to 4 digits).
- b. Press the # key to send the page.

8. A beep will be heard on the telephone that confirms the message was sent.

9. Hang up the telephone.


10. The *Pager* will receive a single, one second vibration (factory setting).

11. See Paging instructions in your *Transmitter* manual for more information.

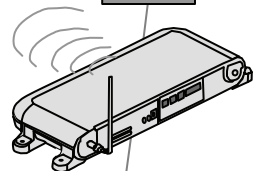

Replace Inserts:


1. Insert the *KEY* into the slots on the end of the *Pager*, until the *Clear Plastic Cover* unlocks.

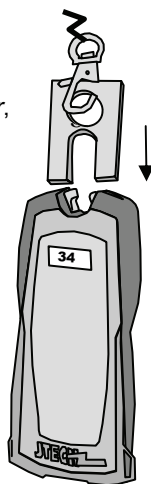

2. Remove the *Clear Plastic Cover* and *Insert*.




3. Replace the *Insert* and “snap” the *Clear Plastic Cover* back into place.

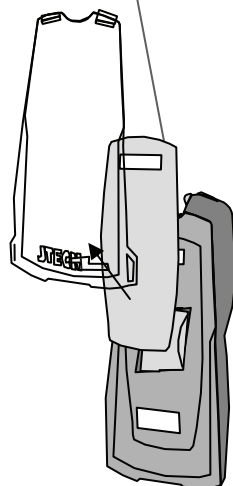


Blank Inserts:

- *Blank Promotional Sheets* can be ordered from JTECH as needed.
- *Sheets* contain eight *Inserts* per sheet and perforated for removal.
- *Sheets* are white in color and can be printed on using a standard printer.
- *Custom Inserts* can also be professionally printed (call your JTECH sales representative for more details).

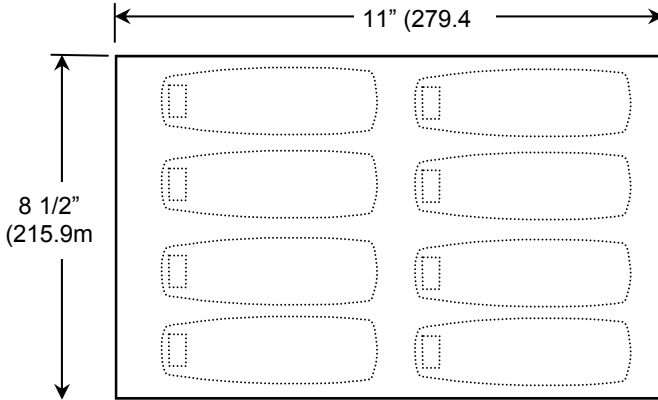


Insert Dimensions:

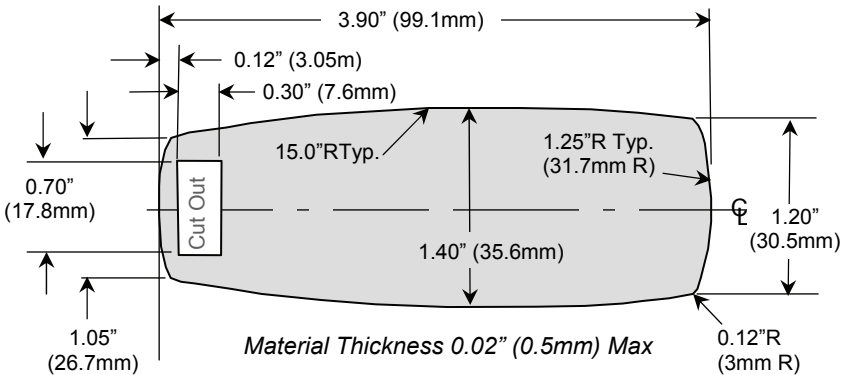


Replacing the Battery:


- Batteries that no longer charge properly or have a reduced operating time can be replaced by the user.
- Replacement battery packs can be ordered from JTECH.
- To replace:
 1. Insert the *Key* into the slots on the end of the *Pager* until the *Clear Plastic Cover* unlocks.

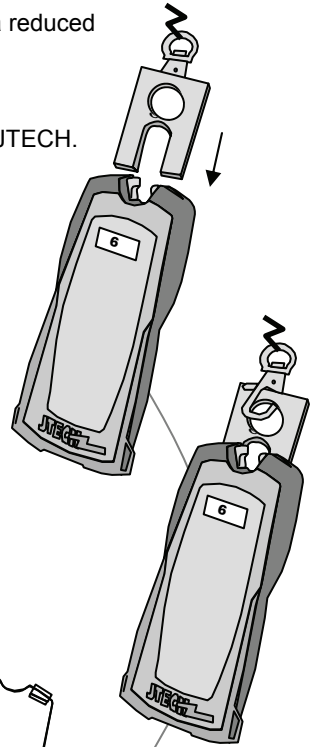

2. Remove the *Clear Plastic Cover* and *Insert*.

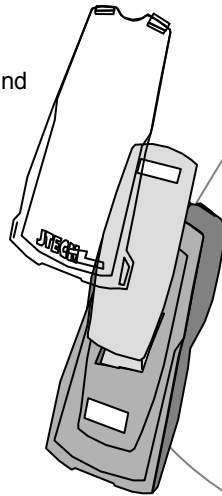

3. Insert the *Key* into the space on the left side of the battery compartment and carefully pry the battery out.

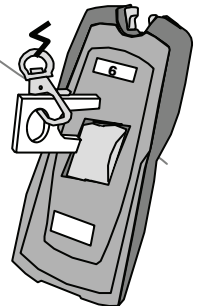

4. Unplug the battery from the *Pager*.

5. Dispose of the Nickel Metal Hydride battery pack at any retail department or home improvement stores that recycles rechargeable batteries.





6. Plug the new battery pack into the *Pager*.

7. Move any excess wire to the into the compartment's left side while inserting the battery into the *Pager*.

8. Battery wires must be on the left side of the *Pager* and not under the battery to assemble the pager properly.

9. Replace the *Insert* and "snap" the *Clear Plastic Cover* back into place.

10. Insert the *Pager* into the *Charger* and fully charge the battery.

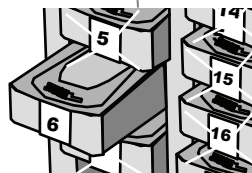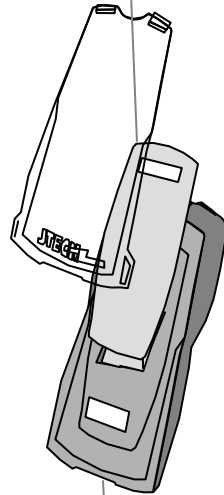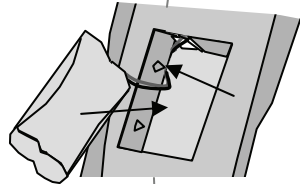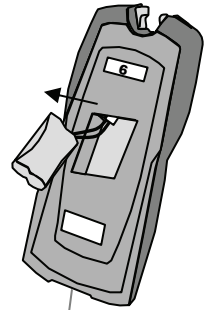

SYSTEM WARRANTY

JTECH Communications, Inc. warrants its equipment to be free from defects in materials and workmanship for a period of one year. Its obligation under this warranty is limited to repairing or replacing, at its own sole option, any such defective products. Products must be returned with transportation charges prepaid. All warranty returns must also include a JTECH-issued RMA number, clearly displayed on the interior and exterior of the package(s). This warranty does not apply to equipment which has been damaged by accident, negligence or misapplication or has been altered or modified in any way. This warranty applies only to the original purchaser.

The following are not covered under our one-year warranty: adapters, antennas, user-replaceable batteries, pager belt clips, pager promobacks, pager battery doors, or pager neck chains. Warranty also excludes liquid damage to master transmitter/controller (including base station, modules and any desktop or rack mount appliances), pagers, chargers or tablet hardware, lightning strikes or other acts of God that could affect the performance of the master transmitter/controller, pagers and peripherals.



6413 Congress Avenue
Suite 150
Boca Raton, Florida 33487
800-321-6221

Part Number 321032B4

© 2012, JTECH Communications, Inc. All Rights Reserved.