



## Introduction

The BlueAnt Z9 Dual Microphone portable mono headset utilizes Bluetooth Wireless Technology. Its dual microphones combined with the BlueAnt Voice Isolation Technology™ software, provide the BlueAnt Z9 with revolutionary clear and clean voice input enabling high quality voice communications. Winner of the prestigious CES Design and Engineering award, the BlueAnt Z9 is the next generation in Noise Suppression, Echo Cancellation and Wind Noise Reduction for Bluetooth headsets.

There are two settings of Voice Isolation -  $\ensuremath{\textbf{STANDARD}}$  and  $\ensuremath{\textbf{MAX}}$ .

Voice Isolation Standard is for use in normal environments and gives you a natural Voice Isolation Max gives you superior voice clarity in a wide variety of high noise areas.

🐜 BlueAnt®

### Features of the BlueAnt Z9

- Winner of the CES 2007 Innovations Design & Engineering Award
- Two microphones for pure speech ٠
- Voice Isolation Technology ™ BlueAnt's revolutionary Digital Signal ٠
- Processor (DSP) software • During a call, users can switch between two Voice Isolation modes -
- Standard and Max
- This world class DSP provides echo suppression, noise reduction and wind • noise reduction which separates the desired voice signal from background noise enabling crystal clear conversation in even the noisiest of environments
- Incorporates 'On-the-Fly' phone switching with up to 3 paired devices ٠
- Automatic connection & reconnection notification
- Different ringtones for known and unknown contacts •
- Innovative tie clip for attaching to shirt or cuff, when not in use ٠ Small & lightweight (1.5" in length & weighs only 0.35 oz) (41mm &10grams)
- . ٠ Stylish, translucent ear hook
- Up to 5.5 hrs talk-time or 200 hrs standby •
- 2 Year Replacement Warranty ٠
- Bluetooth v2.0 .



## What is Bluetooth wireless technology?

Bluetooth is the most advanced cable-replacement technology available today. It enables effortless wireless connections between your Bluetooth devices within a range of up to 10m (30 ft).

# What devices work with the Z9 Dual Microphone?

Your headset is a Bluetooth V2.0 qualified product and supports both the Headset and Handsfree Bluetooth profiles. The Z9 can store information and wirelessly interact with up to three different Bluetooth V1.1, V1.2 or V2.0 compliant devices (backward and forward compatible), including mobile phones, PDA's, PC's / Mac's or any Bluetooth enabled device that supports Headset profile or Handsfree profile. **This manual focuses on how to use your headset with your Bluetooth enabled phone.** 


#### What's in the Package?

> 3 x Translucent Ear hooks

- > A BlueAnt Z9 Dual Microphone Bluetooth Headset
- > Quick Start Guide
  - > User Manual

- > USB Cable
- > AC Adaptor

Warranty Card

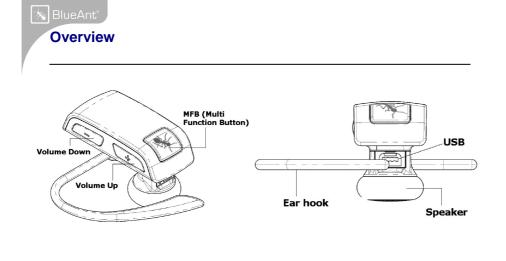



# **Getting Started**

Before you can use your headset, you must do the following two things:

1. Fully charge your headset using one of the chargers provided.

2. Pair your headset with a Bluetooth enabled device, e.g. Cell phone, PDA, Computer

#### Charging

Your Z9 comes with a built-in rechargeable battery. For first time use, you must fully charge your Z9. During charging, the indicator shows a steady Red light. When the battery is fully charged, the Red light will turn off. It takes 120-150 minutes to fully charge the battery. The more you talk using your headset, the less standby time your battery has. Your headset will require longer charging times when not used over extended periods of time.

🐜 BlueAnt<sup>®</sup>

### Charging the Z9 with the USB connecter

- 1. Plug the USB charging cable into the PC/Mac's USB port
- 2. Plug the other end of the USB charging cable into the charging port of your headset. Make sure the USB plug matches up to the USB socket on the headset. Do not force the plug into the socket, it should slide in easily. The Red LED will turn ON.
- 3. When charging is complete the Red LED will turn OFF. Remove the charging adapter.

## Charging the Z9 with the Wall Charger

- Plug the AC Charger into a power socket and the cable into the charging port on the Z9. Make sure the USB plug matches up to the USB socket on the headset. Do not force the plug into the socket it should slide in easily. The Red LED will turn ON.
- 2. When charging is complete the Red LED will turn OFF. Remove the charging adapter.

# Wearing the BlueAnt Z9

Push the ear hook through the ear hook hole which sits on the headset clip and adjust its length to fit comfortably on your ear. Ensure that the headset is pointing towards your mouth. You can wear the Z9 on left or right ears.





For optimal performance of the Z9 headset, angle the headset so that it points towards your mouth.

🚯 Bluetooth<sup>®</sup>

🐜 BlueAnt®

# Pairing

Before use, you must pair the headset with your cell phone. Pairing will create a stored connection in both the Z9 and your Bluetooth cell phone. Pairing need only be done once, when first connecting to a new phone. The Z9 can store pairing information for up to three (3) different Bluetooth devices. If you wish to pair another different device once 3 devices are paired, you will need to RESET the Z9 as per the instructions in Basic Headset Functions below.

#### Pairing Procedure

This is an example only and may differ from your phone, but the process will be the same.

- 1. First turn the phone OFF and then back ON again to refresh its memory.
- 2. Bring the mobile phone to about 30cm from the Z9 Dual Microphone.
- 3. Find the Bluetooth menu in your mobile phone. Turn Bluetooth ON. (Check your mobile phone user guide if necessary)
- 4. With the Z9 OFF, Press and Hold the MFB → for about 6 seconds. The LED will appear a solid Blue, and then will start flashing. The Z9 is now in Pairing mode and ready to be found in searches by other Bluetooth devices. Pairing mode will be active for 2 minutes.



# **Pairing Procedure (continued)**

- Perform a Bluetooth device discovery on your mobile phone to add a new device. (It takes a few seconds to search for and find other Bluetooth devices around you).
- 6. When Bluetooth devices are found, the phone will display "BlueAnt Z9". Scroll to it and press OK to confirm that you want to Pair with it.
- 7. Enter Passkey "0000" when your phone prompts you. The phone and Z9 will now Pair.
- 8. An additional security setting in your phone may be needed to allow the headset and phone to connect automatically without confirmation each time you connect your Z9. Generally in the options for the BlueAnt Z9, it will be referred to as "set as authorized", "add to trusted devices", "allow connection" or similar.
- 9. If required for first time connection, select the BlueAnt Z9 to connect with your phone. OR, Press the MFB (3) on the Z9, to connect with the phone.

#### **Basic Headset Functions**

For easy reference, also see the Button/Function Matrix and the Quick Start Guide.

1. **Power ON:** Press and Hold the MFB for 3 seconds. The solid Blue LED will light up, and if the battery has ample charge the Blue LED will stay on for up to 5 Seconds. If the battery is low a solid Red LED will be displayed. After powering ON, your headset will automatically connect to your last used phone if it is in operating range. If no phone has yet been Paired, the Z9 will enter into Pairing mode. If no Paired phone is in range, the Z9 will enter Idle mode.

2. Power OFF: Press and Hold the MFB for 3 seconds. The Red LED flashes three times.

3. Enter Pairing Mode: With the Z9 OFF, Press and Hold the MFB for about 6 seconds until the LED flashes Blue. The Z9 will stay in pairing mode for 2 minutes then will go into idle mode. To re-enter pairing mode, repeat this step.

4. Make a Call: Dial the number using your phone as normal. Audio will automatically transfer to the headset.



# **Basic Headset Functions (continued)**

5. To Answer or End a call: Click the MFB  $\boxed{3}$  once when there is an incoming call. Press and Hold the MFB  $\boxed{3}$  for 3 seconds to end the call.

6. Reject\*: a call: Press and Hold the MFB for 3 seconds when there is an incoming call.

7. **Redial\*:** the last call, Press and Hold the Volume Button for about 3 seconds. To cancel Redial, click the MFB

8. Activate Voice Dialing\*: While connected to a phone, Press the MFB once. Voice commands must have been previously recorded into your phone (see your phones user guide). To cancel Voice Dialing, click the MFB.

9. Volume level: Click Volume ) or Volume during a call to adjust the desired level.

10. **Disconnect / Transfer:** To disconnect the Z9 with the currently connect phone or transfer an ongoing call back to the phone, Click Volume and Volume together once.



# 🐜 BlueAnt

# **Basic Headset Functions (continued)**

11. **Reconnect:** To reconnect your phone to the Z9, simply turn the Z9 ON. Or with the Z9 ON simply press the MFB3. Alternatively, you can use the menu of your Bluetooth phone.

12. Mute/Unmute: the microphone. Press and Hold Volume for 3 seconds during a call.

13. **Call Waiting**\*: While on a call and another incoming call appears, (beep tones dependent on your network) Click Volume and Volume together for 3 seconds. The current call will be placed on Hold and the incoming call will be answered. To return to the held call, Click Volume and Volume together again for 3 seconds.

14. Call Conference\*: To add a held call to the current conversation, Press and Hold Volume for 3 seconds



## **Basic Headset Functions (continued)**

15. **Disable/Enable the LED indicators:** (for night time driving): When your headset is in idle or standby mode Click Volume and Volume together for 3 seconds. After turning the headset OFF and back ON, the LED Indicators will be active again by default. Note the LED's are turned OFF while a call is active.

16. **Z9 Reset:** If you have already Paired 3 devices to the Z9 it is not possible to pair another as the memory is full. If you want to pair with another phone you must reset the headset. To reset the Z9 to factory settings; while in idle mode (not connected to any device), Click Volume, Volume, and MFB together (3 buttons). The Z9 will refresh its memory, delete all current pairing information and automatically go into Pairing mode (LED will flash Blue) ready to pair with a new device.

\* To use these functions, your phone/device must support the Bluetooth Handsfree Profile. The Bluetooth Headset profile will not activate these features of the BlueAnt Z9.



# 😽 BlueAnt<sup>®</sup>

# BlueAnt Voice Isolation Technology™

You can switch between two settings of Voice Isolation - **STANDARD** and **MAX**.

**Voice Isolation Standard -** For use in normal everyday environments and gives you a natural sounding voice while removing mild noise.

Gives you more intelligible voice in a wide variety of high

Voice Isolation Max -

#### HOW DO I SWITCH?

To switch between Standard and Max: Click the MFB 🖄 while on a call

- When switching between Standard and Max you will hear a confirmation voice tag played from the Z9 speaker.
- When you first turn the headset ON, it will be in the Standard setting.

noise environments.

- After switching the headset OFF and back ON, the headset will return to the Standard setting by default.
- Standard and Max both use the same amount of battery power.

|                                 |  |                     |              | 🐜 BlueA      |
|---------------------------------|--|---------------------|--------------|--------------|
|                                 | Z9 Function  | Button              | Time         | Status       |
| Button Function                 | Power ON   | MFB 🖄               | 3 Seconds    | From OFF     |
| Matrix                          | Power OFF  | MFB 🖄               | 3 Seconds    | From ON      |
|                                 | Enter Pairing Mode                                 | MFB 🖄               | 6 Seconds    | From OFF     |
| Note:                           | Connect to Device 1                                | MFB 🖄               | One Click    | Idle         |
|                                 | Connect to Device 2                                | MFB 🖄               | Two Clicks   | Idle         |
| Standby Mode<br>means connected | Connect to Device 3                                | MFB 🖄               | Three Clicks | Idle         |
|                                 | Answer Call  | MFB 🖄               | Click        | Ringing      |
| o a device but                  | End Call   | MFB 🖄               | 3 Seconds    | Active Call  |
| not on a call.                  | Reject Call  | MFB 🖄               | 3 Seconds    | Ringing      |
| Idle Mode                       | Redial Last Number                                 | Vol 🛨               | 3 Seconds    | Standby      |
| means the Z9                    | Voice Dial Activate                                | MFB                 | Click        | Standby      |
| is ON but not                   | Transfer/Disconnect Z9                             | <b>⊕ &amp; ⊕</b>    | Click        | Connected    |
| connected to any<br>device      | Call Conference                                    | Vol 🕀               | 3 Seconds    | Active Call  |
| device                          | Call Waiting                                       | <b>⊕</b> & €        | 3 Seconds    | Active Call  |
| Multiple                        | Volume Up  | Vol 🕀               | Click        | Active Call  |
| outton presses<br>mean click    | Volume Down  | Vol Θ               | Click        | Active Call  |
| together                        | Mute   | Vol 🗩               | 3 Seconds    | Active Call  |
| -                               | Turn LED's OFF/ON                                  | <b>∂</b> & <b>€</b> | 3 Seconds    | Idle/Standby |
|                                 | Switch Voice Isolation<br>between Standard and Max | MFB 🖄               | Click        | Active Call  |
|                                 | Reset Device                                       | MFB 🕭 & 🗩 & 🕂       | Click        | Idle         |

🐜 BlueAnt°

# LED Indicator Chart

| Power ON               | Solid Blue for 5 Seconds       |  |
|------------------------|--------------------------------|--|
| Power OFF              | Red flash 3 times              |  |
| Pairing Mode           | Blue flashing                  |  |
| Reset                  | Blue flashing                  |  |
| Charging               | Solid Red                      |  |
| Charging with Power ON | Solid Red with a Purple Flash  |  |
| Charging Complete      | Red indicator OFF              |  |
| Low Battery            | All LED's change to Red        |  |
| Idle                   | Blue flash every 8 seconds     |  |
| Standby                | 2 Blue flashes every 5 seconds |  |
| Ongoing call           | NO LED's                       |  |



# **Advanced Headset Functions**

### Using your headset with multiple Bluetooth devices

The Z9 will connect to only one device at a time but 3 devices can be paired to it.

1. Make sure the last phone used has Bluetooth switched off or is out of range.

2. Follow the procedure in 'Pairing Procedure' above for each device you want to pair.

**On-the-Fly Phone Switching** After pairing a 2nd or 3rd mobile, Smartphone, PDA or computer as per the pairing procedure, you can switch between the devices using the following procedure.

# Selecting the required mobile phone

1. Disconnect from the currently connected phone: Click - and - together

2. Connect to any of the three paired devices on request by clicking the  $\mathsf{MFB}^{\textcircled{M}}$ 

Once for the first paired phone

Twice for the second paired phone

Three times for the third paired phone

Note: Be sure to remember in what order the 3 devices have been paired.

**Bluetooth**°

🐜 BlueAnt

# Firmware upgrade

The BlueAnt Z9 is firmware upgradeable via the USB port and provided USB cable. Please see the support section at <u>www.blueantwireless.com</u> for information and downloads for any upgrades that are available.

# **Further Information**

# Setting up a Phone Profile (different to Bluetooth Profiles)

In your phone, set up a Profile with appropriate ringing volumes and keypad tones and select and activate when using with the Z9. Some phones can automatically activate a desired profile when connecting to a Car Kit or Headset Accessory. E.g. Go to Enhancement Settings and select a Default Profile to activate when the headset connects. With some phones you can also personalize levels to make suitable for yourself (see your phone's user manual for instructions on using and activating Phone Profiles). Typical phone Profiles are *General*, *Outdoor, Meeting, Silent, Handsfree, Headset, Portable handsfree and Carkit.* 



#### Phone/PDA/Computer Software

Please make sure you have the latest firmware upgrade for your Phone especially if you are using a PDA Phone. Go to the support section of the manufacturers' website to check that you have the latest version. Many new mobile phones, PDA's and computer phones require a Bluetooth patch to improve Bluetooth functionality from the original released version.

# **Resetting Your Phone/PDA**

Phones and PDA's can become prone to software and memory issues which may cause Bluetooth reconnection problems. This can be fixed simply by turning the phone OFF and back ON again. The phone will be reset and the working memory cleared. Resetting your phone weekly can help maintain it's functionality including Bluetooth.

#### **Troubleshooting and Support Documents**

See the support section of <u>www.blueantwireless.com</u> for troubleshooting and Frequently Asked Questions (FAQ) as well as info on using with computers for VOIP application\s.

😹 BlueAnt°

# **Specifications**

| General        | <ul> <li>Bluetooth v2.0</li> </ul>                               |  |
|----------------|--|--|
| Specification  | <ul> <li>Up to 10 meters RF coverage</li> </ul>                  |  |
|                | <ul> <li>CE,FCC,BQB, RoHS / WEEE Compliant</li> </ul>            |  |
|                | <ul> <li>Headset Profile, Hands-Free profile v1.0</li> </ul>     |  |
| RF Spec.       | <ul> <li>Carrier Frequency 2.402 ~ 2.480GHz</li> </ul>           |  |
| -              | • < 0.1% BER at -80 dBm  |  |
|                | <ul> <li>0 ± 4 dBm (Class 2)</li> </ul>                          |  |
| User Interface | <ul> <li>Blue color LED for operation indication.</li> </ul>     |  |
|                | <ul> <li>Red color LED for low battery indication.</li> </ul>    |  |
|                | <ul> <li>Mini USB for Charging battery or F/W upgrade</li> </ul> |  |
| Audio          | 3GPP with DSP solution   |  |
| Battery type   | 3.7V Lithium Polymer battery                                     |  |
| Talk Time      | Up to 5.5 Hours  |  |
| Stand-By time  | 200hrs.  |  |
| Weight         | 0.35 oz / 10 grams without ear hook or 11 grams with ear-hook    |  |
| Dimensions     | 1.61 x 0.69 x 0.44 (inches) / 41 x 17.5 x 11.2 (mm)              |  |



# Help

#### **BlueAnt Warranty Process**

- 1. Should you be having difficulties in operation please refer to the online FAQ and support documents, or call us. Our number is on the back page of this manual
- 2. Check our website for more information, updated manuals and troubleshooting. www.blueantwireless.com
- 3. Call us and speak to one of the BlueAnt Wireless Customer Service Team We will clarify whether you have a hardware or connection issue.
- 4. If your unit is confirmed to be faulty, a Return Merchandise Authorization (RMA) will be issued
- 5. Return the unit directly to BlueAnt for testing and replacement of faulty items

#### Warranty Terms and Conditions

- 1. BlueAnt Warrant the original purchaser of this product only.
- 2. BlueAnt will replace or repair any faulty product provided it has not
- been misused or abused in any way. 3. There are no user serviceable parts inside this product. Using a non-
- authorized repairer will void the warranty.
  The Warranty is valid for 2 years (24 months) from the date of purchase.
  Proof of purchase must be provided to obtain warranty service.



# 🐜 BlueAnt"

Headset must be in original packaging with serial number for warranty to be valid.
Warranties are effective from the proof of purchase date and not from the date of any subsequent repair or replacement.

## Disclaimers:

This manual is published by BlueAnt. The information contained in this document is subject to change without notice. All rights reserved. The Bluetooth word, mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by BlueAnt is under license. Other trademarks and trade names are those of their respective owners.

# Please protect your ears.

**Warning:** This headset can reach a maximum volume of 103 decibels. Prolonged use of a headset at high volumes may affect your hearing capacity. Using for extensive time periods may result in noise induced hearing loss (NIHL). Hearing loss may occur if the headset is used at maximum volumes for more than 5 minutes per day. Hearing loss may occur if the headset is used at medium volumes if used for more than 1 hour per day. Exposure to sound at such a close range may result in hearing loss, even at low levels.

| untries with separate collection) |  |  |  |  |  |
|-----------------------------------|--|--|--|--|--|
|                                   |  |  |  |  |  |
|                                   |  |  |  |  |  |
|                                   |  |  |  |  |  |

Correct Disposal of This Product (Waste Electrical & Electronic Equipment

 (Applicable in the European Union and other European countries with separate collection) This marking shown on the product or its literature, indicates that it should not be disposed with other household wastes at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources. Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling. Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.



This equipment is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC

# 🐜 BlueAnt®

# Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures: - Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

| 13% | Blu | leAnt |
|-----|-----|-------|
|     |     |       |

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

IMPORTANT NOTE: FCC Radiation Exposure Statement: This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. End users must follow the specific operating instructions for satisfying RF exposure compliance.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.