 


成品尺寸：85x110mm
材质：128G双铜，正反面单色印刷，折页

 
BRAND

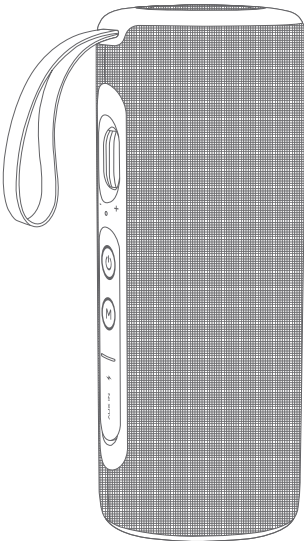

USER MANUAL


BLUETOOTH SPEAKER AND ACCESSORIES

- A. Speaker
- B. Type-C charging cable
- C. AUX audio cable
- D. User manual

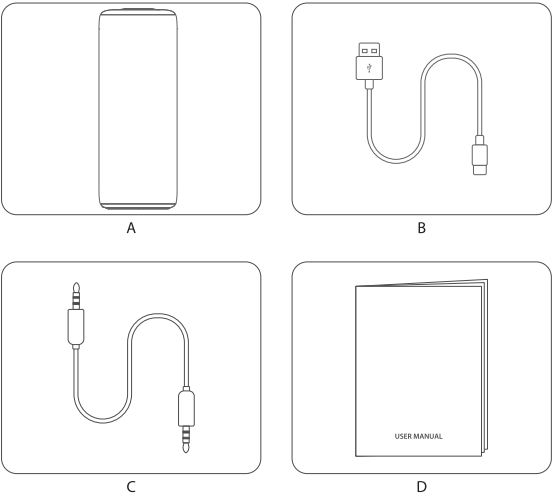

01

 FUNCTIONS

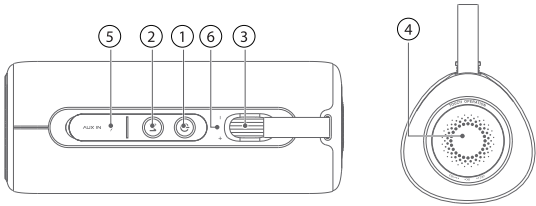

- 1. Long press 2S: Power on/off, Short press 2 times: Bluetooth disconnected, Short press 3 times: Reset factory data, Long press 25S: Reset Bluetooth speaker,
- 2. M: hort press: Switch LED mode, Long press 2S: Turn off LED light, Short press 2 times: TWS connection; TWS disconnection,
- 3. Rotating to left: Volume -, Rotating to right: Volume +,
- 4. Short tap 1 time: Pause/play music; Pick up/hang up call, Short tap 3 times: Previous song, Short tap 2 times: Next song/phone call private protection, Long tap 2S: Reject call, Long tap 4S: Switch EQ mode,
- 5. 3.5mm AUX IN
- 6. Microphone

02

 
OPERATIONS

1. Power on/off

Long press "P" button for 2S to power on, long press it for 2S again to power off.

2. Bluetooth mode

It will enter to Bluetooth mode after power on, and the blue indicator will flash. Then choose "SoundRoll" from your devices list. You will hear a voice prompt once it is connected, and the blue indicator will stay on. Then you can start to play your music. Short press "P" button two times to disconnect Bluetooth connection. Short press three times to delete speaker's Bluetooth connection history information. When the speaker shut down, long press "P" for 25S to reset it, then long press "P" for 2S can power on the speaker.

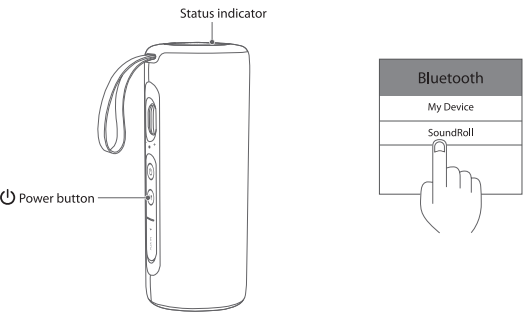


03

OPERATIONS

3. TWS Connection

 - 1) Power on two "SoundRoll" speakers, they will enter to Bluetooth mode.
- 2) Short press each of their "M" button twice, two speakers will enter to TWS pairing mode and you will hear a voice prompt once they connected successfully. The master speaker's blue indicator will keep flashing, the sub-master speaker's blue indicator will stay on.
- 3) Choose "SoundRoll" from your device list to connect the master speaker. You will hear a voice prompt once it connected, and the blue indicator will stay on. After the two models successfully connected with your phone, you can play music on both of them at the same time.

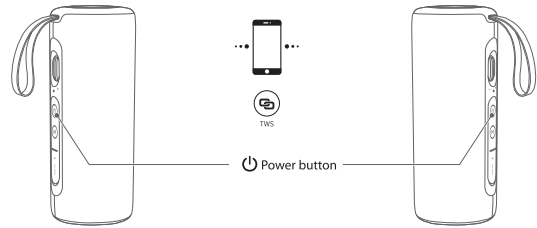

4. Volume control

 
- Rotating the volume control knob to right to increase volume, and left to decrease volume. There will be a "di-di" sound when the volume is adjusted to the maximum.
- Previous/next track control
 - Tapping status indicator area 2 times for next track and 3 times for previous track under Bluetooth mode
 - Control under playing status
 - Tapping 1 time to play/pause music under Bluetooth mode; Tapping 1 time to mute/unmute under AUX mode.

04

OPERATIONS

5. Handsfree call

When you have a incoming call, speaker will enter into handsfree mode automatically under Bluetooth connected status. Short tap status indicator area once to answer the call and short tap it again to hang up. Short tap the area twice to transfer the call from speaker to phone which can protect your privacy.

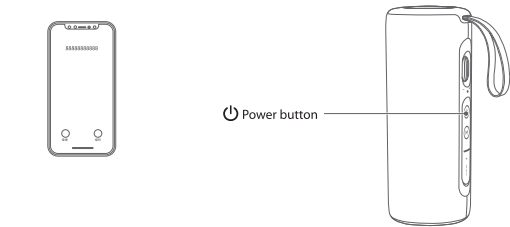

05

6. AUX mode

This speaker supports AUX music playing. It will turn into AUX playing mode automatically once you insert AUX cable.

7. LED lighting mode

This speaker supports 10 different LED lights. Short press "M" once to switch to another light. (mode 1, mode 2, mode 3, mode 4, mode 5, mode 6, mode 7, mode 8, mode 10-off these 10 modes will loop) Mode 1 is defaulted mode when you power on.

8. EQ mode

This speaker supports balance sound, pure sound and bass sound three different EQ modes. Long tap status indicator area 3 seconds to switch to another EQ. Balance sound is defaulted when you power on.

 
OPERATIONS

9. Battery saving

Speaker will power off automatically to save battery when there is no any device connected in 10 minutes. Long press "P" 2S to power on again.


10. Charging/power supply

- Important note:**
- Do not use the adapter which has no any safety certificate
 - Suggest to use output 5V/2A(or above) adapter to charge
1. Please charge it as soon as possible when you heard low battery voice prompt
 2. Red indicator will be on while charging and it will be off when charging done

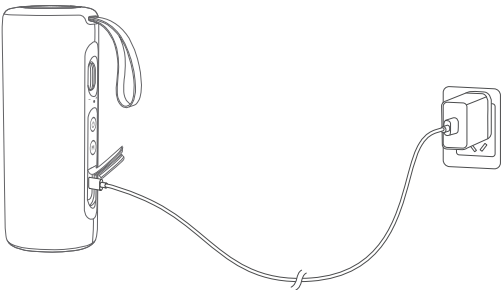

06

 FUNCTION INSTRUCTIONS

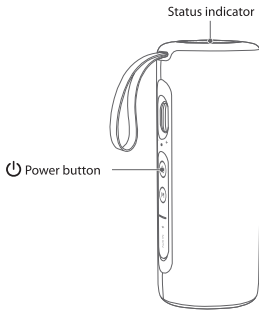

Power on	Blue indicator will be on when power on, and enter to Bluetooth mode automatically, then the blue indicator will flash quickly (in Bluetooth searching status)
AUX	Green indicator will on when you insert AUX cable Blue indicator stays on when Bluetooth is connected
Bluetooth status	Bluetooth indicator keeps flashing when your Bluetooth device is out of range or disconnected, then the speaker will be in searching status.
Maximum volume	There will be a voice prompt when you rotate the speaker's volume to the maximum.
Charging status	Red indicator will be on while charging and be off when charging done.
Low battery	Red indicator flashes when battery is low.
LED lighting	Mode 1 is defaulted when power on. There are 10 different modes.

07

SPECIFICATIONS

Product Name	SoundRoll
Bluetooth Version	5.0
Battery Capacity	4000mAh
Playing Time	8~10 hours(50% Volume)
Talking Time	7~8 hours
Charging Time	2~3 hours
Charging Current	5V \pm 1A
Speaker Unit	12W x 2
Product Size	81x81x187.3mm
Product Weight	602g \pm 10

08

FREQUENTLY ASKED QUESTIONS

Q1: What kind of charger should we use for the speaker?

A: All common USB chargers can be used, while we suggest the ones 5V/2A or above 2A.

Q2: What if there is noise or discontinuous sound during playing?

A: The speaker can be normally used within 10m under no obstruction environment. If it is beyond 10m or with obstruction, there might be noise or discontinuous sound.

Q3: Why the speaker power off automatically after power on but no Bluetooth disconnection?

A: When there is no bluetooth pairing in 10 minutes, the speaker will shut down automatically to reduce power consumption.

Q4: Why does the speaker cannot connect the once-paired cellphone?

A: First, remove the speaker's paired name from the cellphone's Bluetooth List and then restart pairing.

Q5: The speaker cannot be started up in a normal situation.

A: Please plug in the charger and try in a few minutes or try to long press power button 10-30s to reset.

09

FREQUENTLY ASKED QUESTIONS

Notes:

1. Please read this manual carefully before use and keep it properly.
2. For the first use, please fully charge the product.
3. Pls use certified adapter that has passed national safety certification.
4. If you do not use the product for a long time, be sure to charge it once within a month at least to maintain its performance.
5. Do not use this product in an extremely cold or hot environment, such as temperature beyonds the range of 5 $^{\circ}$ C-35 $^{\circ}$ C. If use it beyond the above range, the product may stop automatically to protect the internal circuit.
6. When charging it in a high temperature environment, the product may automatically stop charging to protect the battery. At this time, the charging indicator usually flashes quickly to indicate that the charging environmental temperature or the product internal temperature is too high.
7. Storage environment temperature: -5 $^{\circ}$ ~35 $^{\circ}$ RH<70% (recommended 25 $^{\circ}$ \pm 5).

Important safety instructions:

1. Do not disassemble or repair this speaker personally, otherwise it may cause product damage or personal injury.
2. Do not use it in dusty, humid, dry, and high-temperature environment.
3. Do not place this product near a heat source, or a place with direct sunlight, a lot of dust, or mechanical vibration.
4. In order to reduce the risk of fire, please do not cover this product with newspapers, tablecloths, curtains etc., during use.
5. If the product has a waterproof feature, please do not exceed the nominal parameter range when using it.
6. When the product is damaged such as the power cord or plug is damaged, liquid enters or objects fall into the device, unable to operate normally or falls, it must be repaired.
7. When the product is fully charged, do not connect it to the charger for further long time charging.
8. The maximum ambient temperature should not exceed 40 $^{\circ}$ C.

*This speaker supports mobile phones/ tablets/ PCs etc. Here this User Manual is illustrated base on mobile phones.

10

BRAND



Federal Communications Commission (FCC) Statement. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and

(2) this device must accept any interference received,

including interference that may cause undesired operation. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide Reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications made to this device not expressly approved by **Boompods (HK) LTD.** may void the FCC authorization to operate this device. Note: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

RF exposure statement:

The device complies with RF exposure requirements and can be installed and used without restriction.