

Bosch DCN Standalone Automatic Camera Control

DCN-SWSACC



BOSCH

Table of Contents

1	Introduction	5
1.1	System license key	5
2	Installation	6
2.1	Allegiant video switcher	6
2.1.1	Configuration	6
2.1.2	Operation	7
2.2	AutoDome	7
2.2.1	Configuration	7
2.2.2	Operation	8
2.3	Cables	8
2.4	Software Installation	9
3	The DCN-SWSACC application	10
3.1	The application main screen	10
3.1.1	Menu (1)	11
3.1.2	Workflow buttons (2)	11
3.1.3	Configuration list (3)	11
3.1.4	Content panel (4)	11
4	System	12
4.1	PC Communication Settings	12
4.2	Video Url	12
5	Cameras	13
5.1	Camera System Type	13
5.2	Camera Control Settings	13
5.3	Add/Remove camera	14
5.4	Camera Information	14
6	Assign & store	15
6.1	Temporarily PC with 2 serial ports	16
6.1.1	Start configure	16
6.1.2	Assigning the overview	16
6.1.3	Assigning cameras and prepositions to a unit	17
6.1.4	Remove disconnected units	17
6.1.5	Camera menu	17
6.2	Temporarily PC with 1 serial port	18

7	Upload	19
8	Print layout	20
9	Warning and error reports	21
	Index	26

1 Introduction

Version 4.0, 2011-10-24.

DCN-SWSACC Standalone Automatic Camera Control of the DCN Conference systems interfaces with the Bosch Allegiant or AutoDomes. It selects fixed or prepositioned cameras to be activated to display the current active speaker at a conference.

Automatic Camera Control in conference applications

When a chairman's or delegate's microphone is activated on the equipment, the camera assigned to that position is activated. When no microphones are active, an 'overview' is automatically selected. The image can be displayed on hall displays or other screens together with information about the current speaker, such as delegate identification (seat text). The system operator has a screen, which also displays information about which camera is active. Automatic Camera Control provides an extra dimension to conference proceedings.

Configuration

The DCN-SWSACC software runs on a PC which is temporarily connected to configure the DCN Next Generation or DCN Wireless Discussion System and the Bosch Allegiant or AutoDomes. With this PC the camera positions can be defined using the on-screen Pan, Tilt and Zoom control and stored as prepositions in the AutoDome camera. At the same time a delegate position is linked to a camera preposition. When all delegate positions are linked to camera prepositions the configuration needs to be uploaded to the DCN Conference system where it will be stored persistent in the CCU or NCO. The configuration file can be printed and stored on the temporarily PC for later use. After configuration the PC is removed and Bosch Allegiant or AutoDome is directly connected to the DCN Conference system.

Copyright

No part of this documentation may be reproduced or transmitted in any form by any means, electronic, mechanical, photocopying, recording, or otherwise, without the prior written permission of the publisher. For information on getting permission for reprints and excerpts, contact Bosch Security Systems B.V.

1.1 System license key

The use of the DCN Standalone Automatic Camera Control is depending on the DCN system license key. Depending on the license key, which is located in the system's Control Unit, functions are enabled or disabled.

The license key can be uploaded to the system with the Download and License Tool.



NOTICE!

For demo purposes a demo license is available. In case you have a demo license the Bosch logo in the right top of the application will note "Demo version not for sale". The demo version is fully operational but will not be supported. Contact your local Bosch representative if you have a demo license while you purchased an official license.

2 Installation

This chapter describes how to setup the DCN system and the Camera system. Two different types of DCN systems are available: single CCU systems and multi CCU systems. Also the Camera system exists in two different versions: Allegiant video switcher with multiple cameras and AutoDome which is a single camera.

The system needs to be configured before it can be used operational. To do so, first the choice has to be made which Camera system is used:

- Section 2.1 Allegiant video switcher, or
- Section 2.2 AutoDome.
- Section 2.3 Cables
- Section 2.4 Software Installation

2.1 Allegiant video switcher


2.1.1 Configuration

1. Set the **PC Communication Settings**:

- **Allegiant**: set the baud-rate of the Allegiant to 19k2. Please refer to the Allegiant user manual how to set the Allegiant's baud-rate.
- **DCN-CCU2**: set the protocol for the serial port via menu 8H to allegiant.
- **DCN-CCU (S500)**: set the protocol for serial port which is connected to the temporarily PC to camera control and set the baud-rate to 19k2



- **DCN-NCO**: set the baud-rate for camera control to 19k2 using menu item 7I.
2. Make the connections to the temporarily PC according the image below:

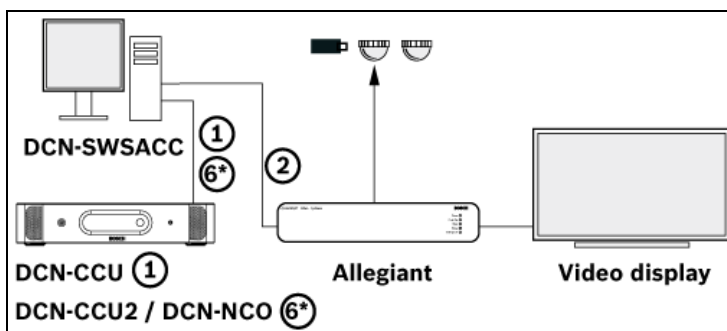


- Refer to Section 2.3 Cables for cable type (1,6* and 2).
3. Start the DCN-SWSACC software.
 - Configure the camera control as described in: Section 3 The DCN-SWSACC application, Section 4 System, Section 5 Cameras and Section 6 Assign & store.
 4. Disconnect the temporarily PC from the **DCN system**: and the **Allegiant**.

2.1.2

Operation

1. Make the connections according the image below:

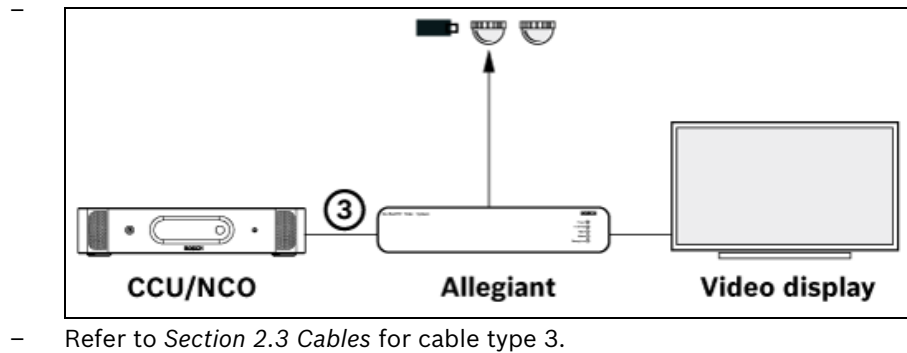

- Refer to *Section 2.3 Cables* for cable type 3.

2.2

AutoDome


2.2.1

Configuration

1. Set the communication settings:
 - **AutoDome:** set the baud-rate to 9600. Please refer to the AutoDome user manual how to set the baud-rate.
 - **DCN-CCU2:** set the protocol for the serial port via menu 8H to AutoDome.
 - **DCN-CCU (S500):** set the protocol for serial port which is connected to the temporarily PC to camera control and set the baud-rate to 9600.



- **DCN-NCO:** set the baud-rate for camera control to 9600 using menu item 7I.
2. Make the connections to the temporarily PC according the image below:

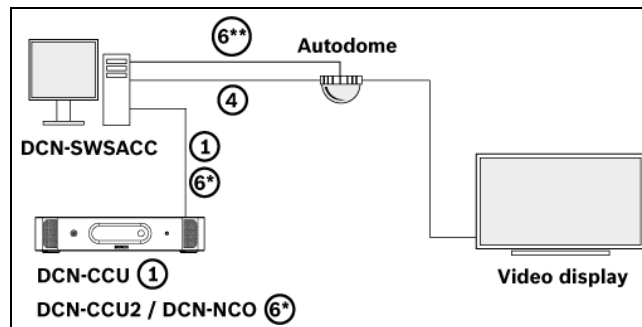


- Refer to *Section 2.3 Cables* for cable types 1,6*, 4 and 6** (**optional: to see a video image of an AutoDome camera with IP-module in the browser of Assign & store).
3. Start the DCN-SWSACC software. Refer to *Section 2.4 Software Installation*.
 - Configure the 'camera control' as described in *Section 3 The DCN-SWSACC application*, *Section 4 System*, *Section 5 Cameras* and *Section 6 Assign & store*.
 4. Disconnect the temporarily PC from the **DCN system:** and the **AutoDome**.

2.2.2

Operation

1. Make the connections according the image below:

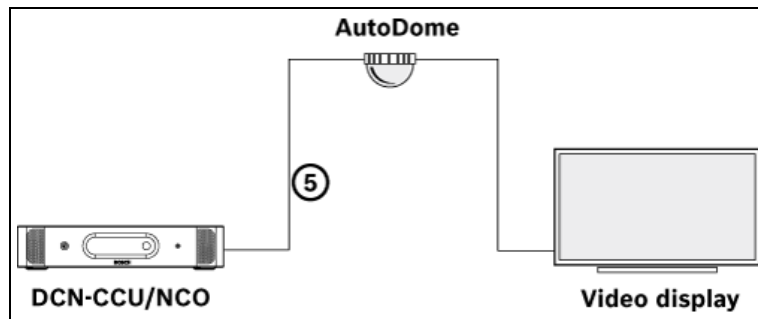

- Refer to *Section 2.3 Cables* for cable type 5.

2.3

Cables

<p>PC</p> <p>DCN-CCU</p>	<p>PC</p> <p>Allegiant</p>
Cable 1. PC to DCN-CCU	Cable 2. PC to Allegiant
<p>CCU/NCO</p> <p>Allegiant</p>	<p>PC</p> <p>AutoDome</p>
Cable 3. CCU/NCO to Allegiant	Cable 4. PC to AutoDome
<p>CCU/NCO</p> <p>AutoDome</p>	<p>PC</p> <p>DCN-CCU2 / DCN-NCO* AutoDome**</p>
Cable 5. CCU/NCO to AutoDome	Cable 6. Standard Ethernet cable

2.4 Software Installation

PC requirements

DCN-SWSACC is compatible with Windows Vista and Windows 7 both 32 and 64 bits versions. Starter editions are not supported.

PC requirements are the same as requested for Windows Vista and Windows 7 by Microsoft. The DCN system must have version 2.60 or higher.

Installing DCN-SWSACC

DCN-SWSACC needs to be installed from the DVD delivered with the DCN system (check Bosch Security Systems extranet for the latest version of the software):

1. Insert the DVD (the software starts automatically).
 - When the software does not start automatically:
 - Select 'Run...' from the 'Start' menu on the Windows Task bar.
 - Type d:\setup.exe (where d is the DVD drive).
2. Browse to 'software' and select the DCN-SWSACC.
3. Follow the on-screen instructions.

3

The DCN-SWSACC application

This chapter describes the main part of the application.

3.1

The application main screen

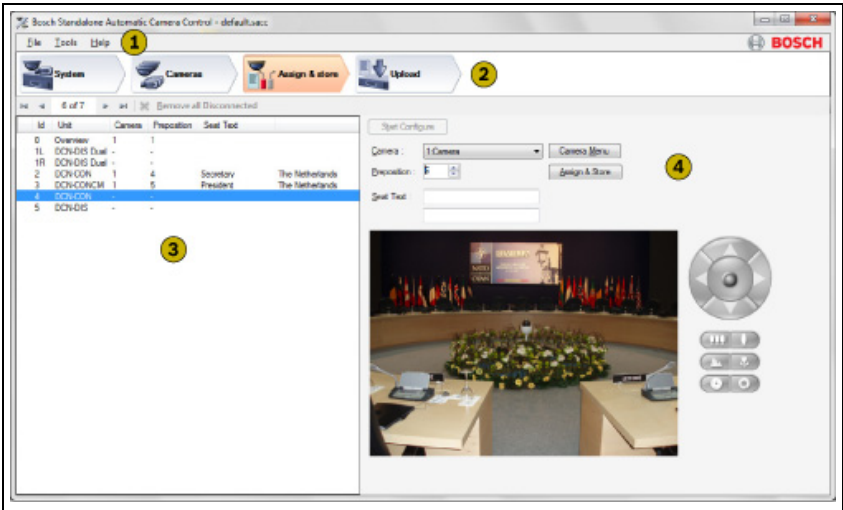


Figure 3.1 Application main screen

1	Menu
2	Workflow buttons
3	Configuration list
4	Content panel

3.1.1**Menu (1)**

The menu provides access to functionality present in the application.

File	
- New (Ctrl+N)	Creates a new configuration.
- Open...(Ctrl+O)	Opens a configuration.
- Save(Ctrl+S)	Saves the configuration to the current configuration filename.
- Save as...	Saves the configuration to a new configuration filename.
- Print (Ctrl+P)	Prints the configuration file.
- Exit (Alt+F4)	Closes DCN-SWSACC.
Tools	
- Language settings	Opens a dialog box with the available user interface languages (shown in native text).
Help	
- Contents	Opens the 'Contents' of the online help.
- Index	Opens the 'Index' of the online help.
- Search	Opens the 'Search' of the online help.
- About	Opens the 'About' dialog box.

3.1.2**Workflow buttons (2)**

The workflow buttons are used to navigate and provide access to the functionality of the DCN-SWSACC.

System	PC communication and video URL settings. Refer to <i>Section 4 System</i> .
Cameras	Defines the Camera system and the cameras. Refer to <i>Section 5 Cameras</i> .
Assign & store	Assign prepositions to the units of the DCN system and store the prepositions in the Camera system. Refer to <i>Section 6 Assign & store</i> .
Upload	Upload of the configuration to the DCN system. Refer to <i>Section 7 Upload</i> .

3.1.3**Configuration list (3)**

The configuration list is used in: *Section 4 System*, *Section 5 Cameras* and *Section 6 Assign & store*.

3.1.4**Content panel (4)**

The Content panel provides access to: *Section 4 System*, *Section 5 Cameras*, *Section 6 Assign & store* and *Section 7 Upload*.

4 System

This workflow describes the system settings:

4.1 PC Communication Settings

DCN system:

The **DCN system:** option defines the **Serial communication:** port of the PC to which the DCN-CCU is connected. Selecting **--None--** disables the connection to the **DCN system:**.

For DCN-CCU2 or DCN-NCO a **Host name or IP address:** must be entered. The IP address of the unit can be found in the front menu of the DCN-CCU2 or DCN-NCO.



NOTICE!

IP address may not contain leading zeros.

Camera system:

The **Camera system:** option defines the **Serial communication:** port of the PC to which the **Camera system:** is connected. Selecting **--None--** disables the connection to the **Camera system:**.

4.2 Video Url

To see a video image of an AutoDome camera with IP-module in the browser of **Assign & store**, the following **Url:** can be used: "http://192.168.0.1/MPEG4.html". Where 192.168.0.1 is the default IP address of the AutoDome.



NOTICE!

You need to have Sun Java and the MPEG4-ActiveX installed. Refer to the AutoDome user manual for more information.

In case the **Url:** is not correct or cannot be reached, the browser reports an appropriate message or will be empty. Note that the **Url:** must always start with http://, MPEG must be in capitals.

The browser in workflow **Assign & store** is hidden when the **Url:** is empty or only holds white spaces.

5 Cameras

This workflow defines the Camera system and the cameras.

5.1 Camera System Type

The DCN system supports two types of Camera systems:

1. **Allegiant:** cameras are connected to the video switcher and multiple screen outputs can be controlled.
2. **AutoDome:** single Pan-Tilt-Zoom camera with single video output.



NOTICE!

When the **AutoDome** is selected a warning message appears if more than one camera is defined for the **Allegiant**.

The *Section 5.1 Camera System Type* selection is disabled when the *Section 6 Assign & store* is active.

5.2 Camera Control Settings



NOTICE!

With the exception of the function **Camera override:** the following options are all disabled when **Camera System Type** is set to **AutoDome**.

Use Screen line of DCN-SW:

This check box allows you to take the screen line to be shown on the audience screen as defined in DCN-SW (also DCN-SWDB is needed).

The screen line can be configured by the DCN-SW configuration application via: "Tools > Person Identification".

Double seat text:

This check box allows you to specify that an additional line of text can be entered for each unit number. The text appears on both the operator screen and audience screens. By default, this option is not enabled (a single seat text line is displayed).

Camera override:

This check box allows you to determine whether a newly switched-on microphone automatically activates the camera covering its position (check box is selected), or whether the camera is only activated when the current microphone is switched-off (check box is deselected).

Camera movement time:

To hide camera movement (as the camera moves from one position to the next), the overview camera can be activated and displayed during the movement. The movement time can be set from 0 to 60 **seconds** in steps of 0.5 **seconds**.

Number of audience screens:

This selection allows you to select the **Number of audience screens**. The **Number of audience screens**: (excluding the operator screen) can be set from 1 till 4. All audience screens show the same picture.

**NOTICE!**

It is recommended that the number selected corresponds to the actual number of audience screens present in the venue. If the number selected is higher than this, there may be some reduction in system performance.

5.3**Add/Remove camera****NOTICE!**

Add/Remove camera is disabled when the **Camera System Type** is set to **AutoDome**

Add a new Camera

A new camera is added to the *Section 3.1.3 Configuration list (3)*. Select the new camera which allows you to enter the *Section 5.4 Camera Information*. The add camera option is disabled when no free camera numbers are available.

Remove a selected camera

This option is always disabled when the *Section 5.2 Camera Control Settings* is visible since no camera is selected.

5.4**Camera Information**

By selection of the **Camera System Type** in the *Section 3.1.3 Configuration list (3)* the **Camera Information** option becomes visible and allows you to view, select and change the assigned cameras settings.

Camera name:

This text box allows you to enter 16 characters to define the **Camera name**.

Camera number:

This is the number of the camera.

**NOTICE!**

This camera number must correspond with the internal address of the camera. Refer to the camera user manual how to change the internal address.

Movable camera

Cameras used in camera control systems can be either fixed or moveable. This check box allows you to determine if a moveable camera (check box is selected) or none moveable camera (check box is deselected) is connected.

Number of prepositions: Number of prepositions:

Fixed cameras cannot automatically adjust their positions. Moveable cameras, such as AutoDome cameras, can automatically adjust their positions (called **Preposition**). This text box allows you to enter or change the number of camera prepositions for each assigned camera as defined in *Section 6.1.3 Assigning cameras and prepositions to a unit*. A maximum of 99 camera prepositions are allowed.

6 Assign & store

This workflow is used to assign prepositions to the units of the DCN system and store the prepositions in the Camera system.

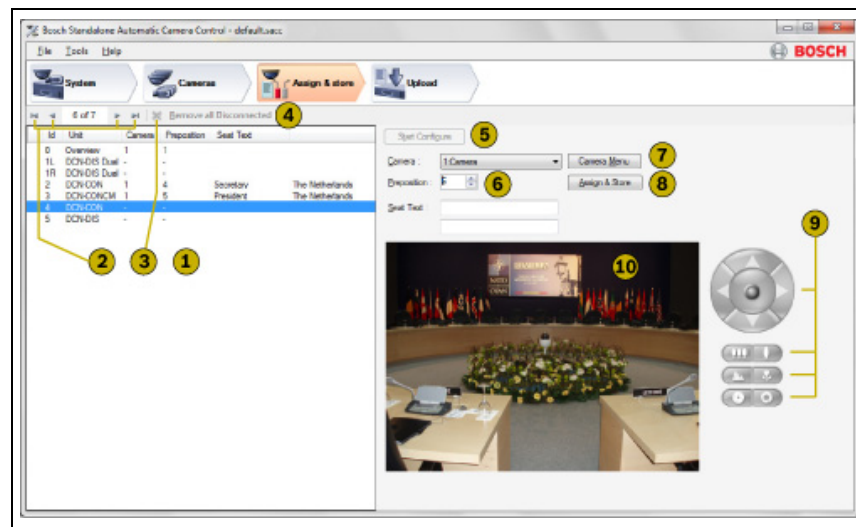


Figure 6.1 Assign & store main window

The **Assign & store** main window contains the following elements:

1. Assignment list showing units including the assigned cameras.
2. Navigation buttons, to navigate through all the units.
3. Remove selected (disconnected) seat button. To remove a single unit from the list which is not connected to the DCN system.
4. **Remove all disconnected** button. To remove all units from the list which are not connected to the DCN system.
5. **Start configure** button. To start the configuration mode of the DCN system.
6. **Preposition** text box to select or define a preposition.
7. **Camera menu** button to activate the on-screen **Camera menu** to change AutoDome settings which are embedded in the AutoDome (Refer to the AutoDome user manual for details).
8. **Assign & store** button. To assign prepositions to the unit and to store prepositions in the Camera system.
9. Pan-Tilt-Zoom-Focus-Iris controls. To control the AutoDome camera.
10. Browser. To see a video image of an AutoDome camera with IP-module.

The system can be configured in two different ways:

1. Using a *Section 6.1 Temporarily PC with 2 serial ports* or;
2. a *Section 6.2 Temporarily PC with 1 serial port*.

6.1 Temporarily PC with 2 serial ports

The following preconditions of **Assign & store** are required:

1. Both the DCN system and the Camera system are properly connected and have the correct settings. Refer to *Section 2 Installation* for more details.
2. **PC Communication Settings** under workflow *Section 4 System* must correspond with the hardware installation.
3. The *Section 4.2 Video Url* must be defined to view the AutoDome video in the browser window.
4. Continue with *Section 6.1.1 Start configure*.

6.1.1 Start configure

1. Click the **Start configure** button.
 - The **Start configure** button changes into **Stop configure** button.



CAUTION!

When the connection with the DCN system or Camera system fails the following error messages could appear:

- Connection failure. Refer to *Section 4.1 PC Communication Settings*
 - Incompatible version of the DCN system.
 - Required authorizations missing.
-

2. Now all connected units are retrieved from the DCN system. While retrieving a progress window will be shown. If all units are retrieved they are shown in the Assignment list. By default the first item in the list is selected, this is the **Overview**. This **Overview** will be shown during the conference if none of the microphones is active or when the **Camera movement time**: is not elapsed. The **Overview** (camera 1) is selected within the Assignment list.

6.1.2 Assigning the overview

The **Overview** camera gives a general overview of the conference venue when all the microphones are off. In case of Allegiant the **Overview** can also be used when an AutoDome camera is moving from one preposition to another.

To assign:

1. Select a **Camera**:
2. Select a **Preposition** if the selected camera is a moveable camera.
3. Move the camera to the desired position.
4. Click the **Assign & store** button. The **Camera**: and **Preposition** are assigned to the **Overview** and are stored in the Camera system.

After assignment of the **Overview** the first unit is selected to have a **Camera**: and **Preposition** assigned. The **Overview** camera can be either a non moveable or moveable (AutoDome) camera. However, when AutoDome is selected as Camera system, the **Overview** is always a preposition of the AutoDome.

6.1.3

Assigning cameras and prepositions to a unit

To assign a camera and prepositions to a unit it is first necessary to select that unit. Selecting a unit number causes all LEDs of the corresponding unit to flash.

There are two ways of selecting the unit:

1. The DCN-SWSACC software will automatically propose a camera and **Preposition**. You can now:
 - Accept this proposal, or change the camera selection and edit fields for **Preposition** and **Seat text**.
2. Alternatively; press the microphone button or any of the voting keys on a unit.
 - This will result in selection of the **Unit** in the assignment list.
3. Click the **Assign & store** button.
 - The software assigns the camera, **Preposition** and **Seat text** to the unit and stores the prepositions in the Camera system. Automatically the next unit will be selected and the next **Preposition** of the selected camera.



NOTICE!

The Allegiant cannot display graphic characters that are used in certain non-European and non-US languages such as Chinese. Please contact your local Bosch representative how to use alternative characters.

4. When all units have a camera assigned the configuration must be uploaded to the DCN system.
 - Refer to the *Section 7 Upload* section.




NOTICE!

During configuration, the audience screen continues to show the image from the **Overview** camera, except if AutoDome is selected as Camera system then it will show the same view as the operator screen. The operator screen shows the video of the selected camera.

6.1.4

Remove disconnected units

When a unit is disconnected from the DCN system a disconnect  image is shown in front of the unit. This unit might be replaced because it was defect. If this unit will not be used anymore it can be removed by clicking the Remove selected seat button. Click **Remove all disconnected** button to remove all disconnected units from the assignment list.

6.1.5

Camera menu

The **Camera menu** button activates the internal menu of the AutoDome. In this menu special AutoDome settings can be controlled like inverting the image in case the AutoDome is placed on a tabletop. Refer to the AutoDome manual for details about the internal menu.

6.2 Temporarily PC with 1 serial port

1. Make a connection between the DCN system and the temporarily PC.
2. In workflow *Section 4 System* set the *Section 4.1 PC Communication Settings* for DCN system to the correct port.
3. Start the configuration mode of the DCN system by clicking the **Start configure**.
 - Now all connected units are retrieved from the DCN system. While retrieving a progress window might be show. If all units are retrieved they are shown in the Assignment list.
4. Click the **Stop configure** button to stop the DCN system configuration mode.
5. Disconnect the DCN system from the temporarily PC.
6. Connect the Camera system to the temporarily PC.
7. In workflow *Section 4 System* set the *Section 4.1 PC Communication Settings* for DCN system to **--None--** and for Camera system to the correct port.
8. Continue with assigning preposition to the units as described in *Section 5 Cameras*. Because the DCN system is not connected the selected unit will not flash the LEDs.
9. If all cameras and prepositions are assigned, disconnect the Camera system and reconnect the DCN system.
10. Change the *Section 4.1 PC Communication Settings*.
11. Start the *Section 7 Upload*.

7

Upload

This workflow describes **Uploading the configuration to the DCN system.**

To do so:

1. Click the **Start upload** button.
 - The window text is changed into **Uploading the configuration to the DCN system.**
 - The **Start upload** button, **File** (except **Exit**), **Tools** menu and Workflow buttons are disabled.
 - The progress bar is visible and gives the visual indication about the progress of the upload.
2. When the **Upload** process is successfully completed:
 - The window text is changed into **Upload successfully finished.**, the progress bar is set to 100% and the **Start upload** button, menu items and Workflow buttons are enabled.

NOTICE!

The **Start upload** button is disabled if the *Section 4.1 PC Communication Settings* for the DCN System is set to **--None--** .

If the **Upload** process cannot start the window text changes into: **Upload failed.** and the progress bar will be hidden.

Failures could be:

- Unable to set up the connection.
- Incompatible version of the DCN system.
- Missing camera control authorization.

If the **Upload** process failed the window text changes into: **Upload failed.** and the progress bar remains on the last value.

Failures could be:

- Lost of connection with the DCN system.
-



8 Print layout

The print function (*Section 3.1.1 Menu (1)*) allows you to print the camera configuration settings as given within the table below:

DCN Standalone Automatic Camera Control



Configuration

Name	configuration1.sacc
Camera system	ALLEGiant
Use Screen line of DCN-SW	No
Double seat text	Yes
Camera override	Yes
Movement time	0 seconds
Number of audience screens	1

Defined Cameras


Camera name	Number	Type	Number of prepositions
Camera	1	Fixed	1
Camera	2	Movable	99


Camera Assignments


ID	Seat Type	Camera	Preposition	Seat text 1	Seat text 2
0	Overview	2	1		



9 Warning and error reports


This section summarizes the warnings and errors and provides the text actually shown.


Warning	Warning when the application exits while configuration process is active.
Icon	
Main instruction	Do you want to save the configuration before application exit?
Content	The configuration process is still active.
Command links	Save and exit
	Exit without saving
Button	Cancel


Warning	Warning when the application exits that the configuration is changed but not yet saved.
Icon	
Main instruction	Do you want to save the configuration before application exit?
Command links	Save and exit
	Exit without saving
Button	Cancel


Warning	Warning when the file opened can not be read (corrupt, empty, read fail).
Icon	
Main instruction	The file {0} can not be opened or is corrupt.
Content	The file can not be opened. Do you want to open a new file?
Buttons	Open a new file
	Don't open a new file


Error	Error issued when the connection with the DCN system can not be established.
Icon	
Main instruction	Check your connection with the DCN system.
Content	Can not establish the connection with the DCN system. Check the protocol and baudrate settings on the DCN system. Connection to the DCN system might be occupied by the DCN-SW server or the Download and License Tool.
Button	OK
Footer icon	 Information
Footer	Learn about connecting the DCN system.



Error	Error issued when the DCN system has incompatible Software version installed.
Icon	
Main instruction	Check the version of your DCN system.
Content	The DCN system with version {0} does not match the version of the DCN-SWSACC application. Update your DCN system to at least version 2.60.xxxx by using the Download and License Tool.
Button	OK


Error	Error issued on start upload when the DCN-SWSACC application has loaded a single CCU configuration, while it connects to a Multi CCU DCN system.
Icon	
Main instruction	The configuration can not be uploaded. What do you want to do?
Content	This configuration is not intended to be used with the connected DCN system. The configuration is intended for a single CCU DCN system, while you are connected to a multi CCU DCN system.
Command links	Open another configuration
	Continue using the active configuration
Button	Don't Upload


Error	Error issued on start upload when the DCN-SWSACC application has loaded a multi CCU configuration, while it connects to a single CCU DCN system.
Icon	
Main instruction	The configuration can not be uploaded. What do you want to do?
Content	This configuration is not intended to be used with the connected DCN system. The configuration is intended for a multi CCU DCN system, while you are connected to a single CCU DCN system.
Button	Don't Upload


Error	Error issued on start configuration when the DCN-SWSACC application has loaded a single CCU configuration, while it connects to a multi CCU DCN system.
Icon	
Main instruction	The configuration can not be started. What do you want to do?
Content	This configuration is not intended to be used with the connected DCN system. The configuration is intended for a single CCU DCN system, while you are connected to a multi CCU DCN system.
Command links	Open another configuration
	Continue using the active configuration
Button	Don't Start configuration


Error	Error issued on start configuration when the DCN-SWSACC application has loaded a multi CCU configuration, while it connects to a single CCU DCN system.
Icon	
Main instruction	The configuration can not be started. What do you want to do?
Content	This configuration is not intended to be used with the connected DCN system. The configuration is intended for a multi CCU DCN system, while you are connected to a single CCU DCN system.
Command links	Open another configuration
	Continue using the active configuration
Button	Don't Start configuration

Error	Error issued when the required authorizations are not present in the DCN system.
Icon	
Main instruction	Check the license key of your DCN system.
Content	The license key of the DCN system does not contain the DCN-SWSACC authorization. Update your license key online. Use the Download and License Tool to upload the new license key.
Button	OK
Footer Icon	 Information
Footer	Learn about the system license key.


Warning	Warning issued after click on 'Assign and store' and the preposition is assigned for more than one seat.
Icon	
Main instruction	Do you want to reuse this preposition?
Content	The preposition is already used for another seat. The preposition will be updated with the new Pan-Tilt-Zoom settings and may affect the other seat.
Buttons	Reuse
	Don't reuse


Error	Error issued when the communication with the Allegiant detects and error. This occurs after a communication session with the Allegiant.
Icon	
Main instruction	Check your connection with the Allegiant.
Content	Connection with the Allegiant is lost. Check the Allegiant installation instruction in the online help.
Button	OK


Error	Error issued when the communication with the DCN system fails. This occurs during active connection with the DCN system between 'Start' and 'Stop' configure.
Icon	
Main instruction	Check your connection with the DCN system.
Content	Connection with the DCN system is lost. The configuration process will be stopped. Check the Installation instructions in the online help.
Button	OK


Error	Error issued when the communication with the DCN system fails. This occurs during active connection with the DCN system during upload.
Icon	
Main instruction	Check your connection with the DCN system.


Error	Error issued when the communication with the DCN system fails. This occurs during active connection with the DCN system during upload.
Content	Connection with the DCN system is lost. The upload will be stopped. Check the Installation instructions in the online help.
Button	OK



Warning	Warning issued the 'AutoDome' option is selected and there are multiple camera's defined for the Allegiant system.
Icon	
Main instruction	Do you want to change to AutoDome?
Content	Changing to AutoDome only keeps the first AutoDome camera and shall remove all other cameras and their assignments.
Buttons	Change to AutoDome
	Don't change



Warning	Warning issued when a camera definition is removed, where the camera (to remove) has assignments.
Icon	
Main instruction	Do you want to remove the camera?
Content	Removing the camera includes removing the assignment made. Stored prepositions in the camera will not be removed.
Button	Remove camera


Error	Error issued when application fails to print.
Icon	
Main instruction	The configuration can not be printed.
Content	Are there printers defined on your system? Is your printer connect properly to your system?
Button	OK

Warning	Warning issued when configuration is not saved before opening another configuration file.
Icon	
Main instruction	Do you want to save the current configuration before opening a new one?
Buttons	Save and open
	Don't save and open

Error	Error issued when the application fails to start.
Icon	
Main instruction	Failed to start the application. Repair the installation by starting the DCN-SWSACC setup and choose Repair.
Button	OK

Error	Error issued when the connection with the DCN system by IP address or Hostname cannot be established.
Icon	
Main instruction	Check your connection with the DCN system.
Content	Can not establish the connection with the DCN system. Check the host name or IP address. Connection to the DCN system might be occupied by the DCN-SW server or the Download and License Tool.
Button	OK
Footer Icon	 Information
Footer	Learn about connecting the DCN system.

Error	Error issued when the connection with the Allegiant can not be established.
Icon	
Main instruction	Check your connection with the camera system.
Content	Can not establish the connection with the Allegiant. Check the baudrate settings in the Allegiant.
Button	OK
Footer Icon	 Information
Footer	Learn about connecting the Camera system.

Error	Error issued when file cannot be saved.
Icon	
Main instruction	Can not save the configuration to selected file.
Content	The file might be read only or locked by another application.
Button	OK

Index

A

Add/Remove camera 14
Assign & store 15
Assigning the overview 16

C

Cables 8
Camera Control Settings 13
Camera information 14
Camera System Type 13

D

Demo version 5

M

Menu 11

P

PC Communication Settings 12
PC with 1 serial port 18
Print layout 20

R

Remove disconnected units 17

S

System licence key 5

U

Upload 19

V

Video Url 12

W

Workflows 11

Bosch Security Systems B.V.

Kapittelweg 10
4800 RA, Breda
The Netherlands

www.boschsecurity.com

© Bosch Security Systems B.V., 2011