



# HIGH-DEFINITION TELEVISION BASIC OWNER'S GUIDE

## MODELS

---

### 151 Series 153 Series 249 Series

---

This manual provides basic connection, setup, and operating instructions. Please visit our website at [www. Mitsubishi-TV.com](http://www.Mitsubishi-TV.com) to view or download a detailed owner's guide that fully describes the features of this TV.

 
- For questions:
  - » Visit our website at [www.mitsubishi-tv.com](http://www.mitsubishi-tv.com).
  - » E-mail us at [MDEAservice@mdea.com](mailto:MDEAservice@mdea.com).
  - » Call Consumer Relations at 800-332-2119.
- For information on **System Reset**, please see the back cover.
- To order replacement or additional remote controls, visit our website at [www.mitsuparts.com](http://www.mitsuparts.com) or call 800-553-7278.
- 153 and 249 Series. IR emitter cables are available for purchase from Mitsubishi. Request either part number 242D483020 (two-ended cable) or part number 299P254020 (four-ended cable).
- The full Owner's Guide is available electronically at [www.Mitsubishi-TV.com/ProductDocuments](http://www.Mitsubishi-TV.com/ProductDocuments)

**6COLOR**  
PROCESSOR



**HDMI**<sup>TM</sup>  
HIGH-DEFINITION MULTIMEDIA INTERFACE

**NET Command**  
WITH IR LEARNING




## CAUTION

RISK OF ELECTRIC SHOCK  
DO NOT OPEN



 CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user of the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.



**MAINS DISCONNECTION:** The mains plug is used as the disconnect device. The disconnect device shall remain readily operable.

**WARNING:** This product shall be connected to a MAINS socket outlet with a protective earthing connection.

## If Your TV Gets Damaged

Crystalline liquid may leak from the LCD panel and broken glass may be scattered.

**CAUTION: The crystalline liquid is toxic. Avoid contact with your skin, eyes, or mouth.** DO NOT touch the broken glass or crystalline liquid. DO NOT get glass fragments or crystalline liquid into eyes or mouth. **Should either contact with your eyes or mouth, rinse the contacted area thoroughly with water and consult your doctor.**

## Disposal of Your TV = MERCURY

The LCD panel contains a small amount of crystalline liquid and the fluorescent tube in the panel contains mercury. Both are toxic and should not be touched.

**DO NOT dispose of the TV with general household waste.** THE LAMPS INSIDE THIS PRODUCT CONTAIN MERCURY AND MUST BE RECYCLED OR DISPOSED OF ACCORDING TO LOCAL, STATE, AND FEDERAL LAWS. For disposal or recycling information, contact your local authorities or the Electronic Industries Alliance at [www.eiae.org](http://www.eiae.org).

**WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

**WARNING:** This product contains chemicals known to the State of California to cause cancer and/or birth defects or other reproductive harm.

**ENERGY STAR® Compliance** Changing the video settings from their initial values could cause the TV to exceed ENERGY STAR® specifications.

## FCC Declaration of Conformity

Product: LCD Flat Panel HDTV  
Models: LT-40151, LT-46151, LT-52151  
LT-40153, LT-46153, LT-52153  
LT-46249, LT-52249  
Responsible Party: Mitsubishi Digital Electronics America, Inc.  
9351 Jeronimo Road  
Irvine, CA 92618-1904  
Telephone: (800) 332-2119

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- » Reorient or relocate the receiving antenna.
- » Increase the separation between the equipment and the receiver.
- » Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- » Consult the dealer or an experienced radio/TV technician for help.

**Changes or modifications not expressly approved by Mitsubishi could cause harmful interference and would void the user's authority to operate this equipment.**

**TV WEIGHT:** This TV is heavy! Exercise extreme care when lifting or moving it. Lift or move the TV with a minimum of two adults. To prevent damage to the TV, avoid jarring or moving it while it is turned on. Always power off your TV, unplug the power cord, and disconnect all cables before moving it.

# Contents

Important Safety Instructions.....	4
Stand Installation.....	5
Remote Control.....	6
TV Connector Panel Diagrams .....	7
Connector Performance .....	7
<b>Connecting Devices</b>	
Connecting with HDMI or DVI .....	8
Connecting with Composite Video.....	8
Connecting with Component Video .....	8
Connecting Antenna or Cable without a Box.....	9
Recording to a Device from Antenna or Cable without a Box.....	9
Connecting A/V Receiver for Audio .....	9
Connecting A/V Receiver with HDMI for Audio and Video Switching .....	9
<b>Device Setup and Control</b>	
Auto Device Discovery Feature .....	10
Device Type and Activity .....	10
Selecting a TV Input .....	10
<b>TV Channel Setup</b>	
Memorizing Channels.....	11
ChannelView™ Channel Listings.....	11
Using ChannelView™ .....	11
<b>TV Menus</b>	
Menu Navigation.....	12
Picture and Sound Settings .....	13
Closed-Caption Settings.....	15
Setup of TV Features.....	16
Input Management .....	17
Controlling TV Usage .....	18
<b>Sound Projector</b> .....	19
<b>Subwoofer</b> .....	20
<b>USB Media Player Menu</b> .....	21
<b>More Menu</b> .....	22
<b>Troubleshooting</b> .....	23
<b>Warranty, Trademarks and Licenses</b> .....	26

## For Your Records

Record the following information for reference when requesting assistance with the TV. The model and serial numbers are on the back of the TV.

**MODEL NUMBER** \_\_\_\_\_  
**SERIAL NUMBER** \_\_\_\_\_  
**PURCHASE DATE** \_\_\_\_\_  
**RETAILER NAME** \_\_\_\_\_  
**LOCATION** \_\_\_\_\_

## TV Cleaning

Before cleaning, turn TV off and unplug.

### General Cleaning Precautions

- DO NOT allow liquid to enter the TV through the ventilation slots or any crevice.
- DO NOT use any strong or abrasive cleaners, as these can scratch the surfaces.
- DO NOT use any cleaners containing ammonia, bleach, alcohol, benzene, or thinners, as these can dull the surfaces.
- DO NOT spray liquids or cleaners directly on the TV's surfaces.
- DO NOT scrub or rub the TV harshly. Wipe it gently.

### Top and Sides of the TV

- Use a vacuum cleaner with a brush attachment to clean dust build-up from the air-intake grilles on the back and sides of the TV.
- Gently wipe down your TV with a soft, non-abrasive cloth such as cotton flannel, lightly moistened. Dry with a second dry, soft, non-abrasive cloth.
- For oily dirt, add a few drops of mild liquid detergent, such as dishwashing detergent, to the water used to moisten the cloth. Rinse with a second cloth moistened only with water. Dry with a third dry, soft, non-abrasive cloth.
- **Glossy Surfaces:** Take special care when cleaning the TV's glossy surfaces.
  - » Always shake or brush the cleaning cloth first to remove any dirt particles.
  - » Wipe the glossy areas gently, without applying pressure.
  - » If necessary, lightly dampen the cloth with water. Use no chemical or abrasive cleaners.

### LCD Screen Cleaning

#### **IMPORTANT**

**DO NOT apply any type of liquid to the surface of the LCD screen.**

- Use only a soft, dry cloth to wipe the screen gently with an up and down motion.
- Clean the entire screen evenly, not just small sections.

# Important Safety Instructions

Please read the following safeguards for your TV and retain for future reference. Always follow all warnings and instructions marked on the television.


- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this apparatus near water.
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11) Only use attachments/accessories specified by the manufacturer.
- 12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- 13) Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.



## Outdoor Antenna Grounding

If an outside antenna or cable system is connected to the TV, be sure the antenna or cable system is grounded so as to provide some protection against voltage surges and built-up static charges.

EXAMPLE OF ANTENNA GROUNDING

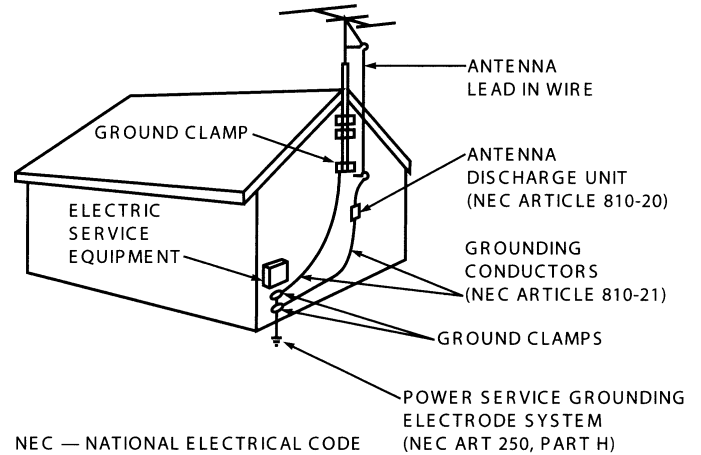

## Choose a Location for your TV.

- Allow at least four inches of space on all sides of the TV to help prevent overheating. Overheating may cause premature failure of the TV as well as shortened lamp life.
- Avoid locations where light may reflect off the screen.

## Replacement Parts

When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock or other hazards.

## Installation Notes

### Wall Mount Requirements

For wall-mounting, see "Stand Installation," p. 5.

**Use with other than the authorized accessories may cause the TV to become unstable, which can cause damage to the product or possible injury.**

**Custom cabinet installation must allow for proper air circulation around the television.**

**NOTE TO CATV SYSTEM INSTALLER:** ARTICLE 820-40 OF THE NEC THAT PROVIDES GUIDELINES FOR THE PROPER GROUNDING AND, IN PARTICULAR, SPECIFIES THAT THE CABLE GROUND SHALL BE CONNECTED TO THE GROUNDING SYSTEM OF THE BUILDING, AS CLOSE TO THE POINT OF CABLE ENTRY AS PRACTICAL.






 
# Stand Installation

## CAUTION

At least TWO (2) PEOPLE are needed to safely install the stand. Two people should grab the marked areas of the TV to avoid hands being jammed between the TV and the stand. Failure to follow these recommendations may result in personal injury and damage to the product.

Required:

Phillips Screwdriver

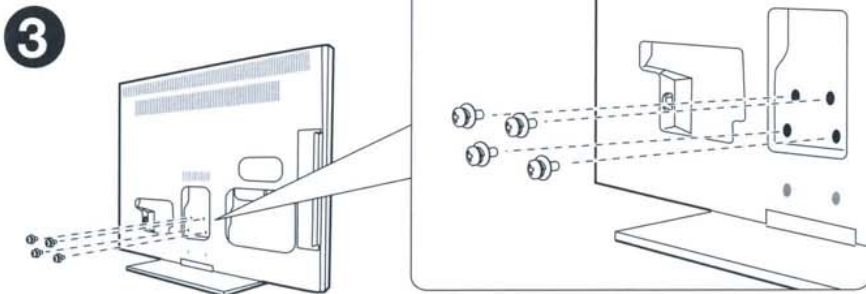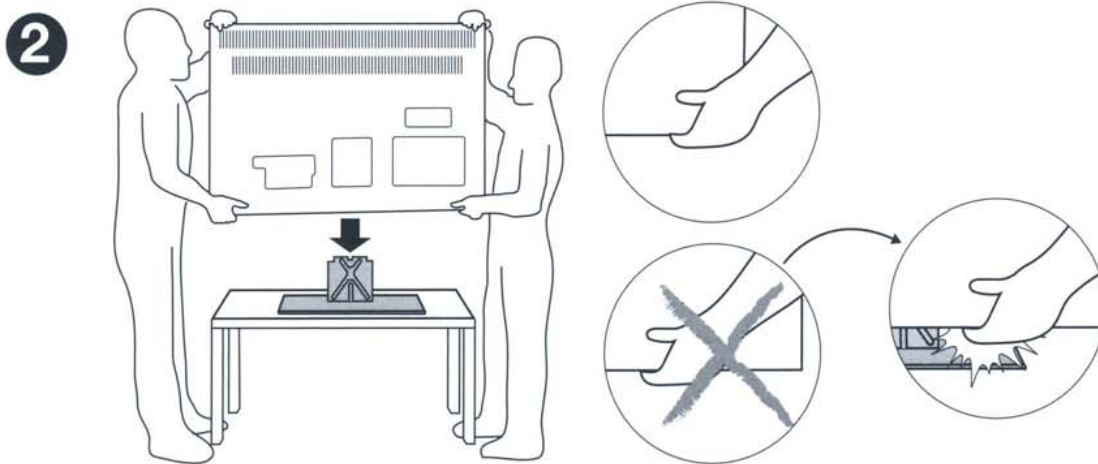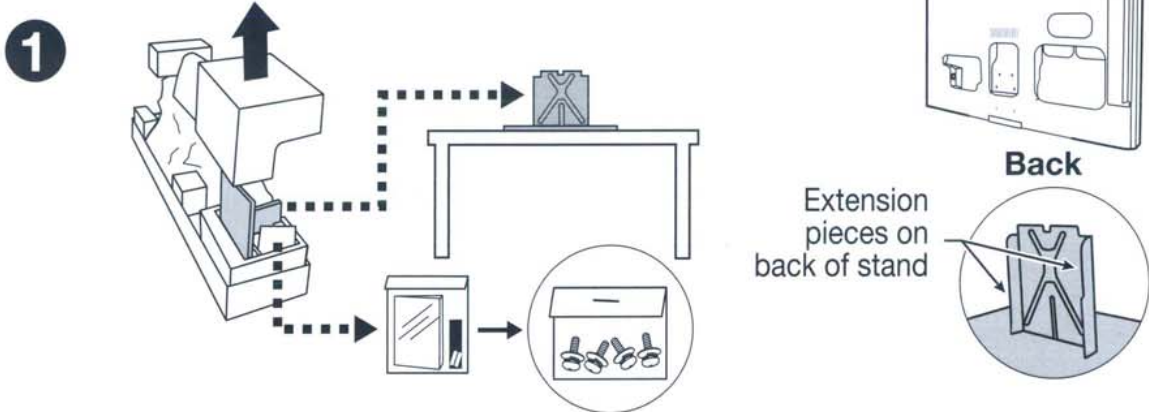

## Wall Mounting Kit

*(purchased separately)*

To order a Wall Mounting Kit, please contact Peerless Industries, Inc. at (800) 473-3753 or visit [www.peerlessmounts.com](http://www.peerlessmounts.com). Use wall mounting kit Model ST650.

**Note:** Complete instructions are included with the kit.

To order a Wall Mounting Kit from Mitsubishi Digital Electronics America, Inc., please visit [www.mitsuparts.com](http://www.mitsuparts.com) or call (800) 553-7278.

**CAUTION:** Using this TV with other than the authorized accessories may cause the TV to become unstable, which can cause damage to the product or possible injury.

# Remote Control

**ACTIVITY** Select a TV input to watch

- GUIDE** Displays ChannelView listings
- MENU** Displays the TV main menu
- INFO** Displays TV status and help
- BACK** Steps back one menu

VCR CABL/SAT TV DVD AUDIO

Control mode indicator for device types that can be controlled. Use side button to change the mode.

Powers TV on or off

Side button changes the control mode

VOLUME UP  
MUTE  
VOLUME DOWN

CHANNEL UP  
LAST Returns to the previously tuned channel  
CHANNEL DOWN

Record/Playback controls for external devices


**(PAUSE)** Freezes a broadcast TV picture

PAGE UP  
**ENTER** Selects a channel number or menu item  
 Navigation keys  
 PAGE DOWN

Number/letter keys for channel tuning and naming channels

**CANCEL** Adds a separator in digital channel numbers. Clears some menu entries.

**MORE** Accesses additional functions for the number keys in the **MORE** menu

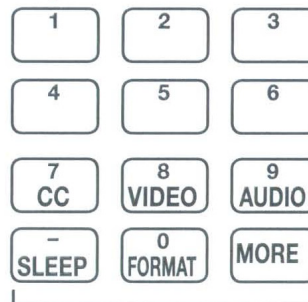

Closed captions  
Video adjustments  
Audio adjustments

**SLEEP** Sleep Timer turns TV off after a length of time  
**FORMAT** Picture shape (aspect ratio)  
**MORE** Clears the **MORE** menu

**If You Power Off the TV by Mistake**


1. Press **POWER** again within about 60 seconds, to have the TV come back on immediately.
2. If the status indicator starts fast green blinking (about 60 seconds after you shut off power), wait a few moments for the status indicator to stop blinking and press power to turn the TV on again.

Features and specifications described in this owner's guide are subject to change without notice.



# TV Connector Panel Diagrams

**Note:**  
The number of inputs/outputs shown on the TV Panel diagram may vary from those on the purchased model.

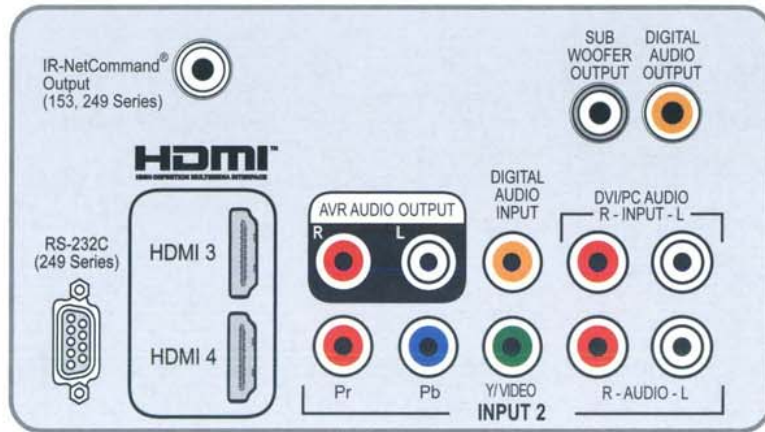

Main connector panel

 


Side panel


249 Series:  
Additional USB jacks within recess.



Connections within recess



## Connector Performance

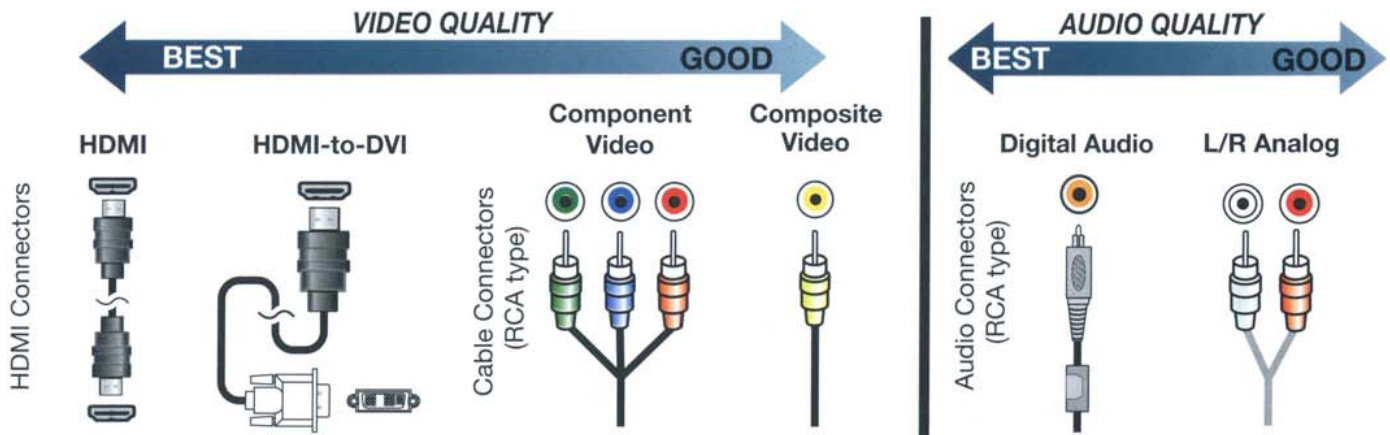


# Connecting Devices

## Connecting with HDMI or DVI

Required:

1. HDMI-to-HDMI cable **OR**
2. a. DVI-to-HDMI cable **AND**  
b. Left/Right Analog Audio cable

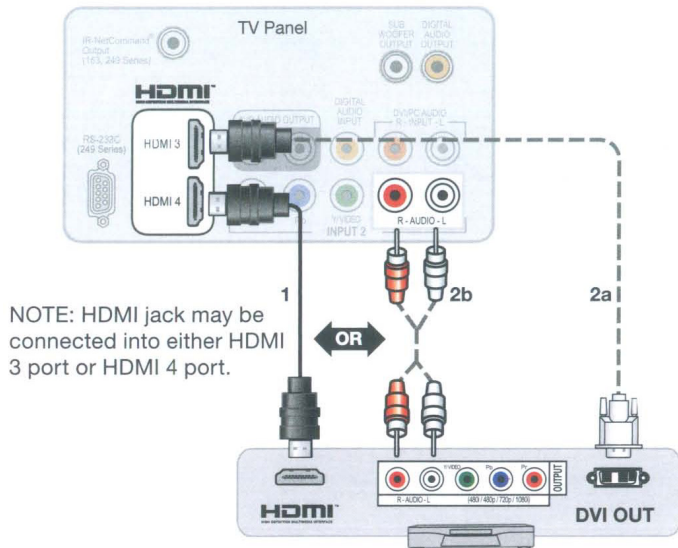


## Connecting with Composite Video

VCR or other device with composite video output

Required:


1. Composite video cable
2. Left/Right Analog Audio cable

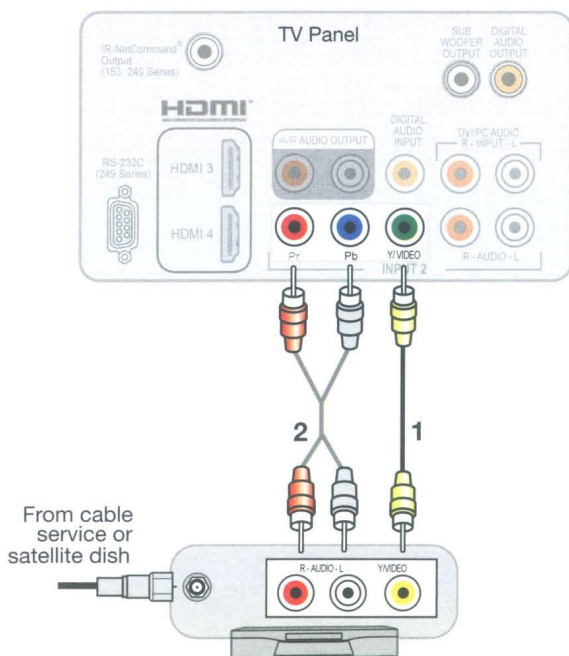

## Connecting with Component Video

Required:

1. Component video cables
2. Left/Right Analog Audio cable.

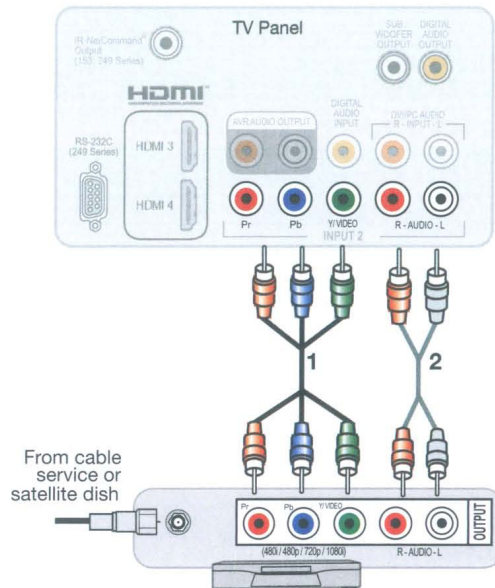

Input 1 is available under the recessed area in the back.

It is designed to provide an installation friendly location for better cable management, especially if a wall mount is used.


Even though the illustration uses Input 2, consider connecting the devices to Input 1 before Input 2.



Input 1 within recess




## Connecting Antenna or Cable without a Box

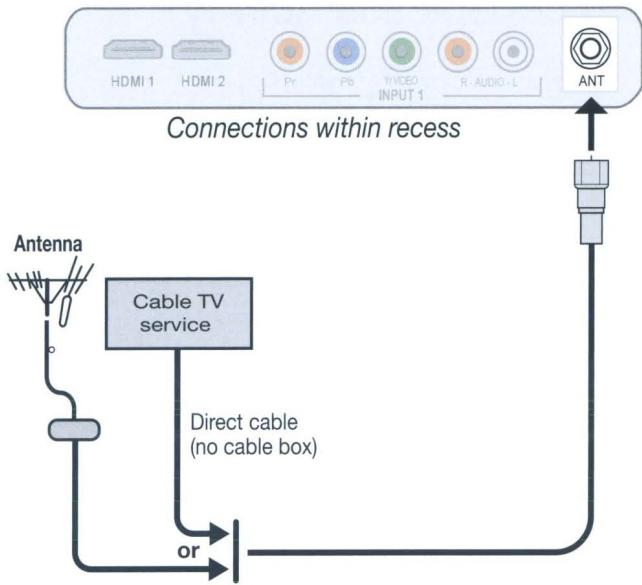

Mitsubishi recommends using coaxial antenna cable instead of flat twin lead antenna wires for better performance.


## Recording to a Device from Antenna or Cable without a Box

- Required:
1. Two-way RF splitter
  2. Two coaxial cables
  3. Right and left analog audio cables
  4. Composite video cable

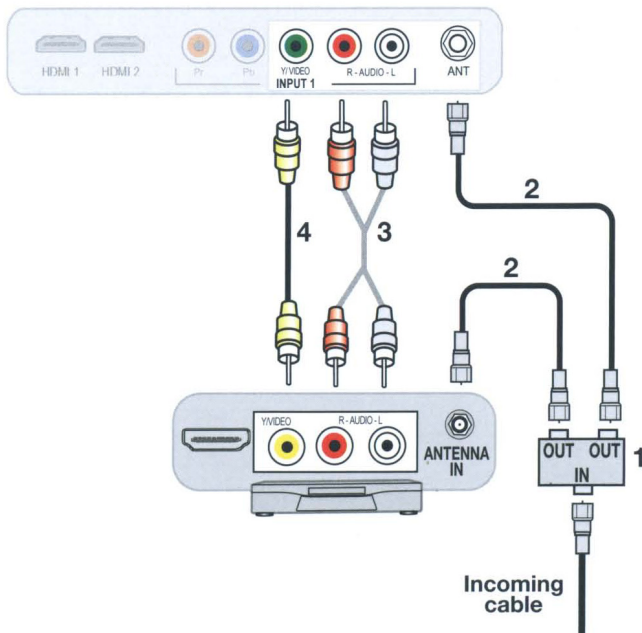

## Connecting A/V Receiver for Audio


- Required:
1. Digital coaxial audio cable **OR**
  2. Analog stereo audio cables

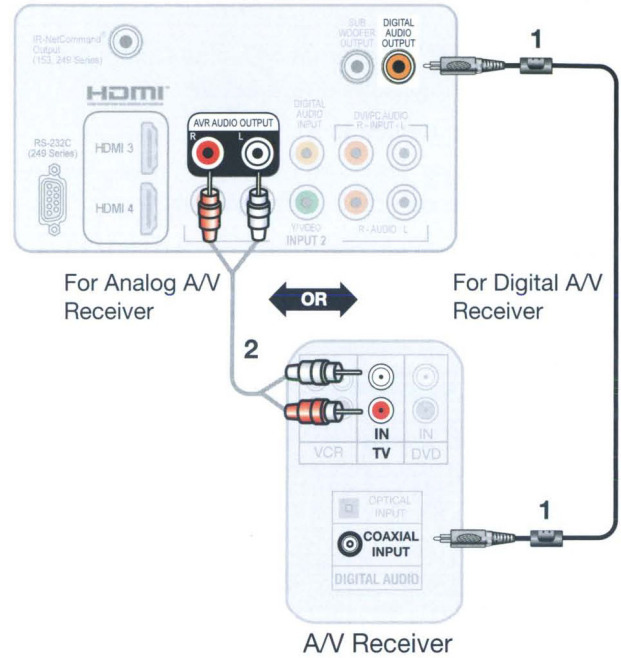

**Note:** If the audio is missing from the digital audio connection, it might be due to the copy-protected signal. Use the analog audio connection.

## Connecting A/V Receiver with HDMI for Audio and Video Switching

- Required: HDMI-to-HDMI cable

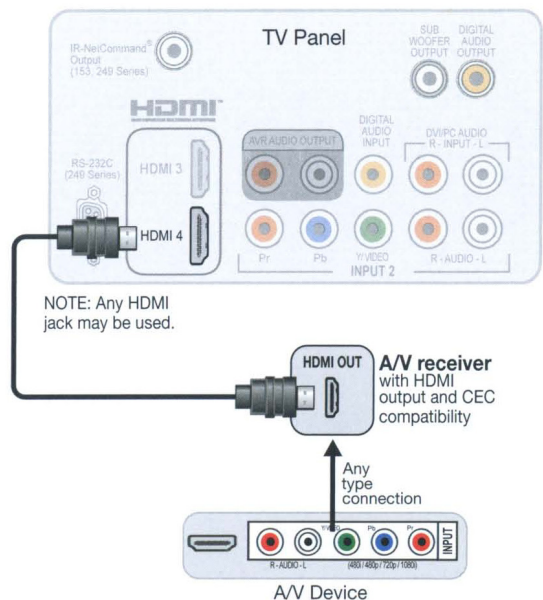


**Note:** For the Antenna or devices connected directly to the TV, the audio output connection is required to hear through the A/V receiver. Otherwise audio is available through the TV speaker.

# Device Setup and Control

## Auto Device Discovery Feature

TV's Easy Connect™ Automatic Device Discovery detects most connections automatically.

1. Connect your device to the TV.
2. TV displays the 'New Device Found' menu when the connection is detected automatically.

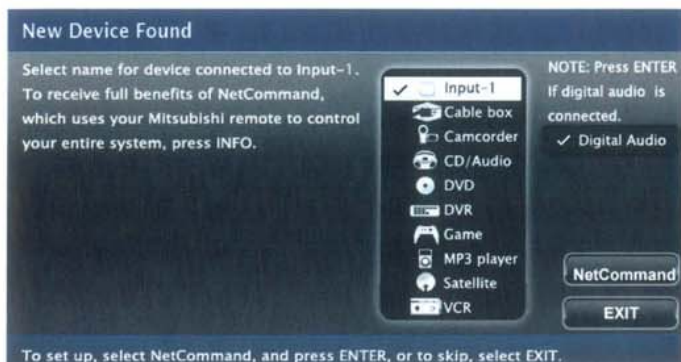

3. To ensure best detection, power on HDMI devices before connection.
4. Specify the Device Type from the menu.
  - a. For DVD or GAME, additional menu pops up.
  - b. The Activity menu is customized based on the device type. Refer to next section for details.

## Device Type and Activity

Activity \ Device Type	Watch TV	Watch Movie	View Photos	Play Game	Listen Music
AV Receiver	X				X
Blu-Ray		X	X		X
Cable Box	X				
Camcorder		X			
CD/Audio					X
DVD		X			X
DVD2		X			X
DVR	X				
Game				X	
MP3 Player		X			X
PC	X	X	X	X	X
PS		X	X	X	
Satellite	X				
VCR		X			
Wii		X		X	
Xbox		X		X	
USB			X		X

To modify the default activity setting, use the Activity sub-menu in the Inputs menu. Refer to TV Menus section for further detail.

## Selecting a TV Input

1. Press **ACTIVITY** key.



The blue rectangle indicates the current source while navigating to other devices. If no device is connected, the only Activity available is "Watch TV."

2. Press **▲▼** and **◀▶** to highlight a source.
3. Press **ENTER** key to switch to the TV input.



# TV Channel Setup

## Memorizing Channels

Use the Scan option in the Channel Management menu to locate and memorize all of the local channels from an antenna or from direct cable service (no cable box).

1. Press **MENU** key to display menu.
2. Press **▲▼** and **◀▶** to open the **Channel** menu.




3. Select **Ant Air** if connected to an over-the-air antenna. Select **Ant Cable** for direct cable.
4. Highlight Scan and press **ENTER**. Wait for the completion message before continuing.
5. To stop Channel Memorization, press **CANCEL** key.

Customize the Channel List using Edit Function. Channels may be added or deleted from the memory.

## ChannelView™ Channel Listings

ChannelView™ shows memorized channels on the **ANT** input. It displays channel names and program information for digital channels as sent by broadcasters or your local cable service provider (information may be incomplete). No program information is displayed for analog channels.

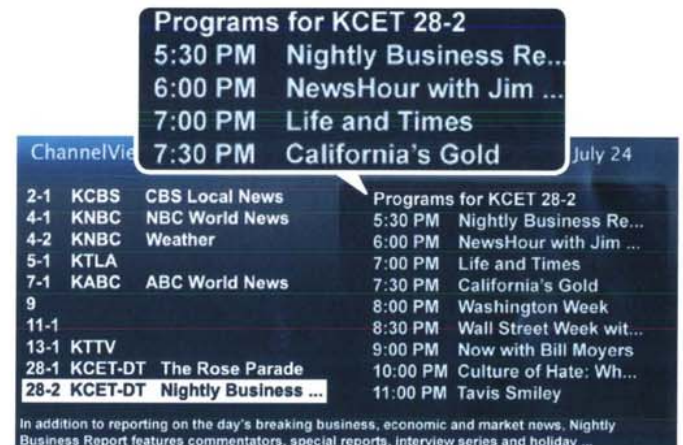

*ChannelView. Programs for the tuned channel are listed on the right side of screen.*






**Note:** You must set the TV Clock to receive ChannelView listings.


## Using ChannelView™

Feature	Instructions
Receive updates for a digital channel.	Tune to the channel.
See ChannelView listings from the <b>ANT</b> input.	<b>GUIDE</b>
Close ChannelView	<b>GUIDE</b>
Scan channels one by one.	Hold <b>▲</b> or <b>▼</b>
Scan channels quickly.	Hold <b>PAGE UP/PAGE DN</b>
Jump to listings for a specific channel.	<ol style="list-style-type: none"> <li>1. Enter the channel number.</li> <li>2. Press <b>ENTER</b>.</li> </ol>
See more of the program description for the current channel (if available).	<b>INFO</b>
Tune to the highlighted channel.	<b>ENTER</b>







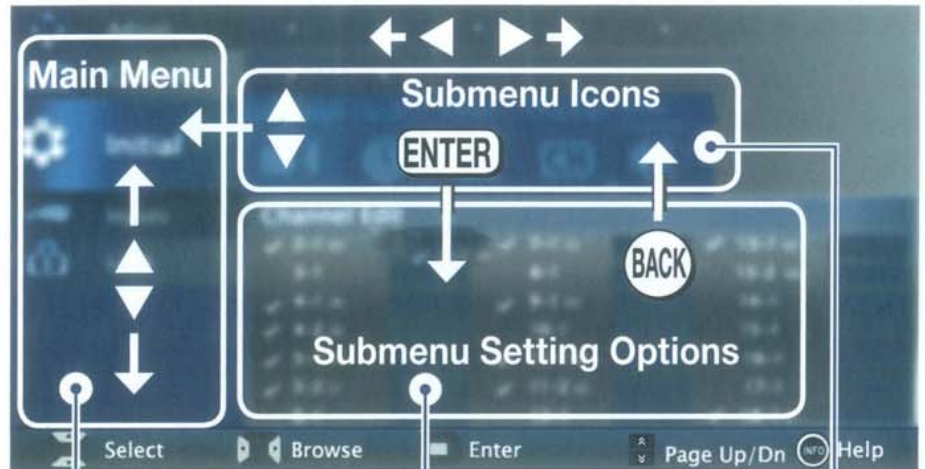




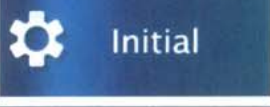





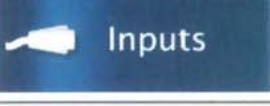









# TV Menus



## Menu Navigation




-  Displays or clears the main menu
- 
  - Moves up one menu level
  - Clears the current menu
- 
  - Navigation into Submenu Setting Options
  - Selects an item
-  Move the highlight within menu
-  Make adjustments in some menus



Key guide → Submenu Setting Options are described in the following section.

TV Menu Features	 Main Menu	 Submenu Icons
Picture and Sound Settings	 Adjust	Picture Audio Reset Global Picture+     
Closed-Caption Settings	 Captions	Services Effects  
Setup of TV Features	 Initial	Language Clock Timer Channel Sound Projector     
Input Management	 Inputs	Name Learn AVR HDMI Control Activity     
Controlling TV Usage	 Lock	Parental Time Panel Other   

Operation	TV Response
	<ul style="list-style-type: none"> <li>• Control moves through the Main menu</li> <li>• Submenu icons are displayed</li> </ul>
	Control moves to Submenu Icon

Operation	TV Response
	<ul style="list-style-type: none"> <li>• Control moves through Submenu Icons in the row</li> <li>• Submenu Setting Options are displayed</li> </ul>
	Control moves to Main Menu
	Control moves to Submenu Setting Options





## Adjust

### Picture and Sound Settings



#### Picture



**Video Settings**

Picture Mode : Natural

Contrast : 63

Brightness : 31

Color : 31

Tint : 31

Sharpness : 31

Back Light : 63

Color Temp : High

Video Noise : Medium

SharpEdge : On

Deepfield Imager : On

- Assign names to TV inputs before making video adjustments (New Device Found or Inputs > Name menu).
- Adjustments will be reset to the defaults if you name or rename inputs afterwards.
- Set the Picture Mode first before changing other video settings, as some settings are stored independently for each Picture Mode.

Use Picture Mode to get the best image under different viewing conditions. Options are:

<b>Picture Mode</b>	<b>Brilliant:</b>	Bright light. Unavailable for the Game or PC inputs.
	<b>Bright:</b>	Daytime viewing
	<b>Natural:</b>	Night time viewing
	<b>Game:</b>	Available for Game or PC input only

<b>Contrast</b>	Adjusts the white-to-black level.	
	<ul style="list-style-type: none"> <li>• Low contrast shows a variety of shades in darker images.</li> <li>• High contrast shows darker images more uniformly black and makes colors appear more vibrant.</li> <li>• High contrast is good for brightly lit environments.</li> <li>• Medium contrast is good for the most home lighting situations.</li> </ul>	
<b>Brightness</b>	Adjusts overall picture brightness.	
<b>Color</b>	Adjusts overall color intensity from no color to fully saturated.	
<b>Tint</b>	Adjusts the red-to-green ratio.	
<b>Sharpness</b>	Adjusts picture detail and clarity.	
<b>Back Light</b>	Adjusts brightness of the backlight. Changing this setting from the initial value could cause the TV to exceed the ENERGY STAR <sup>®</sup> specifications.	
<b>Color Temp</b>	Adjusts the white balance. Settings are stored independently for each Picture Mode.	
	<b>High</b>	Gives white images a cool cast. May provide the most realistic picture under bright lighting.
	<b>Low</b>	Gives white images a warm cast. Natural/Color Temp at the low setting displays video at approximately the 6500K industry standard for NTSC pictures.
<b>Video Noise</b>	Reduces minor noise (graininess) in the picture. Saved by input. This adjustment is not available if the current input is named PC or Game.	
	<b>High</b>	Option for poor-quality signals.
	<b>Medium</b>	Option for moderate noise reduction.
	<b>Low</b>	Option for good-quality signals.
	<b>Off</b>	Use Off to leave the picture unaltered.
<b>Sharp Edge</b>	Add special edge enhancements to make image appear sharper.	
<b>DeepField Imager</b>	Enhance black levels in portions of the screen to provide strong contrast. (153 and 249 Series only)	
	<b>On, Off Demo</b>	For comparison, displays a split picture to show On (right side) and Off (left side).



## Adjust continued



## Audio



## Audio Settings

Subwoofer : On (Press ENTER to adjust Level)  
 Bass : 31  
 Treble : 31  
 Balance : 31  
 Sound Mode : Stereo  
 Listen To : Stereo  
 Language : English  
 Level Sound : Off

Subwoofer option is available if a subwoofer connection has been identified on the **SUBWOOFER OUTPUT** jack.

**Subwoofer Off, On:**

Use **Off** to turn off audio to a connected subwoofer or to reset the **AVR AUDIO OUTPUT** jack.

**Level Adjustment:**

To adjust the subwoofer volume level, highlight **Subwoofer** and press **ENTER** to display an adjustment slider.

## Audio Settings

Speakers : TV  
 Bass : 31  
 Treble : 31  
 Balance : 31  
 Sound Mode : Stereo  
 Listen To : Stereo  
 Language : English  
 Level Sound : Off

Speaker option is available if a subwoofer connection has not been detected.

If an A/V receiver or headphone connection has been detected, available options are:

**TV:** Turns on the internal TV speakers.

**A/V Receiver:** Audio available from an A/V Receiver. (Headphone option not available.)

**Headphones:**

- Audio available from headphones.
- Connect to **AVR AUDIO OUTPUT** jack.

	<b>Stereo:</b>	No special audio effects from the TV speakers.
	<b>Surround:</b>	Modifies audio from the TV speakers.
<b>Sound Mode</b>	<b>Music</b>	153 and 249 series <ul style="list-style-type: none"> <li>• The left and right sound beams are output directly toward the listening position.</li> <li>• The Balance setting is unavailable, defaults to center</li> </ul>
	<b>Night</b>	153 and 249 series <ul style="list-style-type: none"> <li>• Focuses all 16 speakers to the center channel to allow sound to focus only at one point, thus ensuring quiet outside the room.</li> <li>• A range of 35 degrees from center in both directions is supported.</li> <li>• Subwoofer is muted if present.</li> <li>• The Balance setting is unavailable, defaults to center</li> <li>• Press the <b>ENTER</b> key to display a slider, default center (relative center), to move the focused sound to a specific seated location.</li> </ul>
		Available for analog channels from <b>ANT</b> only.
<b>Listen To</b>	<b>Mono:</b>	Reduces background noise.
	<b>Stereo:</b>	The TV plays stereo in stereo and mono broadcasts in mono.
	<b>SAP (Second Audio Program):</b>	Selects an additional sound track not audible during normal TV viewing.
<b>Language</b>		Selects the current language for a digital program from <b>ANT</b> .
<b>Level Sound</b>	<b>On, Off:</b>	Reduces differences in sound volume between programming segments, such as between regular broadcast programs and commercials.

## Reset



## Reset Memory


Press **ENTER** to reset video and audio settings to the initial factory settings for DVD.

RESET


Resets audio and picture adjustments for the current input. Highlight the **Reset** icon and press **ENTER**.



# Adjust continued

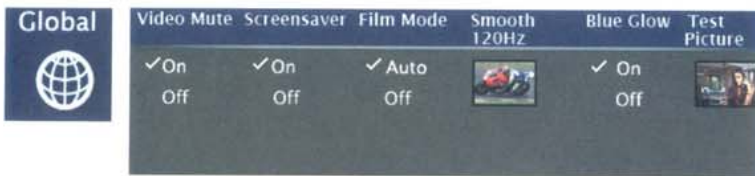


- Video Mute** Displays a solid-colored background when there is no video signal.
- Screensaver** Displays a random pattern while playing an audio-only device named **CD/Audio** or **MP3 Player**.
- Film Mode** **480i and 1080i signals only.** In **Auto**, the TV applies film-decoding correction to movies filmed at 24 frames per second.
- Smooth 120Hz** Reduces motion blur in action scenes.
- Blue Glow** Select **On** to see blue accent lighting. (249 Series only)
- Test Picture** Displays a test picture for use by TV servicers.

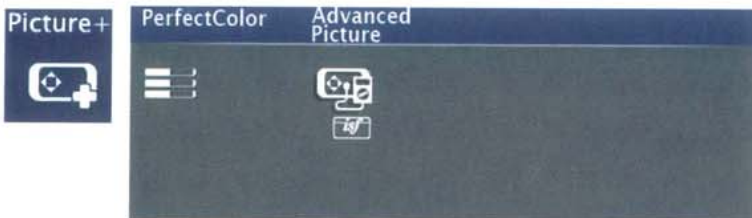

A press of **ENTER** on PerfectColor icon displays PerfectColor and PerfectTint menu if supported.

- PerfectColor** Sliders adjust the saturation (intensity) of six colors for the current input.  
Sliders adjust six hues for the current input (some models).
- PerfectTint** To switch between PerfectColor™ and PerfectTint™ adjustments, highlight **Adjust** and press ◀ ▶. (249 Series only)
- Advanced Picture** Technical picture adjustments for use by a professional installer.

## Captions Closed-Caption Settings

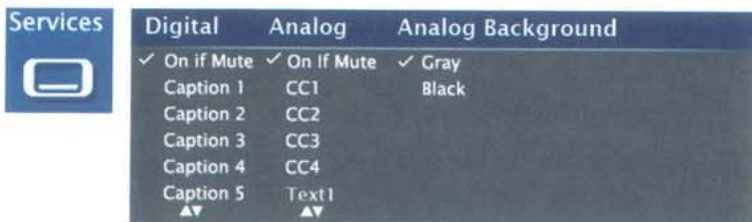

- Provides choices and separate on/off controls for digital and analog captions.
- Selects background color for analog captions.



Selects settings for the appearance of digital closed captions.



## Initial Setup of TV Features



Initial

Language Clock

Timer

Channel Energy

SoundPro



### Language



#### Language

- English
- Español

Choose either English or Spanish for TV menus.

### Clock



#### Time Date Time Zone DST

Time	Date	Time Zone	DST
12:00 PM	01/01/09	<input checked="" type="checkbox"/> Eastern Central Mountain Pacific Alaska Hawaii Atlantic	<input checked="" type="checkbox"/> Off On

- Use this menu to set the TV clock.
- Choose the **DST** (Daylight Savings Time) setting for your area.

### Timer



#### Timer Day Time Input Channel

Timer	Day	Time	Input	Channel
<input checked="" type="checkbox"/> On	<input checked="" type="checkbox"/> Daily	12:00 PM	<input checked="" type="checkbox"/> Ant	2-1
<input type="checkbox"/> Off	Mon-Fri		DVD	
	Sunday		Blu-ray	
	Monday			
	Tuesday			

- Use this menu to set a day and time for the TV to power on automatically.
- Select the input and channel to be used at Power-On.

### Channel



#### Channel Management

- Ant Air
- Ant Cable

Scan

Edit

5-1

Channel Scan searches for channels and adds them to memory.

- Choose if connected to an antenna or direct cable.
- Press ◀ ▶ to **Scan** and press **ENTER**.

### Adding/Deleting Channels

- Check mark indicates memorized channels.
- Select and press **ENTER** to add / delete the channel from the memory.

#### Channel Edit

<input checked="" type="checkbox"/> 2-1 60	KCBS-DT	<input checked="" type="checkbox"/> 7-1 53	<input checked="" type="checkbox"/> 13-1 66
<input type="checkbox"/> 3-1		<input type="checkbox"/> 8-1	<input type="checkbox"/> 13-2 66
<input checked="" type="checkbox"/> 4-1 36		<input checked="" type="checkbox"/> 9-1 43	<input type="checkbox"/> 14-1
<input checked="" type="checkbox"/> 4-2 36		<input type="checkbox"/> 10-1	<input type="checkbox"/> 15-1
<input checked="" type="checkbox"/> 5-1 31		<input checked="" type="checkbox"/> 11-1 65	<input type="checkbox"/> 16-1
<input checked="" type="checkbox"/> 5-2 31		<input checked="" type="checkbox"/> 11-2 65	<input type="checkbox"/> 17-1
<input type="checkbox"/> 6-1		<input type="checkbox"/> 12-1	<input checked="" type="checkbox"/> 18-1 61

### Energy



#### Energy Usage


- Standard
- Fast Power On



Options for power consumption while the TV is powered off.

- **Standard** keeps the TV in compliance with ENERGY STAR® efficiency standards while powered off.
- The **Fast Power On** setting lets the TV power up quickly. The TV draws power while in the off state in excess of ENERGY STAR efficiency standards for a powered-down device.



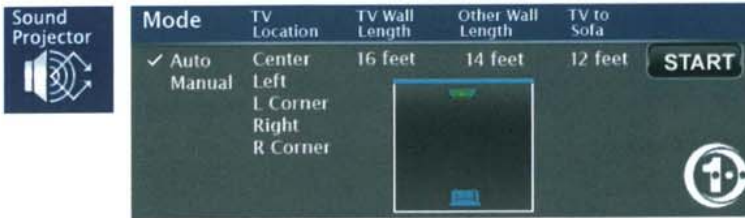

The TV's bank of 16 speakers can be adjusted to create a surround sound effect.

Mode option is available for 153 and 249 Series only.

#### Auto:

- Use only if Microphone is connected to the left audio jack of the side panel (input 3).
- The audio jack is not automatically detected.
- Press START to begin automatic calculation.

#### Manual:

- Custom button is displayed instead of START.
- Specify all items before pressing Custom button.
- Use the Custom option to fine tune per your unique room layout. (See page 19).



## Inputs Input Management



Name	Name				
Ant	Input-1	Input-2	Input-3	HDMI-1	HDMI-2
On	VCR	Input-2	Camcorder	AVR	Cable Box
HDMI-3	HDMI-4	CEC	CEC	CEC	CEC
HDMI-3	Wii	DVD	DVR	DVD2	Blu-Ray
CEC					
Satellite					

- Assign or change names of inputs appearing in the **Activity** menu.
- Turn the **Ant** input **On/Off** (to display/hide in the **Activity** menu).
- Delete unused HDMI inputs from the **Activity** menu.

#### Learn



#### AVR



For complete setup instructions, see the owner's guide on the web.

(153 and 249 Series only)

#### HDMI Control

HDMI CEC Control			
AVR	Cable Box	DVD	Blu-Ray
off	off	off	off

Select **On** or **Off** to enable or disable the TV's control of a CEC-enabled device. See the owner's guide on the web for use of this feature.

#### Activity



Assign Activity for PC	
✓	Watch TV
	Watch Movie
	Play Game
	View Photos
	Listen Music

- Customize the Activity menu choices for the current viewing input.
- Highlight the activity name and press ENTER.
- Not available from the Antenna input.



## Lock

### Controlling TV Usage

This feature restricts the access according to the U.S. based program ratings, the time of day or by the channels. Restricting the access using the non-U.S. based ratings (Alternate Rating System) can be setup from the 'Other' submenu.

- To setup the restriction or to watch TV during the restricted condition, a pass code is required.
- The pass code menu is displayed first whenever Lock is selected on the main menu.



Lock

Parental Time



Panel



Other



### Setting a Pass Code

- Input four-digit pass code using the number keys on the remote control.
- Press **CANCEL** to delete a number and move back one space.
- Press **MENU** or **BACK** to close the menu without setting a pass code.
- Press **ENTER** to set the pass code.
- If you forget the pass code: press the number 9 and **LAST** key on the remote at the same time.

### Resetting a Pass Code

The old pass code is deleted when entering the Lock menu, and prompts you to enter a new pass code.

### Parental



Lock	TV Rating	FV	D	L	S	V	Movie Rating	Start Time	Stop Time
<input checked="" type="checkbox"/> Off	TV-Y						G	12:00 PM	12:00 PM
<input type="checkbox"/> On	TV-Y7						PG		
	TV-G						PG-13		
	TV-PG						R		
	TV-14						NC-17		
	TV-MA						X		
							Not rated		

### Lock by Program Ratings:

- Restricts access to the TV using U.S. ratings sent by the broadcasters.
- Lock applies only to ANT and composite jacks. Some signals do not contain rating information and will not lock.
- To lock for 24 hours, set the same time for Start Time and Stop Time.

### Time



Lock by Time	Lock Time	Unlock Time
<input checked="" type="checkbox"/> Off	12:00 PM	12:00 PM
<input type="checkbox"/> On		

### Lock by Time:

- Blocks all use of the TV during the specified time period.
- Requires pass code to view during the locked time.

### Panel



Lock Control Panel Buttons
<input checked="" type="checkbox"/> Off
<input type="checkbox"/> On

### Lock Control Panel:

- Disables the buttons on the TV's control panel.
- Press and hold **ACTIVITY** button from the panel for about 10 seconds to unlock if the remote control is not available.

### Other



Lock	System	Group	Rating
<input checked="" type="checkbox"/> Off	Canadian	<input checked="" type="checkbox"/> English	<input checked="" type="checkbox"/> E
<input type="checkbox"/> On		French	

### Lock by Other Program Ratings:

- Restricts access using non-U.S. based ratings sent by broadcasters.
- Grayed out if the Other rating is not detected in the broadcasted signal.

Note: Other rating locks apply only to digital channels and signals received on the ANT.



# Sound Projector

The TV's bank of speakers can be adjusted to reflect sound off the room walls to create a surround sound effect. Setup can be performed manually for all models, and /or automatically depending on your TV models.

## Manual Setup Option

1. From the **Initial > SoundPro** menu, enter the room dimensions and layout information requested in the screen. Press **▲▼** to specify the value.
2. Highlight **Custom** and press **ENTER** to fine tune the direction and focus of the TV's sound output.



**153 and 249 Series:** Select **Manual** option under **Mode** (refer to the page 16), for **Custom** button to be displayed.

## Adjusting Angles

1. Position yourself in your usual viewing location.
2. Press **▲▼** to select an audio beam.
3. Press **◀▶** to redirect the audio beam or change the sound level.



Custom Sound Projector menu

- Center Angle** Sound to be equal in both ears.
- Left Angle** Maximize the sound from the left.
- Right Angle** Maximize the sound from the right.
- Left Surround Angle** Adjust as if the sound comes from the left rear side, or same as that for **Left Angle**.
- Right Surround Angle** Adjust as if the sound comes from the right rear side or same as that for **Right Angle**.

- To reset the beams, change the **TV Location** field.
- At extreme beam angles, the image on screen may not be accurate.

## Adjusting Levels

1. Adjust **Center Level** to the mid level.
2. Adjust individual beam one at a time so that each one sounds about the same as the center level.
3. Check all sound levels by quickly switching between them using **▲▼**.
4. Readjust individual levels in small increments.

## Auto Setup Option (153 or 249 series only)

1. Plug the microphone into the left audio jack of the side panel (**INPUT 3**). If the microphone is not plugged in, the TV will not allow the **Auto** setup.
2. Set **Mode** to **Auto**. **START** is displayed in place of **Custom**. Highlight **START** and press **ENTER**.
3. Quietly exit the room right away as your presence will interfere with the calibration process.
4. Return to the room after the completion of setup.
5. Play some sample audio to check the sound quality.

- Note:** Do not perform manual adjustments after the Auto setup. Auto calibration data will be erased.
6. Store the microphone out of direct sunlight and away from heat.

## Microphone Placement

- Place the microphone at least 6 feet away from the TV, centered in front of the TV.
- Place the microphone on a flat, level surface such as on a tripod or on the backrest of your seating.



- Place the microphone where yours ears would be when watching TV. Place it within 3 feet height from the TV Speakers.




# Subwoofer

## Connecting with Subwoofer for Complete Audio


Required:

1. Audio cable with an RCA jack

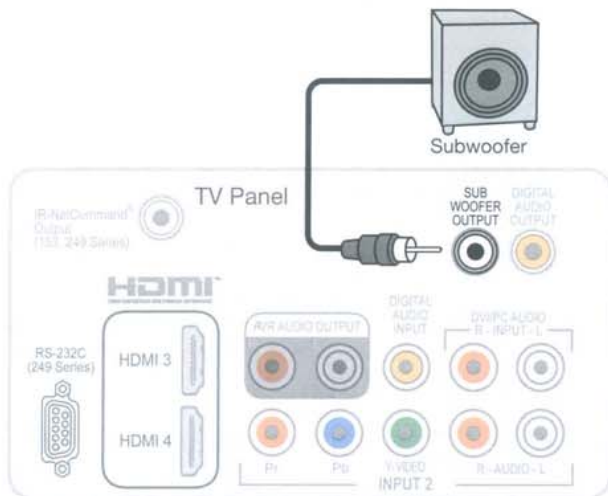

## Subwoofer Discovering

When the **Auto Output Sensing > New Device Found** screen displays, highlight **Subwoofer**.

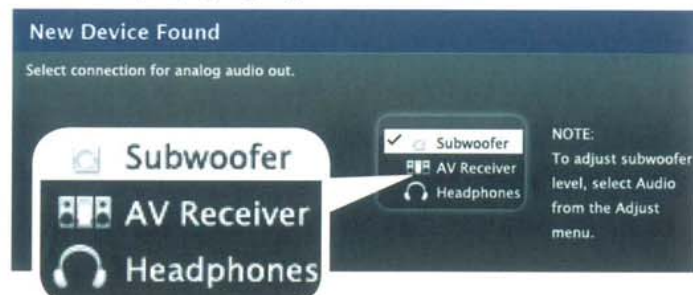

*Note:* The subwoofer must be turned on before connecting to the SUBWOOFER OUTPUT jack.

## Adjusting Subwoofer Level

1. Play sample video or music containing low-frequency bass sound.
2. Press **MORE** key and **AUDIO** key to display the **Subwoofer** option.
3. Press **▲ ▼** to **Subwoofer** is highlighted.
4. With **Subwoofer** set to **On**, press **ENTER** to display a slider for volume.
5. Press **◀ ▶** to adjust subwoofer volume to your preference.

## Resetting the Subwoofer Output Jack

1. Press **MORE** key and **AUDIO KEY** to display the **Subwoofer** option and change it to **Off**.
2. Power off the TV.
3. Disconnect the subwoofer from the TV.
4. Power on the TV.
5. Connect the device to the **SUBWOOFER OUTPUT** jack and the **Auto Output Sensing > New Device Found** screen will display.




# USB Media Player Menu

- The TV can display photo or music files from a USB device.
- Photos must be in JPEG format and music files in wma format.

1. Connect your USB drive to the TV's USB port located at the side panel.



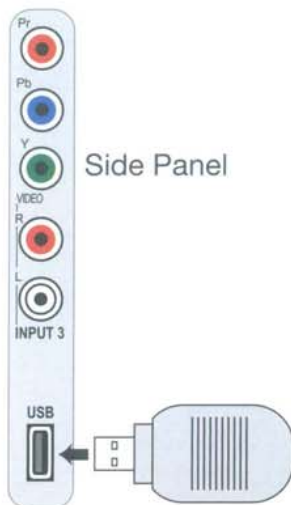

2. The TV ignores all commands while reading files. Wait for icons to appear in the **USB Media Player** menu before activating menu options.

Large files or high-capacity storage devices may take a long time to display.




## Play a Slideshow or Playlist

Starts the slide show or starts playing music.

 or <b>ENTER</b>	Plays the slide show or playlist.
<b>GUIDE</b>	Rotates an image clockwise in 90° increments
<b>INFO</b>	Displays slide name or track name. Press <b>BACK</b> to clear.
	Pauses a slide show or track
	Stops a slide show or track.
	Displays the previous or next slide or track.

### IMPORTANT

Always stop playback with  (STOP) or change to a different TV input before disconnecting your USB device.

Some pictures may not show on the TV.





Back up the data on your USB drive before connecting it to the TV. Mitsubishi is not responsible for any file damage or data loss.



## Thumbnail and Playlist Menus

Displays picture thumbnails or a list of music files.



	Moves the highlight from item to item.
<b>GUIDE</b>	Rotates a thumbnail clockwise in 90° increments (thumbnail only).
 or <b>ENTER</b>	Plays the slide show or playlist starting with the highlighted item.
	Selects the last item on the current page.
	Selects the first item on the current page.
<b>PAGE UP/DN</b>	Displays the next or previous page of items.

## Setup

Displays the USB Media Setup menu.

<b>Display</b>	You have the option to play music with the slide show (Slideshow + Music), Slideshow or Music only.
<b>Slideshow</b>	Select Auto or Manual for the slide show
<b>For automatic advance only:</b>	
<b>Interval</b>	Select the time interval for display of each slide. The actual interval time may vary as it may take longer for larger files.
<b>Frequency</b>	Select the number of times (frequency) to play the complete slide show and/or playlist: <b>Once, Twice, or Continuous.</b>

### Notes on Using the USB Port

- Some images opened and resaved on a computer may not play back or display in the thumbnail list.
- Some manufacturers' devices may be incompatible with the TV. If the TV is unable to display your photos, you can:
  - » Transfer files to a different USB device.
  - » Use your digital camera's Y/VIDEO composite video output.

# More Menu

The **More** menu enables you to access the additional functions from the remote. Depending on which device the remote is setup to control, different functions are available.

- When the remote is setup to control the TV, the **AUDIO, VIDEO, SLEEP, FORMAT** and **MORE** keys are always available. The rest of keys are available only if they are Learned through the NetCommand (Refer to the full Owner's Guide for the NetCommand instruction).
- When the remote is setup to control the other devices, the **AUDIO** and **VIDEO** keys are not available.
- The **CC** function is only available when viewing Antenna input.

TV	Function	Description
	<b>Closed Caption</b>	Turns closed captioning on and off
	<b>Video</b>	Opens the video adjustment menu
	<b>Audio</b>	Opens the audio adjustment menu
	<b>Sleep</b>	Sleep Timer turns TV off after a length of time
	<b>Format</b>	Picture shape (aspect ratio)



## CABLE/SAT

<b>Menu</b>	Opens Cable or Satellite main menu
<b>List</b>	Opens channel list
<b>On Demand</b>	Opens on demand menu
<b>A-D</b>	



## VCR

<b>Menu</b>	Opens VCR menu
<b>Input</b>	Switches device input
<b>Sp/Ep</b>	Sets the recording speed (standard or extended play)



## DVD

<b>Top Menu</b>	Opens DVD menu
<b>Angle</b>	Scrolls through multiple angles
<b>DVD Audio</b>	Opens the audio DVD menu
<b>Subtitle</b>	Opens Subtitle menu
<b>Repeat</b>	Repeats scene
<b>Bonus View</b>	Opens Bonus View menu
<b>Setup</b>	



## AUDIO

<b>Menu</b>	Opens A/V Receiver menu
<b>Input</b>	Switches device input
<b>Surround</b>	Opens on surround sound menu
<b>Night</b>	Focuses angle of sound to one spot



### NOTE:


- The remote control mode can be changed by using the **SIDE** button on the remote.
- Press the **SIDE** button until the Control Mode indicator at the top shows the desired device.
- Refer to the full Owner's Guide on the web for the **More** menu of CEC devices, and the NetCommand Instruction.





# Troubleshooting

## General TV Operation

	Symptom	Remarks
1.	The TV remote control does not work.	<ul style="list-style-type: none"> <li>• Check that the batteries are fresh and installed correctly.</li> <li>• Check that the control mode on the remote is set to TV.</li> <li>• Be no more than 20 feet from the TV when using the remote control.</li> <li>• Program the remote control to operate the TV or other device.</li> <li>• Reset the remote control.</li> </ul>
2.	When I try to use the remote control, the POWER key blinks five times.	Replace the batteries.
3.	TV does not respond to the remote control or to control-panel buttons and TV will not power on or off.	<p>Unplug the AC power cord for 10 seconds.</p> <p>Press and hold the POWER button on the control panel for 10 seconds to perform system reset.</p>
4.	When a device is selected from the Activity menu, the screen is blue or black (no signal source).	<ul style="list-style-type: none"> <li>• Make sure the selected device is turned on.</li> <li>• Begin play of the device.</li> </ul>
5.	You have forgotten your Lock menu pass code.	When prompted for the pass code, press the number 9 and  (LAST) keys on the TV remote control at the same time. This process temporarily unlocks the TV.
6.	Rating restrictions are not working.	<p>Open the Lock &gt; Parental Lock menu and:</p> <ul style="list-style-type: none"> <li>• Verify that the ratings locks are active.</li> <li>• Check the Lock Time/Unlock Time to check if rating restrictions are disabled.</li> <li>• Rating restrictions apply only to content on the ANT input.</li> </ul>
7.	On-screen displays appear each time you change a function.	Normal TV operation.
8.	I have turned on CEC for my HDMI devices but control is erratic and I wish to disable it.	<ul style="list-style-type: none"> <li>• Turn off the TV's HDMI control for the specific device. Open the Inputs &gt; HDMI Control menu, select the device, select Off.</li> <li>• Disable CEC on the device itself. See the device's instructions.</li> <li>• If the problem persists, do the following: <ol style="list-style-type: none"> <li>1. Disconnect the device from the TV.</li> <li>2. Open the Inputs &gt; Name menu, select the device and delete.</li> <li>3. Reconnect the device to the TV and Auto Input Sensing will recognize the device with CEC disabled.</li> </ol> </li> </ul>

TV Power On/Off		
	Symptom	Remarks
1.	TV takes an excessively long time to power on.	When powered on, the TV needs time to boot up, just as a computer does.
2.	You cannot program the TV to turn on automatically (Timer function).	<ul style="list-style-type: none"> <li>The TV may be locked.</li> <li>The clock may not be set.</li> </ul>
3.	TV turned itself off and the light on the front panel started to blink.	<ul style="list-style-type: none"> <li>Momentary power fluctuation caused the TV to turn off to prevent damage. Power on the TV and wait for the lamp to illuminate.</li> <li>If the TV does not stay on, press the POWER button on the control panel for ten seconds to perform System Reset. If this happens frequently, obtain an AC line power conditioner/surge protector.</li> <li>An unusual digital signal may have been received, triggering a protection circuit. Power on the TV.</li> </ul>
4.	TV will not power off.	Press the POWER button on the control panel for about ten seconds to perform System Reset.

Picture		
	Symptom	Remarks
1.	Picture does not look like a high-definition picture.	Not all signals are high-definition signals. To receive high-definition programming from your cable or satellite provider, you must subscribe to the provider's high-definition service. Some over-the-air broadcasts are in high-definition and can be received with a high-quality antenna suited to your location.
2.	TV has sound but no picture.	Press and hold the POWER button on the control panel for 10 seconds to perform System Reset.
3.	There is a large black or gray rectangle on the screen.	The TV's analog closed captioning has been set to "text" mode in the Captions menu. Turn off because there is no text information being broadcast.
4.	You cannot view a picture when playing a VHS tape.	Check your VCR's owner's guide for further troubleshooting.
5.	VCR or DVD player's on-screen menus jitter up and down.	Stop playback. Possible cause: Many VCRs and DVD players provide on-screen menus at only half-resolution that may appear to jitter up and down.
6.	When viewing a stopped VCR, white lines are rolling on the screen.	<ul style="list-style-type: none"> <li>Turn off video mute for the VCR.</li> <li>Begin playing the tape.</li> <li>Change the VCR input to the antenna input.</li> </ul>
7.	A color program appears as a black and white image, or the colors are dim, or the screen is black.	The PerfectColor color balance has been incorrectly set. Reset the PerfectColor balance.
8.	Picture from an HDMI input is noisy (poor quality).	<ul style="list-style-type: none"> <li>Try using a different HDMI cable.</li> <li>If the signal is 1080p, upgrade a Category 1 (unmarked) HDMI cable to a Category 2 high-speed HDMI cable.</li> </ul>
9.	The image from a computer appears distorted when viewed on the TV.	<ul style="list-style-type: none"> <li>Normal TV operation. The TV does not correct distortion in the picture from a computer because the correction process may cause the edges of the image to be cut off.</li> <li>Press MORE key for the FORMAT menu to change dimensions.</li> </ul>



## TV Channels

	Symptom	Remarks
1.	The TV takes several seconds to respond to channel changes.	<ul style="list-style-type: none"> <li>It is normal for digital channels to take longer to tune in.</li> <li>Press ENTER after entering a channel number to avoid delays.</li> <li>Use a 4-digit number for an over-the-air digital channel.</li> <li>Use a 6-digit number for digital cable channels if your cable service is able to recognize 6-digit channel numbers.</li> </ul>
2.	You cannot access a channel.	<ul style="list-style-type: none"> <li>Use number keys instead of CHANNEL Up/Down.</li> <li>Be sure the channel you want to view is in memory.</li> <li>Check that the TV is switched to the correct device or the antenna for that channel by pressing the ACTIVITY key.</li> <li>Make sure the Lock &gt; Parent menu lock is set to Off.</li> <li>If you cannot tune to a virtual digital channel even though the TV has already memorized digital channels, tune to the physical channel number used by the broadcaster. The virtual channel will then be automatically added to memory.</li> <li>You may be trying to tune to an analog channel that is no longer broadcasting.</li> </ul>
3.	When ChannelView list is displayed, information appears incomplete	<ul style="list-style-type: none"> <li>Program information is displayed only for channels tuned during the most recent power-on.</li> <li>Available information is sent from the broadcaster or cable provider. No other data is available.</li> <li>Make sure the TV clock is set correctly.</li> <li>Press INFO to update the display for highlighted channel.</li> </ul>

## Sound

	Symptom	Remarks
1.	There is no sound even when the volume is turned up.	<ul style="list-style-type: none"> <li>Check if the MUTE button is on.</li> <li>The TV's "Listen to:" setting may be set to SAP (analog program from the ANT input).</li> <li>Check that the Speakers option is set to TV to hear sound from the TV speakers. Sound may be being sent to one of the audio outputs for an A/V receiver or headphones.</li> <li>If using an A/V receiver, check that the Speakers option is set to AV Receiver to hear sound from the A/V receiver speakers.</li> <li>Press and hold the POWER button on the control panel for 10 seconds to perform System Reset.</li> </ul>
2.	The sound does not match the screen picture.	The TV's "Listen to:" setting may be set to SAP (analog program from the ANT input).
3.	The sound from my A/V receiver does not match the screen picture (I should hear the correct audio from my A/V receiver).	<ul style="list-style-type: none"> <li>Check that DIGITAL AUDIO OUTPUT and/or AVR AUDIO OUTPUT on TV's back panel is connected to the A/V receiver. Without this connection, devices connected only to the TV (and not the A/V receiver) can be heard only from the TV speakers. Note that this includes the ANT input, a device (such as a camcorder or MP3 files from a USB drive) connected to the front panel, and any other device sending audio to the TV only.</li> <li>Input mode may be selecting unrecognized AV audio input.</li> <li>Wrong NetCommand settings. See online Owner's Guide.</li> </ul>
4.	Cannot select an audio-only device; it does not appear in the Activity menu.	Plug an unused video plug into the INPUT 3 <b>Y/VIDEO</b> jack to activate Auto Input Sensing and make the audio device selectable in the Activity menu.

# Mitsubishi LCD Flat Panel HDTV Limited Warranty

MITSUBISHI DIGITAL ELECTRONICS AMERICA, INC. ("MDEA") warrants to the original purchaser of this LCD Flat Panel HDTV that if purchased from an authorized MITSUBISHI Audio/Video Dealer, should it prove defective by reason of improper workmanship and/or material:

**a. Parts.** All parts (except any software incorporated into this HDTV) are warranted for a period of one year from the date of the original purchase at retail. We will repair or replace, at our option, any defective part without charge for the part. Parts used for replacement may be replaced with those of like kind and quality and may be new or remanufactured. Parts used for replacement are warranted for the remainder of the original warranty period.

**b. Embedded Software.** MDEA warrants that all software incorporated into this HDTV (the "Embedded Software") will perform in accordance with the functional description of Embedded Software in all material respects, but MDEA does not warrant that the Embedded Software is error-free. The warranty contained in this section shall continue for a period of one year, from the date of the original purchase from the authorized dealer. If, after prompt notice within the warranty period, MDEA determines that the Embedded Software has failed to perform in accordance with such functional description in all material respects and if such failure is not due to accident, misuse, modification or misapplication of the Embedded Software, then MDEA shall modify or replace the nonconforming Embedded Software at no charge to you, which at MDEA's sole discretion may be fulfilled by means of modification or replacement software contained on a replacement memory card for Consumer installation. The foregoing shall be MDEA's sole obligation to you under this limited warranty. All rights under this limited warranty on the Embedded Software also subject to your compliance with the terms of the Software License Agreement applicable to this HDTV, and this limited warranty on the Embedded Software shall be null and void if the Embedded Software is modified or changed in any manner except as specifically authorized by MDEA.

**c. Labor.** For certain items that are designed to be replaced by the consumer, including (but not limited to) some Embedded Software, the consumer is solely responsible for any replacement labor. For all other parts, we will provide the labor for a warranty repair by an authorized MITSUBISHI service center without charge for one year from the original date of purchase at retail.

**d. Notice.** To obtain warranty service, you must notify an authorized MITSUBISHI service center of any defect within the applicable warranty time period.

**BEFORE REQUESTING SERVICE, please review the TV owner's guide to insure proper installation and correct customer control adjustment. If the problem persists, please arrange for warranty service.**

## 1. TO OBTAIN WARRANTY SERVICE:

**a.** Contact your nearest authorized MITSUBISHI service center whose name and address can be obtained from your MITSUBISHI dealer, by writing to the address provided below, calling MDEA at 800-332-2119, or using the support feature of our website at [www.Mitsubishi-tv.com](http://www.Mitsubishi-tv.com).

**b.** Warranty service will be provided in your home or, if required, at an authorized service shop, provided that your television is located within the geographic territory customarily covered by an authorized MITSUBISHI service center. If not, you must either deliver your television to an authorized service location at your own expense, or pay for any travel and/or transportation costs the service center may charge to and from you home. Actual service labor will be provided without charge.

**c.** Proof of purchase from an authorized MITSUBISHI dealer is required when requesting warranty service. Present your sales receipt or other document which establishes proof and date of purchase. **THE RETURN OF THE OWNER REGISTRATION CARD IS NOT A CONDITION OF WARRANTY COVERAGE.** However, please return the Owner Registration Card so that we can contact you should a question of safety arise which could affect you.

## 2. THIS LIMITED WARRANTY DOES NOT COVER:

**a.** Up to .01% pixel outages (small dot picture elements that are dark or incorrectly illuminated).

**b.** Cosmetic damage or any other damage where such damage is caused by unauthorized modification, alteration, repairs to or service of the product by anyone other than an authorized MITSUBISHI service center; physical abuse to or misuse of the product (or any product damaged by excessive physical or electrical stress); any products that have had a serial number or any part thereof altered, defaced or removed; product use in any manner contrary to the Owner's Guide; freight damage; or any damage caused by acts of God or other factors beyond the reasonable control of MDEA, such as power surge damage caused by electrical system or damages caused by use of third party mounting brackets or stands. This limited warranty also excludes service calls where no defect in the product covered under this warranty is found, service calls related to unsatisfactory audio or visual reception or signal unless caused by a defect in the product that is covered under this limited warranty, all costs, expenses or any other damages arising from product installation, removal from or re-installation into custom installations or on wall mountings, or set-ups, any adjustments of user controls (including contrast, brightness, color, tint, fine tuning, sharpness), other adjustment necessary to prepare the unit for display or use, connection with any external audio receiver, antenna, cable or satellite systems, or service of products purchased or serviced outside the U.S.A. Please consult the operating instructions contained in the Owner's Guide furnished with the product for information regarding user controls.

**3.** ANY EXPRESS WARRANTY NOT PROVIDED HEREIN, AND ANY REMEDY WHICH, BUT FOR THIS PROVISION, MIGHT ARISE BY IMPLICATION OR OPERATION OF LAW, IS HEREBY EXCLUDED AND DISCLAIMED. THE IMPLIED WARRANTIES OF MERCHANTABILITY AND OF FITNESS FOR ANY PARTICULAR PURPOSE ARE EXPRESSLY LIMITED TO A TERM OF ONE YEAR.



4. UNDER NO CIRCUMSTANCES SHALL MDEA BE LIABLE TO PURCHASER OR ANY OTHER PERSON FOR ANY INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES, WHETHER ARISING OUT OF BREACH OF WARRANTY, BREACH OF CONTRACT, OR OTHERWISE.

5. Some states do not allow limitations on how long an implied warranty lasts, or the exclusion or limitation of incidental, special, or consequential damages, so the above limitations or exclusions may not apply to you.

6. This limited warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

7. In the event of any dispute under this limited warranty, jurisdiction and venue for resolving that dispute will be in the state where the television was purchased and the laws of such state will govern. In no event shall Mitsubishi have any liability, including with out limitation, for general, consequential, incidental, or special damages for loss, destruction, damage or corruption of recorded data, media or software resulting from use of this television, or cost of recovery of lost data, media or software therefore.



MITSUBISHI DIGITAL ELECTRONICS AMERICA, INC.

9351 Jeronimo Road  
Irvine, CA 92618-1904

## Trademark and License Information

LICENSOR'S SUPPLIERS DO NOT MAKE OR PASS ON TO END USER OR ANY OTHER THIRD PARTY, ANY LICENSOR'S SUPPLIERS DO NOT MAKE OR PASS ON TO END USER OR ANY OTHER THIRD PARTY, ANY EXPRESS, IMPLIED OR STATUTORY WARRANTY OR REPRESENTATION ON BEHALF OF SUCH SUPPLIERS, INCLUDING, BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF NON-INFRINGEMENT, TITLE, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

 Manufactured under license from Cambridge Mechatronics Ltd. Worldwide patents applied for.

Rapidfire and the 1... Logo are trademarks of Cambridge Mechatronics Ltd.

Manufactured under license from Dolby Laboratories. "Dolby" and "Pro Logic" are trademarks of Dolby Laboratories.

HDMI™ the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.

The software in this TV is based in part on the work of the Independent JPEG Group, copyright © 1991-1998, the Independent JPEG Group's software, all rights reserved.

x.v.Color and the x.v.Color logo are trademarks of Sony Corporation.

ChannelView™, DeepField™ Imager, Easy Connect™, Net Command®, PerfectColor™, PerfectTint™, Plush 1080p®, QuickView™, SharpEdge™, Smooth120Hz™ are trademarks of Mitsubishi Digital Electronics America, Inc.

# Mitsubishi TV Software

## END-USER LICENSE AGREEMENT FOR EMBEDDED SOFTWARE

**IMPORTANT – READ CAREFULLY:** This License Agreement is a legal agreement between you (either an individual or an entity) and Mitsubishi Digital Electronics America, Inc. (MDEA) for all software pre installed and/or provided along with this television (“Software”). By utilizing this television and Software, you agree to be bound by the terms of this License Agreement.

The Software is protected by United States copyright laws and international treaty provisions, as well as other intellectual property laws and treaties. The Software is licensed, not sold.

1. **LICENSE GRANT.** MDEA grants you a non-exclusive, non-transferable, limited right and license to use one copy of the Software only with the Mitsubishi television model that included this owner’s guide and owned by you.

2. **RIGHTS AND LIMITATIONS.**

Software Not for Resale. You may not resell or otherwise transfer for value the Software, except in conjunction with a sale of the TV that Software has been pre installed.

Prohibition on Reverse Engineering, Decompilation and Disassembly. The Software contains trade secrets or other proprietary material in its human perceivable form and to protect them, you may not reverse engineer, decompile, or disassemble, or otherwise reduce the Software to any human perceivable form, except to the extent that the foregoing restriction is expressly prohibited by applicable law.

Separation of Components. The Software is licensed as a single product. Its component parts may not be separated for use on more than one TV.

No Rental. You may not rent, lease, lend or sublicense the Software.

Trademarks. This License Agreement does not grant you any rights to any trademarks of MDEA.

3. **VIOLATIONS.** You understand that any use, copying or transfer of the Software, except as permitted pursuant to this License, may subject you to serious criminal and civil penalties including damages and an award to MDEA of attorneys’ fees in connection with any violation of this License. You further understand that you may be held legally responsible for any copyright infringement or other violation of intellectual property rights that is caused, encouraged or induced by your failure to abide by the terms of the License. This license is effective until terminated and will terminate immediately without notice from MDEA or judicial resolution if you fail to comply with any provision of this License.

4. **COPYRIGHT.** All title and intellectual property rights in and to the Software (including but not limited to any images, photographs, animations, video, audio, music, text, and “applets” incorporated into the Software), and any accompanying printed materials are owned by or licensed to MDEA. All title and intellectual property rights in and to the content which may be accessed through use of the Software is the property of the respective content owner and may be protected by applicable copyright or other intellectual property laws and treaties. This License Agreement grants you no rights to use such content, except that you own the media on which the Software is recorded, but MDEA and its licensors retain ownership of the Software itself. All rights not expressly granted are reserved by MDEA.

5. **EXPORT RESTRICTIONS.** MDEA is licensing the Software for use within the United States. You agree that you will not export or re-export the Software. You specifically agree not to export or re-export the Software: (i) to any country to which the U.S. has embargoed or restricted the export of goods or services, which currently include, but are not necessarily limited to Cuba, Iran, Iraq, Libya, North Korea, Sudan, and Syria, or to any national of any such country, wherever located, who intends to transmit or transport the Software back to such country; (ii) to any person or entity who you know or have reason to know will utilize the Software in the design, development, or production of nuclear, chemical, or biological weapons; or (iii) to any person or entity who has been prohibited from participating in U.S. export transactions by any federal agency of the U.S. government. You warrant and represent that neither the BXA nor any other U.S. federal agency has suspended, revoked, or denied your export privileges.

6. **DISCLAIMER OF WARRANTY. EXCEPT AS OTHERWISE PROVIDED IN THIS LICENSE OR IN THE LIMITED WARRANTY APPLICABLE TO THE TV, MDEA MAKES NO OTHER WARRANTIES OF ANY KIND WHATSOEVER REGARDING THE SOFTWARE AND HEREBY EXPRESSLY DISCLAIMS ALL WARRANTIES OF ANY KIND WHATSOEVER, EXPRESS OR IMPLIED, WITH RESPECT TO THE SOFTWARE. ALL IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE HEREBY EXPRESSLY DISCLAIMED BY MDEA. IN NO EVENT SHALL MDEA BE LIABLE TO YOU OR ANY THIRD PARTIES, IN CONTRACT, IN TORT OR OTHERWISE, FOR ANY DIRECT, INDIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY KIND OR NATURE. BECAUSE SOME JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF IMPLIED WARRANTIES, THE ABOVE LIMITATION MAY NOT APPLY TO YOU.**

7. **LIMITATION OF LIABILITY. MDEA SHALL NOT, UNDER ANY CIRCUMSTANCES BE LIABLE TO YOU OR ANY THIRD PARTIES FOR ANY DAMAGES OF ANY NATURE, WHETHER INDIRECT, SPECIAL, INCIDENTAL, CONSEQUENTIAL OR OTHERWISE, INCLUDING, BUT NOT LIMITED TO, ANY CLAIMS FOR LOST PROFITS, LOSS OF GOOD WILL OR EXPENDITURES MADE OR COMMITTED FOR IN RELIANCE ON THE CONTINUATION OF THIS LICENSE. YOU AGREE THAT NEITHER MDEA’S BREACH OF THIS LICENSE NOR ITS FAILURE TO REPAIR A DEFECT, ERROR OR BUG SHALL CONSTITUTE A FAILURE OF THE ESSENTIAL PURPOSE OF THIS LICENSE. BECAUSE SOME JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF LIABILITY FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES, THE ABOVE LIMITATIONS MAY NOT APPLY TO YOU. MDEA’s liability to you for direct damages for any cause whatsoever and regardless of the form of the action, will be limited to the money paid by you for the TV (based on fair market value of the TV) that caused the damages.**

8. **GENERAL.** This License Agreement will be governed by the laws of the State of California.



**GNU GENERAL PUBLIC LICENSE**  
Version 2, June 1991

Copyright (C) 1989, 1991 Free Software Foundation, Inc.  
675 Mass Ave, Cambridge, MA 02139, USA

Everyone is permitted to copy and distribute verbatim copies of this license document, but changing it is not allowed.

**Preamble**

The licenses for most software are designed to take away your freedom to share and change it. By contrast, the GNU General Public License is intended to guarantee your freedom to share and change free software--to make sure the software is free for all its users. This General Public License applies to most of the Free Software Foundation's software and to any other program whose authors commit to using it. (Some other Free Software Foundation software is covered by the GNU Library General Public License instead.) You can apply it to your programs, too.

When we speak of free software, we are referring to freedom, not price. Our General Public Licenses are designed to make sure that you have the freedom to distribute copies of free software (and charge for this service if you wish), that you receive source code or can get it if you want it, that you can change the software or use pieces of it in new free programs; and that you know you can do these things.

To protect your rights, we need to make restrictions that forbid anyone to deny you these rights or to ask you to surrender the rights. These restrictions translate to certain responsibilities for you if you distribute copies of the software, or if you modify it.

For example, if you distribute copies of such a program, whether gratis or for a fee, you must give the recipients all the rights that you have. You must make sure that they, too, receive or can get the source code. And you must show them these terms so they know their rights.

We protect your rights with two steps: (1) copyright the software, and (2) offer you this license which gives you legal permission to copy, distribute and/or modify the software.

Also, for each author's protection and ours, we want to make certain that everyone understands that there is no warranty for this free software. If the software is modified by someone else and passed on, we want its recipients to know that what they have is not the original, so that any problems introduced by others will not reflect on the original authors' reputations.

Finally, any free program is threatened constantly by software patents. We wish to avoid the danger that redistributors of a free program will individually obtain patent licenses, in effect making the program proprietary. To prevent this, we have made it clear that any patent must be licensed for everyone's free use or not licensed at all.

The precise terms and conditions for copying, distribution and modification follow.

**GNU GENERAL PUBLIC LICENSE**  
**TERMS AND CONDITIONS FOR COPYING, DISTRIBUTION AND MODIFICATION**

0. This License applies to any program or other work which contains a notice placed by the copyright holder saying it may be distributed under the terms of this General Public License. The "Program", below, refers to any such program or work, and a "work based on the Program" means either the Program or any derivative work under copyright law: that is to say, a work containing the Program or a portion of it, either verbatim or with modifications and/or translated into another language. (Hereinafter, translation is included without limitation in the term "modification".) Each licensee is addressed as "you".

Activities other than copying, distribution and modification are not covered by this License; they are outside its scope. The act of running the Program is not restricted, and the output from the Program is covered only if its contents constitute a work based on the Program (independent of having been made by running the Program). Whether that is true depends on what the Program does.

1. You may copy and distribute verbatim copies of the Program's source code as you receive it, in any medium, provided that you conspicuously and appropriately publish on each copy an appropriate copyright notice and disclaimer of warranty; keep intact all the notices that refer to this License and to the absence of any warranty; and give any other recipients of the Program a copy of this License along with the Program.

You may charge a fee for the physical act of transferring a copy, and you may at your option offer warranty protection in exchange for a fee.

2. You may modify your copy or copies of the Program or any portion of it, thus forming a work based on the Program, and copy and distribute such modifications or work under the terms of Section 1 above, provided that you also meet all of these conditions:

- a) You must cause the modified files to carry prominent notices stating that you changed the files and the date of any change.
- b) You must cause any work that you distribute or publish, that in whole or in part contains or is derived from the Program or any part thereof, to be licensed as a whole at no charge to all third parties under the terms of this License.
- c) If the modified program normally reads commands interactively when run, you must cause it, when started running for such interactive use in the most ordinary way, to print or display an announcement including an appropriate copyright notice and a notice that there is no warranty (or else, saying that you provide a warranty) and that users may redistribute the program under these conditions, and telling the user how to view a copy of this License. (Exception: if the Program itself is interactive but does not normally print such an announcement, your work based on the Program is not required to print an announcement.)

These requirements apply to the modified work as a whole. If identifiable sections of that work are not derived from the Program, and can be reasonably considered independent and separate works in themselves, then this License, and its terms, do not apply to those sections when you distribute them as separate works. But when you distribute the same sections as part of a whole which is a work based on the Program, the distribution of the whole must be on the terms of this License, whose permissions for other licensees extend to the entire whole, and thus to each and every part regardless of who wrote it.

Thus, it is not the intent of this section to claim rights or contest your rights to work written entirely by you; rather, the intent is to exercise the right to control the distribution of derivative or collective works based on the Program.

In addition, mere aggregation of another work not based on the Program with the Program (or with a work based on the Program) on a volume of a storage or distribution medium does not bring the other work under the scope of this License.

3. You may copy and distribute the Program (or a work based on it, under Section 2) in object code or executable form under the terms of Sections 1 and 2 above provided that you also do one of the following:

- a) Accompany it with the complete corresponding machine-readable source code, which must be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,
- b) Accompany it with a written offer, valid for at least three years, to give any third party, for a charge no more than your cost of physically performing source distribution, a complete machine-readable copy of the corresponding source code, to be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,
- c) Accompany it with the information you received as to the offer to distribute corresponding source code. (This alternative is allowed only for noncommercial distribution and only if you received the program in object code or executable form with such an offer, in accord with Subsection b above.)

The source code for a work means the preferred form of the work for making modifications to it. For an executable work, complete source code means all the source code for all modules it contains, plus any associated interface definition files, plus the scripts used to control compilation and installation of the executable. However, as a special exception, the source code distributed need not include anything that is normally distributed (in either source or binary form) with the major components (compiler, kernel, and so on) of the operating system on which the executable runs, unless that component itself accompanies the executable.

If distribution of executable or object code is made by offering access to copy from a designated place, then offering equivalent access to copy the source code from the same place counts as distribution of the source code, even though third parties are not compelled to copy the source along with the object code.

4. You may not copy, modify, sublicense, or distribute the Program except as expressly provided under this License. Any attempt otherwise to copy, modify, sublicense or distribute the Program is void, and will automatically terminate your rights under this License. However, parties who have received copies, or rights, from you under this License will not have their licenses terminated so long as such parties remain in full compliance.
5. You are not required to accept this License, since you have not signed it. However, nothing else grants you permission to modify or distribute the Program or its derivative works. These actions are prohibited by law if you do not accept this License. Therefore, by modifying or distributing the Program (or any work based on the Program), you indicate your acceptance of this License to do so, and all its terms and conditions for copying, distributing or modifying the Program or works based on it.
6. Each time you redistribute the Program (or any work based on the Program), the recipient automatically receives a license from the original licensor to copy, distribute or modify the Program subject to these terms and conditions. You may not impose any further restrictions on the recipients' exercise of the rights granted herein. You are not responsible for enforcing compliance by third parties to this License.
7. If, as a consequence of a court judgment or allegation of patent infringement or for any other reason (not limited to patent issues), conditions are imposed on you (whether by court order, agreement or otherwise) that contradict the conditions of this License, they do not excuse you from the conditions of this License. If you cannot distribute so as to satisfy simultaneously your obligations under this License and any other pertinent obligations, then as a consequence you may not distribute the Program at all. For example, if a patent license would not permit royalty-free redistribution of the Program by all those who receive copies directly or indirectly through you, then the only way you could satisfy both it and this License would be to refrain entirely from distribution of the Program.

If any portion of this section is held invalid or unenforceable under any particular circumstance, the balance of the section is intended to apply and the section as a whole is intended to apply in other circumstances.

It is not the purpose of this section to induce you to infringe any patents or other property right claims or to contest validity of any such claims; this section has the sole purpose of protecting the integrity of the free software distribution system, which is implemented by public license practices. Many people have made generous contributions to the wide range of software distributed through that system in reliance on consistent application of that system; it is up to the author/donor to decide if he or she is willing to distribute software through any other system and a licensee cannot impose that choice.

This section is intended to make thoroughly clear what is believed to be a consequence of the rest of this License.

8. If the distribution and/or use of the Program is restricted in certain countries either by patents or by copyrighted interfaces, the original copyright holder who places the Program under this License may add an explicit geographical distribution limitation excluding those countries, so that distribution is permitted only in or among countries not thus excluded. In such case, this License incorporates the limitation as if written in the body of this License.
9. The Free Software Foundation may publish revised and/or new versions of the General Public License from time to time. Such new versions will be similar in spirit to the present version, but may differ in detail to address new problems or concerns.

Each version is given a distinguishing version number. If the Program specifies a version number of this License which applies to it and "any later version", you have the option of following the terms and conditions either of that version or of any later version published by the Free Software Foundation. If the Program does not specify a version number of this License, you may choose any version ever published by the Free Software Foundation.

10. If you wish to incorporate parts of the Program into other free programs whose distribution conditions are different, write to the author to ask for permission. For software which is copyrighted by the Free Software Foundation, write to the Free Software Foundation; we sometimes make exceptions for this. Our decision will be guided by the two goals of preserving the free status of all derivatives of our free software and of promoting the sharing and reuse of software generally.

#### NO WARRANTY

11. BECAUSE THE PROGRAM IS LICENSED FREE OF CHARGE, THERE IS NO WARRANTY FOR THE PROGRAM, TO THE EXTENT PERMITTED BY APPLICABLE LAW. EXCEPT WHEN OTHERWISE STATED IN WRITING THE COPYRIGHT HOLDERS AND/OR OTHER PARTIES PROVIDE THE PROGRAM "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE PROGRAM IS WITH YOU. SHOULD THE PROGRAM PROVE DEFECTIVE, YOU ASSUME THE COST OF ALL NECESSARY SERVICING, REPAIR OR CORRECTION.

12. IN NO EVENT UNLESS REQUIRED BY APPLICABLE LAW OR AGREED TO IN WRITING WILL ANY COPYRIGHT HOLDER, OR ANY OTHER PARTY WHO MAY MODIFY AND/OR REDISTRIBUTE THE PROGRAM AS PERMITTED ABOVE, BE LIABLE TO YOU FOR DAMAGES, INCLUDING ANY GENERAL, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE PROGRAM (INCLUDING BUT NOT LIMITED TO LOSS OF DATA OR DATA BEING RENDERED INACCURATE OR LOSSES SUSTAINED BY YOU OR THIRD PARTIES OR A FAILURE OF THE PROGRAM TO OPERATE WITH ANY OTHER PROGRAMS), EVEN IF SUCH HOLDER OR OTHER PARTY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.





**Website:**

[www.mitsubishi-tv.com](http://www.mitsubishi-tv.com)

**E-mail:**

[MDEAservice@mdea.com](mailto:MDEAservice@mdea.com)

**For questions, call Consumer Relations at  
800-332-2119**

**To order replacement or additional  
remote controls or IR emitter cables:**

**Visit our website [www.mitsuparts.com](http://www.mitsuparts.com)**

**or call**

**800-553-7278**

**SYSTEM RESET**

If the TV does not respond to the remote control, control-panel buttons, or will not power on/off, hold power button for about 10 seconds.

The TV will take longer to power on after the system reset or AC on.

Setting changes you made most recently before the system reset, may be lost.



# STAND INSTALLATION

Panel HDTV • 151 Series • 153 Series • 249 Series

Required:  
Phillips Screwdriver




**1**



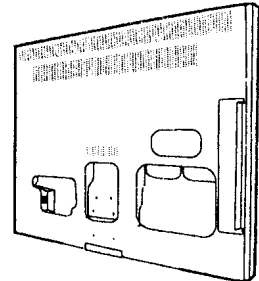
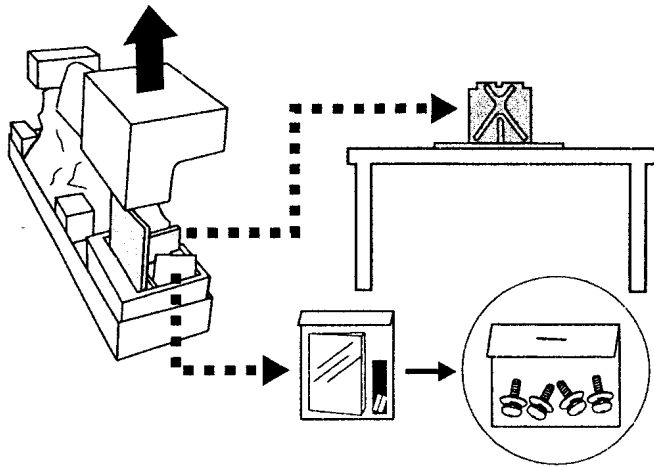


**Back**


Extension  
pieces on  
back of stand

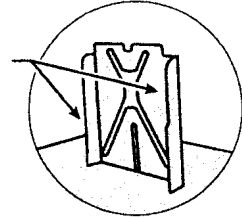

**2**

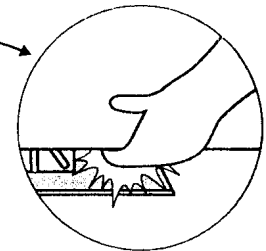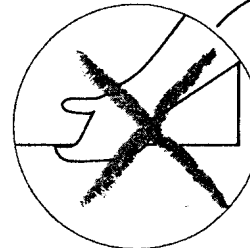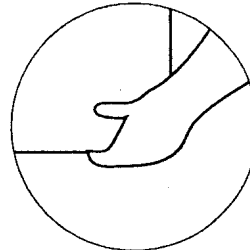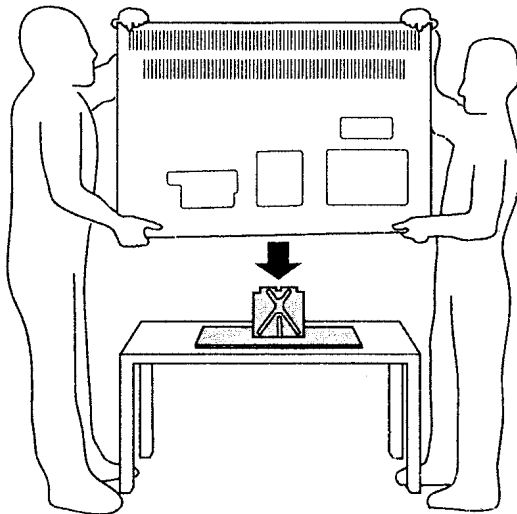

**3**

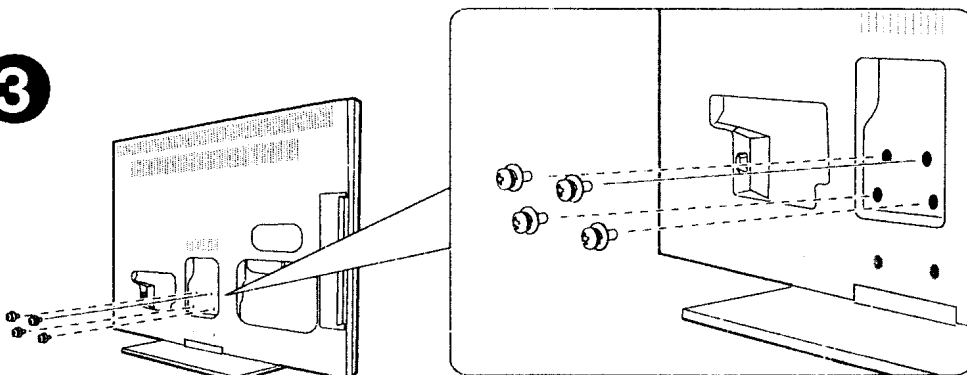




## Connecting HDTV Sources

**Important:** To view high-definition (HD) pictures you must use a high-definition programming source. Examples of high-definition sources are cable service with an HD cable box, satellite service with an HD receiver, a Blu-Ray disc player, an antenna, and direct cable service without a box.


**Note:** For some installations (e.g., wall-mounting), it may be most convenient to use the **INPUT 1** jacks. The **INPUT 1** jacks are located in the recessed area on the back of the TV. See the diagram at the bottom of the page.

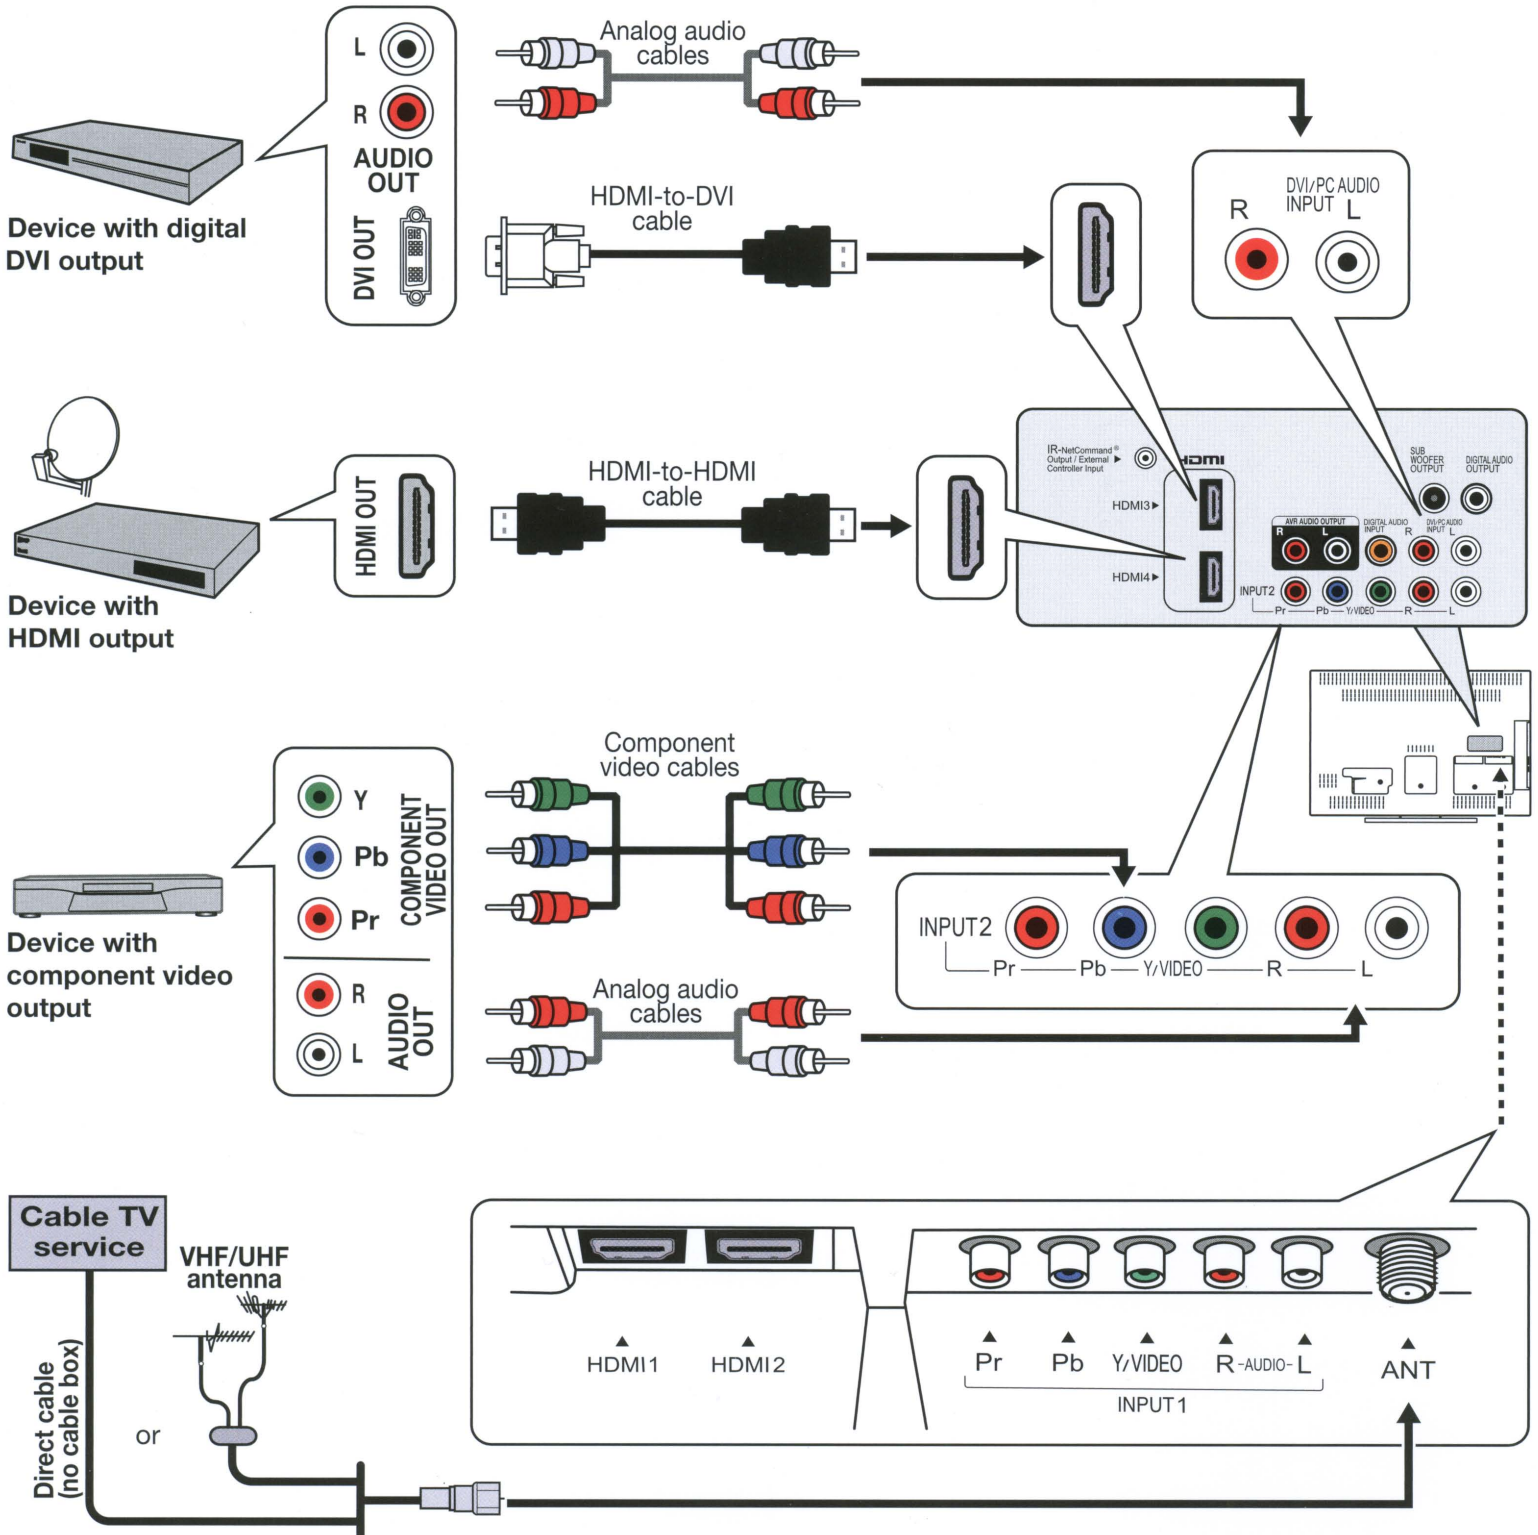

## Memorizing Channels on the ANT (Antenna) Input

Save channels to memory with a channel scan to enable reception of HD digital channels. The scan will search for local channels available from an antenna or direct cable service (no cable box). If you skip this step, the TV will receive only analog channels.



1. Press **MENU**.

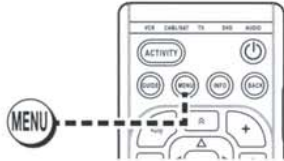

2. Press **▲▼** and **◀▶** to open the *Initial > Channel* menu. Press **ENTER**.



  3. Select **Ant Air** if connected to an over-the-air antenna. Select **Ant Cable** for direct cable.
4. Highlight **Scan** and press **ENTER**. Wait for the completion message before continuing.




## Setting Up Other Inputs

1. Connect your devices to the TV, making note of which TV input jack is used for each device.



2. Power on all connected devices to ensure detection.

3. Power on the TV.

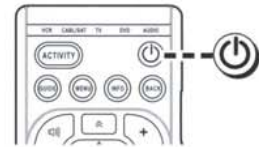

4. When the **New Device Found** menu displays, select the device type from the list if the device is not recognized automatically.

### New Device Found

Sample New Device Found menu




5. Press **BACK** to close the menu.

The TV will then display the **New Device Found** menu for the next connection it finds.

## Selecting a Source to Watch

1. Press **ACTIVITY**.

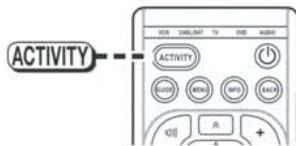


2. Press **▲▼** and **◀▶** to highlight a source.




3. Press **ENTER** to switch to the source.

## Identifying HD Broadcasts Received on the ANT (Antenna) Input

1. Press **INFO**.

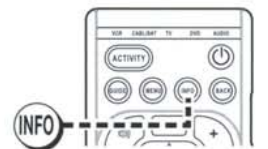


2. The status display will indicate if the broadcast is analog standard definition (480i), standard definition digital (SD), or high-definition digital (HD).

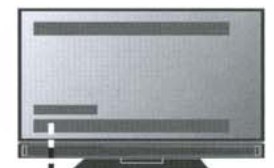

Receiving a High-Definition Digital Signal (HD)



Tues 9:10 PM  
HD 16:9 Wide Expand



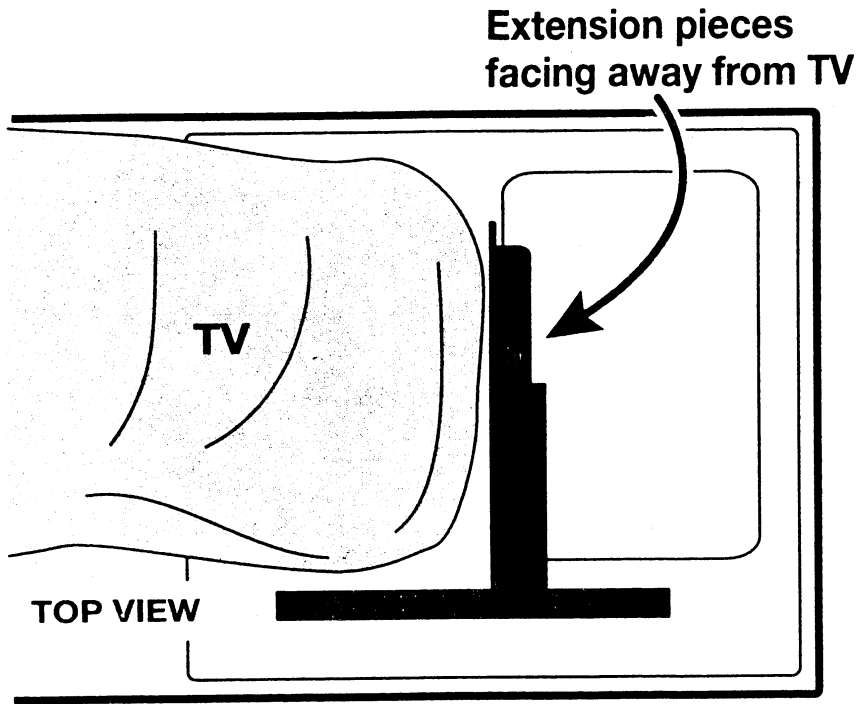


## Repacking the Stand

To prevent TV damage, place stand in foam insert with extension pieces facing away from TV.

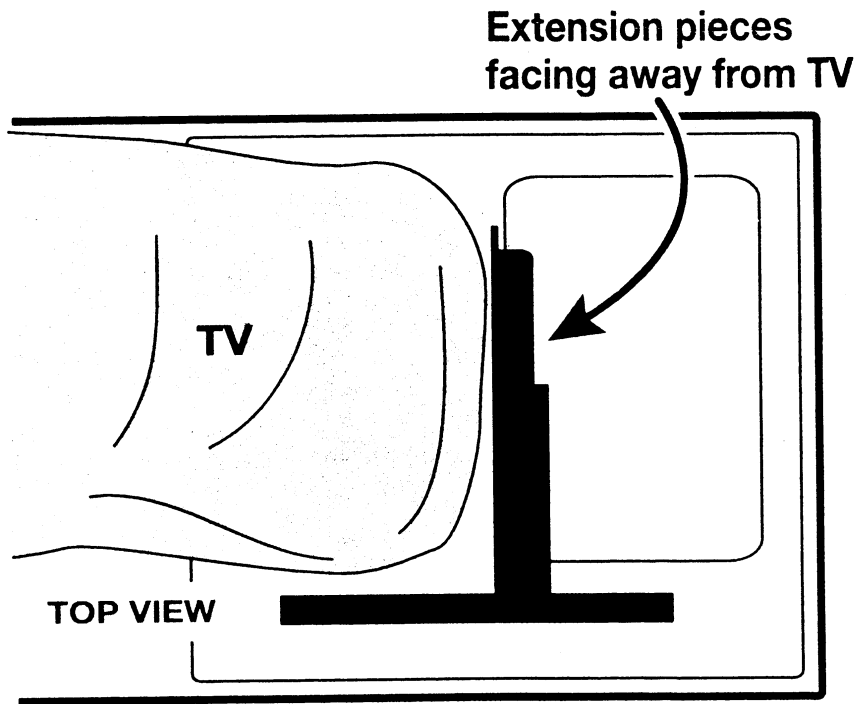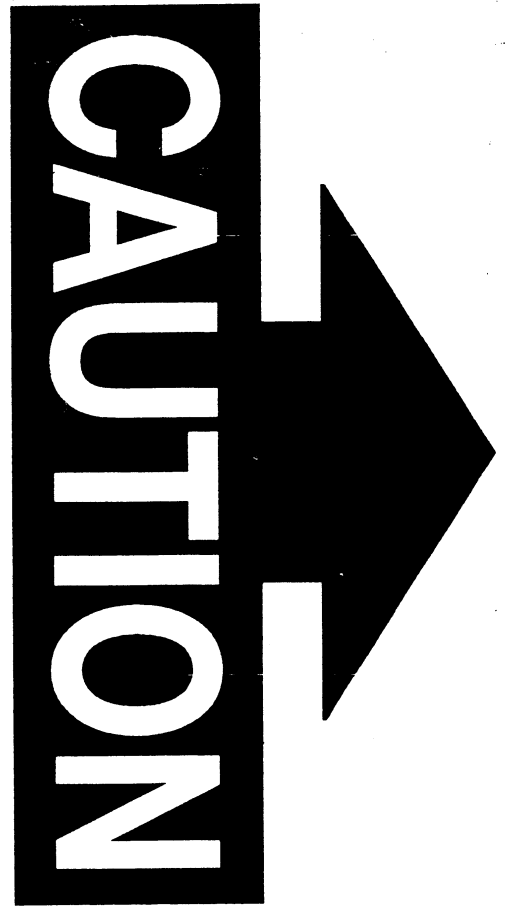

## Repacking the Stand

To prevent TV damage, place stand in foam insert with extension pieces facing away from TV.

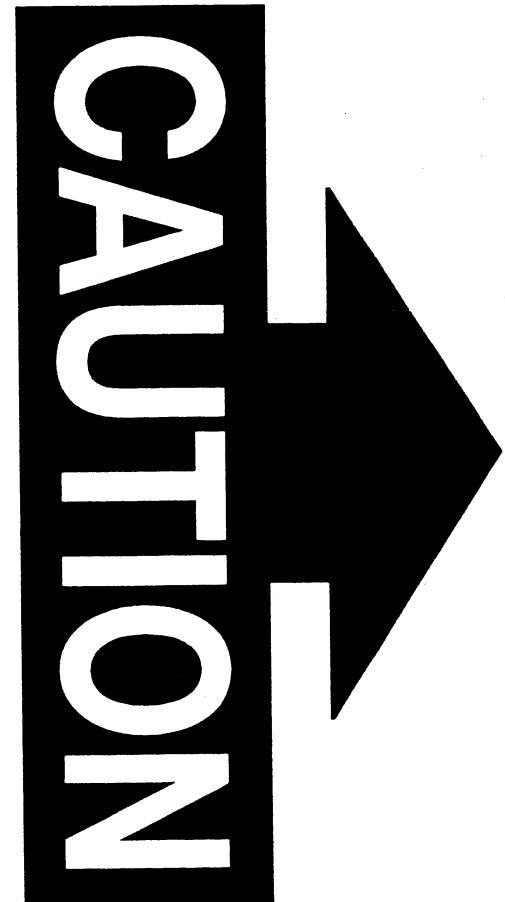

## NETWORK SERVICE DISCLAIMER

Third party content and services, including without limitation home entertainment services by VUDU, Inc., are provided in accordance with whatever terms and conditions are established by the third party providers and agreed to by you. Mitsubishi Digital Electronics America ("MDEA") has no control over any such third parties or any agreement you reach with them. MDEA has no control over the networks or transmission facilities by which content and services are provided by third parties. Your connection to the internet may vary in availability and quality. Customer service questions are to be directed to the third-party provider, not MDEA.

MDEA DOES NOT WARRANT CONTENT OR SERVICES PROVIDED BY ANY THIRD PARTY, EITHER EXPRESSLY OR IMPLIEDLY, FOR ANY PURPOSE. MDEA DOES NOT WARRANT THAT ANY THIRD PARTY SERVICE WILL REMAIN AVAILABLE FOR ANY PERIOD OF TIME OR THAT IT WILL BE SATISFACTORY, UNINTERRUPTED OR ERROR FREE. MDEA EXPRESSLY DISCLAIMS ANY IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO, WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE WITH RESPECT TO ANY THIRD PARTY CONTENT AND SERVICES.

MDEA WILL NOT, UNDER ANY CIRCUMSTANCES, BE LIABLE, WHETHER IN CONTRACT OR TORT OR OTHER LEGAL THEORY, FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES, ATTORNEY FEES, EXPENSES, OR ANY OTHER DAMAGES ARISING OUT OF, OR IN CONNECTION WITH, YOUR USE OF ANY CONTENT OR SERVICE THAT IS PROVIDED TO YOU BY ANY THIRD PARTY, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.



# ACCESS OVER 16,000 MOVIES WITHOUT LEAVING THE SOFA!



## ACTIVATE YOUR VUDU™ ACCOUNT AND STREAM 1080p HD MOVIES RIGHT TO YOUR MITSUBISHI HDTV\*

Extensive on-demand HD selection, featuring full 1080p and 5.1 surround sound.

Hollywood's latest hits and classics – never out of stock.

Available directly on your TV – no store visits, no mailing, no late fees and no subscription.

Access popular internet content through VUDU™ Labs.

Setup instructions on reverse side.

\* VUDU™ Home Entertainment Services are the sole responsibility of VUDU™, Inc. Mitsubishi Digital Electronics America, Inc. has no control over any services or any agreement you reach with VUDU™, Inc. For further explanation, please refer to the Network Service Disclaimer that came with your Mitsubishi HDTV.

For information on your VUDU™ account, please refer to the Terms of Service Agreement found at [www.vudu.com](http://www.vudu.com)



# ENJOYING VUDU™ IS FAST AND EASY.


To start using VUDU™, make sure your TV is connected to the Internet, then:

- 1) Turn on TV
- 2) Press the ACTIVITY key on the remote
- 3) Scroll down to "Watch Movie"
- 4) Highlight the VUDU™ icon Press ENTER on the remote
- 5) You can browse the VUDU™ catalog and service, including the web applications under VUDU™ Labs
- 6) When you first rent or buy a movie, you will be prompted to activate your VUDU™ account.

You can connect your TV to the internet using a wired or wireless configuration:

## WIRED CONFIGURATION:

Simply connect your TV to the internet by connecting your router to the LAN input on the back of your TV using an ethernet cable.

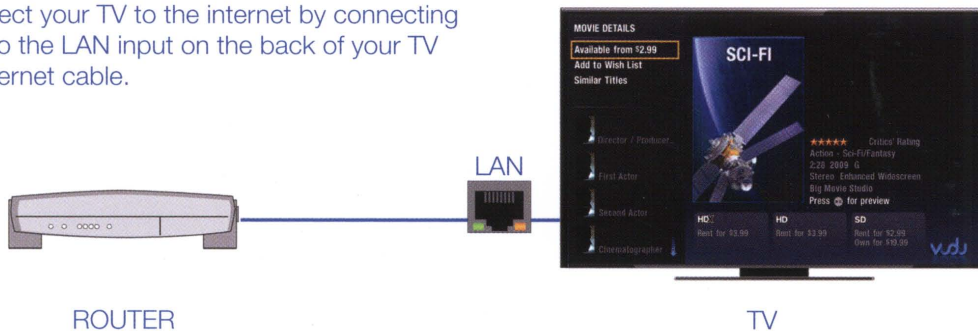

OR

You can establish a wireless connection using VUDU™'s Wireless Kit available for purchase at [www.vudu.com](http://www.vudu.com)

## WIRELESS CONFIGURATION:

Connect one VUDU™ Wireless Adapter to your home network and the other VUDU™ Wireless Adapter to your TV's LAN input. Next, connect the USB cable to the USB B input on the back of the TV.



To Enjoy VUDU™, you will need a Broadband internet connection:

 
- Standard Definition Movies – 1 Mbps or higher
- High Def Movies – 2.25 Mbps or higher
- HDX Movies – 4.5 Mbps or higher

If your internet connection is slower than the minimum required speed, you may experience viewing difficulties.

For more information please refer to your owner's guide.

**PLEASE SEND OTHER  
CORRESPONDENCE TO:**

MITSUBISHI DIGITAL ELECTRONICS AMERICA, INC.  
9351 JERONIMO RD.  
IRVINE, CA 92618-1904



FIRST-CLASS  
POSTAGE  
REQUIRED  
POST OFFICE  
WILL NOT  
DELIVER  
WITHOUT  
PROPER  
POSTAGE.


**I A L O 1**

PN# 853B700B10



**MITSUBISHI  
ELECTRIC**

**PO BOX 174268  
DENVER CO 80217-4268**

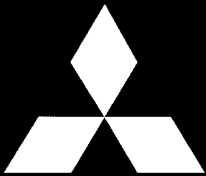

**MITSUBISHI  
ELECTRIC**

**PRODUCT  
REGISTRATION**

**IMPORTANT!**

**REGISTER NOW TO PROTECT  
YOUR INVESTMENT!**

**EFFICIENT SERVICE**

WE CAN CONTACT YOU IN CASE OF RECALL OR TO COMMUNICATE IMPORTANT INFORMATION.

WE MAY ALSO SEND YOU SPECIAL OFFERS ON MITSUBISHI PRODUCTS.

Downloaded From <http://www.MitsubishiUSA.com> **OR REGISTER ON-LINE AT: [WWW.PRODREGISTER.COM/MITSUBISHI](http://WWW.PRODREGISTER.COM/MITSUBISHI)**



