

BOSE[®]



Owner's Guide • តួអង្គដ្ឋតៃ • អយូន អនៃអ
អ្នកអង្គតៃ • អ្នកអង្គតៃ • អង្គតៃ

Important Safety Instructions

Please read this owner's guide carefully and save it for future reference.



The lightning flash with arrowhead symbol within an equilateral triangle alerts the user to the presence of uninsulated, dangerous voltage within the system enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle, as marked on the system, is intended to alert the user to the presence of important operating and maintenance instructions in this owner's guide.



WARNINGS:

- To reduce the risk of fire or electric shock, do not expose this product to rain or moisture.
- Do not expose this apparatus to dripping or splashing, and do not place objects filled with liquids, such as vases, on or near the apparatus. As with any electronic products, use care not to spill liquids into any part of the product. Exposure to liquids may create a failure and/or fire hazard.
- Do not place naked flame sources, such as lighted candles, on or near the product.
- Replace only with a AA (IEC LR06) alkaline battery (or batteries).



CAUTION: Do not make unauthorized alterations to the product; doing so may compromise safety, regulatory compliance, system performance, and may void the warranty.



WARNING: This product contains magnetic material. Contact your physician if you have questions on whether this might affect the operation of your implantable medical device.

NOTES:

- Where the mains plug or appliance coupler is used as the disconnect device, such disconnect device shall remain readily operable.
- This product must be used indoors. It is neither designed nor tested for use outdoors, in recreational vehicles, or on boats.
- This product is intended to be used only with the power supply provided.



Bose Corporation hereby declares that this product is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC and all other applicable EU directive requirements. The complete declaration of conformity can be found at: www.Bose.com/compliance




廢電池請回收

Please dispose of used batteries properly, following local regulations. Do not incinerate.

Important Safety Instructions

Important Safety Instructions

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources, such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Protect the power supply or cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
10. Only use attachments/accessories specified by the manufacturer.
11. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over. 
12. Unplug this apparatus during lightning storms or when unused for long periods of time.
13. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way: such as power supply or cord is damaged; liquid has been spilled or objects have fallen into the apparatus; the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.



This symbol means the product must not be discarded as household waste, and should be delivered to an appropriate collection facility for recycling. Proper disposal and recycling helps protect natural resources, human health and the environment. For more information on disposal and recycling of this product, contact your local municipality, disposal service, or the shop where you bought this product.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by Bose Corporation could void the user's authority to operate this equipment.

This device complies with part 15 of the FCC Rules and Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This Class B digital apparatus complies with Canadian ICES-003.

CAN ICES-3 (B) / NMB-3 (B)

This device complies with FCC and Industry Canada RF radiation exposure limits set forth for general population. It must not be co-located or be operating in conjunction with any other antennas or transmitters.

Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

Radiation Exposure Statement:

This equipment complies with IC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

Déclaration d'exposition aux radiations:

Cet équipement est conforme aux limites d'exposition aux rayonnements IC établies pour un environnement non contrôlé. Cet équipement doit être installé et utilisé avec un minimum de 20 cm de distance entre la source de rayonnement et votre corps.

Regulatory Information

Names and Contents of Toxic or Hazardous Substances or Elements						
Part Name	Toxic or Hazardous Substances and Elements					
	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent (CR(VI))	Polybrominated Biphenyl (PBB)	Polybrominated diphenylether (PBDE)
PCBs	X	O	O	O	O	O
Metal parts	X	O	O	O	O	O
Plastic parts	O	O	O	O	O	O
Speakers	X	O	O	O	O	O
Cables	X	O	O	O	O	O

This table is prepared in accordance with the provisions of SJ/T 11364.
 O: Indicates that said hazardous substance contained in all of the homogeneous materials for this part is below the limit requirement of GB/T 26572.
 X: Indicates that said hazardous substance contained in at least one of the homogeneous materials used for this part is above the limit requirement of GB/T 26572.

Please complete and retain for your records:

Serial numbers can be found on the bottom of the soundbar and on the packaging for the remote control.

Remote serial number: _____

Soundbar serial number: _____

Purchase date: _____

We suggest you keep your receipt with this owner's guide.

Date of manufacture: The four bolded digits in the serial number indicate the date of manufacture. The first digit is the year of manufacture; "5" is 2005 or 2015. Digits 2-4 are the month and date; "001" is January 1 and "365" is December 31.

China Importer: Bose Electronics (Shanghai) Company Limited, Part C, Plan 9, No. 353 North Riyang Road, China (Shanghai) Pilot Free Trade Zone

EU Importer: Bose GP, Castleblayney Road, Carrickmacross, Ireland

Taiwan Importer: Bose Taiwan Branch, Room 905, 9F, Worldwide House, 131 Min Sheng East Rd, Section 3, Taipei, Taiwan, 105

The *Bluetooth*[®] word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Bose Corporation is under license.

Blu-ray Disc[™] and Blu-ray[™] are trademarks of the Blu-ray Disc Association.



Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.

The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.

©2015 Bose Corporation. No part of this work may be reproduced, modified, distributed, or otherwise used without prior written permission.

Contents

Introduction

About your TV sound system	7
System features.....	7
Unpacking	8
Placing the soundbar	9
Sample soundbar placement	9
Wall mounting the soundbar	9

Setting Up the System


Cable options.....	10
Connecting your TV	10
Connecting the soundbar	11
Option 1: Optical cable (preferred)	11
Option 2: Coaxial cable	12
Connecting to power.....	13
Mounting ring	13
Turning off your TV speakers.....	14
Powering on your soundbar.....	14
Confirming your TV speakers are off.....	14

Using the System

Remote control buttons.....	15
Programming the universal remote	16
Customizing the power button.....	17
Resyncing your cable/satellite box and TV.....	17
Switching between sources.....	17
Function buttons.....	17
Adjusting the volume	18
Adjusting the bass level.....	18
Resetting the bass level.....	18
Dialogue mode	19
Auto-wake.....	19
Programming a non-Bose remote control.....	19

Contents

Bluetooth®

Pairing a <i>Bluetooth</i> ® enabled device	20
Connecting to a paired <i>Bluetooth</i> ® enabled device	21
Using the  button	21
Using the <i>Bluetooth</i> ® feature on the paired device.....	21
Switching between connected devices.....	22
Clearing the soundbar's <i>Bluetooth</i> ® pairing list	22

Getting System Information

Soundbar indicators.....	23
Status indicator	23
<i>Bluetooth</i> ® indicator	23

Alternate Setup

No sound from a source(s) connected to your TV	24
No optical or coaxial connector on your TV	24

Care and Maintenance

Troubleshooting	30
Adjusting the audio for wall mounting	31
Replacing the remote batteries	32
Cleaning.....	33
Customer service.....	33
Limited warranty	33
Technical Information.....	33

Introduction

About your TV sound system

Your TV sound system provides clear, spacious sound from one compact soundbar.

 
System features

- Videostage® and TrueSpace® technologies deliver many of the benefits of a five-speaker home theater in a single soundbar.
- Sleek and elegantly designed soundbar fits easily in front of your TV.
- Connects with just one audio cable for easy setup.
- Programmable universal remote powers on/off your TV, cable/satellite box and system with the press of a single button.
- Stream music from *Bluetooth*® enabled devices.
- Stores up to eight *Bluetooth* enabled devices in its pairing list.
- Connects up to two *Bluetooth* enabled devices for easy switching between devices.
- Mounting ring to hide the power supply behind your mounted TV.
- Soundbar can be mounted on the wall (kit available separately).


Introduction

Unpacking


Carefully unpack the carton and confirm that the following parts are included:

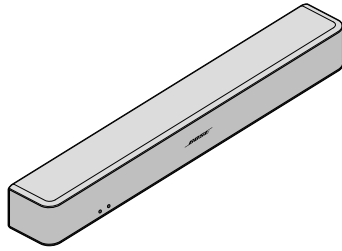

Soundbar

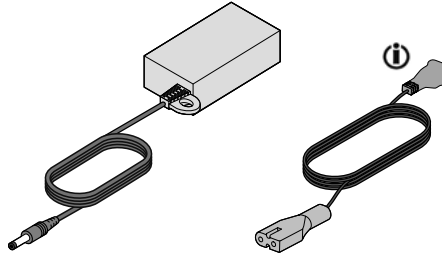 


Power supply and cord

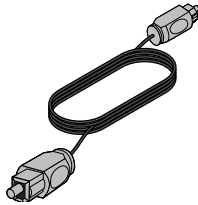 


Optical cable



 Coaxial cable
(Europe only)

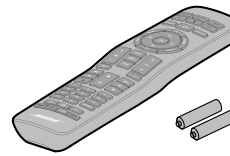

Universal remote control
(batteries provided)

 May ship with multiple power cords. The appropriate power cord for your region is supplied.

Note: If part of the system is damaged, do not use it. Contact your authorized Bose® dealer or Bose customer service. Refer to the contact sheet in the carton.

Introduction

 
Placing the soundbar

- Stand the soundbar on its feet in front of your TV.
- Do not place your TV on the soundbar.
- Make sure there is an AC (mains) power outlet nearby.

To avoid wireless interference:

- Keep other wireless equipment away from the soundbar.
- Place the soundbar outside of and away from metal cabinets, other audio/video components and direct heat sources.

Sample soundbar placement

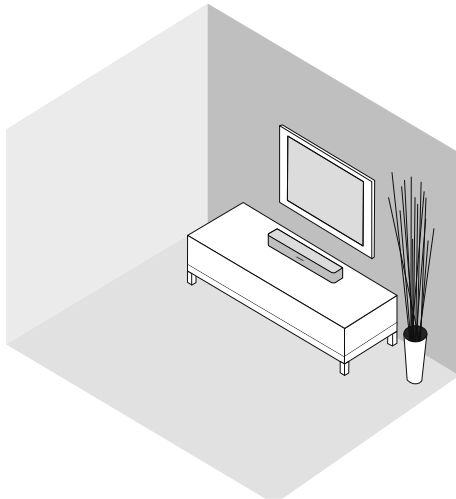

Wall mounting the soundbar

You can mount the soundbar on a wall. To purchase the WB-120 Wall Mount Kit, contact your local Bose® dealer or visit www.Bose.com

After wall mounting and setting up the soundbar, adjust the audio for better bass sound (see page 31).

CAUTION: Do not use any other hardware to mount the soundbar.

Setting Up the System

Cable options

 
Connect your TV to the soundbar using one of the two digital cable options. The optical cable is the preferred method for connection.

Note: If your TV does not have an optical or coaxial connector, see "Alternate Setup" on page 24.

1. On the back of your TV, locate the **Audio OUT** (digital) connector panel.

Note: You must connect the audio cable through your Audio OUT connector panel.

Your TV's connector panel may not appear as shown. Look for the shape or color (coaxial) of the connector.

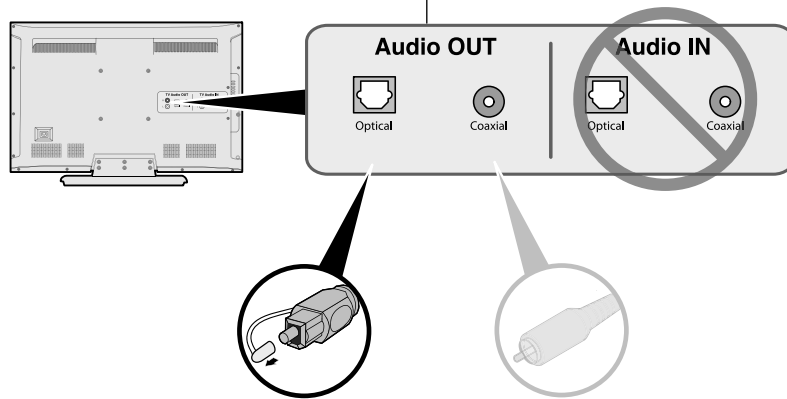

Option 1:
Optical cable (digital audio)
Preferred method for connection.


Option 2:
Coaxial cable (digital audio)
Use if no optical output is available.

2. Choose an audio cable.

Connecting your TV

Insert one end of the audio cable into the correct **Audio OUT** (digital) connector on your TV.

 CAUTION: If using an optical cable, remove the protective caps from both ends. Inserting the plug in the wrong orientation can damage the plug and/or the connector.

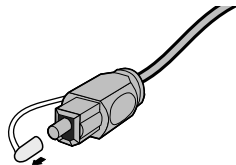

Setting Up the System

Connecting the soundbar


After connecting the audio cable to your TV, connect the other end to your soundbar. Use only one audio cable.

For instructions on connecting a coaxial cable, see page 12.

Option 1: Optical cable (preferred)


CAUTION: Ensure you have removed the protective cap from both ends of the optical cable. Inserting the plug in the wrong orientation can damage the plug and/or the connector.

 1. Hold the optical cable's plug with the Bose logo facing down.
2. Align the plug with the **Optical** connector on the soundbar and insert the plug carefully.

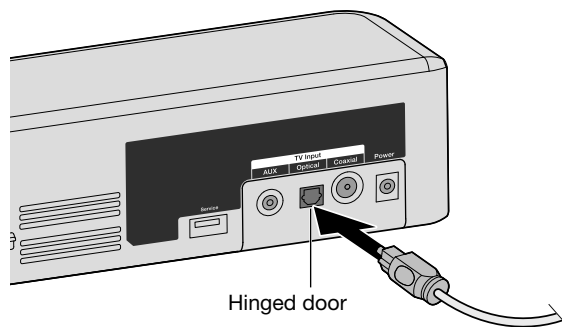

Note: The connector has a hinged door that swings inward when inserting the plug.

 
3. Firmly push the plug into the connector until you hear or feel a click.

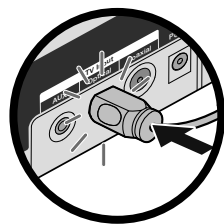

Setting Up the System

Option 2: Coaxial cable

 
Insert the other end of the coaxial cable into the **Coaxial** connector on the soundbar.

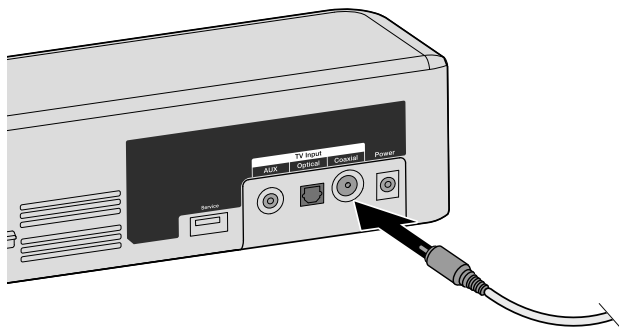

Setting Up the System

Connecting to power

 1. Plug the power supply into the **Power** connector.

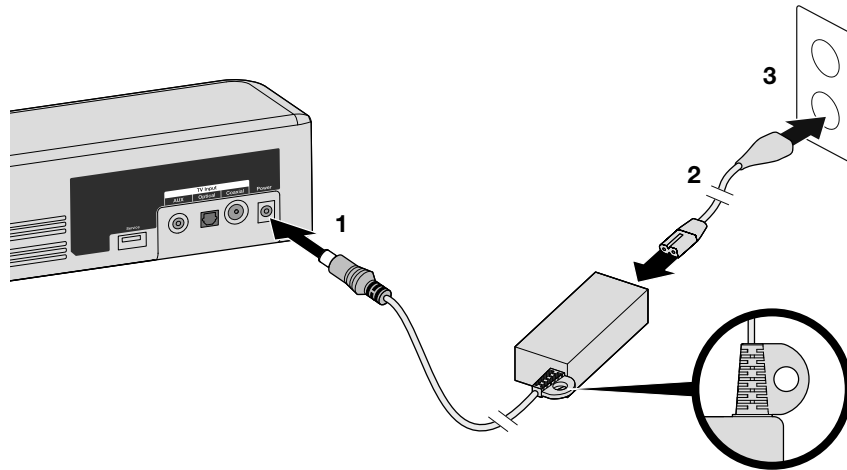

2. Plug one end of the power cord into the power supply.
3. Plug the other end into a live AC power (mains) outlet.
The soundbar emits a tone.

Mounting ring

To hide the power supply behind your mounted TV, use the mounting ring. Attach the mounting ring to your TV's wall mount using zip ties or bread ties (not provided).

 
Setting Up the System

Turning off your TV speakers

To avoid hearing distorted sound, turn off your TV speakers.
Refer to your TV's owner's guide for more information.

Powering on your soundbar

1. Power on your TV.
2. If you are using a cable/satellite box or other secondary source, power on the source.
3. Press the Power button (⏻) on the remote control.
The status indicator glows green.

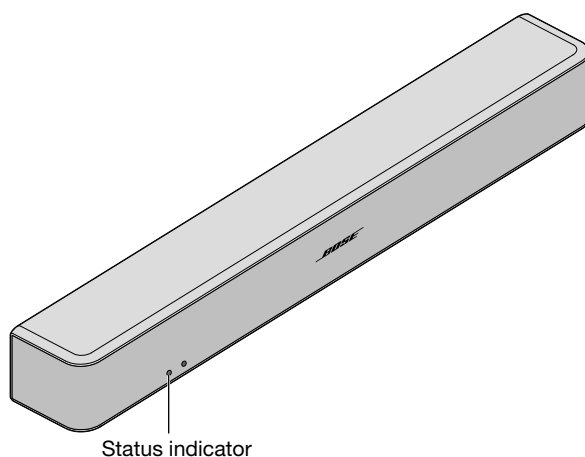

4. Check if sound is coming from the soundbar.
Note: If you do not hear sound coming from the soundbar, see "Troubleshooting" on page 30.

 
Confirming your TV speakers are off

1. Press the Mute button (🔇) on the remote control.
2. Check that no sound is coming from your TV.
Note: If you hear sound coming from your TV, see "Troubleshooting" on page 30.

Using the System

Remote control buttons

Use the remote to control sources connected to your system, adjust the system volume, change channels, use playback functions, enable cable/satellite box functions and navigate source menus.

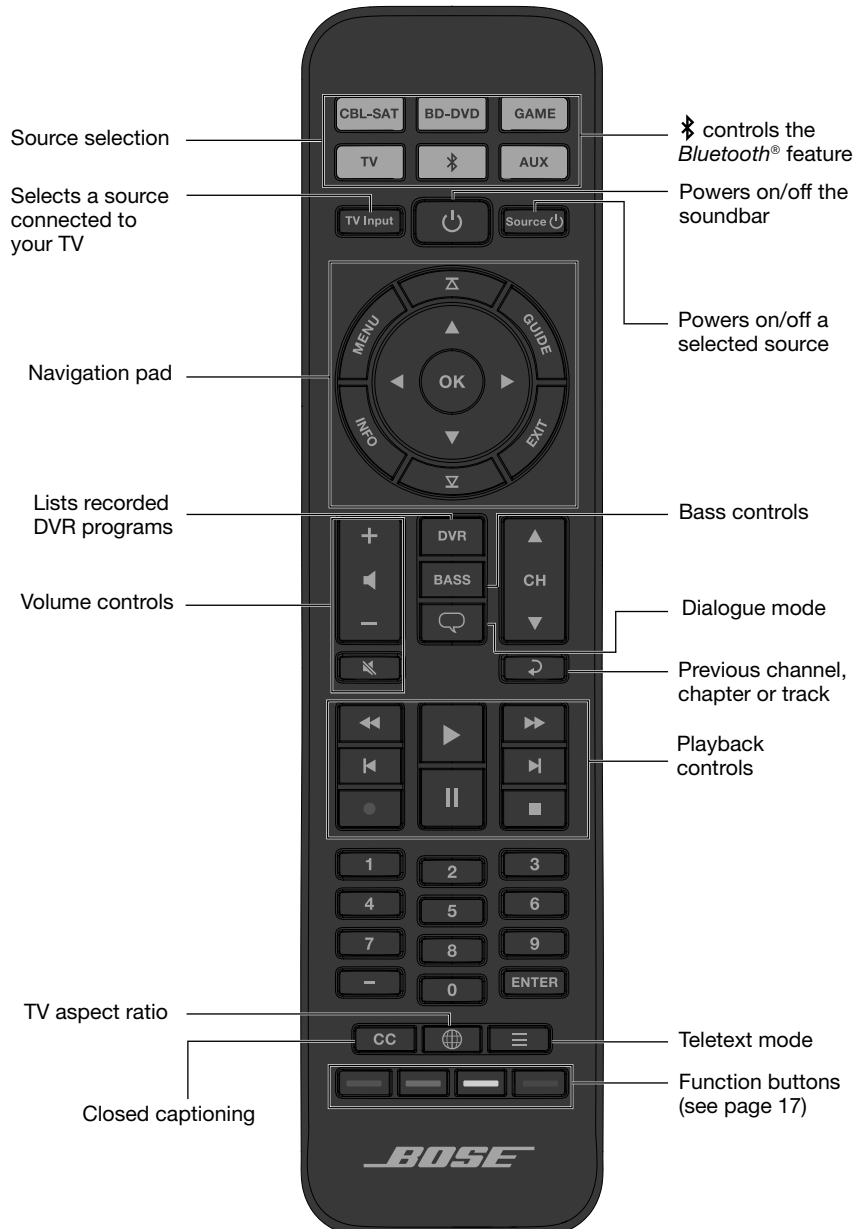

Using the System

Programming the universal remote


You can program the universal remote to control your source, such as a TV, DVD/Blu-ray Disc™ player, cable/satellite box, game system or DVR, by entering the code for your source's brand. There may be several codes for your source. You may need to perform this procedure multiple times to locate the correct code.

Locate your source's code

1. Power on your source.
2. Locate the code for your source's brand in the Universal Remote Device Codes book (provided).

Enter your source's code





1. On the remote control, press and hold the appropriate source button until all six source buttons glow, then release.

For example, to program your TV, press and hold  until all six source buttons glow, then release.

The appropriate source button continues to glow.

2. On the number keypad, enter the code for your source's brand and press + on the volume button.

Test your source's code


1. Test your source for basic functions. Follow the instructions for your source:
 - **TV:** press the channel buttons. Press . The settings menu appears. Press ◀ and ▶ to navigate.
 - **Cable/satellite box:** press . The programming guide appears. Press ◀ and ▶ to navigate.
 - **DVD or Blu-ray Disc™ player:** press . The settings menu appears. Press ◀ and ▶ to navigate.
 - **Game system:** press ◀ and ▶ to navigate through your menu.
2. Based on your source's response to basic functions:
 - **Remote responds accurately:** press  to exit programming and save your settings.
 - **Remote does not respond or does not respond accurately:**
 - **If your source button glows:** press + on the volume button to move to the next code. Repeat steps 1-2 in "Test your source's code". You may need to repeat this procedure 30 or more times. If all six buttons blink three times, you have cycled through all codes for your source.
 - **If your source button is off:** your remote exited programming mode. Repeat steps 1-2 in "Enter your source's code" and steps 1-2 in "Test your source's code".

Tip: After you exit programming mode, press the appropriate source button to use your source.

Note: Your source may not be compatible with universal remote controls. Refer to your source's owner's guide for more information.

Using the System



Customizing the power button

You can customize  (power button) on your remote to power on/off your soundbar, TV and cable/satellite box simultaneously.

1. Program your remote to control your TV and cable/satellite box (see page 16).
2. Press **CBL-SAT** and **TV** simultaneously and hold for ten seconds.
Both buttons flash three times.

Resyncing your cable/satellite box and TV


After customizing the power button, your cable/satellite box and TV may become out of sync and not power on/off simultaneously. Use the following steps to resync your soundbar.

1. Press the source button for the source that is out of sync.
 2. Press **Source**  to power on/off the source.
 3. Press .
- Your sources power on/off simultaneously.

Switching between sources

You can switch from one source to another by pressing the appropriate source button on the remote.

Note: Before you begin, ensure you have correctly programmed your sources.

1. Press the button for the source you want to control.
The source button glows.
2. Press **Source** .
3. Press **TV Input** and select the correct input on your TV.

Function buttons


The red, green, yellow and blue buttons on the remote control correspond with the color-coded function buttons on your cable/satellite box or teletext functions.

- Cable/satellite box functions: refer to your cable/satellite box's owner's guide.
- Teletext functions: correspond with color-coded page numbers, headings or shortcuts on a teletext display.

Using the System

Adjusting the volume

On the remote control:

- Press + to increase the volume.
- Press – to decrease the volume.
- Press  to mute or unmute the audio.

Note: If you hear sound coming from your TV, see "Troubleshooting" on page 30.

Adjusting the bass level

1. Press the Bass button (BASS).

The status indicator blinks white three times.

2. On the remote control:

- Press + to increase the bass.
- Press – to decrease the bass.

The status indicator blinks white three times and the soundbar saves your settings.

Note: For optimal sound quality for dialogue-only programs, such as news and talk shows, see page 19.

Resetting the bass level

On the remote control, press and hold BASS for five seconds to reset the bass level to original factory settings.

Using the System

Dialogue mode

Dialogue mode provides optimal sound quality for dialogue-only programs, such as news and talk shows, by decreasing the soundbar's bass settings.

Press the dialogue button (🗨️) to toggle between dialogue mode and your default audio settings.

The status indicator glows amber when dialogue mode is enabled.

Auto-wake

You can set the soundbar to power on whenever a sound signal is received.

Note: The soundbar powers off after 60 minutes of inactivity.

Press and hold ⏻ on the remote for 5 seconds to toggle between auto-wake and default power settings.

The status indicator glows dim amber when the soundbar is off and auto-wake is enabled.

Programming a non-Bose remote control

You can program a non-Bose remote control, such as your cable/satellite box remote, to control the soundbar. Refer to your non-Bose remote control's owner's guide or cable/satellite website for instructions.


Once programmed, the non-Bose remote performs basic functions such as power on/off and volume.

Bluetooth®

Pairing a Bluetooth® enabled device

Bluetooth® wireless technology enables you to stream music from Bluetooth enabled smartphones, tablets, computers or other audio devices to the soundbar.

 
Before you can stream music from a Bluetooth enabled device, you must pair your device with the soundbar.

1. On the remote control, press and hold  until the Bluetooth indicator blinks blue.

Make sure the Bluetooth indicator blinks blue before you pair your device.

2. On your Bluetooth enabled device, turn on the Bluetooth feature.

Tip: The Bluetooth feature is usually found in Settings. A gear icon (⚙️) often represents Settings on the Home screen.

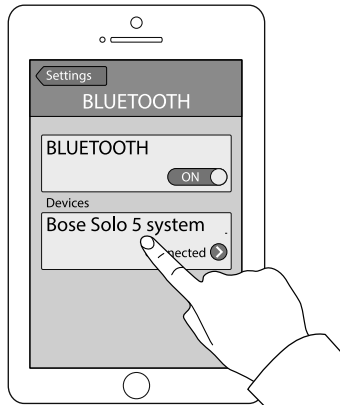

3. Select **Bose Solo 5 system** from your device list.
Once paired, the **Bose Solo 5 system** appears connected in the device list.
4. On your Bluetooth enabled device, play music to stream to your soundbar.

If you cannot pair your device

You may need to clear the soundbar's Bluetooth pairing list (see page 22).
After you clear the list, try pairing again.


See "Troubleshooting" on page 30 for more information.

Connecting to a paired *Bluetooth*® enabled device

You can stream audio from a *Bluetooth*® enabled device to the soundbar. There are two ways to stream audio from a paired device to the soundbar.

If there are multiple devices stored in the soundbar's pairing list, it may take a minute or two for the paired device to connect. The soundbar's *Bluetooth* indicator shows connection status (see page 23).

Using the button

1. On the remote control, press .

The soundbar connects to the last two devices that streamed to your soundbar.

2. On your device, play music.

If you cannot stream audio from a paired device

The soundbar may have lost connection to your device. Check the soundbar's *Bluetooth* indicator. If the paired device is out of range of the soundbar, move your device within range.

Using the *Bluetooth*® feature on the paired device

1. On your *Bluetooth* enabled device, turn on the *Bluetooth* feature.
2. Select **Bose Solo 5 system** from the device list.
3. Once connected, on your *Bluetooth* enabled device, play music to stream to the soundbar.

Bluetooth®

Switching between connected devices

The soundbar supports multi-point connectivity, which allows you to seamlessly switch playing music between connected devices.

The last two devices that streamed to the soundbar remain connected. During playback, you can pause audio on the streaming device, and then play music from another connected device.

1. Pause music from the streaming device.
2. On another connected device, play music.
3. Repeat steps 1 and 2 to switch between connected devices.

Clearing the soundbar's *Bluetooth*® pairing list

 
When you pair a *Bluetooth*® enabled device to the soundbar, the connection is stored in the soundbar's pairing list. You may need to clear the pairing list if you cannot connect to a device. Once you clear the list, you need to pair previously-paired devices again.

1. Press and hold **⌘** for ten seconds, until the *Bluetooth* indicator blinks blue.
2. On your mobile device, delete **Bose Solo 5 system** from the *Bluetooth* menu.
All paired mobile devices are cleared and the soundbar is ready to pair (see page 20).

Getting System Information

Soundbar indicators

The status and *Bluetooth*[®] indicators on the front of the soundbar provide information on soundbar activity.

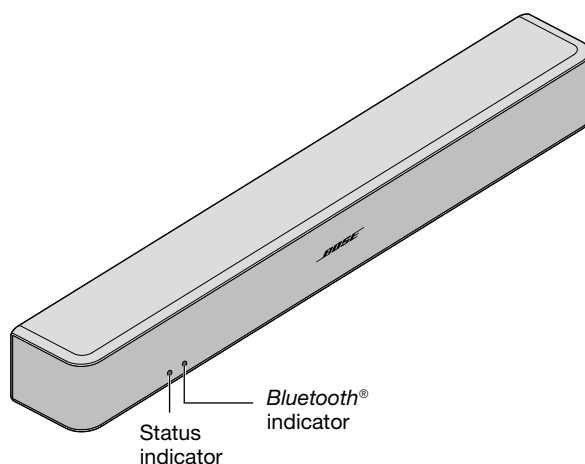

Status indicator

Indicator activity	System state
Off	Soundbar off (standby)
Green	Solid: Soundbar is on Blinking: Soundbar is muted
Amber	Dim: Standby, auto-wake is enabled Solid: Dialogue mode Blinking: Dialogue mode, soundbar is muted
Red	System error: Call Bose Customer Service. Refer to the contact sheet in the carton.

Bluetooth[®] indicator

Indicator activity	System state
Blue	Blinking: Ready to pair
White	Blinking: Connecting Solid: Connected

Alternate Setup

You may need to use an alternate setup method for the following reasons:

- No sound from a source(s) connected to your TV.
- No optical or coaxial connector on your TV.

No sound from a source(s) connected to your TV

Some TVs do not deliver sound from connected sources to the soundbar. Use an alternate setup method to directly connect your source(s) to the soundbar.

Problem	What to do
No sound from a source connected to your TV	Connect your source to the soundbar using one of the two cable options. (See page 25.)
No sound from two sources connected to your TV	Connect your sources to the soundbar using Option 1 or Option 2. (See page 27.)

No optical or coaxial connector on your TV

Some TVs do not have optical or coaxial connectors. Use an alternate setup method to connect your TV to the soundbar.

Problem	What to do
TV only has an analog connector	Connect your TV using a 3.5 mm to RCA stereo cable (not provided). (See page 26.)
TV only has a headphones connector	Connect your TV using a 3.5 mm stereo cable (not provided). (See page 29.)
TV has no audio outputs	Use the audio outputs on another source, such as a cable/satellite box to connect to the soundbar. (See page 25.)

 
Alternate Setup

Connecting a source to the soundbar

If you do not get sound from a source, such as a DVD/Blu-ray Disc™ player, cable/satellite box, game system or DVR, connected to your TV, connect it to the soundbar. Use only one audio cable.

CAUTION: If using an optical cable, remove the protective caps from both ends. Inserting the plug in the wrong orientation can damage the plug and/or the connector.

1. On the back of your source, locate the **Audio OUT** (digital) connector panel.

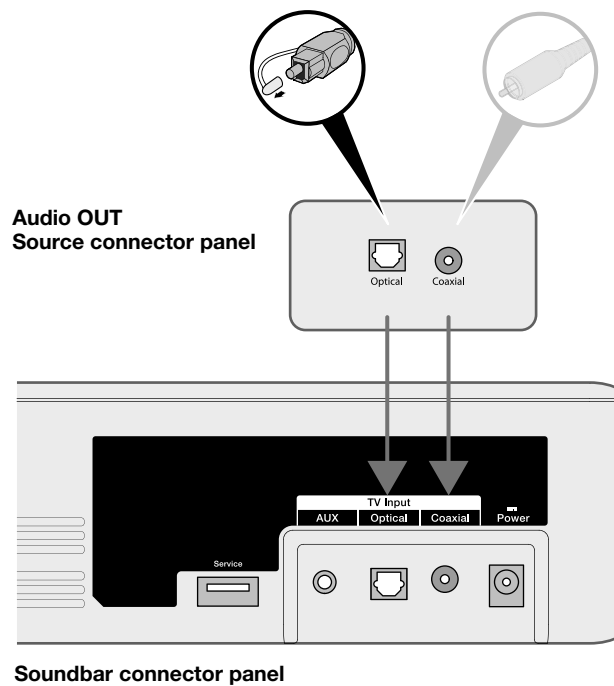

2. Choose an audio cable.
3. If you have not already, disconnect your TV from the soundbar.
4. Connect the audio cable from your cable/satellite box's **Audio OUT** (digital) connector panel to the soundbar.

 
Note: Do not disconnect your source's video cable, such as an HDMI™ cable, from your TV.

Alternate Setup

Connecting a source's analog connector to the soundbar

If your source does not have an optical or coaxial connector, and only has analog connectors (red and white), use a 3.5 mm to RCA stereo cable (not provided) to connect to the soundbar.

1. If you have not already, disconnect your TV from the soundbar.
2. Insert the RCA analog cable into the **Audio OUT** RCA (red and white) connectors on your source.
3. Insert the stereo plug into the soundbar's **AUX** connector.

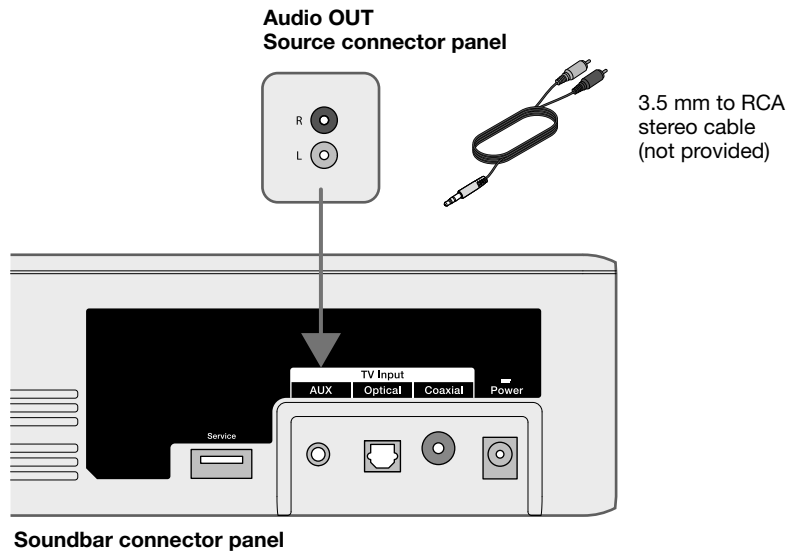

Alternate Setup

Connecting two sources to the soundbar

If you do not get sound from any source, such as a DVD/Blu-ray Disc™ player, cable/satellite box, game system or DVR, connected to your TV, connect it to the soundbar. Use only one audio cable for each source.

1. On the back of each source, locate the **Audio OUT** (digital) connector panel.
2. Choose a separate audio cable for each source using either Option 1 or Option 2 (see page 28).

Note: You MUST use either Option 1 or Option 2. Do not use the coaxial cable and optical cable at the same time.


3. If you have not already, disconnect your TV from the soundbar.
4. Separately connect the chosen audio cable from each source's **Audio OUT** (digital) connector panel to the soundbar.

Note: Do not disconnect your source's video cable, such as an HDMI™ cable, from your TV.

Option 1

This figure shows two source connections using an optical cable and 3.5 mm to RCA stereo cable (not provided).

 
CAUTION: If using an optical cable, remove the protective caps from both ends. Inserting the plug in the wrong orientation can damage the plug and/or the connector.

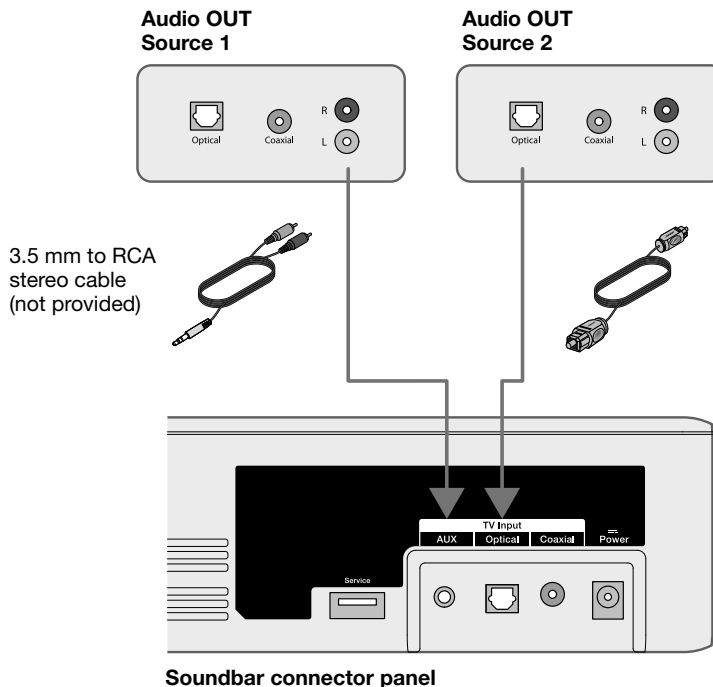

Alternate Setup

Option 2

 This figure shows two source connections using a coaxial cable and 3.5 mm to RCA stereo cable (not provided).

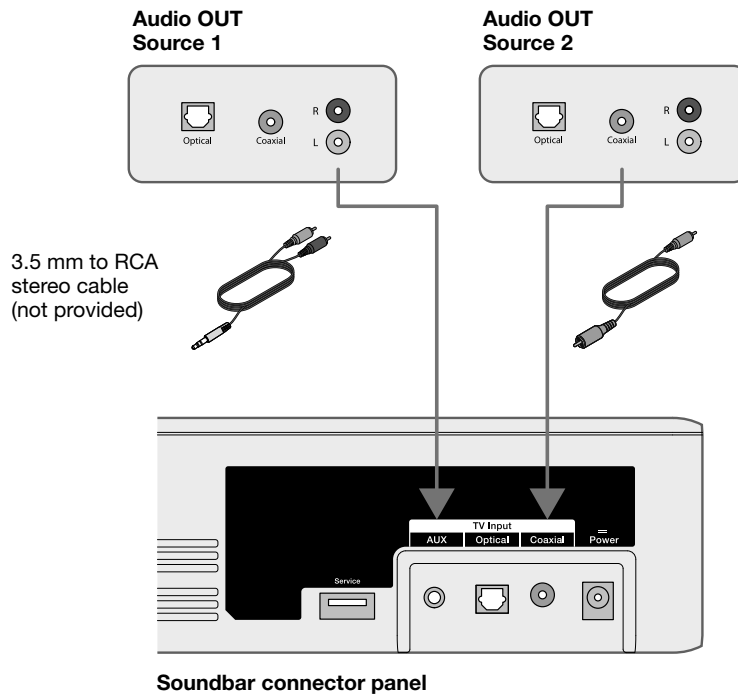

Using two sources connected to the soundbar

 
Power off sources when not in use. In order for one source to deliver audio to the soundbar, your other source must be off.

Alternate Setup

Connecting a TV headphones connector to the soundbar

If your TV only has a headphones connector, use a 3.5 mm stereo cable (not provided) to connect it to the soundbar.

1. Insert the stereo plug into the TV headphones connector.
2. Insert the other end of the cable into the **AUX** connector on your soundbar.
3. Ensure your TV speakers are on. Refer to your TV's owner's guide for more information.
4. To ensure optimal volume control from your soundbar,
 - Set your TV's volume to 75 percent of maximum.
 - Next, set the volume level of your soundbar using the remote control.

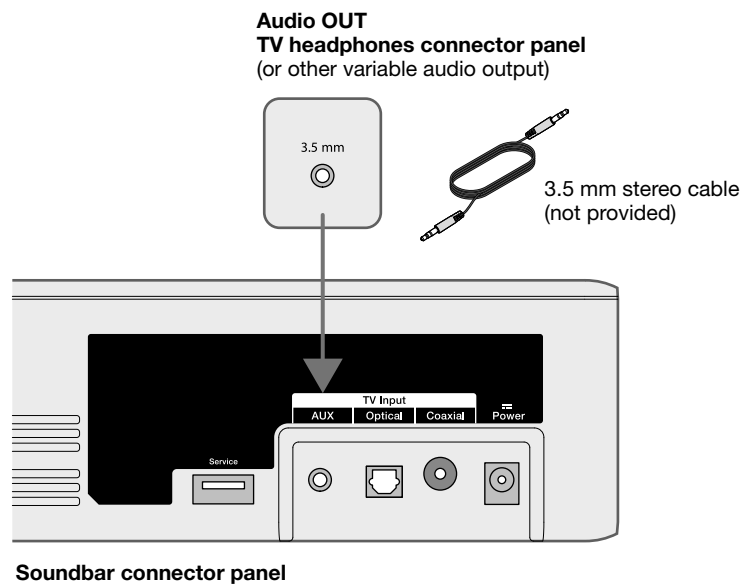

Care and Maintenance

Troubleshooting

Problem	What to do
No power	<ul style="list-style-type: none">• Secure both ends of the power cord.• Plug the power cord into a live AC (mains) outlet.• Unplug the power cord for at least one minute and reconnect.
No sound	<ul style="list-style-type: none">• Unmute the soundbar.• Increase the volume.• Plug the audio cable into a connector on your TV labelled Audio Output or Audio OUT, not Audio Input or Audio IN.• Use only one audio cable.• Secure all cable connections and ensure they are correct.• If you are using a cable/satellite box or other secondary source for sound, select the correct TV input.• Enable your TV's audio output and select the correct setting, such as such as Stereo or 5.1 Channel Audio. Refer to your TV's owner's guide for more information.• Use alternate setup (see page 24).• If connecting to two sources:<ul style="list-style-type: none">– Power off the other source.– Ensure that you are not using an optical cable and coaxial cable.• If the soundbar is connected to a TV output labelled VARIABLE (VAR), power of your TV speakers, set your TV volume to 75 percent of maximum and unmute your TV.• If connecting through a TV headphones output, increase your TV volume to the maximum limit.• Unplug the power cord for at least one minute and reconnect.
Cannot play <i>Bluetooth</i> [®]	<ul style="list-style-type: none">• On your soundbar:<ul style="list-style-type: none">– Pair a device (see page 20).– Clear the soundbar's pairing list (see page 22).– Try pairing a different device.• On your <i>Bluetooth</i> enabled device:<ul style="list-style-type: none">– Turn off and on the <i>Bluetooth</i> feature.– Remove the soundbar from the <i>Bluetooth</i> menu. Pair again.– Use a different music source.– Check your <i>Bluetooth</i> enabled device for compatibility. Refer to your <i>Bluetooth</i> enabled device's owner's guide.• Increase the volume on the soundbar, your mobile device and music source.• Ensure you are using the correct device.• If more than one <i>Bluetooth</i> enabled device is connected, pause your streaming device first.• Disconnect other <i>Bluetooth</i> enabled devices when not in use.• See "No sound" or "Distorted sound" on page 31.

Care and Maintenance

Problem	What to do
Distorted sound	<ul style="list-style-type: none">• Secure cable connections on the soundbar and TV (or other connected sources).• If the soundbar is connected to a TV output labelled VARIABLE (VAR), reduce the TV volume.• Use alternate setup (see page 24).• If wall mounting the soundbar, adjust the audio (see "Adjusting the audio for wall mounting").• Unplug the power cord for at least one minute and reconnect.
Remote control is inconsistent or does not work	<ul style="list-style-type: none">• Check the batteries to see if they are installed properly or if they need to be replaced (see page 32).• Point the remote control directly at the soundbar.• Check that the status indicator flashes when you press the remote volume or mute button.• Unplug the power cord for at least one minute and reconnect.
Sound is coming from the TV	<ul style="list-style-type: none">• Turn off your TV speakers (see page 14).• Mute or decrease the volume your TV.
Status indicator is red	<ul style="list-style-type: none">• System error: Call Bose Customer Service. Refer to the contact sheet in the carton.

Adjusting the audio for wall mounting

After wall mounting the soundbar, adjust the audio for better bass sound.

Press and hold  for 10 seconds.

The soundbar emits a tone.

 
Tip: If you remove the soundbar from the wall, repeat to return the soundbar to default audio settings.

Care and Maintenance

Replacing the remote batteries

Replace both batteries when the remote control stops operating or its range seems reduced. Use Alkaline batteries.

1. Slide open the battery compartment cover on the back of the remote.
2. Remove both batteries.
3. Dispose of the batteries according to the regulations in your area.
4. Insert two AA (IEC-LR6) 1.5V batteries or the equivalent. Match the + and – symbols on the batteries with the + and – markings inside the compartment.
5. Slide the battery compartment cover back into place.

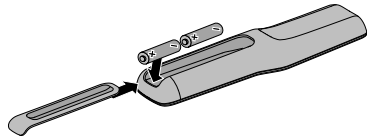

Care and Maintenance

Cleaning

- Clean the surface of the system with a soft, dry cloth.
- Do not use any sprays near the system. Do not use any solvents, chemicals or cleaning solutions containing alcohol, ammonia or abrasives.
- Do not allow liquids to spill into any openings.

Customer service

For additional help, contact Bose Customer Service. Refer to the contact sheet in the carton.

Limited warranty

Your system is covered by a limited warranty. Details of the limited warranty are provided on the product registration card in the carton. Please refer to the product registration card for instructions on how to register. Failure to register will not affect your limited warranty rights.

The warranty information provided with this product does not apply in Australia or New Zealand. See our website at www.bose.com.au/warranty or www.bose.co.nz/warranty for details of the Australia and New Zealand warranty.

Technical Information

Input rating

Input: 20VDC, 30W