

***BOSE***<sup>®</sup>



---

# WAVE<sup>®</sup> MUSIC SYSTEM MULTI-CD CHANGER

---

Owner's Guide | Guía de usuario | Notice d'utilisation

 
# SAFETY INFORMATION

## Please read this owner's guide


Please take the time to follow the instructions in this owner's guide carefully. It will help you set up and operate your system properly and enjoy its advanced features. Please save this owner's guide for future reference.

**WARNING:** To reduce the risk of fire or electrical shock, do not expose the product to rain or moisture.

**WARNING:** Do not expose this apparatus to dripping or splashing, and do not place objects filled with liquids, such as vases, on or near the apparatus. As with any electronic products, use care not to spill liquids into any part of the system. Liquids can cause a failure and/or a fire hazard.



 **WARNING:** Do not place any naked flame sources, such as lighted candles, on or near the apparatus.

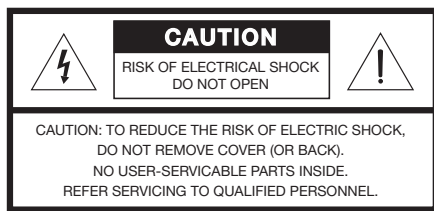

The lightning flash with arrowhead symbol within an equilateral triangle alerts the user to the presence of uninsulated dangerous voltage within the system enclosure that may be of sufficient magnitude to constitute a risk of electrical shock.



The exclamation point within an equilateral triangle, as marked on the system, is intended to alert the user to the presence of important operating and maintenance instructions in this owner's guide.

**CAUTION:** To prevent electric shock, match the wide blade of the line cord plug to the wide slot of the AC (mains) receptacle. Insert fully.

**CAUTION:** Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure from the internal laser component. The compact disc player should not be adjusted or repaired by anyone except properly qualified service personnel.

**CAUTION:** Make no modifications to the system or accessories. Unauthorized alterations may compromise safety, regulatory compliance and system performance.

**Note:** The product label is located on the bottom of the product.

**Note:** The product must be used indoors. It is neither designed nor tested for use outdoors, in recreational vehicles, or on boats.

**Note:** Where the mains plug or appliance coupler is used as the disconnect device, such disconnect device shall remain readily operable.


**Note:** This product is intended to be used only with the Bose® Wave® music system.



This product conforms to all applicable EU Directive requirements. The complete Declaration of Conformity can be found at [www.Bose.com/compliance](http://www.Bose.com/compliance).

## Class 1 laser product

 This CD player is classified as a CLASS 1 LASER PRODUCT according to EN/IEC 60825.



# IMPORTANT SAFETY INSTRUCTIONS

- 1. Read these instructions** – for all components before using this product.
- 2. Keep these instructions** – for future reference.
- 3. Heed all warnings** – on the product and in the owner's guide.
- 4. Follow all instructions.**
- 5. Do not use this apparatus near water or moisture** – Do not use this product near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, near a swimming pool, or anywhere else that water or moisture are present.
- 6. Clean only with a dry cloth** – and as directed by Bose Corporation. Unplug this product from the wall outlet before cleaning.
- 7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions** – To ensure reliable operation of the product and to protect it from overheating, put the product in a position and location that will not interfere with its proper ventilation. For example, do not place the product on a bed, sofa, or similar surface that may block the ventilation openings. Do not put it in a built-in system, such as a bookcase or a cabinet that may keep air from flowing through its ventilation openings.
- 8. Do not install near any heat sources, such as radiators, heat registers, stoves or other apparatus (including amplifiers) that produce heat.**
- 9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wider blade or third prong are provided for your safety. If the provided plug does not fit in your outlet, consult an electrician for replacement of the obsolete outlet.**
- 10. Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.**
- 11. Only use attachments/accessories specified by the manufacturer.**
- 12. Use only with the cart, stand, tripod, bracket or table specified by the manufacturer or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.**
- 13. Unplug this apparatus during lightning storms or when unused for long periods of time** – to prevent damage to this product.
- 14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way: such as power-supply cord or plug is damaged; liquid has been spilled or objects have fallen into the apparatus; the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped** – Do not attempt to service this product yourself. Opening or removing covers may expose you to dangerous voltages or other hazards. Please call Bose to be referred to an authorized service center near you.
- 15. To prevent risk of fire or electric shock, avoid overloading wall outlets, extension cords, or integral convenience receptacles.**
- 16. Do not let objects or liquids enter the product** – as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock.
- 17. Use Proper Power Sources** – Plug the product into a proper power source, as described in the operating instructions or as marked on the product.



---

## Information about products that generate electrical noise

If applicable, this equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, this is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, you are encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a different circuit than the one to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**Note:** *Unauthorized modification of the receiver or radio remote control could void the user's authority to operate this equipment.*

This product complies with the Canadian ICES-003 Class B specifications.

## Note to CATV system installer

This reminder is provided to call the CATV system installer's attention to Article 820-40 of the NEC (of USA) that provides guidelines for proper grounding. In particular, it specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as is practical.

## For your records

Record the serial number of your new multi-disc changer in the space below. The serial number can be found on the bottom panel.

Serial number \_\_\_\_\_

Purchase date \_\_\_\_\_

We suggest you keep your receipt with this owner's guide.

<b>SETUP .....</b>	<b>6</b>
Introduction .....	6
Unpacking the carton .....	6
Selecting a location for your system .....	6
Seating your Wave® music system on the Multi-CD Changer .....	6
Connecting the Multi-CD Changer to your Wave® music system .....	7
<b>OPERATION .....</b>	<b>8</b>
Remote control guide .....	8
Turning your multi-CD system on and off .....	9
Loading and unloading discs .....	9
Loading CDs into the Wave® music system (Disc 1) .....	9
Loading CDs into the Multi-CD Changer (Disc 2 - Disc 4) .....	9
Unloading discs .....	9
Playing CDs .....	10
Moving to another CD .....	10
Stopping a CD .....	10
Ejecting a CD .....	10
Changing Play Modes .....	10
Connecting an external audio source .....	11
Playing a connected audio source .....	11
<b>CARE AND MAINTENANCE .....</b>	<b>12</b>
Cleaning .....	12
Troubleshooting .....	12
Customer Support .....	12
Limited warranty .....	12
Technical information .....	13
<b>CONTACT INFORMATION .....</b>	<b>14</b>

## SETUP

### Introduction

Thank you for purchasing the Bose® Wave® music system Multi-CD Changer accessory.

 
Adding the Multi-CD Changer to your Wave® music system provides you with some valuable benefits:

- **A four-disc Wave® music system** – Allows you to load and play up to four audio CDs. Provides hours of uninterrupted CD music.
- **Elegant integrated pedestal design** – Using the same footprint as the Wave® music system, the changer complements the elegance and simplicity of the system.
- **One integrated remote control** – Provides the simplicity of using the remote control that came with your Wave® music system and one-touch selection of all built-in sources.
- **Multiple source switching** – By adding two input connections for external audio devices, you can enjoy listening to one or two other audio sources in your home through the Wave® music system.

### Unpacking the carton

Carefully unpack your Wave® music system Multi-CD Changer and save all packing materials for possible future use. The original packing materials provide the safest way to transport your new Multi-CD Changer.

Make sure you received the parts shown in the following diagram. If any part appears damaged, do not attempt to use it. Notify Bose customer service immediately (see phone numbers on the inside back cover).

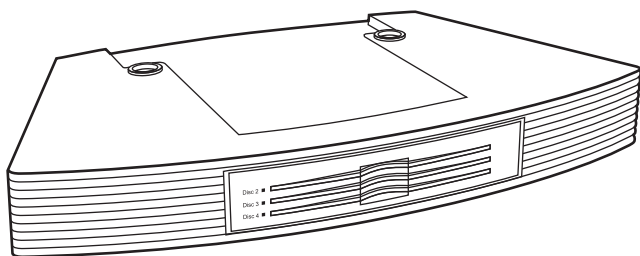

Wave® music system Multi-CD Changer

### Selecting a location for your system

Your Multi-CD Changer is designed to fit directly under your Wave® music system. Before you connect the Multi-CD Changer to the Wave® music system, select a good location for the complete system using the following guidelines.

- Place the system on a table or other flat surface.
- To enjoy maximum performance, place the system across the room from where you will be listening.
- Place the system within two feet of a wall, and avoid placing it directly in a corner.

**CAUTION:** DO NOT place your system on a heat-sensitive surface. Like all electrical equipment, it generates some heat.

 
**CAUTION:** DO NOT use your system in a damp location or any other place where moisture can get inside.

**Note:** DO NOT place your system on a metal surface. It could interfere with AM reception.

### Seating your Wave® music system on the Multi-CD Changer

With the changer placed in your chosen location, carefully set your Wave® music system on top of the changer.

- Make sure the rear feet of the Wave® music system fit into the recesses on top of the changer.
- Make sure the Wave® music system sits flat and the side edges of both units are aligned.

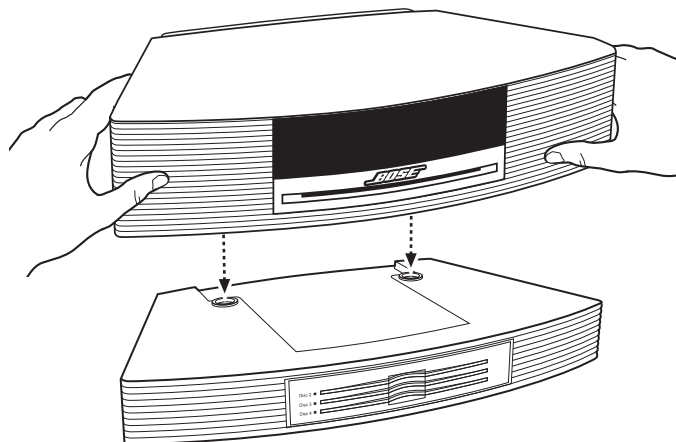

## Connecting the Multi-CD Changer to your Wave® music system

 
 
**Before you start this setup procedure, disconnect the AC power cord on your Wave® music system and set it aside. You will need to use it again in Step 3.**

1. Plug the Bose® link cable from the changer into the Bose® link connector on your Wave® music system.
2. Plug the changer power cord into the AC power input connector on the back of the Wave® music system.

3. Plug the AC power cord from the Wave® music system into the AC power input connector on the back of the changer.
4. Plug the other end of the AC power cord into an AC (mains) wall outlet.

**After applying power, “PLEASE WAIT” appears on the display for about 30 seconds while the system prepares itself for operation. DO NOT insert any discs until this message disappears.**

5. For best FM reception, straighten the AC power cord as much as possible. Your Wave® music system uses the power cord as an FM antenna.

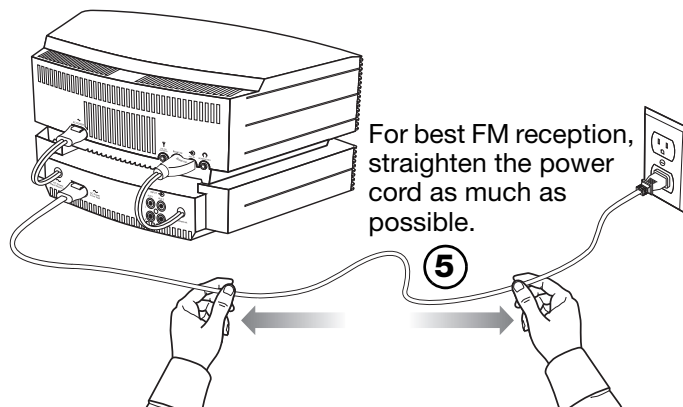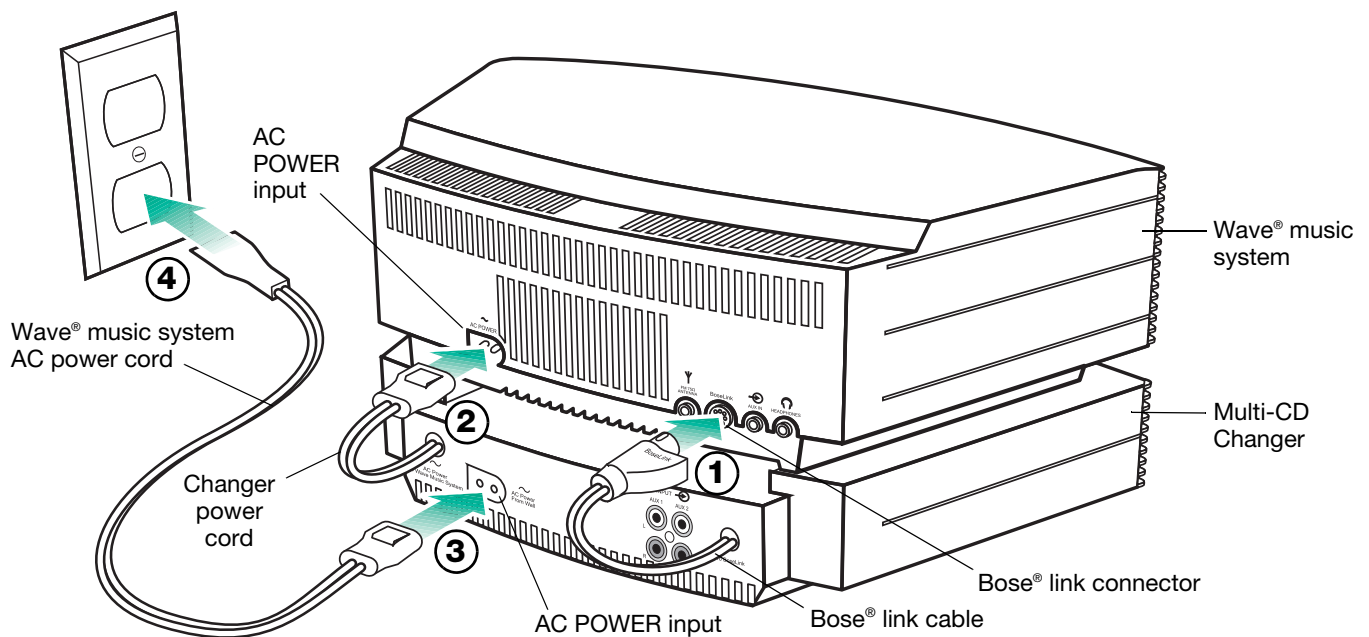

# OPERATION

## Remote control guide

Your Wave® music system remote will operate the Multi-CD Changer. Just aim the remote at the front panel and press the buttons. The remote normally works within 20 feet of the front panel.

The following diagram describes the buttons used for playing CDs using the disc changer.

**Note:** Press-and-hold operations require holding the button down for at least one second.

**Note:** Pressing **RADIO, CD, or AUX** automatically turns on the Wave® music system to the source selected.

The diagram shows a Bose remote control with the following buttons and callouts:

- Stop Alarm:** Power button.
- Mute:** Mute button.
- Radio:** Radio button.
- CD:** CD button.
- AUX:** AUX button.
- Sleep Buzzer:** Sleep Buzzer button.
- Volume:** Volume up/down buttons.
- Presets:** Presets 1-6 buttons.
- Seek / Track:** Seek / Track button.
- Play / Pause:** Play / Pause button.
- Stop / Eject:** Stop / Eject button.
- Tune / MP3:** Tune / MP3 buttons.
- Time:** Time buttons.
- Alarms:** Alarms 1-2 and Alarm Setup buttons.
- Play Mode:** Play Mode button.
- Menu:** Menu button.

**Seek/Track**

- *Press:* Skips to next/previous CD track on the current disc.
- *Press and hold:* Rapidly skips to next/previous CD track on the current disc.

**Tune/MP3**

- *Press:* Navigates between folders when playing MP3 CDs.
- *Press and hold:* Rapidly scans forward/backward through a CD track.

**Play Mode**

- Selects CD play modes (page 10).

**CD**

- *Press:* Selects the CD source (page 10).
- *Press again:* Moves to the next disc (page 10).

**AUX**

- Press to hear audio from an external source connected to either the AUX 1 or AUX 2 input on the changer (page 11).
- Press to switch between the AUX 1 and AUX 2 input (page 11).

**Stop/Eject**

- *Press once:* Stops playing the current CD (page 10).
- *Press again:* Ejects the stopped CD.
- *Press and hold:* Ejects a playing CD.

**Play/Pause**

- *Press:* Plays the current CD.
- *Press again:* Pauses a playing CD.



## Turning your multi-CD system on and off

Press **Power** once to turn your multi-CD Wave® music system on or off. The system turns on to the last source played. If the last source was CD, the last disc selected starts to play.



Press **Power** again to turn the system off.

Press **CD** to turn the system on to the CD source. The last disc selected will play.

 


## Loading and unloading discs

You can load and unload discs with the system on or off. If the system is off or in the CD source mode, the first disc loaded starts playing automatically. Disc slots are numbered 1 through 4. The Wave® music system has disc slot 1. The changer has disc slots 2, 3 and 4.


### Loading CDs into the Wave® music system (Disc 1)

Insert the disc, label side up, into the CD slot below the display. The disc player will automatically pull the disc in.

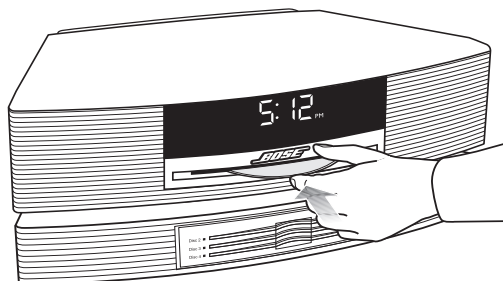

### Loading CDs into the Multi-CD Changer (Disc 2 - Disc 4)

 Insert a disc, label side up, into an empty slot. An empty slot is indicated by an unlit disc slot indicator. With your fingers on the outside edge of the disc, push the disc all the way into the slot.

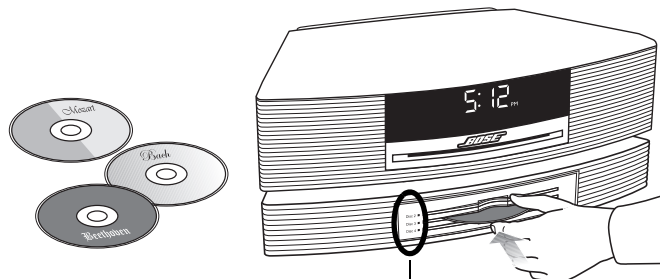

#### Disc slot indicators

- Off ..... Empty disc slot.
- Solid green ..... The current disc slot.
- Solid amber ..... The disc slot contains a CD, but it is not currently selected.

### Unloading discs

You can unload discs while the system is off or in the CD source mode. Press **Stop/Eject** on the remote control to eject the current disc. After removing the disc from its slot, the system moves to the next available disc which then can be ejected by pressing **Stop/Eject** again.

Stop / Eject



 
For more information on using the **Stop/Eject** key, see "Ejecting a CD" on page 10.

#### CAUTION:

- **DO NOT INSERT** mini CDs or non-circular CDs into any disc slot. These discs may not play properly and could interfere with the system's ability to eject them.
- **DO NOT INSERT** more than one disc at a time into any disc slot.
- Doing either of the above can cause damage to the disc and/or the disc slot.

## Playing CDs

With the Multi-CD Changer installed, your Wave® music system operates as a four-disc changer. Now, when you play CDs, all the normal CD information appears on the display with one addition – the selected CD slot number (d1, d2, d3, or d4) appears in the center of the display.

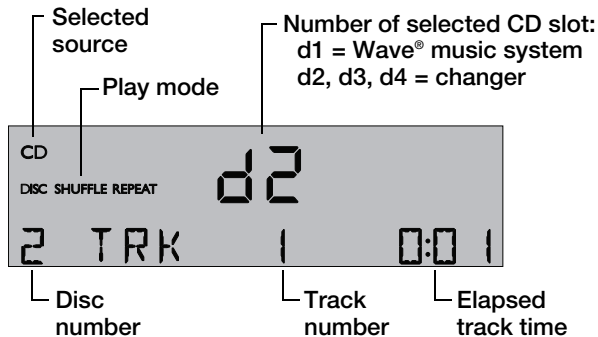

**Note:** When switching from the FM, AM, or AUX source to the CD source, the CD in the most recently used slot begins playing automatically. If that slot is empty, the next slot containing a CD is selected.

The following information describes functions related to the Multi-CD Changer. Refer to your Wave music system owner's guide for complete instructions on playing the selected CD.

### Moving to another CD

Press **CD** to move to the next CD slot. The CD number on the display tells you which CD slot is currently selected.



### Stopping a CD

Press **Stop/Eject** once to stop a playing CD.



### Ejecting a CD

Press **CD** on the remote to move to the CD you want to eject. Press **Stop/Eject** once to stop a playing CD and then, press again to eject the CD.



For more information on ejecting CDs, see "Unloading discs" on page 9.

## Changing Play Modes

While the Multi-CD changer is connected, the following play modes are available. The system plays continuously in all modes except SHUFFLE DISC for audio and MP3 CDs, and SHUFFLE FLDR for MP3 CDs only.

While playing a CD, press **Play Mode** repeatedly until the play mode you want is displayed.



### Play modes for audio CDs:

- **NORMAL PLAY** plays all CDs in order.
- **SHUFFLE** plays all tracks on the selected CD in random order, then moves to the next CD, again playing all tracks in random order.
- **SHUFFLE DISC** plays all tracks on the selected CD once in random order.
- **SHUFF RPT CD** repeats all tracks on the selected CD in random order.
- **REPEAT DISC** repeats all tracks on the selected CD in order.
- **REPEAT TRACK** repeats the selected track on the selected CD.

### Play modes for MP3 CDs:

- **NORMAL PLAY** plays all CDs in order.
- **SHUFFLE** plays all tracks on the selected CD in random order, then moves to the next CD, again playing all tracks in random order.
- **SHUFFLE DISC** plays all tracks on the selected CD once in random order.
- **SHUFF RPT CD** repeats all tracks on the selected CD in random order.
- **REPEAT DISC** repeats all tracks on the selected CD in order.
- **SHUFFLE FLDR** plays all tracks in the selected folder once in random order.
- **SHUFF RPT FDR** repeats all tracks in a folder in random order.
- **REPEAT FOLDR** repeats all tracks in a folder in order.
- **REPEAT TRACK** repeats the selected track on the selected CD.

**Note:** When operating the Wave® music system without the Multi-CD changer, you can select a music source in the setup menu to automatically play after a CD ends. Because the system plays continuously while the Multi-CD changer is connected, this option is not available.

 
## Connecting an external audio source

With the Multi-CD changer connected, any external audio devices you may have used with your Wave® music system can be connected to the back of the Multi-CD changer. However, you now need a dual RCA stereo cable.

The Wave® music system Multi-CD Changer provides two rear panel inputs (AUX 1 and AUX 2) for external audio devices such as TV, VCR, DVD player, cassette player, or MP3 player. This gives you the advantage of hearing Wave® music system sound from a range of sources.

To connect a device, connect one end of the cable to the audio output jacks of the source and the other end to one of the AUX inputs on the changer. Be sure to match the red and white plugs on the cable to the red (R) and white (L) AUX jacks on the changer.

### Connection example:

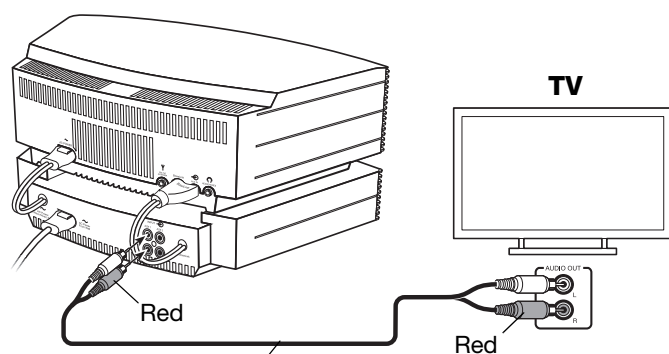

Dual RCA stereo cable

**Use only a stereo connection. You will not hear the connected device if just the left (L) or right (R) channel is connected.**

## Playing a connected audio source

To listen to a connected source:

1. Turn on the external device.
2. Press **AUX** on the Wave® music system remote control. Press **AUX** again to switch between the AUX 1 and AUX 2 inputs. AUX 1 or AUX 2 appears on the display to confirm your selection. AUX
3. Adjust the volume using the Wave® music system remote control.

---

**Note:** The Wave® music system remote control cannot turn a connected AUX device on or off, or change its settings or selections.

---



---

**Note:** Neither AUX 1 or AUX 2 can be selected as an alarm source.

---

## CARE AND MAINTENANCE

### Cleaning

Use only a soft dry cloth to clean your Wave® music multi-CD system. If necessary, you may use a soft-bristled attachment to gently vacuum across the front. Do not use any liquid cleaning solutions, solvents, chemicals, alcohol, ammonia, or abrasives.

**CAUTION:** Do not allow liquids to spill into any openings in the enclosure. If liquids get into the unit, turn it off immediately. Call Bose® Customer Support as soon as possible to arrange for service. See the list of phone numbers inside the back cover.

### Troubleshooting

Problem	What to do
The Wave music system is on but the changer does not operate.	<ul style="list-style-type: none"><li>• Check the power connections between the Wave® music system and the changer (page 7).</li></ul>
No sound or sound is muffled	<ul style="list-style-type: none"><li>• Make sure the Wave® Multi-CD Changer is plugged into a live power outlet and is turned on.</li><li>• Check the connections between the Wave® music system and the changer (page 7).</li><li>• If the AUX source is selected, check the connections from the AUX source to the changer and make sure the AUX device is turned on.</li><li>• Disconnect headphones.</li></ul>
No sound heard from the AUX device	<ul style="list-style-type: none"><li>• Make sure the RCA plugs on the stereo cable are pushed in as far as they can go.</li><li>• Press <b>AUX</b> on the remote and select the AUX input used by the device (AUX 1 or AUX 2).</li><li>• Make sure the AUX device is turned on.</li></ul>
CD skips	<ul style="list-style-type: none"><li>• Make sure the system is not getting bumped in its current location. If so, move it to a more protected location.</li><li>• Check the CD for smudges or dirt. If cleaning is necessary, wipe the CD straight out from the center (NOT in a circular motion) to clean it.</li></ul>
CD does not play	<ul style="list-style-type: none"><li>• Make sure there is a CD in the selected CD slot.</li><li>• Make sure CD is selected on the display of the Wave® music system .</li></ul>
A CD is playing, but none of the Multi-CD Changer LEDs are lit	<ul style="list-style-type: none"><li>• Check to see if the CD slot in the Wave® music system III is selected, instead of a slot in the Multi-CD Changer.</li></ul>

### Customer Support

For additional help in solving problems, contact Bose® Customer Support. Refer to the address list on the inside back cover of this guide.

### Limited warranty

#### Who is covered:

This warranty is extended only to the original end-use purchaser or the person receiving the product as a gift, and shall not be extended to any other person or transferee.

#### What is covered/For how long:

For a period of 1 year (2 years, European Union) from the date of retail purchase by the original end-use purchaser, Bose® warrants that this product, when delivered to you in new condition, in original packaging, from a Bose authorized reseller and used in normal conditions, is free from any defects in manufacturing, materials and workmanship.

#### What is not covered:

This warranty does not cover defects resulting from improper or unreasonable use or maintenance; failure to follow operating instructions; accident; excess moisture; insects; lightning; power surges; connections to improper voltage supply; unauthorized alteration or modification of original condition; damages caused by inadequate packing or shipping procedures; loss of, damage to or corruption of stored data; damages caused by use with non-Bose products; product that requires modification or adaptation to enable it to operate in any country other than the country for which it was designed, manufactured, approved and/or authorized, or repair of products damaged by these modifications; and products purchased from unauthorized dealers.

#### What we will do:

During the warranty period, we will, at our sole option, repair or replace (using new or refurbished replacement parts) any defective parts within a reasonable period of time and free of charge.

#### What we will not do:

Pay shipping, insurance or transportation charges from you to us, or any import fees, duties and taxes.

**What you must do to obtain  
Limited Warranty Service:**

Return product, with proof of purchase from an authorized Bose® dealer, using the following procedures:

1. Contact the Bose organization in your country/region (visit [Global.Bose.com](http://Global.Bose.com) for Bose contact information in your country/region) for specific return and shipping instructions;
2. Label and ship the product, freight prepaid, to the address provided by the Bose organization in your country; and
3. Place any necessary return authorization number prominently on the outside of the carton. Cartons not bearing a return authorization number, where required, will be refused.

**Other conditions:**

THE PROVISIONS OF THIS LIMITED WARRANTY ARE IN LIEU OF ANY OTHER WARRANTY, WHETHER EXPRESSED OR IMPLIED, WRITTEN OR ORAL, INCLUDING ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. BOSE CORPORATION'S MAXIMUM LIABILITY SHALL NOT EXCEED THE ACTUAL PURCHASE PRICE PAID BY YOU FOR THE PRODUCT. IN NO EVENT SHALL BOSE BE LIABLE FOR LOSS OF, DAMAGE TO OR CORRUPTION OF STORED DATA, OR FOR SPECIAL, INCIDENTAL, CONSEQUENTIAL, OR INDIRECT DAMAGES HOWSOEVER CAUSED INCLUDING WITHOUT LIMITATION THE REPLACEMENT OF EQUIPMENT AND PROPERTY, AND ANY COSTS OF RECOVERING, PROGRAMMING OR REPRODUCING ANY PROGRAM OR DATA STORED IN OR USED WITH YOUR BOSE PRODUCT. THIS WARRANTY IS VOID IF THE LABEL BEARING THE SERIAL NUMBER HAS BEEN REMOVED OR DEFACED.

**Other legal rights:**

This limited warranty gives you specific legal rights, and you also may have other rights that vary from state to state or country to country. Some places do not allow limitations on implied warranties or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

## Technical information

---

**Multi-CD Changer power rating**

120V~ 50/60 Hz, 80W

**Dimensions**

2.6"H x 14.5"W x 9.9"D  
(6.6 cm x 36.8 cm x 25.2 cm)

**Weight**

4.5 lb (2.04 kg)

**Color**

Graphite Gray or Platinum White



***BOSE***<sup>®</sup>  
*Better sound through research*<sup>®</sup>

2012 Bose Corporation, The Mountain,  
Framingham, MA 01701-9168 USA  
AM352348 Rev 00