

Breville

Microwave Oven

Instructions and Recipes
BMO100



Inspiration. Every day.™

Contents

| | Page |
|--|------|
| Breville recommends safety first | 4 |
| Know your Breville Microwave Oven | 10 |
| Operating your Breville Microwave Oven | 12 |
| Cleaning and Cleaning | 18 |
| Recipes | 20 |

A Breville microwave oven is the central focus, shown in a clean, white kitchen setting. The microwave is white with a digital display and a control panel on the right side. The control panel includes a digital display showing '8:8:8', a 'CLOCK' button, a 'MEMORY DEFROST' button, and a numeric keypad from 1 to 9, along with 'STOP/PAUSE' and 'START/POWER OFF' buttons. In the foreground, a white plate with a small bowl of food and a folded white napkin are visible on a white countertop. The background is a plain white wall.

Congratulations

on the purchase of your new Breville Microwave Oven

Breville recommends safety first

We at Breville are very safety conscious. We design and manufacture consumer products with the safety of you, our valued customer, foremost in mind. In addition we ask that you exercise a degree of care when using any electrical appliance and adhere to the following precautions:

IMPORTANT SAFEGUARDS FOR YOUR BREVILLE MICROWAVE OVEN

- Carefully read all instructions before operation and save for future reference.
- Remove and safely discard any packaging material and promotional labels before using the Breville Microwave for the first time.
- To eliminate a choking hazard for young children, remove and safely discard the protective cover that is fitted to the power plug of the Breville Microwave.
- Do not place the Breville Microwave Oven near the edge of a bench or table during operation. Ensure all surfaces are level, clean and free of water or any other substances.
- Do not place the Breville Microwave Oven on or near a hot gas or electric burner, or where it could touch a heated oven.
- When using the Breville Microwave Oven, provide adequate air space above and on all sides for air circulation (see page 6 Installation, point 4).
- Always operate the Breville Microwave Oven on a heat-resistant surface. Do not use on a cloth-covered surface, near curtains or other flammable materials.
- Do not use the Breville Microwave Oven on a metal surface, for example a sink drain board.
- Always ensure the Breville Microwave Oven is properly assembled before connecting to the power outlet and operating. Do not use the oven without the roller ring and glass turntable tray in place. Ensure the turntable tray is positioned correctly into the indents on the rotating shaft.
- The Breville Microwave Oven is not intended to be operated by means of an external timer or separate remote control system.
- Never use the Breville Microwave Oven without food or water in the oven cavity. Operating the Breville Microwave Oven when empty could cause damage to the appliance.
- Do not leave the Breville Microwave Oven unattended when in use.
- Do not touch hot surfaces. Allow the Breville Microwave Oven to cool before moving or cleaning any parts.
- Do not place or store anything on top of the Breville Microwave Oven.
- Always ensure the Breville Microwave Oven is turned off at the power outlet and the cord is unplugged from the power outlet before attempting to move the appliance, when not in use, if left unattended and before disassembling, cleaning or storing.
- Keep the appliance clean. Follow the cleaning instructions provided in this book (page 18).

Breville recommends safety first continued

IMPORTANT SAFETY INSTRUCTIONS – READ CAREFULLY AND KEEP FOR FUTURE REFERENCE



WARNING: DO NOT ATTEMPT TO OPERATE THE OVEN WITH THE DOOR OPEN SINCE OPEN-DOOR OPERATION CAN RESULT IN HARMFUL EXPOSURE TO MICROWAVE ENERGY. IT IS IMPORTANT NOT TO DEFEAT OR TAMPER WITH THE SAFETY INTERLOCKS.



WARNING: DO NOT PLACE ANY OBJECT BETWEEN THE OVEN FRONT FACE AND THE DOOR OR ALLOW SOIL OR CLEANER RESIDUE TO ACCUMULATE ON SEALING SURFACES.



WARNING: IF THE DOOR OR DOOR SEALS ARE DAMAGED, THE OVEN MUST NOT BE OPERATED UNTIL IT HAS BEEN REPAIRED BY A BREVILLE SERVICE CENTRE. IT IS PARTICULARLY IMPORTANT THAT THE OVEN DOOR CLOSES PROPERLY AND THAT THERE IS NO DAMAGE TO THE: (1) DOOR (BENT), (2) HINGES AND LATCHES (BROKEN OR LOOSENED), (3) DOOR SEALS AND SEALING SURFACES.



WARNING: IT IS HAZARDOUS FOR ANYONE OTHER THAN A BREVILLE SERVICE CENTRE TO CARRY OUT ANY SERVICE OR REPAIR OPERATION THAT INVOLVES THE REMOVAL OF A COVER WHICH GIVES PROTECTION AGAINST EXPOSURE TO MICROWAVE ENERGY.



WARNING: ONLY ALLOW CHILDREN TO USE THE OVEN WITHOUT SUPERVISION WHEN ADEQUATE INSTRUCTIONS HAVE BEEN GIVEN SO THAT THE CHILD IS ABLE TO USE THE OVEN IN A SAFE WAY AND UNDERSTANDS THE HAZARDS OF IMPROPER USE.



WARNING: DO NOT PUT ANY FOREIGN MATERIAL BETWEEN THE DOOR AND DOOR JAM OF THE BREVILLE MICROWAVE OVEN AS THIS COULD CAUSE EXCESSIVE LEAKAGE OF MICROWAVE ENERGY.

SPECIFICATIONS

Power Consumption: 230-240V, 50Hz, 1450W

Output: 900W

Outside Dimensions: 335mm (H) × 520mm (W)
× 430mm (D)

Oven Capacity: 25 Litres

Cooking Uniformity: Turntable System {Ø315m}

Net Weight: Approx. 14.1kg

These specifications may change without notice.

ADDENDUM

If the apparatus is not maintained in a good state of cleanliness, its surface could be degraded and affect the life span of the apparatus and lead to a dangerous situation.

Breville recommends safety first continued

SPECIAL SAFETY INSTRUCTIONS FOR YOUR MICROWAVE OVEN

- Wipe the oven cavity with a soft, damp cloth after each use. Leaving food residue, grease or fat in the cavity could cause the oven cavity to overheat and may cause the Breville Microwave Oven to smoke or catch fire.
- The Breville Microwave Oven should be cleaned regularly and any food residue or splattering should be removed. Failure to maintain the Breville Microwave Oven in a clean condition could lead to deterioration of the surface, adversely affecting the life of the appliance and possibly resulting in a hazardous situation
- If the door seals or any part of the Breville Microwave Oven are damaged, the Breville Microwave Oven must not be operated until it has been inspected and/or repaired at an authorised Breville Service Centre.
- Ensure all food containers and/or plates are suitable for use in the Breville Microwave Oven. This should be done prior to preparing food for heating or cooking in the Breville Microwave Oven. Monitor foods and liquids heating or cooking in the Breville Microwave Oven at all times due to the possibility of containers igniting.
- Containers or plates suitable for use in the Breville Microwave Oven should not exceed the width of the glass turntable tray as this may impede the rotation of the tray and result in food being unevenly cooked.
- Liquids or other foods must not be heated in sealed containers since they are liable to explode.
- Some containers and/or plates may appear suitable for use in the Breville Microwave Oven but may be coated in a glaze that will absorb the microwave energy, overheat and cause the container to crack. The glaze may also prevent the food from heating/cooking.
- Food and/or liquids should not be heated or cooked directly on the turntable tray. Food and/or liquids must be placed into a suitable microwave-proof container before placing onto the turntable tray.
- Food and/or liquids should not be heated or cooked in plastic or paper containers or bags, unless specified as suitable for use by the manufacturer, due to the possibility of containers exploding or igniting. Metal clips or twists should be removed from packaging as these could cause sparking and/or fire.
- Do not use recycled paper or kitchen paper towelling when cooking. Recycled paper may contain small metal or other impurities which could cause sparking and/or fire.
- Do not use metal containers or utensils in the Breville Microwave Oven as these could cause sparking and/or fire.
- Food grade foil wrapping may be used in a single layer to mask portion of the food to be cooked and should not extend past the edge of the glass turntable tray. Food grade foil should not be used in layers or fully cover the food as this could cause sparking and/or fire. Food grade foil should not be used to cover any part of the glass turntable tray.
- Ensure that lids and caps covering containers are removed prior to placing liquids and/or foods into the Breville Microwave Oven.
- Feeding bottles and baby food jars should have the lids and caps removed before warming or heating in the Breville Microwave Oven. To avoid burns or scalding after heating, the contents should be stirred or shaken and the temperature checked before serving.

Breville recommends safety first continued

- Always ensure the temperature of food or drink which has been heated or cooked in the Breville Microwave Oven has been tested before eating, drinking or serving to others, especially children, disabled or elderly people.
- The heating of liquids and beverages in the Breville Microwave Oven can result in delayed eruptive boiling. Care must be taken when handling any containers containing hot liquids or beverages.
- Do not heat popcorn in the Breville Microwave Oven unless it has been commercially packaged for microwave use. There may be a number of un-popped kernels that may overcook and burn when popping popcorn. Do not use oil unless recommended by the manufacturer. Do not pop popcorn longer than the manufacturer's instructions (popping time should not exceed 3 minutes). Longer cooking could cause scorching or fire.
- Do not cook any food surrounded by a membrane (such as potatoes, chicken liver, egg yolks, oysters, etc) without first piercing the membrane several times with a fork.
- Fresh eggs in the shell and whole hard-boiled eggs should not be cooked or heated in the Breville Microwave Oven as they may explode during cooking, at the end of cooking or after removing from the Breville Microwave Oven.
- Do not heat oil or fat for shallow or deep frying in the Breville Microwave Oven. Doing so may cause the Breville Microwave Oven and/or the oil to overheat and/or ignite.
- If any smoke is observed, switch off and unplug the Breville Microwave Oven at the power outlet. Keep the door closed to stifle any flames.
- Do not attempt to operate the Breville Microwave Oven by any method other than those described in this book.
- Do not disconnect the Breville Microwave Oven from the power supply by pulling on the cord to unplug from the power outlet.
- When storing the Breville Microwave Oven, loosely wind the cord. Do not wrap the cord around the Breville Microwave Oven.

Breville recommends safety first continued

IMPORTANT SAFEGUARDS FOR ALL ELECTRICAL APPLIANCES

- Unwind the cord fully before use.
- To protect against electric shock do not immerse the power cord, power plug or appliance in water or any other liquid.
- Do not let the cord hang over the edge of a bench or table, touch hot surfaces or become knotted.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure they do not play with the appliance.
- This appliance is for household use only. Do not use this appliance for anything other than its intended use. Do not use in moving vehicles or boats. Do not use outdoors.
- It is recommended to regularly inspect the appliance. Do not use the appliance if power supply cord, plug or appliance becomes damaged in any way. Return the entire appliance to the nearest authorized Breville Service Centre for examination and/or repair.
- Any maintenance, other than cleaning, should be performed at an authorized Breville Service Centre.
- The installation of a residual current device (safety switch) is recommended to provide additional safety protection when using electrical appliances. It is advisable that a safety switch with a rated residual operating current not exceeding 30mA be installed in the electrical circuit supplying the appliance. See your electrician for professional advice.




CAUTION: SURFACES MAY BE HOT DURING AND AFTER USE.

Know your Breville Microwave Oven



1. Door latch – prevents the microwave oven from operating when the door is open
2. Door seal – keeps microwave energy within the microwave oven cavity and prevents microwave leakage
3. Door safety lock – prevents unsupervised operation by young children
4. Microwave oven cavity – where food is placed inside the microwave oven
5. Splatter shield – protects the microwave energy outlet from splattering foods
6. Glass turntable tray – made of heat resistant glass. The turntable tray must always be in position prior to use and food should not be cooked directly on the tray
7. Roller ring – supports the glass turntable tray during rotation
8. Microwave oven window – allows the user to see through the door while food is cooking
9. Oven cavity light – to observe food when heating or cooking
10. Oven air vent – allows air to move freely through the microwave oven
11. Indented Shaft – supports and rotates the glass turntable tray
12. Control panel – user access panel for programming the microwave oven
13. Door release handle – opens the door and stops the microwave oven from operating

Know your Breville Microwave Oven continued

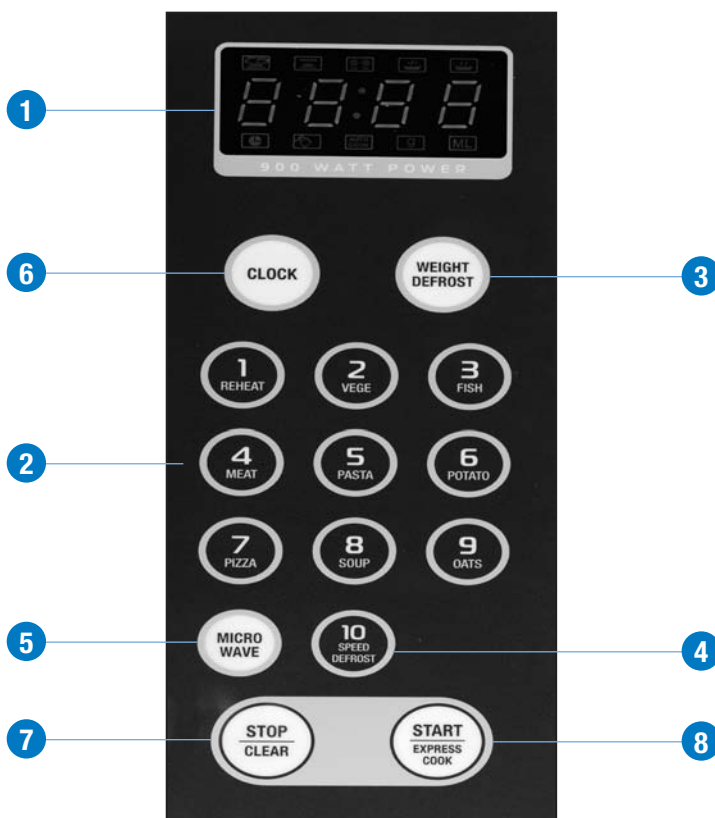

1. LED DISPLAY SCREEN – shows selected cooking time, power, symbols and time-of-day
2. NUMBER PADS (1-10) – Press individual pads to set clock time, cooking time or weight
3. WEIGHT DEFROST – Use to defrost frozen meat, poultry and seafood by weight. The defrosting time and power level are automatically set once the food category and the weight are programmed
4. SPEED DEFROST – Press to set defrosting time; the oven automatically divides the defrosting time into periods of alternating defrosting and standing times by cycling on and off
5. MICROWAVE – Use to set the power level. To check selected power level during time cooking, press 'MICROWAVE' pad
6. CLOCK – Press to set the time-of-day or recall the time-of-day display. The time-of-day will be displayed at all times except when the oven is operating. In the event of a power failure or if the microwave oven is unplugged, the clock will have to be reset
7. STOP/CLEAR – Press to cancel the selected power level, cook or defrost times that previously programmed. The time-of-day clock cannot be cancelled by pressing the 'CANCEL' pad
8. START/EXPRESS COOK – Press to start the cooking or defrosting functions. The cooking symbol will appear on the display and the interior oven light will turn on, the interior fan will operate and the turntable will rotate

Operating your Breville Microwave Oven

BEFORE FIRST USE

Remove and safely discard any packaging material and labels before using the Breville Microwave Oven for the first time. Carefully unpack the Breville Microwave Oven and keep all the packing material until all the parts of the Breville Microwave Oven have been found and the appliance has been assembled.

To remove any dust that may have accumulated during packing, wash the roller ring and glass turntable tray in warm soapy water, rinse in clean water then dry thoroughly. Wipe the interior and exterior of the Breville Microwave Oven with a soft, damp cloth then dry thoroughly.

Installation

1. Make sure that all the packing materials are removed from the inside of the door.
2. This microwave oven must be placed on a flat, stable surface to hold its weight and the heaviest food likely to be cooked in the oven.
3. Do not place the oven where heat, moisture or high humidity are generated, or near combustible materials.
4. For correct operation, the oven must have sufficient airflow. Allow 20cm of space above the oven, 10cm at back and 5cm

at both sides. Do not cover or block any openings on the appliance. Do not remove feet. This microwave oven must not be placed in a cabinet

5. Do not operate the oven without glass tray, roller support, and shaft in their proper positions.
6. Make sure that the power supply cord is undamaged and does not run under the oven or over any hot or sharp surface.
7. The power outlet must be readily accessible so that the oven can be easily unplugged in an emergency.
8. Do not use the oven outdoors.

Assembling the glass turntable tray

1. Place the Roller Ring into position in the indented space in the oven cavity base.
2. Insert the Glass Turntable Tray into position, matching the indents on the base of the Glass Turntable Tray with the indents in the shaft located in the centre of the oven cavity base.



WARNING: CHECK THE OVEN FOR ANY DAMAGE, SUCH AS MISALIGNED OR BENT DOOR, DAMAGED DOOR SEALS AND SEALING SURFACE, BROKEN OR LOOSE DOOR HINGES AND LATCHES AND DENTS INSIDE THE CAVITY OR ON THE DOOR. IF THERE IS ANY DAMAGE, DO NOT OPERATE THE OVEN AND CONTACT A BREVILLE SERVICE CENTRE.



WARNING: DO NOT IMMERSE THE MICROWAVE OVEN, POWER CORD OR PLUG IN WATER OR ANY OTHER LIQUID.

Operating your Breville Microwave Oven continued

Setting the clock

When power is activated, the LED will display '0:00'. The input time should be within 0:00-23:59.

Example: To set 12:12.

1. Press the 'CLOCK' button, the hour figures will flash, and the indicator for clock will light.
2. Press the number buttons of '1', '2', '1', '2' in order.
3. Press 'CLOCK' to finish clock setting. The indicator for clock will go out, ':' will flash, and the time will illuminate.

In the process of clock setting, if 'STOP/CLEAR' is pressed or if there is no operation within 1 minute, the oven will go back to the previous status automatically.

Note

Number pad '10' is used as '0' for programming time.

Note

Operating your Breville Microwave Oven continued

MICROWAVE COOKING

Select different microwave power levels and set cooking time as you wish. There are five power levels available for choosing. The maximum microwave cooking time is 99 minutes and 99 seconds. Keep on pressing 'MICROWAVE' to choose the power wished.

Microwave power levels

| PRESS 'MICROWAVE' | MICROWAVE POWER | DISPLAY |
|-------------------|-----------------|---------|
| 1 time | 100% | P 100 |
| 2 times | 80% | P 80 |
| 3 times | 50% | P 50 |
| 4 times | 30% | P 30 |
| 5 times | 10% | P 10 |

Example: Choose 50% power for cooking 10 minutes:

1. Press 'MICROWAVE' three times.
2. Press the numeral buttons of '1', '0', '0', '0' in order.
3. Press 'START/EXPRESS COOK' to start cooking, and time will count down.

Speedy cooking

When the unit is in waiting state, press 'START/EXPRESS COOK' to start cooking at 30 seconds with 100% microwave power. Each additional press will increase the cooking time by 30 seconds until the accrued time reaches 1 minute 30 seconds or less. By then, each press will increase cooking time by 1 minute, the maximum cooking time is 12 minutes.

Example: Set 3 minutes speedy cooking:

1. Press 'START/EXPRESS COOK' once to start cooking, LED will display '0:30'.
2. Press 'START/EXPRESS COOK' again for 5 times, and the cooking time will be 3 minutes.

Defrost by weight

Example: Defrost beef of 500g:

1. Press 'WEIGHT DEFROST', LED will display 'dEF1'.
2. Press '5', '0', '0' in order, 'g' will light, the range of defrosting weight is 100g-2000g.
3. Press 'START/EXPRESS COOK' to start defrosting, 'g' will go out, time will be displayed and countdown will start.

Speed defrost

Example: Defrost beef of 500g:

1. Press 'SPEED DEFROST', LED displays 'dEF2'.
2. Press '5', '0', '0' in order, 'g' will light, the range of defrosting weight is 100g-1200g.
3. Press 'START/EXPRESS COOK' to start defrosting, 'g' will go out, time will be displayed and countdown will start.

Operating your Breville Microwave Oven continued

Auto menu cooking

The numeral pads 1-9 match with nine different subjects respectively:

| PAD | DISPLAY | COOK |
|-----|---------|-------------|
| 1 | A1 | Auto Reheat |
| 2 | A2 | Vegetable |
| 3 | A3 | Fish |
| 4 | A4 | Meat |
| 5 | A5 | Pasta |
| 6 | A6 | Potato |
| 7 | A7 | Pizza |
| 8 | A8 | Soup |
| 9 | A9 | Porridge |

Example: Cook vegetable of 350g:

1. Press 'VEGETABLE' button.
2. Press 'VEGETABLE' button twice to choose weight, LED will display '350' and 'g'.
3. Press 'START' to start cooking, 'g' will go out, and 4:00 time will count down.

Operating your Breville Microwave Oven continued

| MENU | WEIGHT (G) | PRESS TIMES | DISPLAY |
|-----------------|-----------------------------|-------------|---------|
| A-1 Auto Reheat | 150 | 1 time | 150 |
| | 250 | 2 times | 250 |
| | 350 | 3 times | 350 |
| | 400 | 4 times | 400 |
| A-2 Vegetable | 150 | 1 time | 150 |
| | 350 | 2 times | 350 |
| | 500 | 3 times | 500 |
| A-3 Fish | 150 | 1 time | 150 |
| | 250 | 2 times | 250 |
| | 350 | 3 times | 350 |
| | 400 | 4 times | 400 |
| | 450 | 5 times | 450 |
| A-4 Meat | 150 | 1 time | 150 |
| | 300 | 2 times | 300 |
| | 450 | 3 times | 450 |
| | 600 | 4 times | 600 |
| A-5 Pasta | 50 (with cold water 450g) | 1 time | 50 |
| | 100 (with cold water 800g) | 2 times | 100 |
| | 150 (with cold water 1200g) | 3 times | 150 |
| A-6 Potato | 1 (approx. 200g) | 1 time | 1 |
| | 2 (approx. 400g) | 2 times | 2 |
| | 3 (approx. 600g) | 3 times | 3 |
| A-7 Pizza | 1 (approx. 80g) | 1 time | 1 |
| | 2 (approx. 160g) | 2 times | 2 |
| | 3 (approx. 250g) | 3 times | 3 |
| A-8 Soup | 500 | 1 time | 500 |
| | 750 | 2 times | 750 |
| | 1000 | 3 times | 1000 |
| A-9 Porridge | 550 | 1 time | 550 |
| | 1100 | 2 times | 1100 |

Operating your Breville Microwave Oven continued

Inquiring function

1. In one stage cooking state, press 'MICROWAVE', and the current microwave power will be displayed for 3 seconds. After three seconds, the oven will turn back to the former state.
2. In cooking state, press 'CLOCK' to display the current time. Time will flash in the LED for 2-3 seconds, and the oven will return back to the cooking state.

Multi-section cooking

At most 2 sections can be selected for cooking. In multi-section cooking, if one section is defrosting, then defrosting shall be placed in the first section.

Auto cooking cannot work in the multi-section cooking.


Note

Example: If you want to cook the food with 100% microwave power for 10 minutes + 80% microwave power for 15 minutes. Do it as following:

1. Press 'MICROWAVE' once to choose 100% microwave power.
2. Press number keys '1', '0', '0', '0' in order to adjust the cooking time.
3. Press 'MICROWAVE' twice to choose 80% microwave power.
4. Press number keys '1', '5', '0', '0' in order to adjust the cooking time.
5. Press 'START/EXPRESS COOK' to start cooking.

Setting the door safety lock

The safety lock prevents unsupervised operation by young children. While in lock mode, the door can be opened, however the microwave cannot be turned on.

1. To set, press and hold 'STOP/CLEAR' pad for 3 seconds. There will be a long 'beep' denoting unit is entering the children-lock state and a  will be displayed.
2. To unlock, press and hold 'STOP/CLEAR' pad for 3 seconds, and there will be a long 'beep' denoting that the lock is released.

Cooking end reminding function

When cooking ends, there will be 5 'beeps' which denotes completion of cooking.

Display specification

1. In waiting state, LED will display clock and ':' will flash.
2. In function setting state, LED will display the related setting.
3. In the operation and suspending state, LED will display the residual cooking time.

Operating your Breville Microwave Oven continued

HINTS & TIPS FOR MICROWAVE COOKING

- Foods that are high in liquid, fat and sugar cook well in the Breville Microwave Oven.
- Drier foods require shorter cooking time.
- Always arrange food carefully. Place the thickest areas towards the outside of the dish.
- Place smaller items, such as 1-cup drinks, towards the outer edge of the glass turntable tray.
- Place larger items, such as chicken or cake, in the centre of the glass turntable tray.
- Larger items, such as chicken or cake, should be raised on a microwave-safe rack for more even cooking.
- Pay close attention to the cooking time. Cook for the shortest amount of time indicated and add more time as needed. Food that is severely overcooked can smoke or ignite.
- Cover foods loosely with vented lids or microwave safe plastic wrap while heating or cooking. Covering foods prevent splattering and helps foods cook evenly.
- Turn foods over once during microwaving to speed cooking of such foods as chicken and hamburgers. Large items like roasts must be turned over at least once.
- Rearrange foods such as meatballs halfway through cooking both from top to bottom and from the centre of the dish to the outside.

MICROWAVE UTENSILS

- Containers, plates, dishes, etc. used in the Breville Microwave Oven should always be microwave-safe. Check if stated on the underside of the utensil or contact the manufacturer.
- To test if a container, plate or dish is microwave-safe, place it into the microwave oven with 1 cup of cold water (in a microwave-safe cup) and heat on High (100%) Power for 1 minute. If the container is hot and the water is cold, the container is not suitable for microwave oven use. If the container is cold and the water is hot, then the container is suitable for microwave oven use.
- Metal containers and utensils should not be used in the Breville Microwave Oven.

Care and Cleaning

CARE & CLEANING

- Switch off the microwave oven at the power outlet and remove the plug from the power outlet before cleaning.
- Keep the inside of the oven clean. When food splatters or spilled liquids adhere to oven walls, wipe with a damp cloth. Mild detergent may be used if the oven gets very dirty. Avoid the use of spray and other harsh cleaners as they may stain, streak or dull the door surface.
- The outside surfaces should be cleaned with a damp cloth. To prevent damage to the operating parts inside the oven, water should not be allowed to seep into the ventilation openings.
- Wipe the door and window on both sides of the door seals and adjacent parts frequently with a damp cloth to remove any spills or splatters. Do not use abrasive cleaner.
- Do not allow the control panel to become wet. Clean with a soft, damp cloth. When cleaning the control panel, leave oven door open to prevent oven from accidentally turning on.
- If steam accumulates inside or around the outside of the oven door, wipe with a soft dry cloth. This may occur when cooking foods high in moisture or if the microwave oven is operated under high humidity conditions, this is normal.
- It is occasionally necessary to remove the glass turntable tray for cleaning. Wash the tray in warm sudsy water, rinse in clean water and dry thoroughly.
- The roller ring and oven floor should be cleaned regularly to ensure the turntable tray rotates correctly and avoid excessive noise. Simply wipe the bottom surface of the oven with a soft damp cloth. The roller ring may be washed in mild sudsy water, rinse in clean

water and dry thoroughly. When removing the roller ring from cavity floor for cleaning, be sure to replace in the proper position.

- Remove odours from your oven by combining a cup of water with the juice of one lemon in a deep microwave-safe bowl, microwave on High (100%) for 5 minutes. Wipe the oven cavity thoroughly and dry with a soft cloth.
- When it becomes necessary to replace the oven light, please consult your Breville Service Centre to have it replaced.
- Please do not dispose this appliance with domestic rubbish; it should be taken to the appropriate disposal centre provided by the local council municipalities.

BEFORE YOU CALL FOR SERVICE

- Check to ensure that the oven is plugged in securely. If it is not, remove the plug from the power outlet, wait 10 seconds and plug it in again securely.
- Check for a blown circuit fuse or a tripped main circuit breaker. If these seem to be operating properly, test the power outlet with another appliance.
- Check to ensure that the control panel is programmed correctly and the timer is set.
- Check to ensure that the door is securely closed engaging the door safety lock system. Otherwise, the microwave energy will not flow into the oven.

If none of the above rectify the situation, then contact your Breville Service Centre. Do NOT try to adjust or repair the oven yourself.

Note

Notes

Breville

Breville is a registered trademark of Breville Pty. Ltd.

ABN 98 000 092 928

Breville Customer Service Centre Australian Customers

Breville Customer Service Centre

PO Box 22

Botany NSW 2019

AUSTRALIA

Customer Service: 1300 139 798

Fax (02) 9384 9601

Email Customer Service: askus@breville.com.au

New Zealand Customers

Breville Customer Service Centre

Private Bag 94411

Greenmount

Auckland, New Zealand

Customer Service: 0800 273 845

Fax 0800 288 513

Email Customer Service: askus@breville.com.au



www.breville.com.au

© Copyright. Breville Pty. Ltd. 2008

Due to continual improvements in design or otherwise, the product you purchase may differ slightly from the one illustrated in this booklet.

Model: BMO100 Issue 1/08