
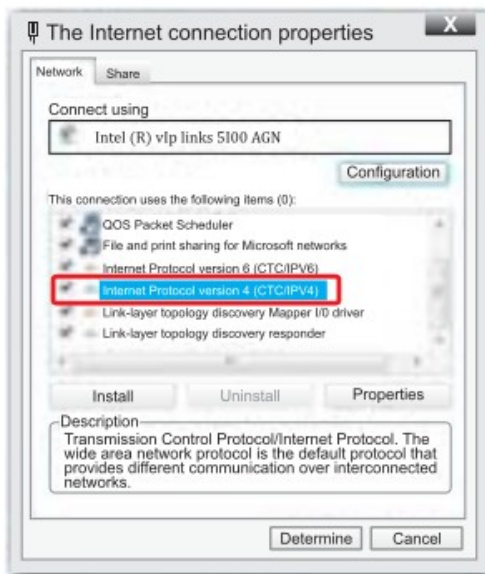


# 1. Use the following procedure to set

## Windows 7 The WINDOWS 7 system is set according to the following steps

- 1 click "start" --control panel--internet and The network and Sharing Center--Change adapter settings --"Wireless network link"-- Right click "Wireless network link"-- choose "Properties".
- 2 double click" Internet Protocol version 4(TCP/IPv4) " .


- 3 Setting the computer IP address is 192. 168. 0. X (X taken between from 2 to 255 as Integer)A mask is 255. 255. 255. 0. click "entry". back to previous page.

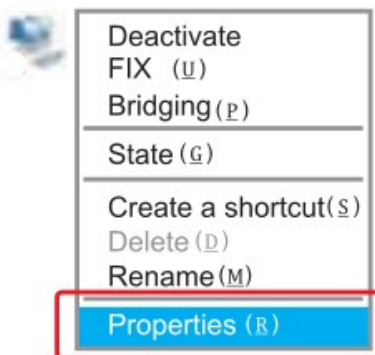


Kindly please setting up backups for the original IP address before making any changes

## Windows XP windows 2000 or Windows XP system is set according to the following steps

- 1 choose the "network neighborhood" right click, choose "properties".

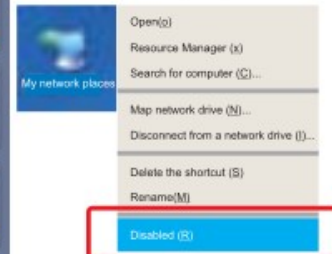

- 2 Choose "local connection", choose "Properties".

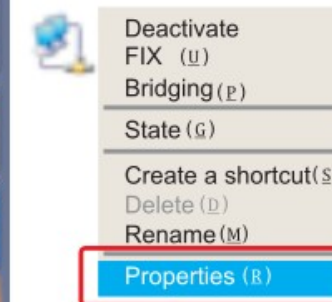


- 3 double click Internet Protocol version (TCP/IP) " .




Kindly please setting up backups for the original IP address before making any changes

- 4 Setting the computer IP address is 192. 168. 0. X (X taken between from 2 to 255 as Integer)A mask is 255. 255. 255. 0. click "entry". back to previous page.

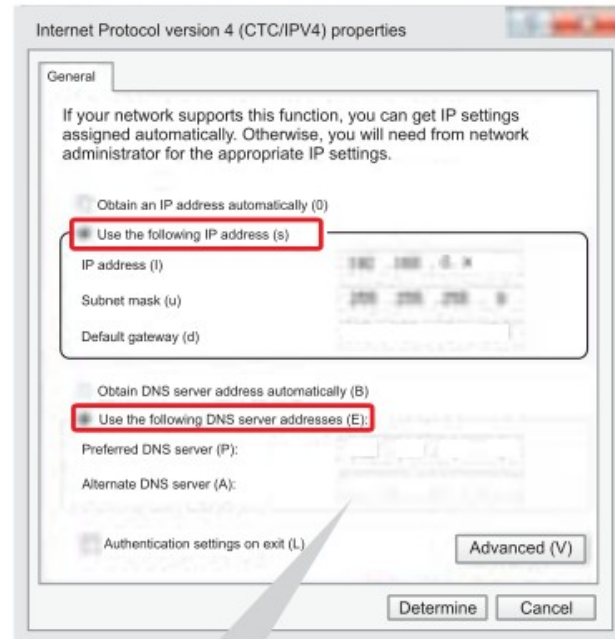

## 2. Two, the wireless network connection

**Windows 7** The WINDOWS 7 system is set according to the following steps

- 1 Network Adapter after the installation is complete, and you will see  icon. click it.




- 2 In the pop-up list, select the network that you want to "connect" to a wireless network. And click on a link.



- 3 When the picture shows that the computer is connected to a wireless network when "connected".



**Windows XP** Windows 2000 or Windows XP system is set according to the following steps

- 1 Network card installation when the WAN is complete. You can see  click it



- 2 In the pop-up list, double-click the network that you want to connect to a wireless network.




- 3 When the entry appears in the upper right corner of the network status window, indicate that the computer has successfully "connected" to a wireless network.



# 3. to set up a router

1 Set the network cable into the network connector.

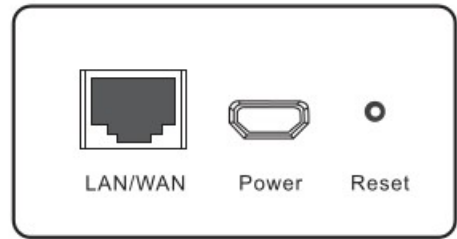


2 Connect to the wireless touter by "typing http:// 192.168.0.1" in the address field of your browser . and ten press ENTER a login window displays. Tips: "enter admin for the router user name" and your password (or thedeault, password) configuring basic connectivity




3 Into user manual



4 Choose a wireless network setting that next you need to do.

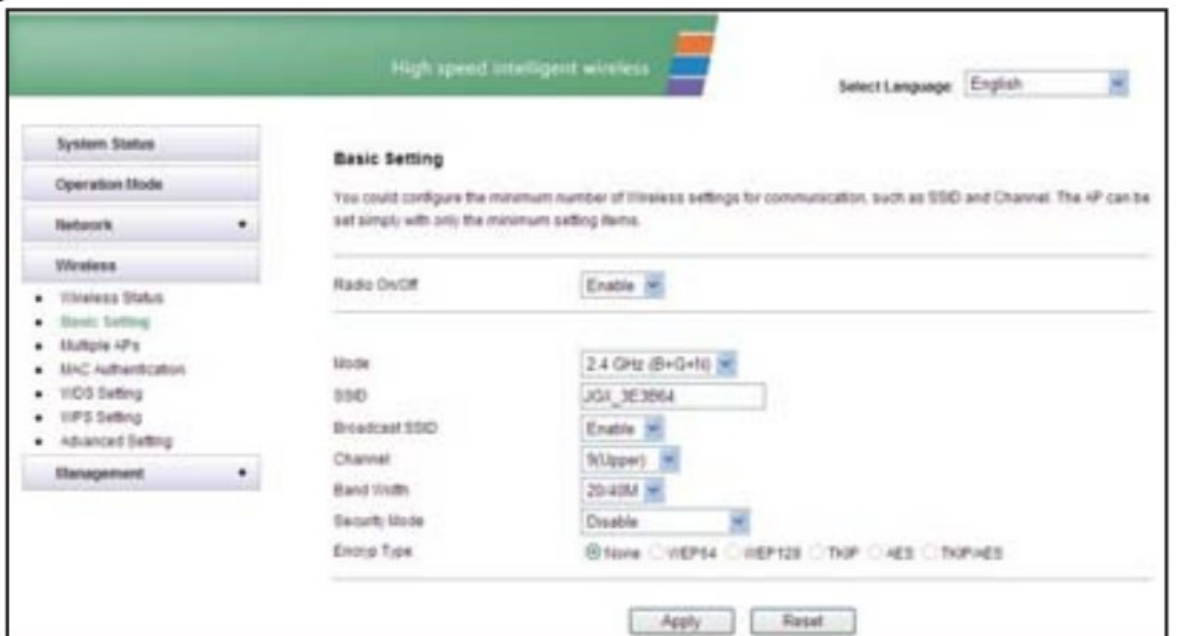

5 you change the SSID and set a password for your wireless network

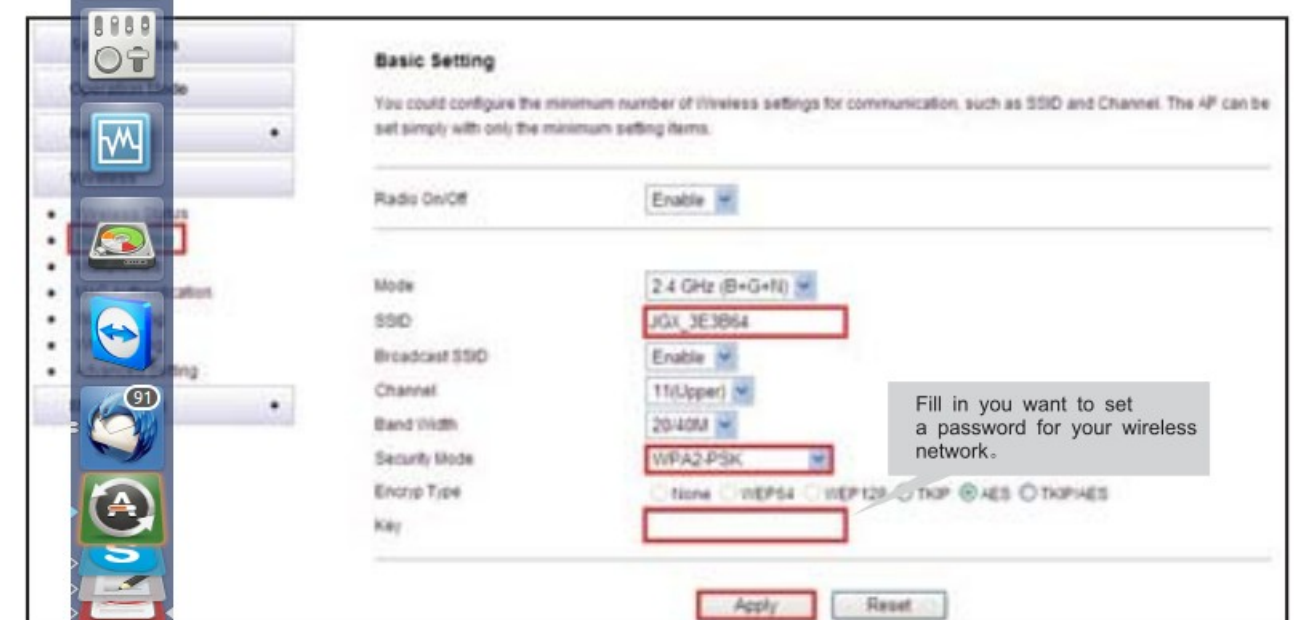


# 4 reset computer

Follow the steps of 1 set computer IP address is changed to "Obtain an IP address automatically"


## Windows 7 The WINDOWS 7 system is set according to the following steps

Follow the section1 Choose obtain an "IP address automatically" And the "DNC server address automatically". Press entry .

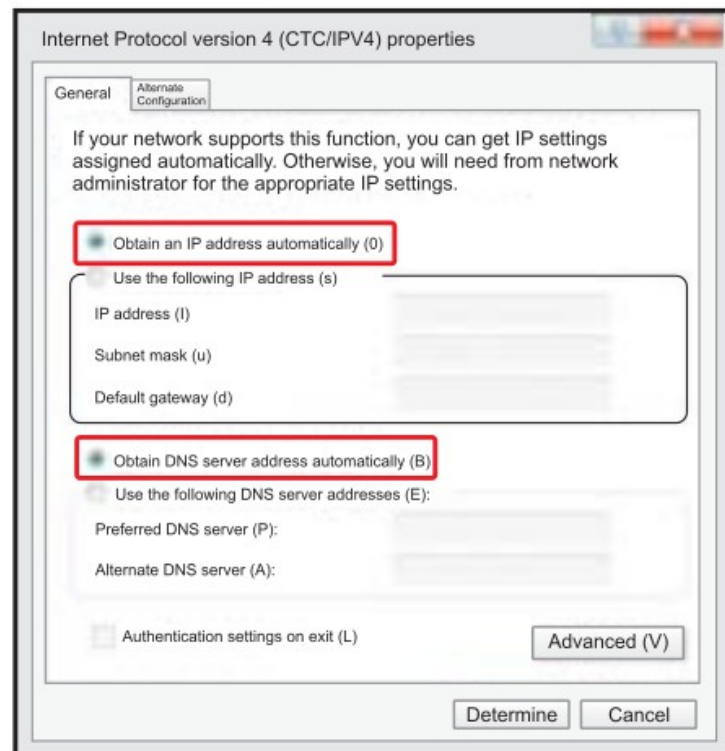

## Windows windows 2000 or Windows XP system is set according to the following steps

Follow the section1 Choose obtain an "IP address automatically" And the "DNC server address automatically". Press entry .

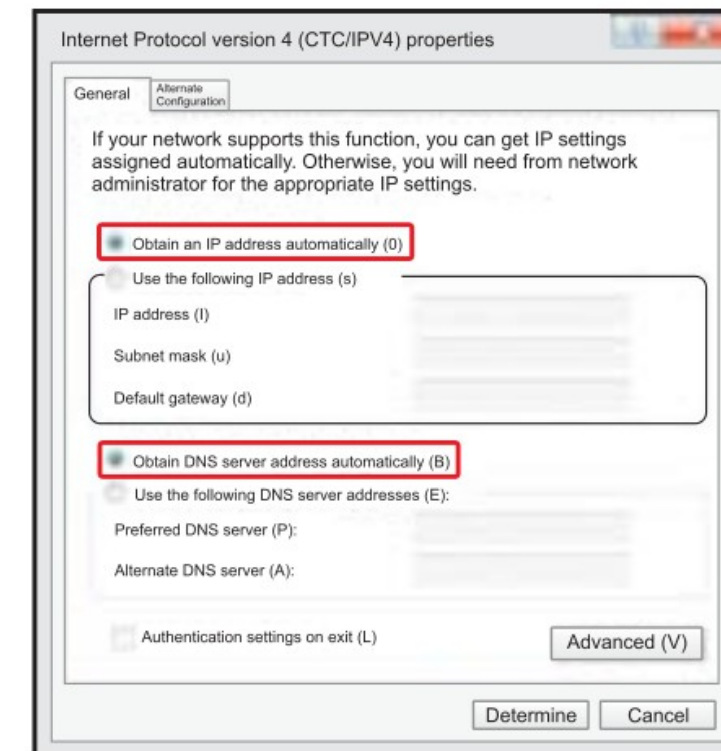

## FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.