



ATP7658

EXCELLENT 8 4.0



User Manual

CONTENTS

1.	Welcome	3
2.	Important notices	3
3.	Keys and functions	4
4.	Getting started	5
	4.1. Connect to your computer	5
	4.2. Turn on / off	5
	4.2.1. Turn on	5
	4.2.2. Turn off	
	4.3. Lock / unlock the screen (sleep mode)	5
5.	Your homescreen	6
	5.1. Change wallpaper for homescreen	7
	5.2. Add / delete applications from the homescreen	7
	5.3. Add widgets from the homescherm	7
6.	Network connection	7
	6.1. Wi-fi	7
	6.1.1. Turn on Wi-fi	8
	6.1.2. Turn off Wi-fi	8
	6.1.3. Add a Wi-fi network manually	8
	6.2. 3G-netwerk	8
7.	Internet Browsing	8
8.	Install and manage Apps	10
	8.1. Install Apps	10
	8.2. Manage Apps	10
	8.3. Market	11
9.	Multi-media Functions	11
	9.1. Music	11
	9.2. Video	12
	9.2.1. Video Player	12
	9.2.2. HDMI Output	12
	9.3. Gallery	13
	9.4. Camera	13
	9.5. E-book reader	14
	9.6. E-mail	15
10.	Settings	20
	10.1. Wireless and networks	20
	10.2. Device	20
	10.3. Personal	20
	10.4. System	20
11.	Explorer	21
12.	Battery	22
13.	Troubleshooting	23

1. WELCOME

Thank you for purchasing this Excellent 8 tablet.

This tablet offers total convenience for your business (supports Word, Excel, send & receive e-mails...) and personal entertainment needs (chatting, movie playback, e-books etc.).

Running on **Android 4.0** and with a highly responsive capacitive touch screen, it will bring you a wonderful user experience.

Before you begin, please read this User Manual carefully.

2. IMPORTANT NOTICES

 
- Your tablet's battery will reach optimum performance after you have fully charged and discharged the tablet 2-3 times.
- Excessive use of earphones at high volumes may cause hearing impairment.
- Adjust the volume of the player to a moderate level and limit earphone usage.
- Do not suddenly disconnect the tablet when formatting or uploading and downloading, this can lead to program errors.
- Do not dismantle the tablet by yourself, and do not use alcohol, thinner or benzene to clean its surface.
- Do not use the tablet while driving or walking.
- The tablet is not moisture/water-resistant. Please do not use it in a damp environment.
- Do not drop the tablet or slam it down on a hard surface as this may damage the screen.

3. KEYS AND FUNCTIONS

Front view

Side view

Backside view

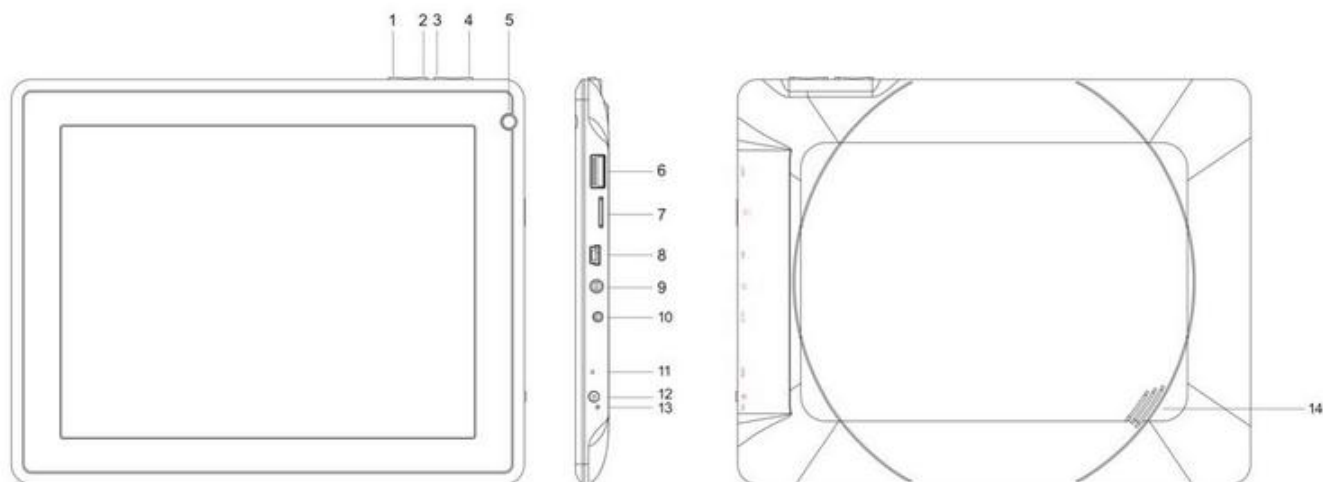

1. Vol- key	Press to decrease the volume
2. Vol+ key	Press to increase the volume
3. Menu key	Tap to view the option menu. Note: When you tap the Menu key from within an application, you will see the sub-menu for the application.
4. ESC key	Tap to return to the previous screen/page. If the keyboard is in use, close the keyboard.
5. Camera	0.3M camera
6. USB host	Supports USB stick, keyboard and mouse, USB 3G Dongle, etc.
7. SD card slot	To insert an SD card
8. Mini USB port	Connect to a computer via a USB cable to transfer data (e.g. music, videos, photos and other files).
9. Earphone jack	To connect your earphone
10. Power jack (DC input)	Connect to a 5V output adapter
11. MIC	Microphone
12. Power and lock key	Key to switch the tablet on or off
13. Reset hole	Press to reset the tablet. Insert a paper clip or other small object with a narrow tip into this reset hole.
14. Speaker	Speaker

4. GETTING STARTED

4.1. Connect to computer

Connect your tablet to your computer with the supplied USB cable to transfer media files when you are running Windows 7 or Vista.

For Windows XP, please install Windows Media Player 11 before you transfer media files.

Earlier versions of Windows require the MTP Porting Kit.

For Mac please refer to: www.android.com/filetransfer.

4.2 Turn On / Off

4.2.1. Turn on

To start your tablet, press and hold the power key at the right side of your tablet for about 5 seconds.



After your tablet has booted click and hold the lock  and do the following:

Drag the lock on the open lock icon: you will go to the home screen.

Drag the lock on the camera icon: you will go directly to the camera app.

4.2.2. Turn off

To turn off your tablet, press and hold the power button until the “Would you like to shut down?” dialog appears and tap “OK” to turn it off.

4.3. Lock/unlock the screen (sleep mode)

To save the battery, place your tablet in sleep mode by turning off the LCD display. To do this, shortly press the power key. Press it again to wake up the screen.

After you have turned on the screen click and hold the lock  and do the following:

Drag the lock on the open lock icon: you will go to the home screen.


Drag the lock on the camera icon: you will directly go to the camera app.

5. YOUR HOME SCREEN



a. Google search	Tap to enter a Google search
b. Voice search	Tap to start a voice search
c. Apps Launcher	Tap to view all the applications installed
d. ESC key	Tap to return to the previous screen/page
e. Home	Tap to return to your home page
f. Recent apps	Tap to view your most recently opened apps
g. Connect to PC	When connected to a PC, this icon will appear.
h. System time	Displays the current system time
i. Wi-Fi	Wi-Fi-signal when your tablet is connected to a Wi-Fi network
j. Battery status	Displays the battery status

 Click once on the time on the home screen to open the status screen and view the Wi-Fi, battery status and the current time and date.

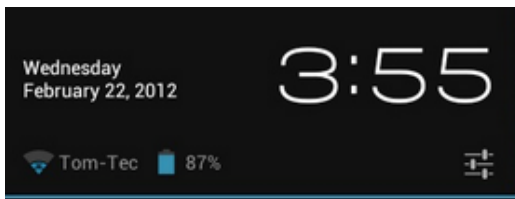


If you click again on the time in the status screen a menu will appear enabling a quick way of adjusting the settings of your tablet.



5.1. Change wallpaper for home screen:

Tap and hold your finger in an empty space on the home screen, you will then see a pop-up screen; you can choose to select a wallpaper from the Gallery or a pre installed Wallpaper or Live Wallpaper.

5.2. Add/delete applications from the home screen:

You can add frequently used apps on the home page and delete undesired apps. Tap the app launcher in the top right corner to go to the apps panel, then tap and hold the app you want to add to the home screen. To delete an app from the home screen, tap and hold it, and then drag the app to the remove icon . The app icon will then turn red, release the icon to delete it.

5.3. Add widgets to home screen

Tap the Apps launcher and then select Widgets on the top of the screen. Here you will find widgets like an analog clock, bookmarks, calendar, Email, and many more. Tap and hold the widget you want and drag it to the home screen.

Tips: Besides your home screen, you can access four other panels by sliding left or right on your home screen. You can also customize these panels.

 
6. NETWORK CONNECTION


6.1. Wi-Fi

Wi-Fi can only be used when you are within a range of networks you know or when you are at a free unsecured Wi-Fi hotspot. Under "Wireless & networks", tap "Wi-Fi" to turn it on. After a moment, your Wi-Fi networks list should populate. If you need to rescan for available networks, tap "Scan".

6.1.1. Turn on Wi-Fi


Within the App Panel, tap “Settings”, “Wireless & networks” and then “Wi-Fi” to turn it on.

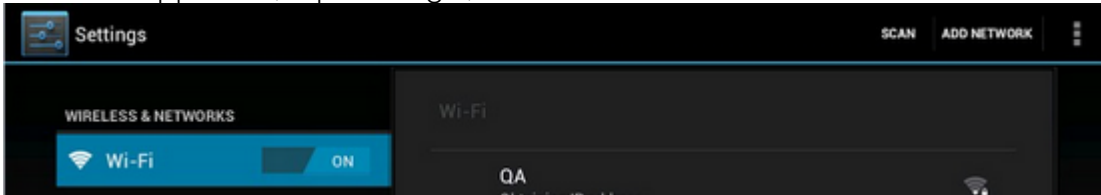

Your tablet will list all the networks it finds within range. Tap a network to connect. If necessary, enter the Wireless password, and tap “Connect”. When your tablet is connected to the network, the wireless indicator  appears in the status bar. The number of grey/blue waves indicates the connection strength of the wireless network.

6.1.2. Turn off Wi-Fi

 Turn off Wi-Fi when you are not using it to save the battery. To turn off Wi-Fi, tap Wi-Fi again.

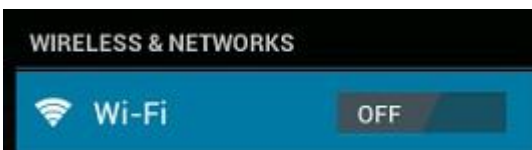

6.1.3. Add a Wi-Fi network manually

You can also manually add a Wi-Fi network under “Wi-Fi settings”. In “Wi-Fi settings”, tap “Add network”. Enter the SSID (name) of the network. If necessary, enter security or other network configuration details. Touch Save.

6.2 3G Network

A 3G network is a mobile network that allows high-speed data access and advanced network capacity. It features a wider range of services and advanced network capacity over the previous 2G network.

Your tablet supports external 3G network by a 3G dongle. 3G dongles are connected via the USB HOST port.

Note: some models support an optional 3G network. If you have purchased a tablet with a SIM card slot, you can access the Internet via your 3G SIM card when a Wi-Fi network is not available. Please insert your 3G card into the SIM card slot of the tablet, and the tablet will obtain 3G signal automatically. If you've purchased a tablet without a SIM card slot, you can also access Internet with a USB 3G dongle.

7. INTERNET BROWSING

Before using the browser, make sure you have set up an Internet connection on your tablet. Go to the “Settings” app and under “Wireless and networks” connect to a Wi-Fi network.



To browse the Internet, open the browser app  in the applications overview.

Tap the address bar to bring up the Android keyboard for entry of keywords or a web address (a URL). Hold down the text field to edit text or change an input method.

The browser will display the following buttons by default:



Bookmarks: Open and manage bookmarks



Menu: Here you will find the other Browser options (including "Settings")



New tab sheet: Open a new tab sheet



Refresh: Refresh the page



Search: Search in Google



Set bookmark: Create a new bookmark for the page that you are currently viewing



Next page: Continue to the next page



Previous page: Return to the previous page

Press the Menu button to select the other options including:

New tab sheet: Open a new tab sheet

 
New incognito tab sheet: Open a tab sheet that does not save entries

Page sharing: Share the Internet page with your contacts

Settings: Adjust all browser settings

Request desktop version: View desktop version instead of the mobile website

Refresh: Refresh the current page

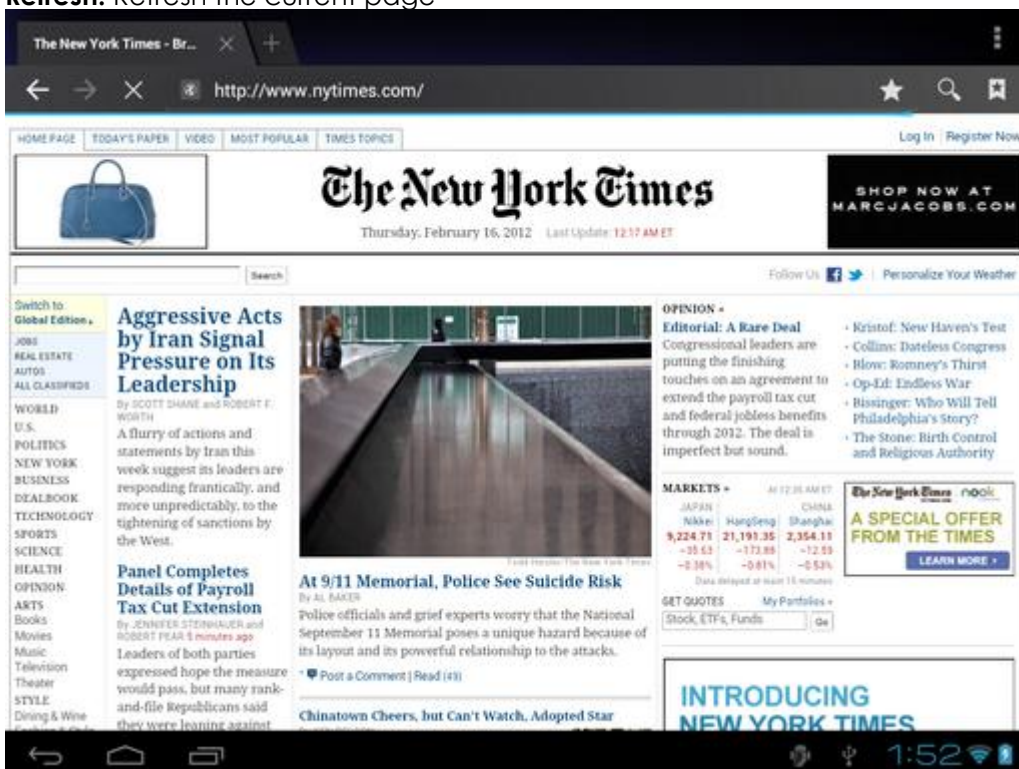

8. INSTALL AND MANAGE APPS

8.1. Install Apps



The ApkInstaller allows you to install an .apk file from the internal memory or an SD card. The ApkInstaller can be found in the applications overview.

Select "Install" to install a program.

After you have selected this option, select the medium on which the .apk file is stored: the Internal Memory or an SD card (TF card). Open the .apk file and follow the steps on the screen to install the application.

Note: Make sure the .apk file is workable on android 4.0, and the suffix is .apk. e.g. "angrybirds.apk". In some cases, there may be no icon in the App Panel after an .apk file has been installed. Possible reasons may be that this app is not compatible with your OS or the downloaded .apk file is a broken one so you may need to download a working version.

8.2. Manage Apps

 


The ApkInstaller allows you to manage all the programs installed. The ApkInstaller can be found in the application overview.

Select "Manage" to launch, export or uninstall an app.

After you have selected this option, you will receive an overview of all the applications installed on your tablet. Click on an app to launch, export or uninstall it. Exported applications are always stored in the internal memory.

This tablet can read files directly from an SD Card or USB stick. To use a memory card, place it in the card slot at the side of the device. Make sure the card is inserted correctly! Push the card all the way in until it clicks. To remove the card, push it slightly inward until it is released. To use a USB stick, insert the stick in the USB port. In both cases go to Explorer in the application overview to gain access to the files stored on the SD card or the USB stick.

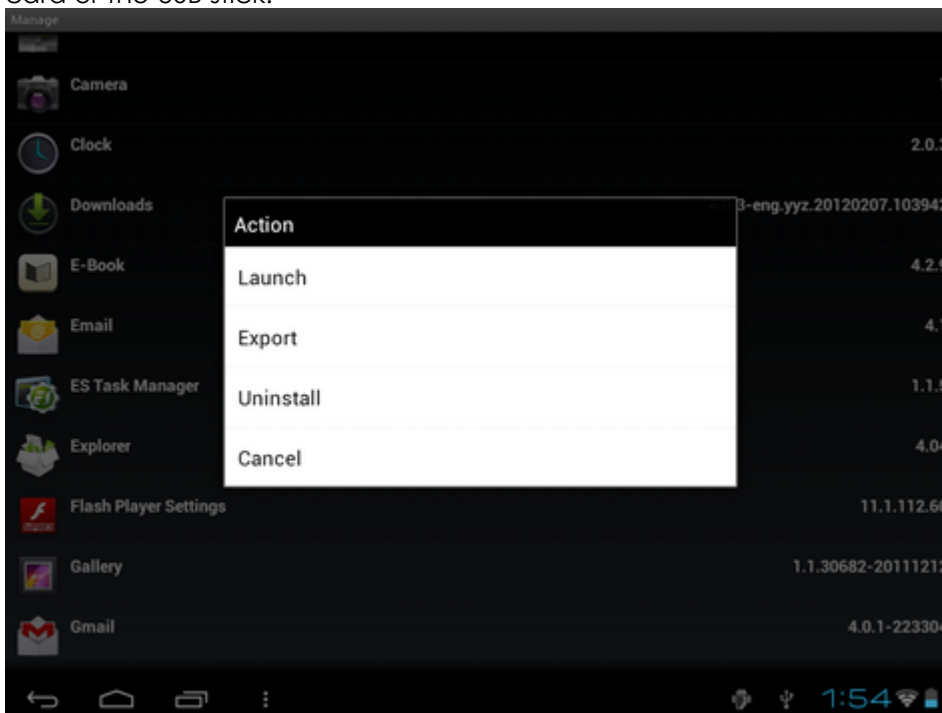

You can also go to "Apps" under "Settings" to manage apps.

8.3 Market



The Market app allows you to download and install all the available apps for your tablet. To use the Market app open the "Settings" application, go to "Apps" and click on "Show Google Apps in Launcher".

You will now find the Market in the Apps Launcher.

If you wish to use the Android Market, you must use your current Google Account or register a new account.

The Market app has the following options:



Search: search for available apps for your tablet



My apps: manage and update all the apps on your tablet



 
 
Menu: contains all other options of the application

9. MULTI-MEDIA FUNCTIONS

9.1 Music




After loading music on your tablet, tap the music icon to open the music player. You can select to sort your music by Artist, Album, Song or stored Playlist. Tap to select. The media player allows you to shuffle, skip, or pause your current selection and even displays the album artwork when available.

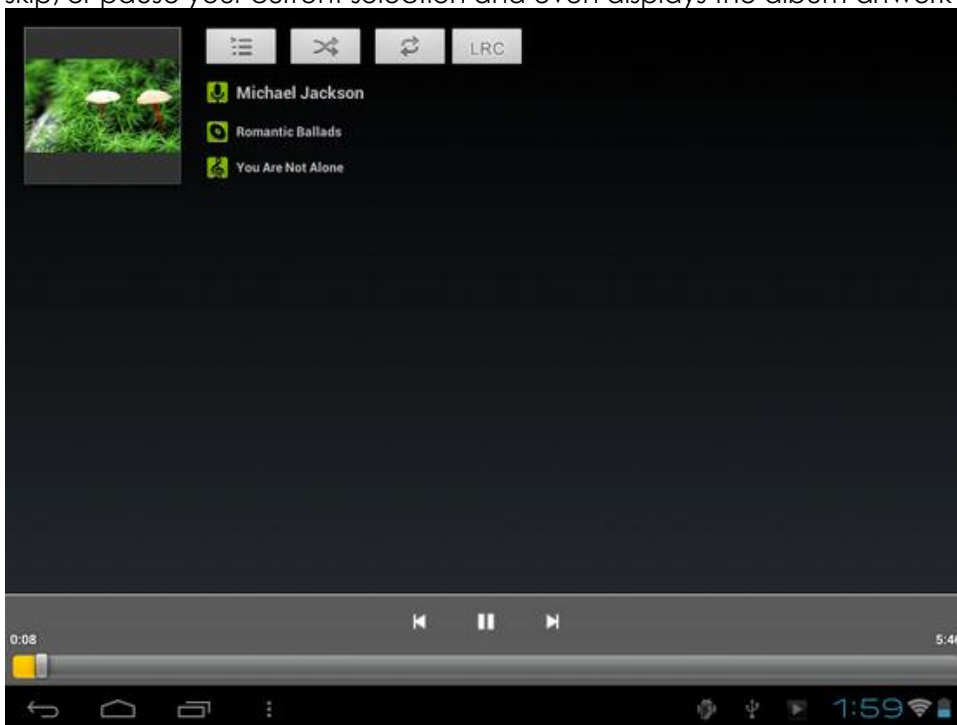


Tap at the bottom of the screen to open a submenu on the music page.

9.2. Video

9.2.1. Video Player

 You can play videos stored on your tablet or SD card. To play, tap the Video  icon to launch the video player:

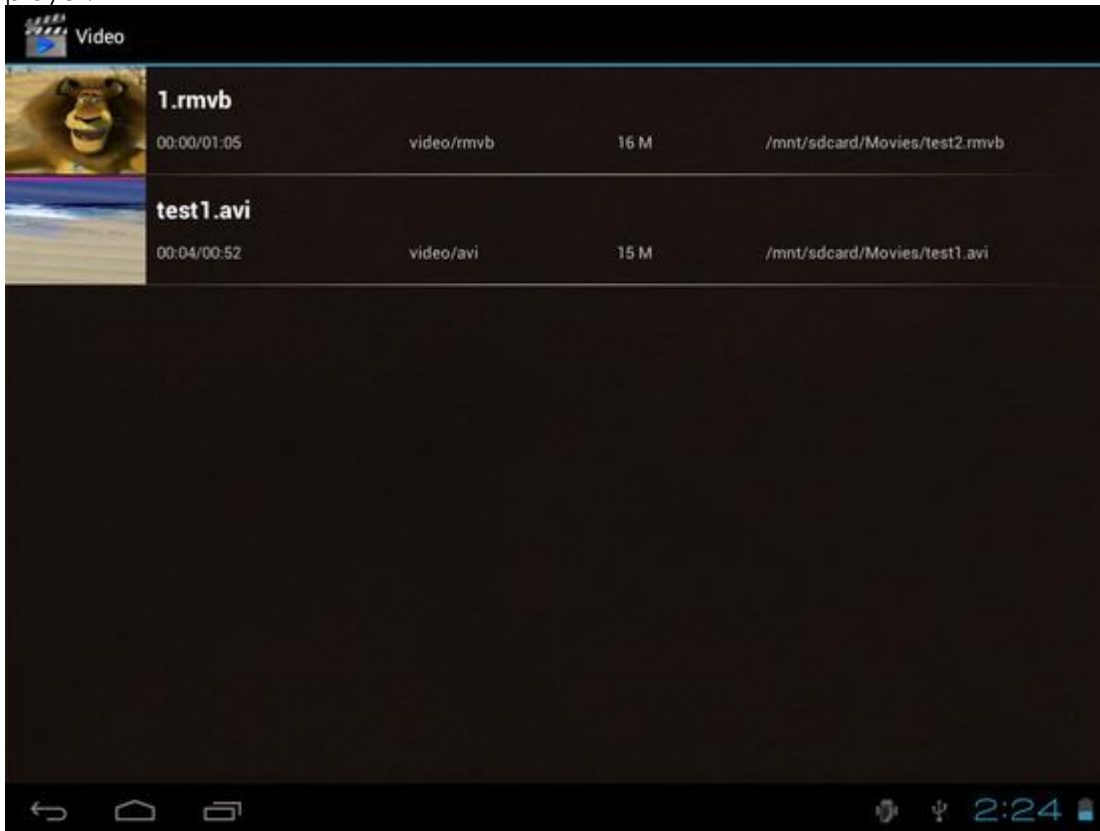

Tap the video you would like to play. To playback, fast forward or pause your video tap the screen to display the toolbar. You can also add bookmarks, adjust the brightness, or set the screen ratio. Below is an example of the toolbar:




9.2.2. HDMI Output

Connect the tablet to your TV via an HDMI cable and wait a few seconds for your TV set to receive the display signal. Adjust your TV settings if necessary. An HDMI cable is not included as an accessory. The HDMI port is a single-ended output. The screen of the tablet goes dark when connected to the TV. To carry out operations on the tablet, please use a USB mouse.


9.3. Gallery

You can view and edit your digital pictures on the tablet's full color, high-resolution display.


After placing images on your tablet, tap Gallery  to display your pictures:

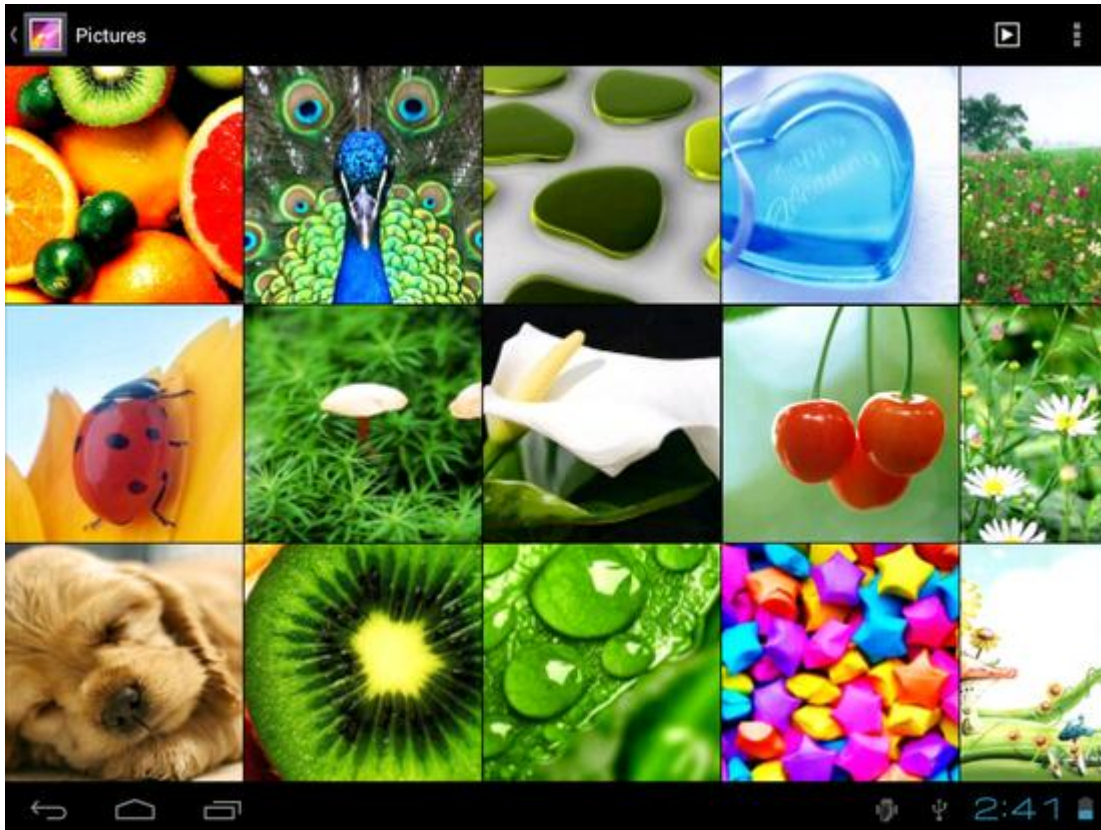 


Tap the picture you want to display and slide right or left to show the next or previous picture.

Tap the Menu  icon to edit, rotate, crop, or set the image as a wallpaper.

 9.4. Camera

Tap the  icon to open the camera app.
You can take a photo, or record a video with the front camera.

 Note: After turning on your tablet, you can go to the camera directly by dragging the lock icon onto the camera.

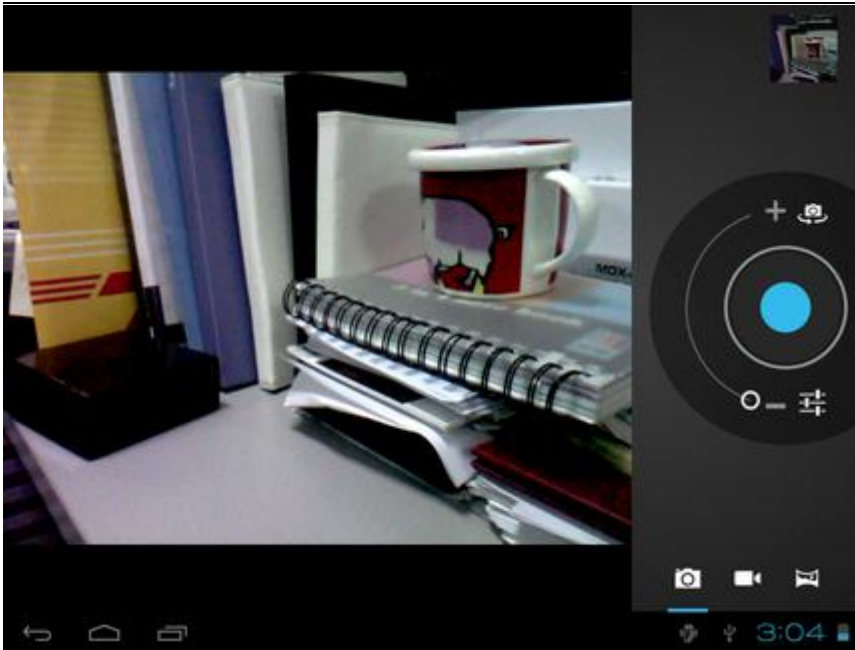


9.5. E-book reader

The tablet supports many e-book formats like PDF, Text, E-Pub, FB2.



 Tap the "e-book" icon to open the e-bookshelves. Tap an e-book to open the book and read.

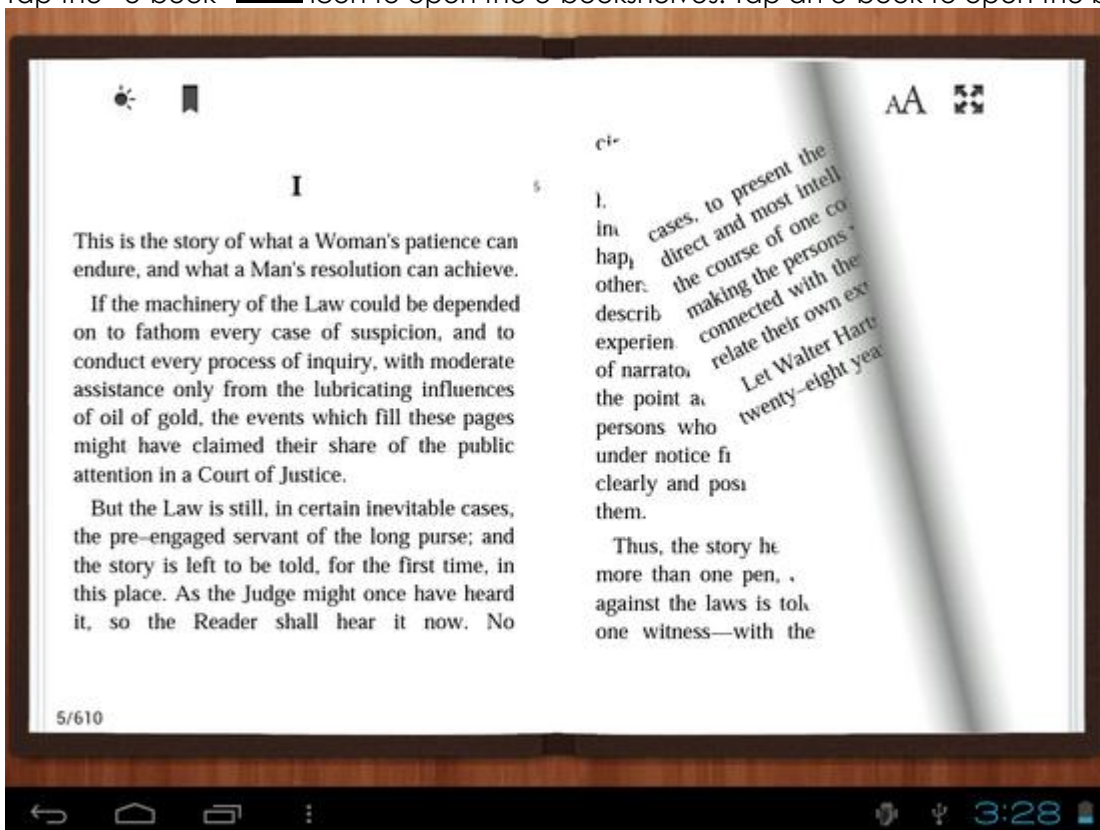

You can go to the next or previous page by sliding your finger right or left.



Tap the menu icon on the Menu button to check the sub-menus. You can change the font size, Go To Page, check your bookmarks, set the auto flip time, etc.

9.6 E-mail



To use email on your tablet, use the E-Mail application in the App Launcher.

 


If you want to use Gmail, instead of using the E-mail app use the GMail application which is specially designed for GMail, Google mail.


To set up an email account on your tablet, you will need the incoming and outgoing server settings of your email account for the configuration.



Open the E-mail application, which will display the screen below. Enter your email address and password and select "Volgende" (Next).

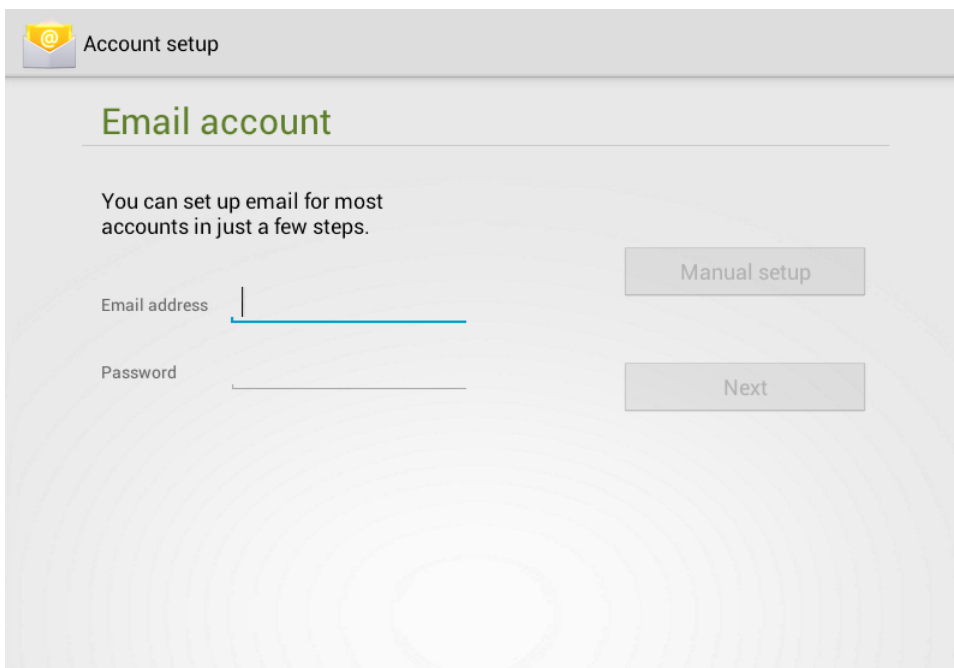A screenshot of the 'Account setup' screen for email. The title 'Account setup' is at the top left. Below it, the heading 'Email account' is in green. A message states: 'You can set up email for most accounts in just a few steps.' There are two input fields: 'Email address' and 'Password'. To the right of the 'Email address' field is a button labeled 'Manual setup'. To the right of the 'Password' field is a button labeled 'Next'. The background features a faint, stylized fingerprint pattern.

 You will then be asked to select your email account type. After you have clicked on the appropriate type you will proceed to the next step.

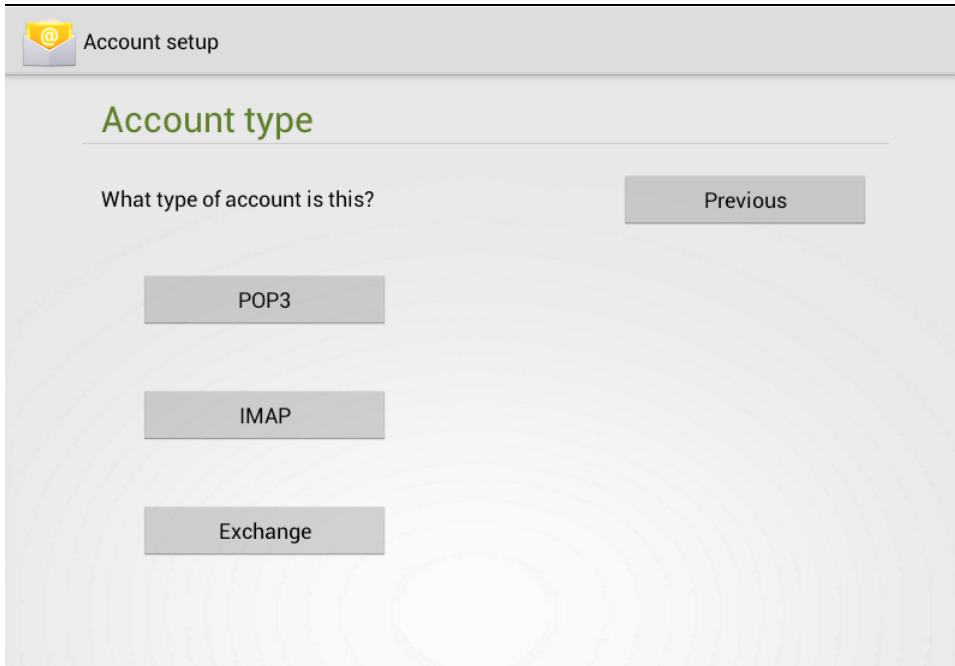


The screenshot shows the 'Account setup' screen with a title bar containing an '@' icon and the text 'Account setup'. Below the title bar, the heading 'Account type' is displayed in green. The main content area asks 'What type of account is this?' and features three buttons: 'POP3', 'IMAP', and 'Exchange'. A 'Previous' button is located in the top right corner.

Depending on the type of account, details of the incoming server settings will be requested; enter all the details of the incoming server settings for your email account. The E-mail app will automatically enter the most common default settings however they should be checked for correctness.

After entering the settings, click on "Volgende".

 If the settings are correct, you will proceed to the next step. If this is not the case, the tablet will indicate which details have not been correctly entered.

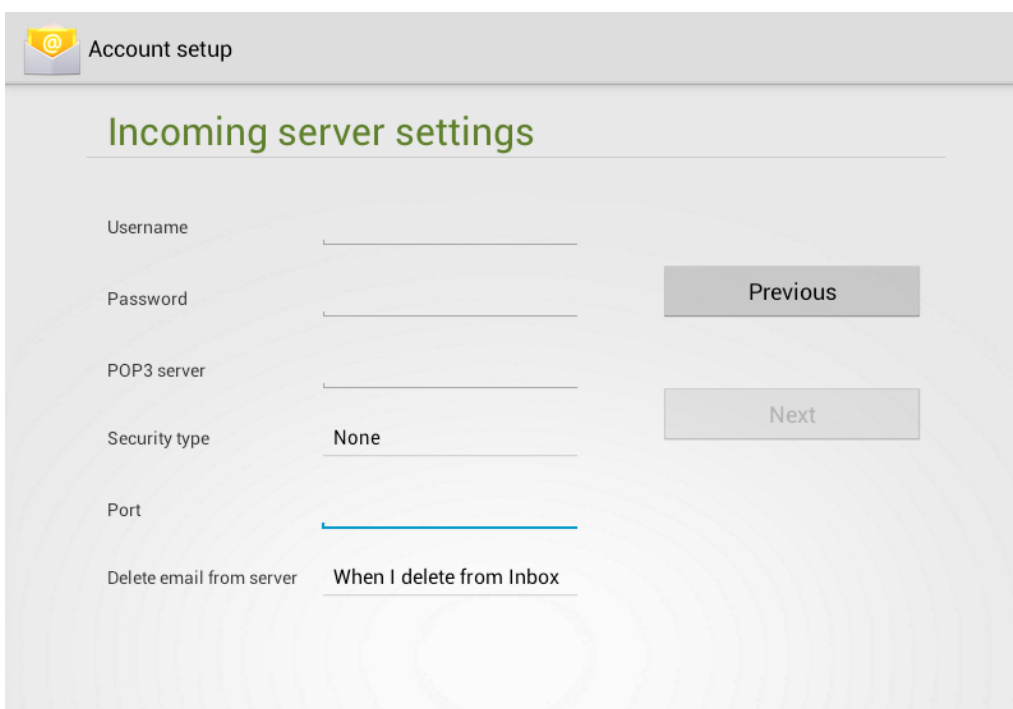


The screenshot shows the 'Incoming server settings' screen with a title bar containing an '@' icon and the text 'Account setup'. Below the title bar, the heading 'Incoming server settings' is displayed in green. The form contains several input fields: 'Username', 'Password', 'POP3 server', 'Security type' (with a dropdown menu showing 'None'), 'Port', and 'Delete email from server' (with a dropdown menu showing 'When I delete from Inbox'). A 'Previous' button is located in the top right corner, and a 'Next' button is located in the bottom right corner.

Next, enter the outgoing server settings and then select "Volgende".

The E-mail app will automatically enter the most common default settings however they should be checked for correctness.

 
If the settings are correct, you will proceed to the next step. If this is not the case, the tablet will indicate which details have not been correctly entered.

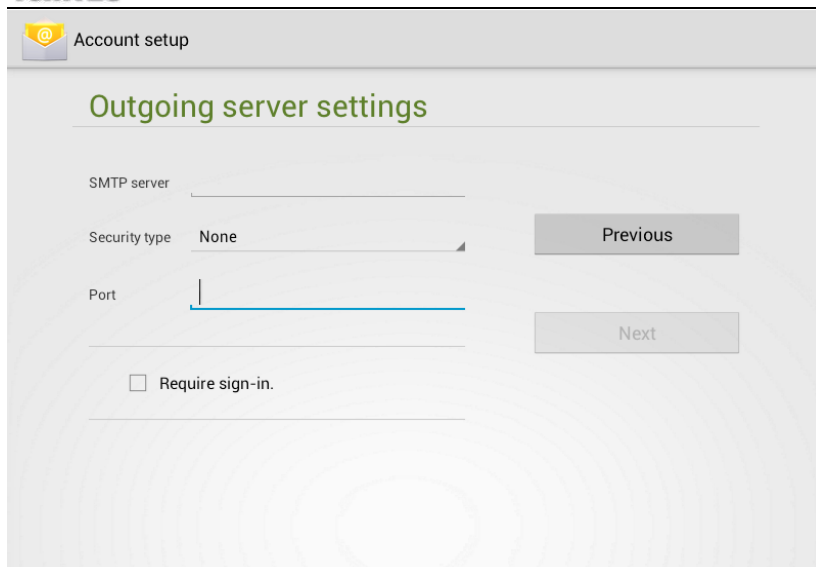

The screenshot shows the 'Account setup' screen with the title 'Outgoing server settings'. It contains the following fields and controls:

- SMTP server: A text input field.
- Security type: A dropdown menu currently set to 'None'.
- Port: A text input field.
- Buttons: 'Previous' and 'Next' buttons.
- Checkbox: 'Require sign-in.' with an unchecked box.

 
After the incoming and outgoing mail server settings have been correctly entered, the tablet will ask which mail account data requires to be synchronized and the interval for downloading emails.

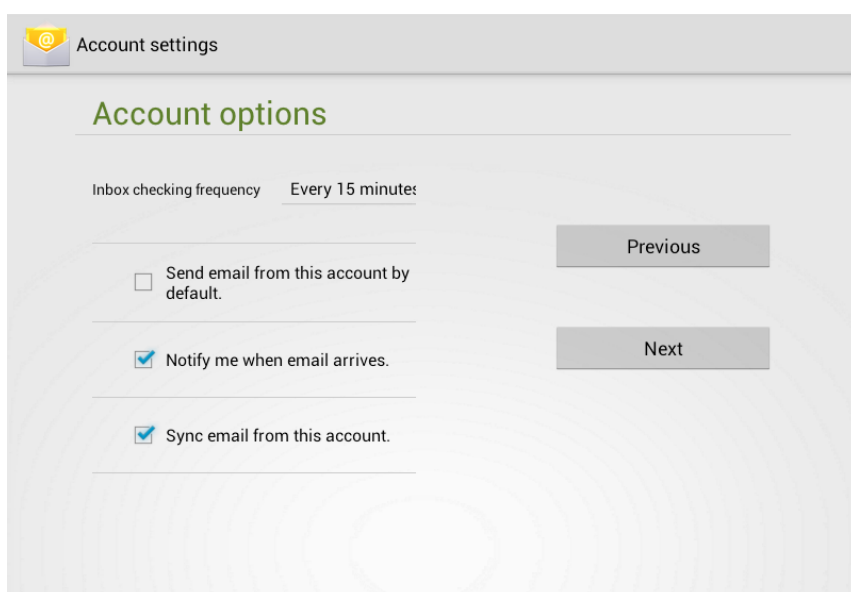

The screenshot shows the 'Account settings' screen with the title 'Account options'. It contains the following fields and controls:

- Inbox checking frequency: A dropdown menu set to 'Every 15 minutes'.
- Buttons: 'Previous' and 'Next' buttons.
- Checkboxes:
 - 'Send email from this account by default.' (unchecked)
 - 'Notify me when email arrives.' (checked)
 - 'Sync email from this account.' (checked)

 Finally, you will be asked under which name the account should be added and which sender address should be displayed on emails sent by you.

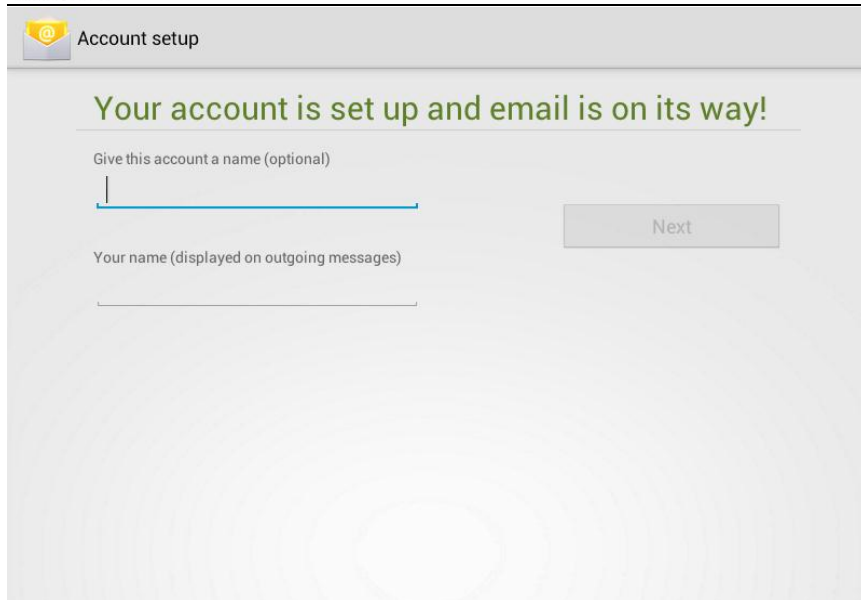

Account setup

 
Your account is set up and email is on its way!

 
Give this account a name (optional)

Next

Your name (displayed on outgoing messages)

After entering the required information, mail from your account will be downloaded onto the tablet and will appear on the screen within a few minutes.

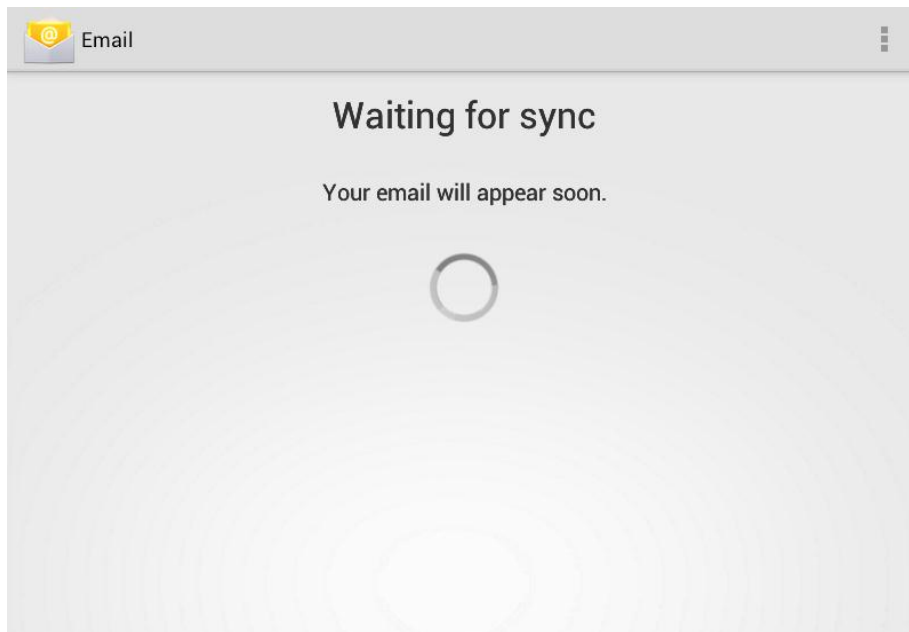


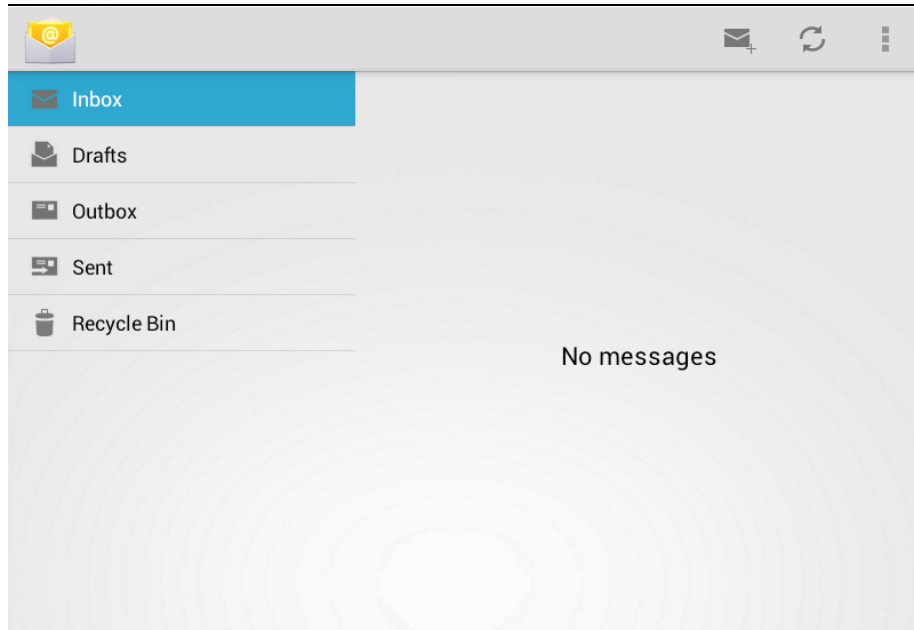

10. SETTINGS



 Tap the "Settings" icon in the app launcher to go to the settings menu.

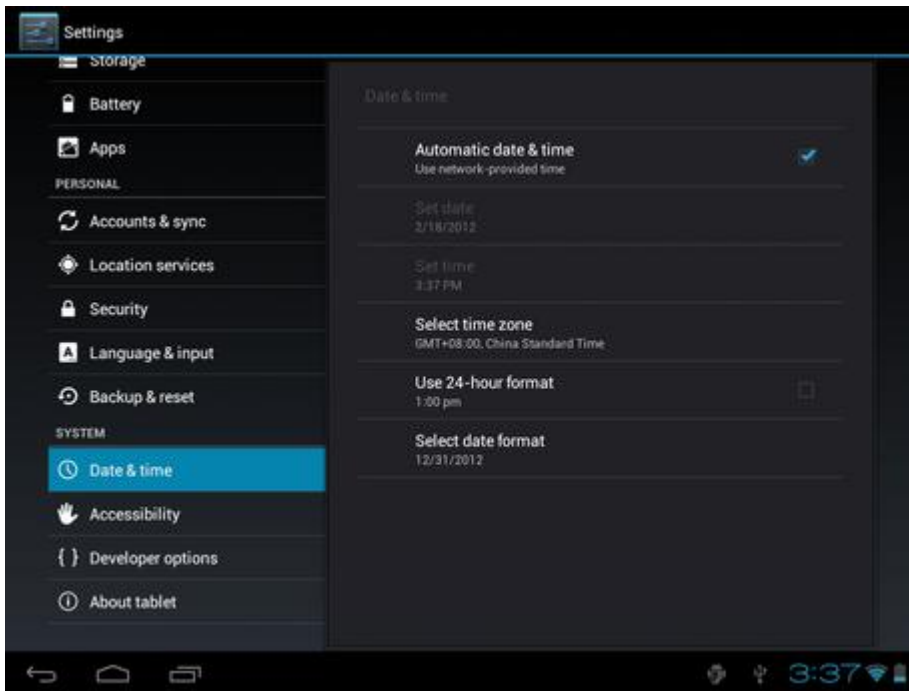

In the "Settings" menu you will find the following categories and subcategories:

10.1. Wireless and networks:

Wi-Fi: Connect to or manage your wireless networks

Data usage: View and limit the data usage of a mobile (3G) connection

10.2. Device:

Sound: Set volume levels and turn sounds on/off.

Display: Set all display options including brightness and sleep mode.

Storage space: Display storage space of internal memory, SD card and USB stick.

Battery: Battery's charge percentage and total standby time.

Apps: Manage all your applications.

10.3. Personal:

Accounts and synchronization: Manage accounts and set account synchronization options.

Location services: Manage the use of your location used by applications.

Security: Set screen security and manage other security settings.

Language & input: Adjust language and keyboard settings.

Back-up & reset: Make a back-up of your data to the Google servers and restore the tablet back to factory settings.


10.4. System:

 
Date and time: Set date and time including time zone and date notation.

Accessibility: Enable/disable automatic screen rotation and other accessibility options.



About tablet: Information about the tablet including IP/MAC address and Android version.


11. EXPLORER

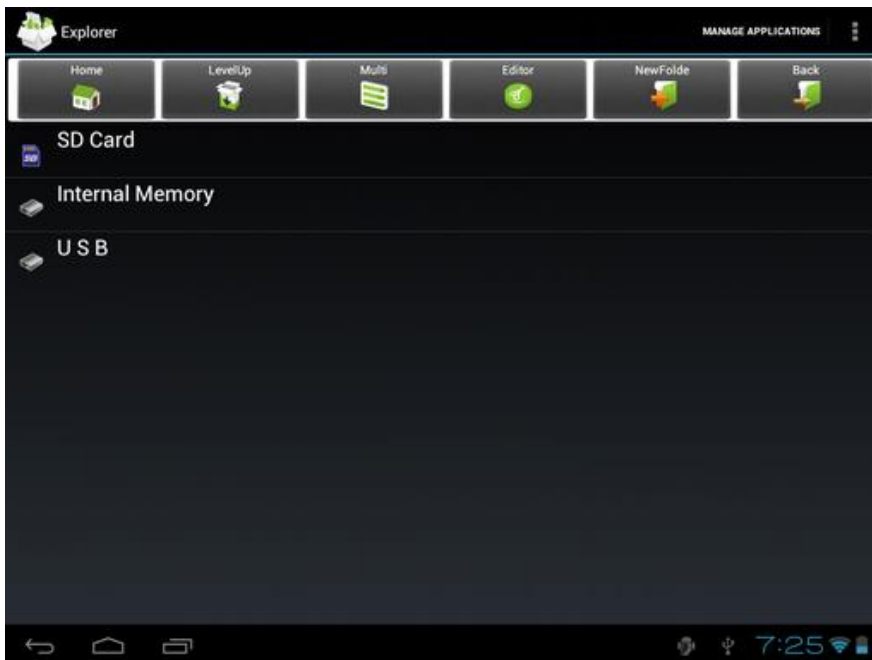

 In Explorer , you can manage all your files. You can copy, delete, paste, or rename your files in your Micro SD Card, Internal Memory and USB disk.



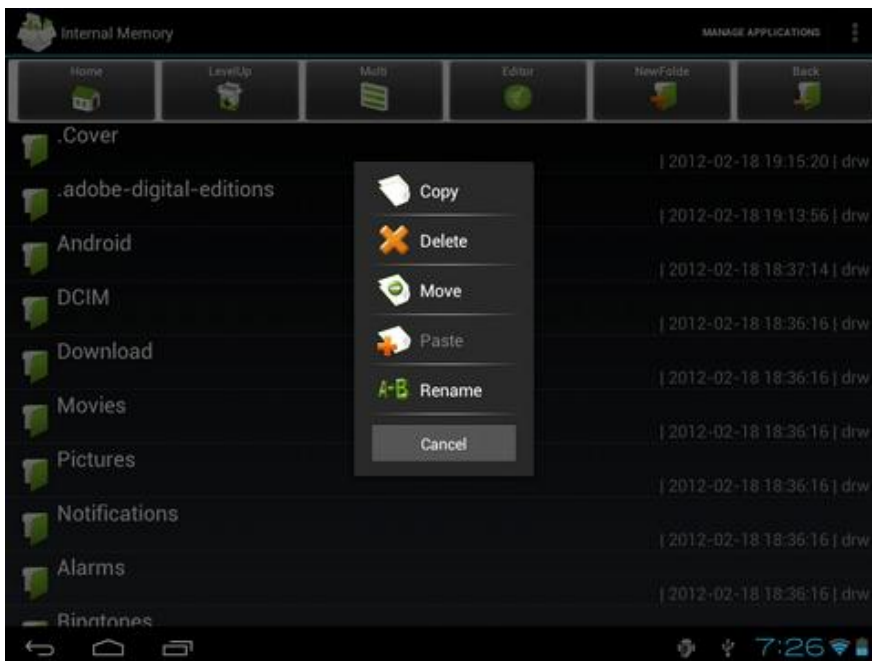


For example, to copy files from "Internal Memory" to Micro "SD Card":

1. Open "Explorer", you will see the above interface
2. Tap "Internal Memory" to see all the files that are on your tablet
3. Tap "Multi"  icon and then select all the files you want to edit
4. Tap "Editor"  icon, you will see a pop-up menu, select "copy"



 
5. Tap the "Home"  icon in the top left corner to return to the main interface, select "SD card", then tap the "Editor"  icon, you will see a pop-up menu, select "Paste". After these steps the files are copied from your tablet to your Micro SD card.


12. BATTERY

		
Low battery	Full battery	Battery charging



The  icon indicates that the battery is full. When the battery level becomes too low, a prompt comes up to notify you to charge your tablet.

 While charging, you can check the charging status in the lock screen:

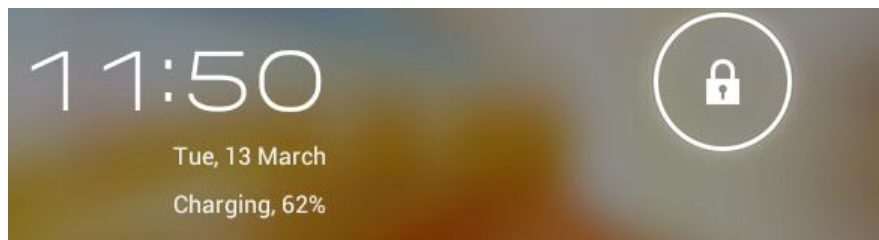

It takes approximately 5 hours to charge your tablet to full battery. Please only use the 5V/2.0A adaptor included in the package to charge the tablet.

13. TROUBLESHOOTING

1. Cannot turn on the tablet

Check the tablet's power level, please charge it before starting the tablet.

If you still cannot turn on your tablet, try to reset it.

2. No sound coming from the earphones

Check to see if the volume is turned off or is turned down to "0". Also try another earphone to make sure it is not damaged.

3. Earphone noise

Check for dust in the earphone or speaker. Check to see if the music file you are playing is damaged.

4. Tablet freezes and doesn't respond on input

Use a pin to reset and then restart your tablet.

5. Screen drift or unresponsive screen

To correct it, you may a) Go to Settings → Accessibility → Touch panel calibration to calibrate it, or b) In case calibration cannot be carried out, you may press and hold the power button for about 15 seconds to force the tablet to shut down. Calibration will be automatically carried out after you start up your tablet. Use a USB mouse to carry out calibration operations on your tablet.

6. Application is not working

Possible reasons may be that this app is not compatible with Android or the downloaded .apk file is damaged.

7. How can I delete a Google account?

If an account is added, the account is shown in "Accounts & sync" under "Settings", where you may also add another account. To delete an undesired account, go to "Settings" → "Privacy settings" → "Factory data reset". Your tablet's internal storage, downloaded apps, etc. will also be deleted, except for the info that is stored on external devices such as a USB disk or SD card. Be careful when carrying out this operation.

For all your questions about your **TOMTEC** product within the warranty period, please go to:

helpdesk.tom-tec.eu

On this website you will find user manuals and FAQs (Frequently Asked Questions) about your product, as well as information about our helpdesk.

FCC Statement

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.