

Contents

1 GENERAL INFORMATION	4
1.1 INSTRUCTION	4
1.2 NOTES FOR SAFE	4
1.3 APPEARANCE.....	6
1.4 ICONS	7
2 GETTING STARTED.....	8
2.1 INSTALL AND REMOVE UIM CARD	8
2.2 INSTALL AND REMOVE BATTERY	9
2.3 HEADSET AND MICROSD CARD.....	9
2.4 CHARGING.....	10
3 BASIC FUNCTION	11
3.1 POWER ON AND OFF	11
3.2 STANDBY MODE.....	11
3.3 MAKE A CALL	12
3.4 ANSWER / END A CALL.....	13
4 WRITE TEXT	14
4.1 INPUT METHOD	14
4.2 INPUT SPECIAL CHARACTER.....	15
5 MESSAGES.....	15
5.1 SMS	15
5.2 MMS.....	18
6 LOG.....	20

6.1 ALL CALLS	20
6.2 SENDEED SMS	21
6.3 DELETE CALL LOG	21
6.4 CALL DURATION	21
6.5 MESSAGE LOG	21
7 CONTACTS.....	21
7.1 CONTACTS	22
7.2 SETTINGS	22
7.3 GROUPS	23
7.4 SPEED DIALS	23
7.5 DELETE ALL CONTACTS.....	23
8 SETTINGS.....	23
8.1 PROFILES.....	23
8.2 DISPLAY SETTINGS.....	24
8.3 TIME AND DATE.....	25
8.4 CALL SETTINGS.....	25
8.5 PHONE SETTINGS.....	25
8.6 SECURITY SETTINGS.....	26
8.7 DOWNLOAD SETTINGS	27
9 MEDIA DATA	27
10 ENTERTAINMENT	27
10.1 MP3	27
10.2 MP4	28
10.3 CAMERA.....	28

10.4 ALBUM.....	29
10.5 FM RADIO.....	29
10.6 GAMES	29
11 APPLICATION	30
11.1 ATV.....	30
11.2 VOICE MEMO.....	30
11.3 CALCULATOR	31
11.4 STOPWATCH.....	31
11.5 ORGANIZER.....	31
11.6 SCRATCHPAD.....	32
11.7 E-BOOK READER	32
12 ESURFING	33
13 SAFE INFORMATION.....	34
14 CARE AND MAINTENANCE	36

1 General Information

1.1 Instruction

Please read this User Guide carefully to make sure your phone's best status.

This phone is our company's product with streamline layout and good handle. ATV, rings, incoming call, file manager (support microSD card), taking pictures and sound videos, MP3, MP4 play, E-Book; Optional features with WAP, FM radio, MMS and so on. These functions can make your life more convenient and fun.

1.2 Notes for Safe



Follow any restrictions. Switch the phone off near medical equipment.



Do not use the phone at a refueling point. Do not use near fuel or chemicals.



UIM card can be disassembled, please be aware of reaching the small parts in case of any danger.



Do not use any voltage over the restriction. Do only use external devices factory approved.



Do not unarm phone or battery and do not do any changes on them. The warranty disabled once the armed label corrupted.



Battery out of use please disposes following the local regulation.



Electrical devices like televisions, radios and computers, may be disturbed by RF energy that affects your mobile phone performance.



Turn off your mobile phone or set it to FLY MODE before boarding any aircrafts to prevent interference with communication systems. It is illegal to use mobile phone in a plane.

















Use earphone when driving in case causing traffic accidents.

WARNING: Improperly use will result in warranty disabled.

1.3 Appearance

Name	Description
Left/Right Function Key	These two function keys depend on the menu at the bottom of screen
Power/End Key	Terminate call Switch power on or off Return to idle screen from function list
Dial Key	Making call out Answer incoming calls Browse calls history from idle screen.
OK Key	Confirm function in some menus.
Direction Keys	Scroll in function list or phone book. Scroll cursors in user edit status Enter the specific function from idle screen Scroll up/ down/ right/ left direction
Number Keys	Input numbers, letters and symbols
# Key	Lock keypad quickly. Switch input modes in user edit status
* Key	Input symbols in user edit status. Input "+", "P", "T" when dialing numbers. Switch between current mode and silent mode in idle screen

1.4 Icons

Icon	Content
	CDMA Network signal strength 
	New message
	general  meeting  outdoor silent  my style 1
	Alarm
	Battery level : high -> low 
	USB charging.
	Shortcut to access TV
	microSD card
	Shortcut to access Application

2 Getting started

Dimension : 106.5(L) x 45(W) x 12.5(H) mm

Weight(include battery) : 75g

Battery: 900 Ah

Note: In this manual, some functions are only for “UIM card” and not available for non-UIM card phone .

Note: Always switch off the power and disconnect the charger and any other device before removing the cover. Avoid touching electronic components while changing the cover. Always store and use the device with the cover attached

2.1 Install and remove UIM card

(function only for UIM card phone)

Turn off the phone, remove the back cover and battery, and then insert the UIM card. Make sure the UIM card is properly inserted and the golden contact area of the card is facing the connectors on the device and that without the beveled corner is facing the top of the device.

To remove the UIM card, put out the UIM card lightly.

NOTE: Please be aware of operations on UIM card, rubbing or bending will damage your UIM card.

2.2 Install and remove battery

Turn off the phone, remove the cover, position the battery with the contacts aligned to the golden contacts of the phone. Insert the battery into the battery slot. To remove the battery, insert your finger into the finger grip and lift the battery from its compartment.

Note: Always switch the device off and disconnect the charger before removing the battery.

2.3 Headset and MicroSD card

■ Headset

Plug the headset connector into the Port connector at the bottom of your phone. Position the headset on your ear. With the headset connected, you can make, answer, and end calls as usual.

■ MicroSD card

Remove back cover and battery; SD card slot is beside UIM card slot. Insert the memory card in the slot. Make sure that the contact area is facing the connectors on the device. Push the card in until it locks into place. To remove SD card, pull out the SD card lightly

NOTE: Do not remove the memory card during any operation when the card is being accessed. This would damage the memory card and the device, and corrupt data stored in the card.

2.4 Charging

➤ **USB Charging**

The USB cable connects to computer and your mobile phone interface. When charging, the battery level icon will display the status. If your mobile phone connected to computer in power on status, it can be treated as a U-Flash disk

➤ **Charger Charging**

Charger can charge the battery by your mobile phone. When charging, assembling your battery:

1. Connect through the USB interface by data cable.
2. Insert the cable to your mobile phone's interface.
3. Insert the charger to the proper power socket.
4. Then charging animation will stop after charging done.

NOTE: If the battery is not enough to power on your mobile phone, it takes a little bit long time to make

the charging animation play.

WARNING: To make sure the local standard voltage and frequency match up your charger's rated voltage and power.

3 Basic Function

3.1 Power on and off

To switch the phone on or off, press and hold the power key.

3.2 Standby mode

At standby mode you can quickly access your most frequently used applications, and view at a glance if you have missed calls or new messages, options as below

- Press left function key to “Menu”
- Press right function key to “Names” (contacts)
- Press dial key to call history.
- Press * key for 2 sec to turn on/ off silent function.
- Press # key for 2 sec to lock the keypad quickly
- Unlock the keypad, please press upper-right function key then press # key.

■ **Shortcut setting :**

You can change shortcuts assigned for the selection keys in the standby mode

Select Menu > Settings > Phone settings> Shortcut
>Shortcut application

1.Select one of shortcut entry

2.Shortcut menu: shortcut such as dial, messages, contacts, log, Media data, profile, MP3, MP4, FM, camera, calculator, alarm, calendar, WAP, MMS.

3.You can select five different shortcut in standby mode.

4. Default shortcut:

– Changeable: Dial screen, Profiles, Contacts, Messages, Call log,

– Unchangeable: missed calls, new messages, today's appointment

3.3 MAKE A CALL

■ **Using the keypad**

Enter the phone number (including the area code), and press the Dial key. Then press the End key to end the call or to cancel the call attempt.

■ **Using the contact list**

At the standby mode, press right function key to

access contacts and scroll to the entry you wish to view. Then press the Dial key to make the call, or press Details to view details of the entry.

■ Using the last dialed number

At the standby mode, press the Dial key to display the last dialed number. Then scroll to the number (or name) you wish to redial and press the Dial key.

■ Call function:

During a call, press left function key the options as below:

1. Handfree: use your phone as a loudspeaker during a call
2. Mute: to put all active calls on mute
3. New call: during a call, dial another call to have a conference call with two participants.
4. End all calls: end all calls
5. Send DTMF: to send tone strings
6. Start record: start to record the phone call.

3.4 Answer / End a call

To answer an incoming call, press the Dial key. To decline the call without answering, press the End key.

4 Write text

In any user edit window, including edit phone book, messages and memo, press the # key to switch the input method editor.

4.1 Input method

Switch to uppercase or lowercase mode press # key. Press a key once to insert the first letter on the key, twice for the second letter, etc. If you pause briefly, the last letter in the display is accepted and your phone awaits the next entry

ABC indicate the uppercase

abc indicate the lowercase

123 indicates number mode

To write text with the keypad, press a number key, 2–9, repeatedly until the desired character is displayed. There are more characters available for a number key than are printed on the key. If the next letter is located on the same key as the present one, wait until the cursor is displayed, and enter the letter. To insert a number, press and hold the number key. To switch between the different character cases and modes,

4.2 Input special character

When use any kind of method, press * key to display the character list, and then press the direction key to select the item. When use any kind of method except numeric method, press "0" key to input blank

5 Messages

5.1 SMS

➤ New message

Select Memu > Messages > New message, options as below,

- Send: send this message
- Save: save this message
- Insert template : insert quick text to message
- Insert contact: insert contact
- Sending options : select emergency or delivery report

➤ Inbox

You can store your received messages here. If inbox is full, you cannot receive new messages any more. Meanwhile the idle screen will display an icon showing the inbox is full. You can receive new

messages again after you delete some messages.

Select Menu > Messages > Inbox , options as below

- Reply: replay message
- Reply MMS: replay multimedia message
- Call back: use message number to call back
- Delete: erase messages
- Use detail: use number, URL detail
- Move: move to archive
- Forward: forward messages
- Lock: lock and unlock messages
- Copy to UIM: copy message to UIM card
- Mark: mark messages
- Mark all: mark all messages
- Detail info: view detail information

➤ **Outbox / Sentbox/ Draft**

Outbox: store failed sent messages.

Sentbox: store sent messages

Drafts: store the messages without sending for reediting

Note: Whether outbox, sentbox, drafts the options are the same as inbox, please see inbox options function.

➤ **Archive**

Messages can restore in Archive.

➤ **Templates**

There are some common phrases in your mobile phone, you can insert text quickly.

➤ **Delete messages**

You can delete inbox, sentbox, outbox, draft, archive, and all messages.

➤ **Voice mail**

Your network stores the voicemail messages you receive. Voice mail services vary by service provider. Please check with your service provider for using your voice mail service

➤ **Message settings**

Select Menu > Messages > Messages Settings, options as below,

■ Send options:

- Priority: select normal or Emergency
- Validity: select default, thirty minutes, 1、 2、 12hours,1、 2、 3days
- Delivery report: select on/off delivery report
- Save sent message
- Callback number: Setting or Edit callback number
- Voice mail number: edit number

- Signature: setting or edit signature
- Other settings : when full of message replace sentbox or replace inbox

NOTE: When have a new message waiting and the memory for the messages is full, before you can save the waiting message, delete old messages to free memory space.

➤ **Memory status**

You can view Phone, UIM card memory status

NOTE:

- The phone can storage most to 300 messages
- UIM storage depend on network provider.

5.2 MMS

This function needs the supporting of network operators. You can consult your network provides.

➤ **Create**

To: add recipient or select from recipient list

CC: add recipient or select from recipient list

Bcc: add recipient or select from recipient list

Subject: edit subject

MMS content: edit MMS or press left function key options such as done, preview, add picture, add

sound, add video, add business card, add calendar note, add new slide, previous slide, next slide, slide duration, send setting, receive setting, save, delete, input select

➤ **Inbox**

- View: view the messages
- Edit: edit messages
- Call: call
- Send: send multimedia messages
- Delete: delete multimedia messages
- Use number: use number to call, save to contact, add to contact, replace contact, send MMS or send SMS
- Use URL: use URL in MMS
- Use email: use email in MMS
- Message detail: view messages detail information

➤ **Sentbox / Draftbox / Outbox**

- Outbox: store failed sent messages.
- Sentbox: store the sent messages
- Drafts: store the messages without sending for reediting

NOTE: Whether outbox, sentbox, drafts the options are the same as inbox, please see inbox options function.

➤ **Delete all**

Delete messages from inbox, sent box, draft box, outbox, or all messages.

➤ **MMS settings**

You can set MMS such as receive setting, send setting, server setting, memory status, and storage setting and so on.

6 Log

At standby mode, press Dial key to view call history.

6.1 All calls

Select Memu > Log > all calls

It can view all call history including missed calls, received calls, and dialed calls. Whether viewing missed, received, or dialed calls, the menu options are the same:

- Details : view details
- Delete : delete call record
- Call : call the number
- IP Call : use IP number to make a call
- Send message : send a message to the number

- Send MMS : send a multimedia message to the number
- Save to contact : enter new name for the number and save it
- Add to contact : add number to contact list
- Replace contact : replace contact for existing number

6.2 Sended SMS

Store sended messages.

6.3 Delete call log

You can delete all calls, missed calls, received calls, dialed calls, or sended calls and so on.

6.4 Call duration

You can view the duration time of calls, such as last call duration, dialed call duration, received call duration, or all call duration and so on.

6.5 Message log

- Sent text messages : all sent text messages
- Received text messages : all received text messages

7 Contacts

You can save names and phone numbers (Contacts) in the phone memory or in the UIM card memory.

7.1 Contacts

Select Memu > Contacts > Contacts

- Add Detail: you can add number, ringer, picture
- Details: add some contact detail
- Search : find a name or select from contact list.
- Add new contact : add new contact to your contacts list.
- Delete contact : delete contact
- Move contact : move contact to phone or UIM card
- Copy contact : copy contact to phone or UIM card
- Mark : mark the contact
- Mark all : select all
- Send message : edit message then sent it
- Send mms : edit short multimedia message then sent it

7.2 Settings

View memory status in phone and UIM card.

NOTE: The phone contacts list can hold up to 500 contacts, UIM card memory status depends on

UIM card style, please check with service provider

7.3 Groups

You can set five different group names, incoming rings, pictures, and group members, options as below:

- View: view contact group
- Add new group: add new contact group
- Group details: edit group names, tones, images
- Delete group: delete contact group

7.4 Speed dials

Assign a phone number to one of the speed-dialing keys, 2 to 99. At standby mode, press a speed-dialing key, then press the Dial key.

7.5 Delete all contacts

You can delete contacts from phone memory or UIM card.

8 Settings

8.1 Profiles

Select Memu > Settings > Profiles

There are some profile styles: General, Silent,

Meeting、Outdoor、 My style1 、 My style2. You can select your favorite profiles. Select 1 profile you can set options as below:

- Activate: Activate profiles

- Personalize:
 - Incoming call alert: select ringing, ring once, repeat once, off
 - Ringing tone: select favorite ring tone
 - Ringing volume: scroll up or down to adjust volume
 - Vibrating alert: set vibrating alert tone
 - Message alert tone: set message alert tone
 - Keypad tones: scroll up/ down to adjust volume
 - Warning tones: set warning tone

- Timed: Set expired time of profile

8.2 Display settings

To set screen display, options as below:

- Wallpaper: select the favorite wallpaper
- Themes: use default theme, or use other theme
- Brightness: scroll up/down to adjust brightness
- Backlight: always on, 7,15,30 seconds

8.3 Time and date

To set time and date, options as below:

- Clock: set hide clock, Digital clock or analog clock
- Time format: set 24-hour or 12-hour
- Date format: set date display YYYY,MM,DD

8.4 Call settings

- Anykey answer: set on/ off anykey answer
- IP number : set IP number
- Speed dialing: set on/ off
- International prefix: set manual or set prefix code
- Roam call alert: set on/ off roaming call alert
- Network service: set call divert and call waiting
- Answer machine enable: set the answer machine
- Answer machine set: you can set 3 kinds of answer machine
- Call restrictions: set the phone call restriction.
(Default is 0000)

8.5 Phone settings

- Language: setting language

- Memory status: view free memory and Media data status
- Shortcut:
 - Shortcut mode: set on/ off
 - Shortcut application: you can set 5 favorite shortcuts in standby mode
- Automatic keyguard: set keypad lock
- Automatic playlist build : set on/ off
- DTMF tones: select burst or continues tones
- Welcome: edit welcome
- Power on/off volume: scroll up/down to adjust volume
- Airplane mode: set on/off
- Phone info: view phone information

8.6 Security settings

Enter lock code to set security options as below:
(default is 0000)

- Lock phone: select unlock/ on power up/ lock now
- Change security code: set new lock code
- PIN management: You can get the PIN code from service supplier. Phone will be lock by entering wrong code three times.
- Reset to default: reset to default setting

8.7 Download settings

You can set as automatic setting in phone or memory card. You also can set manual download

9 Media data

It provides you the functions such as browsing media files, checking storage space and manages media files. Default files are Musics, Graphics, Recordings, My video, Themes files.

Select Menu > Media data, options as below:




 

 
- Open: Enter the folder.
- Details: view data details.
- Add Folder: create a new folder in the specific folder.
- Delete: delete the folder
- Sort: setting the sorting rule
- Memory status: view memory status

10 Entertainment

10.1 MP3

You can play MP3 from microSD card. It also supports background play. You can set 4 kinds of my playlists

Play function:

-  : stop
-  : next song
-  : play
-  : pause
-  : previous song
-  : press OK key to switch play style such as repeat one, repeat all, random

10.2 MP4

Access the menu, you can enter film list and press "option" to choose a movie clip to play. Add, delete, and delete all

While playing, scroll up or down to adjust volume. Scroll left or right to switch the previous or next film.

10.3 Camera

Camera options as below:

- Take movie: change camera to take video
- Size: set photosize 640*480,320*240 ,screen
- Brightness: 1~5 brightness rates
- Effect: select standard, black&white, archaize, reverse
- White Balance: select auto, tungsten lamp, fluorescent light, sunny, cloudy

- Auto timer: set delay 5,10, 15 seconds
- Quality: photo quality high/ middle/ low
- Shutter music: 4 shutter music
- Photo folder: open photo folder

Note: make sure SD card is inserted when you want to take pictures.

10.4 Album

You can see the photo and edit photo in the album. There are some functions such as open, delete, move, copy, rename, details, sort, add folder, memory status, set as wallpaper, send by MMS and so on.

10.5 FM radio

Access this menu, user can listen to radio. Press left or right to switch the previous/ next channel. Scroll up or down to adjust volume.

Note: Please put out the antenna fist before you use FM radio. You can not use radio when the battery is low.

10.6 Games

- Kongming chess
- Memory game

11 Application

11.1 ATV

Access menu, user can watch analog TV. While playing, scroll left or right to adjust ATV volume. Scroll up or down to switch previous or next channel. Press OK key to switch full screen.

Press left function key to set analog TV channel, options as below:

1. Access "Location Setting" to select your location.
2. Access "Auto scan" to search your location channel.
3. Back to analog TV menu, you can see the channel you have found. Press up and down to choose your favorite channel.

Note: Before you search analog TV channel, or watch analog TV, put out the antenna first.

11.2 Voice memo

Voice memo options as below:

- Memo list: view voice memo list
- Record list: view voice record list
- Answering rec.: you can record 3 answering records

11.3 Calculator

The calculator can add, subtract, multiplie, divide the value.

Enter the first number in the calculation. Press the scroll key (up/ down/ left/ right key) to enter add (+), subtract (-), multiply (*), and divide (/) characters, then press OK key to calculate the value. Press * key for a decimal point if necessary. Press # key for change positive/negative number.

11.4 Stopwatch

Your phone has 10 stopwatches that can be used to track time. The stopwatch displays time in hours, minutes, seconds. Press OK key to start, press right function key to return.

11.5 Organizer

World clock

User can view the local time of some cities around the world, and set your city for world clock.

Calendar

The calendar keeps track of reminders, calls you need to make, meetings, and birthdays. It can

even sound an alarm for any of these events. Monthly view provides an overview of the selected month and weeks. It also allows you to jump to a specific date. Any days or dates that appear in bold font contain calendar notes such as a meeting or reminder.

Alarm

You can set 4 alarms in the phone at most, options as blow:

- Alarm time: set alarm time
- Repeat alarm: repeat alarm days
- Alarm tone: select alarm tone
- Snooze time-out: select snooze time-out in 5, 10, 30, 60 minutes or others

11.6 Scratchpad

You can write something or diary in scratchpad. Press left function key to open, add, delete, and delete all scratchpad.

11.7 E-book reader

You can save txt format files (E-book) into the microSD card, E-BOOK folder. Select one of eBook to reader text.

12 eSurfing

➤ WAP

Base on the network provider's UIM card services, you can use the services here. If your UIM card and/or network provider do not support the service, this function is disabled. More details, please contact your network provider

WAP user can visit surf homepage, display existed bookmarks, save the website you have visited recently, store the information sent from the service provider and setting WAP.

- Home: browse the home page
- Bookmark: page bookmark as mark page or favorites
- History: select visit, details, delete, delete all
- Save this page: enter title and save current web page
- View saved pages: view saved pages in the folder open, rename, delete, delete all and create a new folder
- Reload: reload current network page
- Go to URL: add new URL or select one URL, select options as visit, edit, mark page, delete, delete all.
- Visit control: select back or forward page

- **Advanced:** advanced function such as push message, save items, show URL, clear Cache, clear cookies and about WAP information.
- **Settings:** to set HTTP proxy, Push setting, Cache setting, Cookie setting, SSL3.2 setting, view certificates, restore setting.
- **Exit:** exit network ,

➤ UTK

UTK is operator service. You may get detailed information from your local operator company.

13 Safe information

Battery

- Your device is powered by a rechargeable battery.
- The battery can be charged and discharged hundreds of times but it will eventually wear out. When the talk and standby times are noticeably shorter than normal, please buy a new battery.
- Use only the approved batteries, and recharge your battery only with approved chargers designated for this device.
- Unplug the charger from the electrical plug and the device when not in use. Do not leave the battery connected to a charger. Overcharging may shorten its lifetime. If left unused, a fully

charged battery will lose its charge over time.

Safe information

- Remember to follow special regulations in any area and always switch off your device when its use is prohibited or when it may cause interference or danger. Use the device only in its normal operating positions. Do not keep the device near credit cards and other magnetism medium, some accessories can bring magnetism that may be delete the data.
- Pacemaker manufacturers recommend that a minimum separation of 6in (20cm) should be maintained between a wireless phone and a pacemaker to avoid potential interference¹ with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research. To minimize the potential interference, persons with pacemakers should do as below:
 - Always keep the device more than 6 in (20 cm) from their pacemaker when the device is switched on.
 - Not carry the device in a breast pocket. Hold the device to the ear opposite the pacemaker
 - If you have any reason to suspect that interference is taking place, switch off your device immediately.

Hearing aids

Some digital wireless devices may interfere with some hearing

Other medical devices

Operation of any radio transmitting equipment, including wireless phones, may interfere with the functionality of inadequately protected medical devices. Switch off your phone in health care facilities when any regulations are posted in these areas instructing you to

14 Care and maintenance

Your device is a product of superior design and craftsmanship and should be treated with care. The following suggestions will help you protect your warranty coverage.

- Keep the device dry. Precipitation, humidity, and all types of liquids or moisture can contain minerals that will corrode electronic circuits. If your device does get wet, remove the battery, and allow the device to dry completely before replacing it.
- Do not use or store the device in dusty, dirty areas. Its moving parts and electronic

components can be damaged.

- Do not store the device in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
- Do not store the device in cold areas. When the device returns to its normal temperature, moisture can form inside the device and damage electronic circuit boards.
- Do not attempt to open the device other than as instructed in this guide.
- Do not drop, knock, or shake the device. Rough handling can break internal circuit boards and fine mechanics.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the device.
- Do not paint the device. Paint can clog the moving parts and prevent proper operation.
- Use a soft, clean, dry cloth to clean any lenses, such as camera, proximity sensor, and light sensor lenses.
- Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the device and may violate regulations governing radio devices.
- Use chargers indoors.
- Always create a backup of data you want to

keep, such as contacts and calendar notes.

- To reset the device from time to time for optimum performance, power off the device and remove the battery.

IMPORTANT NOTE:

Federal Communication Commission (FCC) Radiation Exposure Statement

This EUT is compliance with SAR for general population/uncontrolled exposure limits in ANSI/IEEE C95.1-1999 and had been tested in accordance with the measurement methods and procedures specified in OET Bulletin 65 Supplement C. This equipment should be installed and operated with minimum distance **1.5cm** between the radiator & your body.

FCC Warning statement

a. for FCC 15b devices

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

b. FCC Part 15.21 information for user

You are cautioned that changes or modifications not expressly approved by the party responsible for compliance could void your authority to operate the equipment.

b-1. FCC Part 15.19 (若 EUT 太小時無法放入 label 上時, 則須加入使用手冊內)

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation