



# User Manual

**FXP-861R / FXP-862R**

WCDMA Fixed Wireless Phone

# PREFACE

## WELCOME

Congratulations on the purchase of your **FXP-861R / 862R** product!

Please retain your original dated sales receipt for your records.

For warranty service of your **FXP-862R / 862R** product, you will need to provide a copy of your dated sales receipt to confirm warranty status.

Thank you for choosing Motorola product.

➤ **Please read important safety instructions before use.**

➤ **Read and understand all instructions before use.**

➤ **Please retain this guide for future reference.**

The information contained in the **FXP-862R / 862R** user guide is believed to be correct at the time of printing. We reserve the right to change or modify any information, product specifications, features or functionality without notice. The contents of the **FXP-862R / 862R** user guide are provided "as is." Certain features may not be activated by your service provider, and/or their network settings may limit the feature's functionality. Additionally, certain features may require a subscription.


Contact your service provider for details.

# Contents

PHONE OVERVIEW.....	4
INSTALLATION.....	5
KEY FUNCTION.....	6
[1] Left / Right Soft Key ( Menu / Call logs key ) .....	6
[2] Send key .....	6
[3] End key .....	6
[4] Numeric Keys / ' * ' keys / '# ' Keys .....	6
[5] Navigation / Scroll keys.....	6
[6] Speaker key .....	7
[7] Volume key.....	7
[8] FM Radio.....	7
[9] OK key.....	7
DISPLAY INDICATORS AND ICONS.....	8
BASIC OPERATION.....	9
[1] Switching the phone ON and OFF .....	9
[2] Making a call .....	9
[3] Answering a call .....	10
[4] Speaker mode.....	10
[5] Adjusting the Ring Volume.....	10
[7] Caller ID.....	11
[8] SMS and Voice Mail.....	11
USING PHONE MENUS.....	12
[1] Menus.....	12
[2] Scrolling through menus.....	12
[3] Exiting menu levels.....	12
[4] Menu Tree.....	12
[5] Using shortcuts through menu .....	12

<b>ENTER LETTERS AND NUMBERS.....</b>	<b>13</b>
<b>[1] Entering Letters.....</b>	<b>13</b>
<b>[2] Editing name or phone number.....</b>	<b>13</b>
<b>[3] Changing the case of letters and numbers .....</b>	<b>13</b>
<b>OVERVIEW OF MENU TREE.....</b>	<b>14</b>
<b>SAFETY INFORMATION.....</b>	<b>18</b>
<b>GARANTÍA.....</b>	<b>22</b>
<b>FCC NOTICE TO USERS.....</b>	<b>25</b>
<b>REGULATORY .....</b>	<b>27</b>

## PHONE OVERVIEW

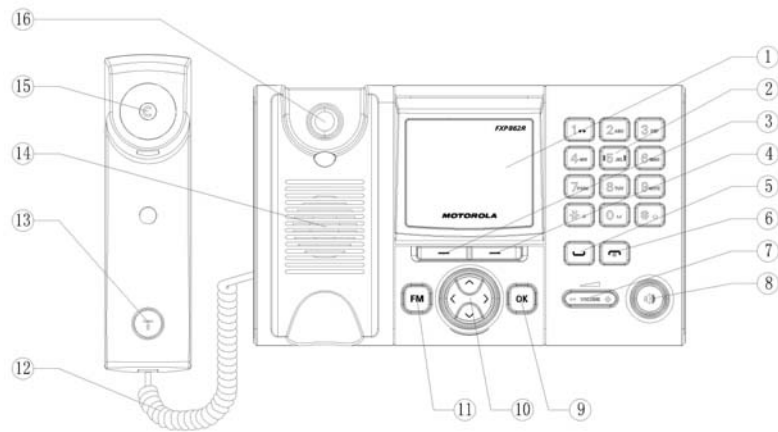

No.	Description	No.	Description
1	LCD display	9	OK Key
2	Numeric Key	10	Navigation key
3	Left / Menu / OK Key	11	FM key
4	Right / Call logs / Back Key	12	Coil cord
5	Call / Send Key	13	Microphone
6	End / Power off Key	14	Speaker
7	Volume Key	15	Receiver
8	Speaker Key	16	Hook

## INSTALLATION

- [1]** Connect the coil cord to both the handset and the transceiver (phone).
- [2]** Install the antenna to the antenna connector. Hold the plastic portion of the antenna and turn the metal screw clock-wise.
- [3]** Connect the adaptor to the AC Wall outlet and put adapter jack into the hole on the rear side of transceiver
- [4]** Remove the battery door and Insert SIM card into the SIM slot in the right direction. After this, please connect the rechargeable battery pack into the battery plug and replace the battery door.
- [5]** After installing the handset correctly, press the power key which is on the right of the front panel for about 3 seconds, the phone will then automatically test whether the SIM Card is inserted and valid. Wait for the antenna icon to display indicator bars before you make a call.

**Note:**

**The battery pack is a backup for emergencies in case of a power failure. Do not operate the phone without having the AC/DC adaptor connected.**

**Be sure to carefully match the positive and negative terminals as shown on the battery. When using the phone for the first time, charge it for over 6 hours to ensure optimum battery charge.**

**Caution:**

**It is prohibited to use the SIM card for this Fixed Wireless Phone in other GSM phone. Once the SIM pin number is entered, the SIM pin maybe automatically changed so the initial PIN is no longer valid. Therefore, it is highly recommended**

**NOT to take out the SIM card once it is installed in this product.**

**DO NOT bend or scratch your SIM card, and avoid exposing it to static electricity, water, or dirt.**

## KEY FUNCTION

### [1] Left / Right Soft Key ( Menu / Call logs key )

- ➔ Press the left soft key (**Menu/OK**) to perform the function indicated by the text on the screen above the key.
- ➔ Press the right soft key (**Call logs/Back**) to directly access the Call Record list

#### **Note:**

The functions of the soft keys depend on the guiding text shown above the keys. For example, when the text **Menu** is above the left soft key, press, and the left key enters the menu functions. Similarly, pressing the right soft key under the text **Call logs** accesses the call Record list functions

### [2] Send key

- ➔ Press to make a call to a name / number shown on the screen.
- ➔ Press to answer a call.
- ➔ Press to access the list of recently outgoing call .

### [3] End key

- ➔ Press to end a call.
- ➔ Press once to exit a function and return to the idle screen.

### [4] Numeric Keys / '\*' keys / '#' Keys

- ➔ Used for entering numbers and letters.
- ➔ Press and hold number 1 key to call the voice mailbox.
- ➔ Press '#' key to toggle between upper case, lower case and numeric modes in message mode.
- ➔ Press '\*' key to toggle between letters and symbols in message mode.

### [5] Navigation / Scroll keys

- ➔ Press up navigation key to go into **New SMS**.

- Press **down** navigation key to go into **Alarm**
- Press **Right** navigation key to go into **Calendar** menu
- Press **Left** navigation key to go into **Phonebook( Contacts )**.
- Press up/down key to up / down the phone's menu.

**Note:**

The key assignment of each navigation key could be different according each telephone service provider's preference. For the detail, please contact your service provider.

**[6] Speaker key**

If you are using the handset to call and you want to transfer the call to the speakerphone mode, press the Speaker key button and hang up the receiver to transfer the call to the speakerphone

**[7] Volume key**

- Press Volume left/right key to change volume level.

**[8] FM Radio**

- Press the shortcut key ( **FM** ) to directly access the sub-menu




















**[9] OK key**

- Press the shortcut key ( **OK** ) to directly select OK instead of left Soft key



## DISPLAY INDICATORS AND ICONS

The display indicators and icons provide information about the operation of the phone. The start screen is displayed when the phone is turned ON. Several features can be used only when the phone is at the start screen.

	Signal strength Indicator Indicates the strength of the network signal 
	GSM network
	UMTS network
	EDGE
	HSDPA
	Speaker mode
	USB connected
	Battery level indicator 
	Mute: shows when turn off the volume of MIC
	Call divert
	Call active
	Missed Call
	Received new SMS
	Received new MMS
	Received new email
	Music playing
	Alarm Clock

## BASIC OPERATION

### [1] Switching the phone ON and OFF

1) To turn on your phone, press and hold “**End key**” for a few seconds or until the display turns on.

2) To turn off your phone, press and hold “**End key**” for a few seconds.

### [2] Making a call

#### 1) Dial a Call

Raise your receiver and enter phone number which you want to call. After entering phone number and press “**Call key**” to make a call.

**Tip: In some menus like Phonebook, Call center, etc. which have individual phone number, Press “Call key” directly to make a call.**

#### 2) Dial the Fixed Phone Extension Number

Some fixed phone extension can't be called directly, it need a phone exchange. If you input the pause character 'P' between the exchange phone number and extension number, the phone will finish the dial procedure, connect to the extension. To get the “P”, press the “**★**” key some time till the “P” displayed on the phone screen.

#### 3) Dial a International Call

Press the “**★**” key some time till the character “+” displayed on the phone screen. Input the country code and the phone number after the prefix.

#### 4) Dial from Phonebook

Press **Left navigation** key to get into the phone book. Press **Up / Down** key to scroll the list to search the caller's name. Then press call key to make a call.

#### 5) Speed Dial

Press 2 ~ 9 keys for a while, the phone number stored in speed dial list will be sent out. Make sure the speed dial key has been set up.

**[3] Answering a call**

When your phone rings, just raise your receiver to answer, or press “**Send key**” or “**Speaker key**” to answer in speaker phone mode.

**[4] Speaker mode.**

You can make or answer a phone call by pressing Speaker key when the handset is on the base

To make a call:

- 1) Press the number you want to connect to without pick the handset up.
- 2) Press Send key

**Note: The call is automatically made without pressing, approximately 3 seconds after you dial the number.**

To answer a call

When the phone rings, press **Speaker key** to turn ON the speaker phone mode.

**[5] Adjusting the Ring Volume**

You can adjust the ring tone volume by pressing the left/right navigation keys on the phone in setting menu.

- 1) Incoming a call or During a call, directly press Volume keys to enter the **Ring Volume** control screen.
- 2) Press volume key to right to increase the volume.
- 3) Press volume key to left to decrease the volume.

**[6] Redialing the last-dialed number**

The phone stores up to 20 last dialed numbers.

- 1) Press **Send key** to find the most recently dialed numbers.
- 2) Press navigation key to scroll to the number you wish to dial.
- 3) Press **Send key** once.

**Note: If no recently dialed numbers are stored, you will not be able to use this function.**

**[7] Caller ID**

Requires a subscription to a calling plan that supports this feature. Not available in all areas. Contact your telephone service provider for availability and details. When Caller ID is active, your phone shows the caller's phone number during an incoming call, as long as this number is a part of your service provider's wireless network.

The wireless network lets you know if it does not recognize the caller's phone number. The wireless network will also let you know if the calling party has blocked the Caller ID feature.

If you have stored the name and number of the calling party in your Phonebook and that number is supported by the wireless network, the caller's name will also appear.

**[8] SMS and Voice Mail**

Requires a subscription to a calling plan that supports this feature. Not available in all areas. Contact your telephone service provider for availability and details.

A new SMS arrives:

The back light of the LCD is ON and the display shows "New Message, 1 unread" message with SMS icon. And if you want to read received new Message, press the left soft key ( View ). If you want to check message later, press the right soft key ( Back ).

Voice mail arrives :

The back light of the LCD is ON and the pop up display shows the receiving of New Voice Message with Voicemail icon. And if you want to check new voice message, press the left soft key. If you want to check message later, press the right soft key .

## USING PHONE MENUS

### [1] Menus

A menu is a list of choices you can make. Your phone has 11 menus. ( And your service provider may add STK menu extra depending on network service ) Each menu contains options that allow you to use the message, change the ring tone, etc. You can use menus and sub-menus in two ways: by scrolling or by using shortcuts.

### [2] Scrolling through menus

- 1) From the Start screen, press **Menu**, and then scroll through the menus using **Up / Down / Left / Right Navigation** key.
- 2) Use the scroll and **OK** key to select the submenus and **back** key to return to the Start screen.

### [3] Exiting menu levels

- 1) To return to the previous menu level, press **Back** key.
- 2) To return to the Start screen, press **End** key. No menu setting changes will be saved.

### [4] Menu Tree

You can refer to below pages about Menu tree for more details.

### [5] Using shortcuts through menu

- 1) Call logs : press the right soft key directly
- 2) Dialed calls: press Send key one time for a second.
- 3) SMS : press up navigation key directly.
- 4) Alarm : press down navigation key directly.
- 5) Phonebook ( Contacts ) : press left navigation key directly
- 6) Calendar : press right navigation key directly
- 7) FM: press FM shortcut key to FM directly

**Note:** The key assignment of each shortcut could be different according each telephone service provider. For the detail, please contact your service provider.

## ENTER LETTERS AND NUMBERS

### [1] Entering Letters

When you want to add new names or when you view names in the Contacts, your phone automatically switches to the abc (ABC) mode and displays the abc icon on the left upper side in Display. ✖: Abc→ ABC→ abc→ 123 and or→ ES→ es→ Es→ 123 like rotated

- 1) 1 key : displays many kinds of letter or symbol like “. , ? ! 1...^\_~” for your selecting
- 2) 2 ~ 9 key : displays the English and Spanish character or number marked on each key button, for example, if you press 2 key, it displays “a, b, c, à, á, ç, 2” for your selecting
- 3) 0 key : displays (Space) or '0'
- 4) \* key : displays many kinds of symbols for your selecting
- 5) # key : it is for changing letter case (✖)

### [2] Editing name or phone number

- 1) From the Phonebook, select the name you want to edit by scrolling Up / Down navigation key and press **OK key**.
- 2) To edit, press the left soft key and scroll down to the edit option and press **Select key**.
- 3) Edit the name and or the phone number you want to change and press again **OK key**.
- 4) Press Clear key to correct any mistakes or press hold to clear all.
- 6) Press the **OK key** to save changes

### [3] Changing the case of letters and numbers

You can switch the mode among uppercase and lowercase letters and numbers by pressing # key.

# OVERVIEW OF MENU TREE

\* For detail about menu tree and usage, please contact your service provider

<b>1. Messaging</b>		
	1. Write message	1) Text message
		2) Multimedia message
	2. Inbox	
	3. Draft	
	4. Outbox	
	5. Sent messages	
	6. Archive	
	7. SIM messages	
	8. Email	1) Gmail
		2) Hotmail
		3) Other Email accounts
9. Broadcast messages	1) Receive mode	
	2) Channel settings	
	3) Languages	
	4) Read messages	
10. Templates	1) Text message	
	2) Multimedia message	
11. Message settings	1) Text message	
	2) Multimedia message	
	3) Service message	
<b>2. Phonebook</b>		
	1. Add new contact	
<b>3. Call center</b>		

	1. Call history	
	2. Call settings	
<b>4. Settings</b>		
	1. Profiles	1) Ring type
		2) Incoming call
		3) Ringtone volume
		4) Message
		5) Message volume
		6) Keypad
		7) Keytone volume
		8) Power on
		9) Power off
		10) System alert
	2. Phone settings	1) Time and date
		2) Schedule power on / off
		3) Language
		4) Pref. Input method
		5) Dedicated keys
		6) Auto update time
	3. Display	1) Wall paper
		2) Screen saver
		3) Power on display
		4) Power off display
		5) Show date and time
		6) LCD backlight
	4. Network settings	1) Network selection
		2) Preferences



		3) Service selection
		4) Network information
		5) GPRS connection
		6) GPRS transfer pref.
		7) HSPA preference
	5. Security settings	1) SIM security
		2) Phone security
	6. Connectivity	1) Connection management
		2) Data accounts
		3) Internet tethering
		4) Data service
	7. Restore factory settings	
<b>5. Fun</b>		
	1. Java	
	2. Games	
<b>6. Services</b>		
	1. Internet service	
<b>7. File manager</b>		
	1. Phone	
<b>8. Calculator</b>		
<b>9. Multimedia</b>		
	1. Image viewer	
	2. Media player	1) Now playing
		2) All songs
		3) All videos
		4) Music playlists
		5) Streaming URL

	3. Photo editor	
	4. Sound recorder	
	5. FM radio	
<b>10. Email</b>		
	1. Gmail	
	2. Hotmail	
	3. Other Email accounts	
<b>11. STK</b>		
<b>12. Organizer</b>		
	1. Ebook reader	
	2. Calendar	
	3. Tasks	
	4. Alarms	
	5. Unit converter	1) Weight
		2) Length
	6. Currency converter	
	7. Stopwatch	1) Typical stopwatch
		2) nWay stopwatch
	8. World clock	
	9. Notes	

\* Please check with your service provider for more detail before using this function

The information contained in the FXP-861R / 862R user guide is believed to be correct at the time of printing. We reserve the right to change or modify any information, product specifications, features or functionality without notice. The contents of the FXP-861R / 862R user guide are provided "as is." Certain features may not be activated by your service provider, and/or their network settings may limit the feature's functionality. Additionally, certain features may require a subscription. Contact your service provider for details.

# SAFETY INFORMATION

## 1. EXPOSURE TO RADIO FREQUENCY (RF) ENERGY

- Your phone contains a transmitter and a receiver. When it is ON, it receives and also sends out radio frequency (RF) signals. When you communicate with your phone, the system handling your call controls the power level at which your phone transmits.
- Your phone is designed to comply with local regulatory requirements in your country concerning exposure of human beings to RF energy.

## 2. OPERATIONAL PRECAUTIONS

- To assure optimal phone performance and make sure human exposure to RF energy is within the guidelines set forth in the relevant standards; always adhere to the following procedures.

## 3. EXTERNAL ANTENNA CARE

- Use only the supplied Motorola approved antenna. Unauthorized antennas, modifications, or attachments could damage the phone.
- Do NOT hold the antenna when the phone is IN USE. Holding the antenna affects call quality and may cause the phone to operate at a higher power level than needed. In addition, use of unauthorized antennas may result in non-compliance with the local regulatory requirements in your country.

## 4. PHONE OPERATION

- When placing or receiving a phone call, hold your phone as you would use a wireless telephone.
- To maintain compliance with RF energy exposure guidelines, ensure the phone antenna is at least 10 inches (25centimeters) from your body when transmitting.

## **5. APPROVED ACCESSORIES**

- Use of accessories not approved by Motorola, including but not limited to batteries and antennas, may cause your phone to exceed RF energy exposure guidelines.

## **6. RF ENERGY INTERFERENCE / COMPATIBILITIES**

- Nearly every electronic device is susceptible to RF energy interference from external sources if inadequately shielded, designed, or otherwise configured for RF energy compatibility. In some circumstances your phone may cause interference.

## **7. MEDICAL DEVICES**

### **1) Pacemakers**

Pacemaker manufacturers recommend that a minimum separation of 10 inches (25centimeters) be maintained between the fixed wireless phone and a pacemaker.

Persons with pacemakers should:

Always keep the phone more than 10 inches (25 centimeters) from your pacemaker when the phone is turned ON. Turn OFF the phone immediately if you have any reason to suspect that interference is taking place.

### **2) Hearing Aids**

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your hearing aid manufacturer to discuss alternatives.





### **3) Other Medical Devices**

If you use any other personal medical device, consult the manufacturer of your device to determine if it is adequately shielded from RF energy. Your physician may be able to assist you in obtaining this information.

## 8. BATTERIES

Batteries can cause property damage and / or bodily injury such as burns if a conductive material such as jewelry, keys, or beaded chains touches exposed terminals. The conductive material may complete an electrical circuit (short circuit) and become quite hot. Exercise care in handling any charged battery, particularly when placing it inside a pocket, purse or other container with metal objects. Use only original batteries and chargers.

Your battery or phone may contain symbols, defined as follows.

	<b>Important safety information will follow</b>
	<b>Your battery or phone should not be disposed of in a fire</b>
	<b>Your battery or phone may require recycling in accordance with local laws. Contact your local regulatory authorities for more information</b>
	<b>Your battery or phone should not be thrown in the trash</b>

- Please don't use any damaged battery or charger and use the battery only for its intended purpose.
- Don't apply extreme shock to the battery. It's dangerous to disassemble a battery or to apply extreme shock to the battery via nail or heavy metal objects.
- Keep the charger or batteries out of reach of small children or babies.
- Always try to keep the battery between -10 ~ 55 Celsius.
- Use only manufacturer approved rechargeable batteries and charger designated for this device.

### **9. Seizures / Blackouts**

- Some people may be susceptible to epileptic seizures or blackouts when exposed to flashing lights, such as when watching television or playing video games. These seizures or blackouts may occur even if a person never had a previous seizure or blackout.
- If you experienced seizures or blackouts, or if you have a family history of such occurrences, please consult with your doctor.

# GARANTÍA

Garantía Limitada para los Productos de Comunicación Personal, Accesorios y Software.

¿Qué cubre esta garantía? Conforme a las exclusiones contenidas a continuación, BRIGHTSTAR garantiza los productos de marca Motorola que BRIGHTSTAR fabrica ("Productos"), esta libre de defectos en materiales y de manipulación bajo uso normal del consumidor para el periodo(s) esbozado a continuación. Esta garantía limitada es el remedio exclusivo del consumidor, y aplica como sigue a nuevos productos, que son acompañados por esta garantía escrita:

## Productos cubiertos

1. Teléfono fijo inalámbrico.
2. Los accesorios incluidos con el teléfono fijo inalámbrico.

## Duración del cubrimiento

A. Un (1) año a partir de la fecha de compra por el consumidor/comprador original del producto

## Exclusiones

**Baterías.** Sólo baterías cuya capacidad cargada totalmente cae por debajo de 80% de su capacidad promedio, y baterías que su escape sea cubierto por esta garantía limitada.

**Abuso y mal uso.** Defectos o daños que resultan de: (a) funcionamiento impropio, almacenamiento, mal uso o abuso, accidente o descuido, como daño físico (grietas, arañazos, etc.) a la superficie del producto que son el resultado del mal uso; (b) contacto con líquido, agua, lluvia, humedad extrema o transpiración pesada, corrosión, suciedad o similar, calor extremo, o comida; (c) uso del Producto para propósitos comerciales o someter el Producto a uso o condiciones anormales; o (d) otros actos que no son culpa de BRIGHTSTAR, se excluyen del cubrimiento.

**Uso de productos y accesorios no marcados como Motorola:** Defectos o daño que son el resultado del uso de productos, accesorios, software u otros equipos periféricos no marcados o certificados como Motorola, se excluyen del cubrimiento.

**Servicio o modificación no autorizados.** Defectos o daño que son el resultado del servicio, prueba, ajuste, instalación, mantenimiento, alteración, o modificación de forma alguna por alguien que no es de BRIGHTSTAR o sus centros de servicio autorizados se excluyen del cubrimiento.

**Productos alterados.** Productos o accesorios con (a) números de serie o etiquetas de fecha que se han removido, alterado o borrado; (b) Sellos que muestren evidencia de manipulación; (c) números de serie que no concuerdan; o (d) carcasas o piezas no compatibles o de marca diferente a Motorola, se excluyen del cubrimiento.

**Servicios de comunicación.** Defectos, daños, o falla de productos, debido a cualquier servicio de comunicación o señal a la que usted se haya suscrito o utilizado con los productos se excluyen de la cobertura.

**¿Quiénes están cubiertos?** Esta garantía sólo se extiende al primer consumidor/comprador, y no es transferible.

**¿Qué hará BRIGHTSTAR?** BRIGHTSTAR, a su voluntad, sin cargo para usted, reparará, reemplazará o reintegrará el precio de la compra de cualquier producto que no resulte conforme a esta garantía. Nosotros podemos usar funcionalmente productos, accesorios o partes equivalentes reacondicionadas, restauradas, de segunda mano o nuevas. Ningún dato, software o aplicaciones que se hayan agregado a su producto, accesorio o software, incluidos pero no limitados a los contactos personales, juegos y tonos de timbre, se reinstalará. Evitar por favor perder tales datos, software y aplicaciones; cree un respaldo de esos datos antes de pedir el servicio.

#### **Cómo obtener servicio de garantía u otra Información**

Para información en cómo obtener servicio, contacte el lugar donde el producto fue



comprado o un centro de servicio BRIGHTSTAR en su país.

Para que esta garantía tenga efecto, lleve su unidad, junto con esta póliza, al lugar de compra o a un centro de servicio autorizado BRIGHTSTAR.

Usted recibirá instrucciones de como enviar los productos, a expensas suyas, a un centro de reparación autorizado de BRIGHTSTAR. Para obtener servicio, usted debe incluir: (a) una copia de su recibo, factura de venta u otra prueba comparable de compra, (b) una descripción escrita del problema; (c) el nombre de su proveedor de servicio, si aplica; (d) el nombre y locación del establecimiento de la instalación (si aplica) y, mas importante; (e) su dirección y número de teléfono.

**¿Qué Otras Limitaciones Existen?** CUALQUIER GARANTÍA IMPLÍCITA INCLUYE SIN LIMITACIÓN LAS GARANTÍAS IMPLÍCITAS DE COMERCIABILIDAD Y APTITUD PARA UN PROPÓSITO PARTICULAR, SE LIMITARÁ A LA DURACIÓN DE ESTA GARANTÍA LIMITADA, POR OTRA PARTE LA REPARACIÓN, REEMPLAZO, O REEMBOLSO PROVEIDA BAJO ESTA GARANTÍA LIMITADA ES EL REMEDIO EXCLUSIVO DEL CONSUMIDOR, Y SE PROPORCIONA EN LUGAR DE TODAS LAS OTRAS GARANTÍAS, EXPRESAMENTE O IMPLICITAMENTE. EN NINGÚN EVENTO MOTOROLA O BRIGHTSTAR SERÁ RESPONSABLE, YA SEA EN AMBITOS CONTRACTUAL O CIVIL (INCLUSO NEGLIGENCIA) POR DAÑO Y PERJUICIOS POR MAS DEL PRECIO DE COMPRA DEL PRODUCTO, O POR CUALQUIER DAÑO INDIRECTO, INCIDENTAL, ESPECIAL DE CUALQUIER TIPO. O PERDIDA DE GANANCIAS O LUCRO CESANTE, PERDIDA DE NEGOCIOS, PERDIDA DE INFORMACION O DATOS U OTRA PERDIDA FINANCIERA QUE SURJAN DE LA CAPACIDAD O INCAPACIDAD DE USAR LOS PRODUCTOS, LA MAGNITUD DE ESTOS DAÑOS PODRAN SER NEGADOS POR LA LEY

**Algunos estados y jurisdicciones no permiten la limitación o la exclusión de daños incidentales o consiguientes, o limitación en la duración de una**

**garantía implícita, así que las limitaciones anteriores o exclusiones puedan no aplicarse a usted. Esta garantía le da derechos legales específicos, y usted también puede tener otros derechos que varían de estado a estado o de una jurisdicción a otra.**

## **FCC NOTICE TO USERS**

We have not approved any changes or modifications to this device by the user. Any changes or modifications could void the user's authority to operate the equipment. See 47 CFR Sec. 15.19(3).

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1) This device may not cause harmful interference, and
- 2) this device must accept any interference received, including interference that may cause undesired operation. See 47 CFR Sec. 15.19(3).

If your mobile device or accessory has a USB connector, or is otherwise considered a computer peripheral device whereby it can be connected to a computer for purposes of transferring data, then it is considered a Class B device and the following statement applies:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular

installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**RF exposure information:**

To maintain compliance with FCC RF exposure requirements, use fixed wireless phone that maintain a 20cm separation distance between the user's body and the host. MPE limit for RF exposure at prediction frequency is  $0.566\text{mW}/\text{cm}^2$  for GSM850MHz,  $1\text{mW}/\text{cm}^2$  for GSM1900MHz,  $0.564\text{mW}/\text{cm}^2$  for WCDMA850MHz and  $1\text{mW}/\text{cm}^2$  for WCDMA1900MHz. The MPE for GSM850MHz is  $0.095\text{mW}/\text{cm}^2$ ,  $0.073\text{mW}/\text{cm}^2$  for GSM1900MHz.  $0.060\text{mW}/\text{cm}^2$  for WCDMA850MHz and  $0.120\text{mW}/\text{cm}^2$  for WCDMA1900MHz. It satisfy RF exposure compliance.

## REGULATORY



Brightstar Corp. hereby declares this unit to be in compliance with the relevant Provisions of the Low Voltage Directive 73/23/EEC and the EMC Directive 89 / 336 / EEC.

Brightstar Corp. hereby declares this unit to be in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EEC.

The FCC certification is applicable only for FXP-861R / 862R

**User Manual of FXP-861R / 862R version 0.1 [ENG] 04/01/2013**

**Copyright 2013, Motorola Inc., All rights reserved.**