 


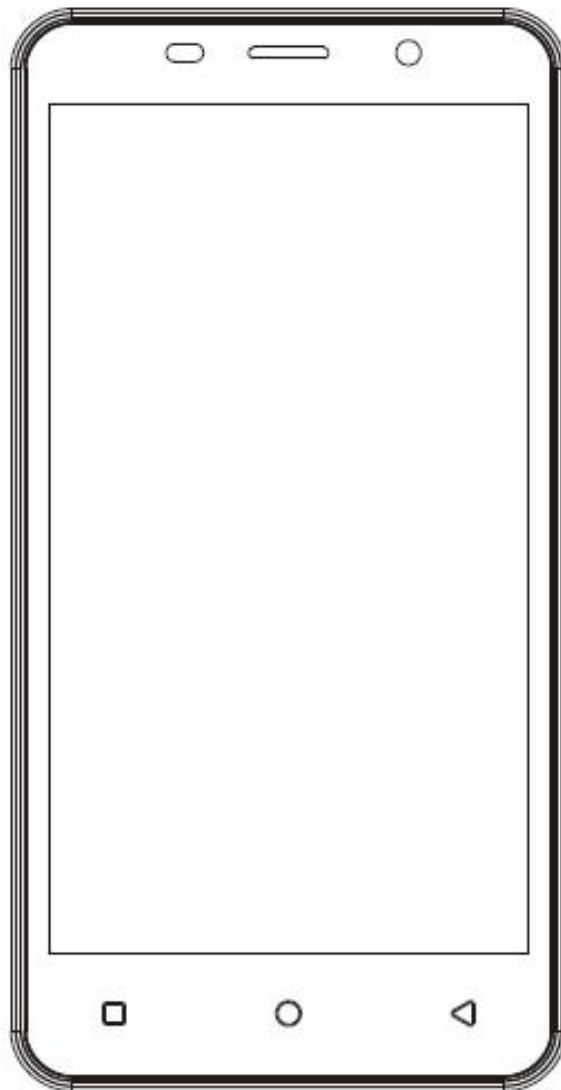

User Manual

Model :B9505

 


1. Caution:

- 1) Do not drop, hit or place heavy objects on the touch screen.
- 2) Avoid placing any heavy objects on the mobile phone.
- 3) Do not use the mobile phone in areas near water, take special care during rain, snow, on the beach, or near the shore. Exposing the mobile phone to these conditions may cause damage to it.

Accessories:

- 1) DC+5V Adaptor *1
- 2) USB Cable*1
- 3) Rechargeable battery *1
- 4) Earphone *1
- 5) User manual *1

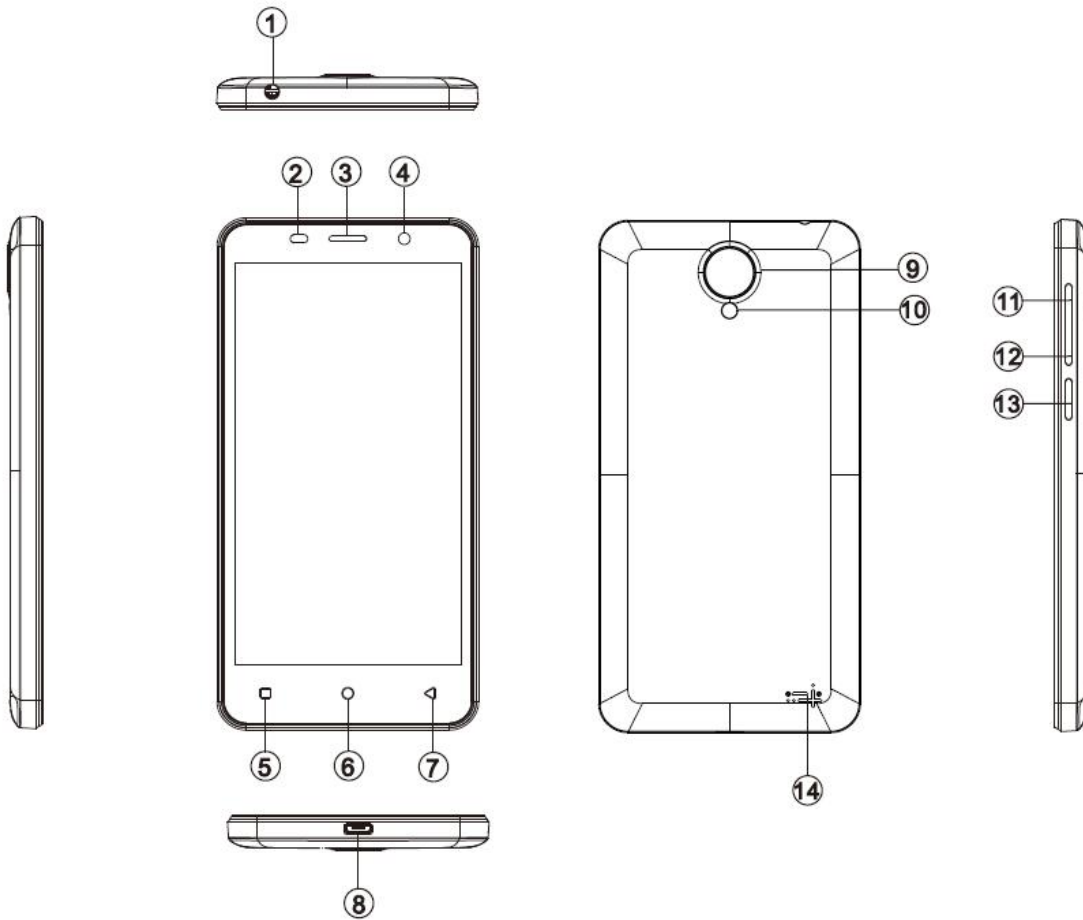

1. Earphones Jack
2. Proximity sensor
3. Receiver
4. Front Camera
5. Go to the sub-Menu (if available) of current menu.
6. Go to the home screen
7. Go back a screen
8. USB Port (for charging and connecting to computer)
9. Rear Camera
10. Flash
11. Volume+ Control Key
12. Volume- Control Key
13. Power On/Off
14. Speaker

2. Feature:

- 5.0 inch Touch Screen 854*480TN
- CPU: MTK6737M 1.5Ghz
- Operation System: Android 7.0
- Network: 802.11 b/g/n
- RAM:1GB + ROM:8GB
- SIM 1:GSM 850/1900 ,UMTS Band II , FDD-LTE Band2 / Band4/ Band7
- SIM 2: GSM 850/1900
- Camera: Front camera 5.0 MP /Rear 8.0 MP
- Bluetooth: BT 4.0
- Built-in Battery: Lithium-Ion Battery 2100 MAH, 4-10 hours working time

3. Battery Charging

Connect one end of the USB cable (supplied) to the USB port of the DC+5V adaptor (supplied) and the other end of the USB cable to the USB port of the mobile phone, then plug the DC+5V adaptor into the wall socket (AC 180-240V), charging will start.

The battery can also be charged by connecting directly one end of the USB cable to the USB port of the mobile phone and the other end of the USB cable to the USB port of a computer.

Note:

When the battery is low, the screen will display “**Battery is low**”. The mobile phone may not function properly if battery is low, please recharge battery immediately.

◆ Caution

 
Do not throw the battery into the fire, otherwise it may cause fire breakout or explosion of the battery. Do not place the battery together with metal necklaces or with other metal objects, otherwise it may cause liquid leakage, overheat, fire breakout or explosion of the battery. Do not use or place the battery near the fire, oven or other places with high temperature, otherwise it may cause liquid leakage, overheat, fire breakout or explosion of the battery. If you notice, when charging the battery or using the mobile phone, that the temperature of the battery is abnormally high; the color of the battery casing has changed; the battery casing is distorted or any other unusual phenomena, please stop using the mobile phone and replace the battery. Do not charge the battery continuously for more than 24 hours.

◆ Inserting and Removing the SIM Cards or TF Card


Turn off the mobile phone. Unplug the external power supply, remove the battery, then insert the SIM card or TF card into the holders as shown in the picture below. Do the same when you want

to remove the SIM card or TF card.



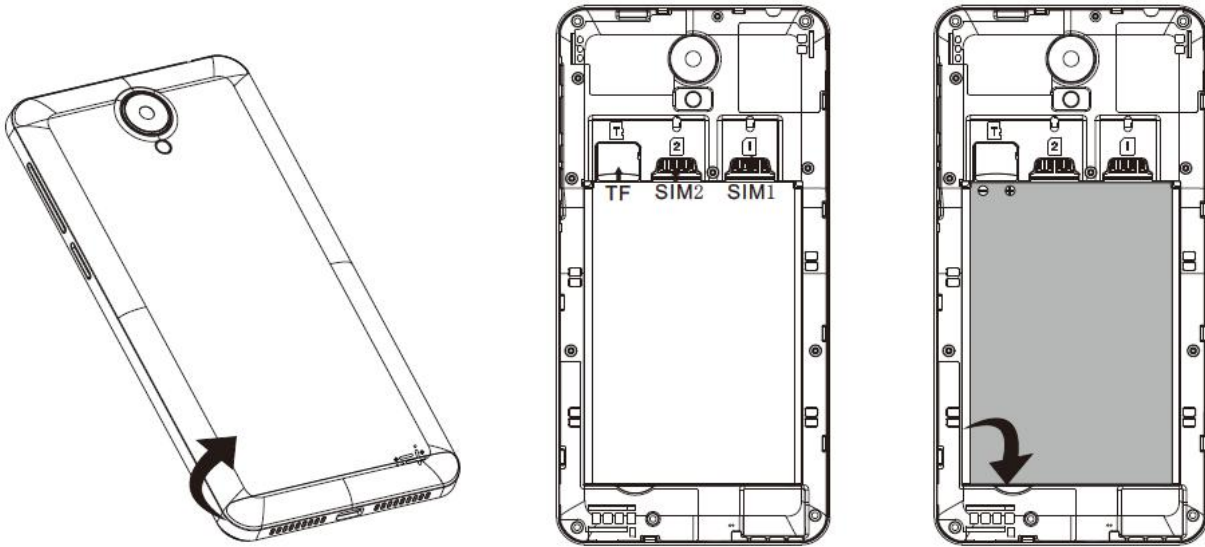



Warning: Never insert or remove the SIM card or TF card when an external power supply is connected, as this may cause damage to the SIM card or TF card.









4. Power On/Off

To turn on the smartphone, long press Power On/Off key. To unlock, drag the “” icon to the upper. To lock the screen, short press the Power On/Off key. To turn off the mobile phone, long press Power On/Off button, then touch “Power Off”.

5. Icons

Icon	Description
	Indicate the strength of the network signals.
	Show missed calls.
	A new message is received
	An application is being downloaded.
	The alarm clock has been set and activated.
	A call is in progress.

	A piece of music is playing
	Show battery level.
	USB connection is enabled
	Access is blocked.
	Connected to the WiFi network
	Bluetooth is turned on

◆ Calls Options


Mute: Press  to mute the voice.

Hands-free: Press  to switch on the hands-free speaker.



New call: Press  to add a new call

End a call: Press  to end the current call.



6. Data Connection

Data Connection: In the main menu, touch Settings, then select SIM cards, and select a SIM card and touch Cellular data to Select a SIM for data. To turn off data connection, touch SIM slot 1 or 2  .



Note: To enable data connection, please first insert a SIM card into the mobile phone

WiFi: In the main menu, touch Settings, touch Wifi off  to turn on and **search**. To turn off, touch again. 

7. Bluetooth

In the main menu, touch Settings, touch Bluetooth Off  to turn on and search other Bluetooth devices, when Bluetooth is turned on, your device can communicate with other nearby Bluetooth devices. Touch Bluetooth On  again to turn off your device.

8. USB Computer Connection

Turn on the smartphone, use the USB cable (supplied) to connect the USB Port of the mobile phone to the USB port of a computer, the icon  hide automatically on the top of the screen of the mobile phone. Pull down from the top screen and touch  to go into the USB connection interface, you can select the Connection type by touching “” to enable it

Utilizar USB para

- Cargar este dispositivo
Cargar solo este dispositivo
- Transferir archivos
Transferir archivos a otro dispositivo
- Transferir fotos (PTP)
Transferir fotos o archivos si no se admite MTP (PTP)
- Utilizar dispositivo como MIDI
Utilizar este dispositivo como MIDI

CANCELAR

10. Specification

Touch Screen		5 inch Touch Screen TN
Resolution		854*480TN
CPU		MTK6737M 1.5Ghz
RAM		1GB
ROM(EMCP FLASH)		8GB
Operation System		Android 7.0
Network	WIFI	802.11 b/g/n
	SIM 1	GSM 850/1900 ,UMTS Band II , FDD-LTE Band2 / Band4/ Band7
	SIM 2	GSM 850/1900
Special functions	Sensor	G-sensor
	Bluetooth	Bluetooth 4.0
	FM	Yes
Web camera		DUAL CAMERA: Front 5.0 MP Camera; Back 8.0 MP
Extend Port	1.USB Interface	USB Micro 5Pin *1
	2.Memory Card Slot	Support TF /Micro SD Card Up to 32GB extended.
	3.SoundEffect Interface	3.5 MM Headphone jack Built-in Microphone: Support, high sensitive input
Power Supply	Battery	2100MAH
	Adapter	AC In 100-240V.50-60HZ, DC Out DC 5V/ 1A
Working time		4-10 hours working time
Language		Multi-languages
Unit Size		140.1*72.0*8.7mm
Support Format	Picture	JPEG, JPG, BMP, GIF
	Audio	MP4/MP3/WMA/APE/FLAC/AAC/WAV
	Video	AVI,WMA,3GP/MP4,MOV,MPG,VOB,MKV,FLV,TS/TP RMVB
	E-BOOK	UMD, TXT, PDF etc
	Extras	Pre-Installed App
Accessories		User Manual, DC Adapter ,Micro USB Cable,Earphone,Battery

11. Notices for the use of phone

Your phone is a product of superior design and craftsmanship and should be treated with care. The following suggestions can help you comply with the terms of repair kits, to extend the life of mobile phone.

- 1) Place the mobile phone and their parts and components out of reach of small children.
- 1) Keep the phone dry, rain, humidity and all types of liquids which contain minerals will corrode electronic circuits.
- 2) Don't touch the phone with wet hands when charging, it will cause electric shock or damage the phone.
- 3) Avoid place the device in high temperature environment. Temperatures will shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
- 4) Avoid place the device in too low temperature environment. When the temperature rises, the phone will produce water vapor that may damage electronic circuit.
- 5) Avoid place the phone in dusty, dirty places, otherwise parts may be damaged.
- 6) To avoid the phone in a lit cigarette, near open flame or any heat source.
- 7) Do not open the device, non-professional approach will do damage to the phone.
- 8) Do not throw it from height, knock or shake the phone, rough handling can damage internal circuit boards.
- 9) Do not paint the phone, because the paint will block headphones, microphones or other removable parts, and lead it not work.
- 10) Use clean, soft, dry cloth to clean the camera, light sensor lenses. Prohibit the use of harmful chemicals and cleaning agents, cleaning fluids to clean the phone
- 11) If mobile phone, battery, charger, or mobile phone accessories are defective, send to the nearest qualified service center for inspection.
- 12) If necessary, Service Centre staff will assist you and will arrange for phone repairs.

The FCC warning:

This device complies with part 15 of the FCC Rules. Operation is subject to the condition that this device does not cause harmful interference

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Specific Absorption Rate (SAR) information:

This Mobile Phone meets the government's requirements for exposure to radio waves. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health.

FCC RF Exposure Information and Statement The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types: S100 (FCC ID: WVBMB9505) has also been tested against this SAR limit. The highest SAR value reported under this standard during product certification for use at the ear is 0.392W/kg and when properly worn on the body is 1.148W/kg. This device was tested for typical body-worn operations with the back of the handset kept 0mm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 10mm separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

Body-worn Operation

This device was tested for typical body-worn operations. To comply with RF exposure requirements, a minimum separation distance of 10mm must be maintained between the user's body and the handset, including the antenna. Third-party belt-clips, holsters, and similar accessories used by this device should not contain any metallic components. Body-worn accessories that do not meet these requirements may not comply with RF exposure requirements and should be avoided. Use only the supplied or an approved antenna.