

BRIGMT N



BTPC-PH2

**TABLET PC-CAPACITIVA 7"-TELÉFONO-3G-DUAL SIM
Android 4.1.2-GPS-Bluetooth**

Manual de Instrucciones

CONTENIDO

- 1 Introducción
 - 1.1 Advertencias
 - 1.2 Instrucciones de seguridad
- 2. Funcionamiento
 - 2.1 Preparación y uso
 - 2.3 Iconos de estado
- 3. Guía de inicio rápido
 - 3.1 Botones de función
 - 3.2 Encendido y apagado
 - 3.3 Abrir y cerrar pantallas
 - 3.4 Uso de la pantalla táctil
 - 3.5 Interfaz principal
 - 3.6 Aplicaciones
 - 3.7 Conexión USB
 - 3.8 Sistemas de entrada
 - 3.9 Técnicas de aplicaciones
- 4. Ajustes básicos
 - 4.1 Tarjeta SIM
 - 4.2 WiFi
 - 4.3 Bluetooth
 - 4.4 Uso de datos
 - 4.5 Otras funciones
 - 4.6 Perfiles de audio
 - 4.7 Pantalla
 - 4.8 Almacenamiento
 - 4.9 Batería
 - 4.10 Aplicaciones y programas
 - 4.11 Cuentas y sincronización
 - 4.12 Servicios de localización
 - 4.13 Configuración de seguridad
 - 4.14 Idioma y entrada de texto
 - 4.15 Copia de seguridad y reset
 - 4.16 Fecha y hora
 - 4.17 Programar encendido y apagado
 - 4.18 Accesibilidad
 - 4.19 Opciones de desarrollo
 - 4.20 Acerca del dispositivo
- 5. Multimedia
 - 5.1 Música
 - 5.2 Vídeo
 - 5.3 Galería de fotos

- 5.4 Cámara
- 5.5 Radio FM
- 6. Funciones de comunicación
 - 6.1 Teléfono
 - 6.2 Mensaje de texto
 - 6.3 Lista de contactos
- 7. Internet
 - 7.1 Navegador
 - 7.2 Correo electrónico
- 8. GPS
- 9. Otras aplicaciones
 - 9.1 Reloj
 - 9.2 Calculadora
 - 9.3 Administrador de archivos
 - 9.4 Grabadora
- 10. Procedimientos de instalación
 - 10.1 Instalar
 - 10.2 Desinstalar
- 11. Solución de problemas

1. INTRODUCCIÓN

1.1 Advertencias

Por favor, mantenga siempre el dispositivo alejado de sitios húmedos, no utilice el dispositivo ni el cargador con las manos mojadas. No exponga el dispositivo a temperaturas extremas, tanto frías como calientes. Evite golpes bruscos.

No desmonte nunca el dispositivo pues es causa de pérdida de la garantía.

1.3 Instrucciones de seguridad

- Antes de usar el dispositivo, por favor, lea con atención estas instrucciones
- No utilice nunca el dispositivo mientras conduce, con el fin de garantizar una conducción segura.
- Respete las normas en cada zona en las que use el dispositivo, como hospitales, gasolineras, etc.
- Respete las normas a bordo de un avión, para impedir que la señal interfiera en los dispositivos de navegación.
- Mantenga el dispositivo alejado de equipos magnéticos ya que las radiaciones pueden provocar pérdidas de datos o mal funcionamiento.
- Mantener lejos del alcance de niños y supervisar el uso realizado por niños.
- No utilice nunca el dispositivo en el baño u otro ambiente húmedo.

2. FUNCIONAMIENTO

2.1 Preparación y uso

Cargue la batería por completo antes de usar el dispositivo, para ello use el adaptador suministrado.





2.3 Iconos de estado

	Nuevo Email		Modo Avión
	USB conectado		Depuración USB
	Botón VOLVER		Descargando archivo/apk
	Ajustes y aplicaciones recientes		Botón HOME
	Indicador de batería		WIFI COnectada

Los iconos de estado o aviso se encuentran en la barra inferior, puede desplegar la barra para mayor información .

3. GUÍA DE INICIO RÁPIDO

3.1 Botones de función

Botón de encendido	Pulsación larga para encender o apagar y corta para modo standby
Volumen +	Aumentar volume
Volume n -	Disminuir volumen
Botón HOME 	Para volver al menú principal
Botón volver 	Para volver a la pantalla anterior
Botón Menú 	Muestra la interfaz de menú
Botón Ajustes y APK 	Muestra ajustes y aplicaciones recientes

3.2 Encendido y apagado

Encendido: Mantenga pulsado el botón de encendido durante 3 segundos. El sistema entrará en estado de bloqueo de la pantalla, por favor, desbloquee la pantalla

Apagado:

1. Mantenga pulsado el botón de encendido y se mostrará la pantalla de apagado.

2. Podrá seleccionar: APAGADO-SILENCIO-AVIÓN-REINICIO

 
3. Seleccione apagado.

3.3 Abrir y cerrar pantallas

1. Pantalla irá a modo standby por su cuenta si no se usa ninguna función en un periodo de tiempo con el fin de ahorrar batería

2. Cuando la pantalla esté encendida, pulse el botón de encendido rápidamente y la pantalla se apagará inmediatamente.

Para volver a encender la pantalla pulse el botón de encendido de nuevo. Una vez encendida mostrara el menú de bloqueo, podrá desbloquear o entrar en la función cámara:

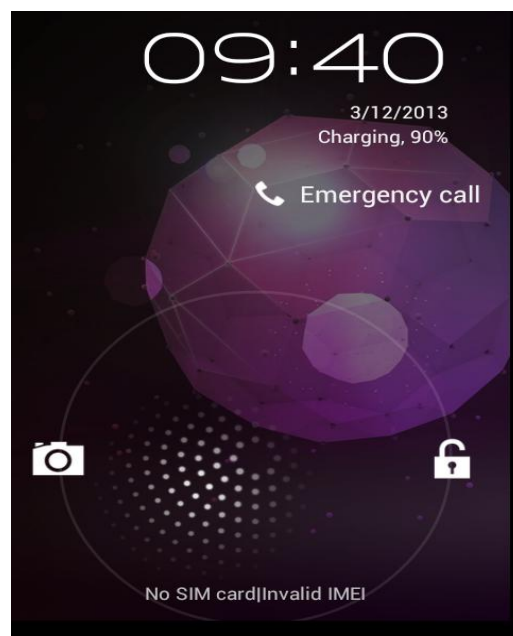

3.4 Uso de la pantalla táctil

Hacer clic: Para hacer clic debe tocar con el dedo en la posición deseada.

Apertura de icono: Para abrir un icono o programa pulse sobre él.

 
Deslizamiento: Para deslizar la pantalla pase rápidamente el dedo hacia izquierda/derecha o arriba/abajo

Mover: Mantenga pulsado con el dedo un icono y arrástrelo a la posición deseada. Luego suelte el icono dejando de pulsar.


Girar: Si está activada la función de giro, puede simplemente girar el dispositivo para girar la pantalla o imagen.

3.5 Interfaz principal

En esta imagen se muestra la pantalla de inicio principal:

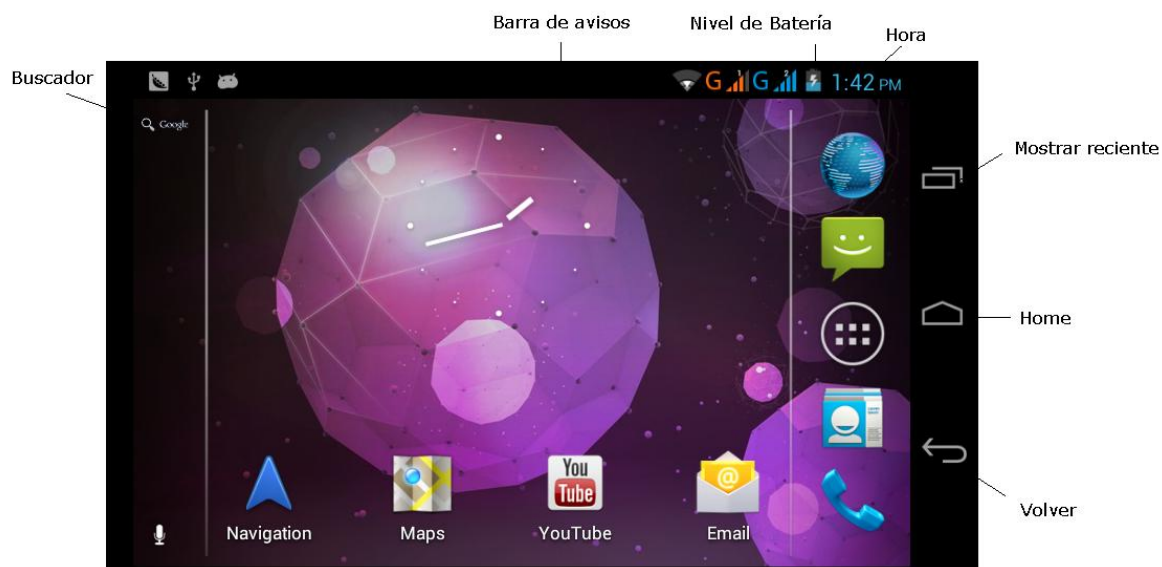


 Página de inicio extendida: La página de inicio se puede extender más allá de la anchura de la pantalla para ofrecer más espacio, donde podrá poner accesos directos y widgets. Haga clic en el espacio en blanco en la página de inicio y luego deslice hacia la derecha o la izquierda para extender a la derecha o la izquierda de la pantalla:

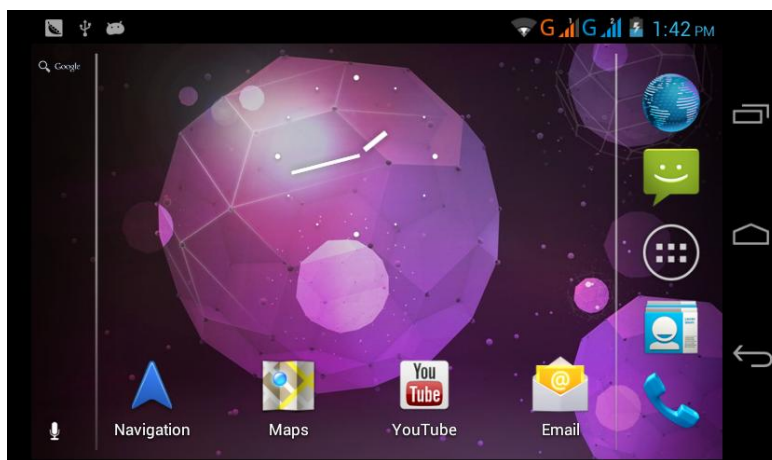

Puede crear una carpeta de iconos en el escritorio. Para ello Arrastre

 los iconos seleccionados al escritorio. A continuación, arrastre un icono y sitúelo sobre otro para agrupar los iconos:

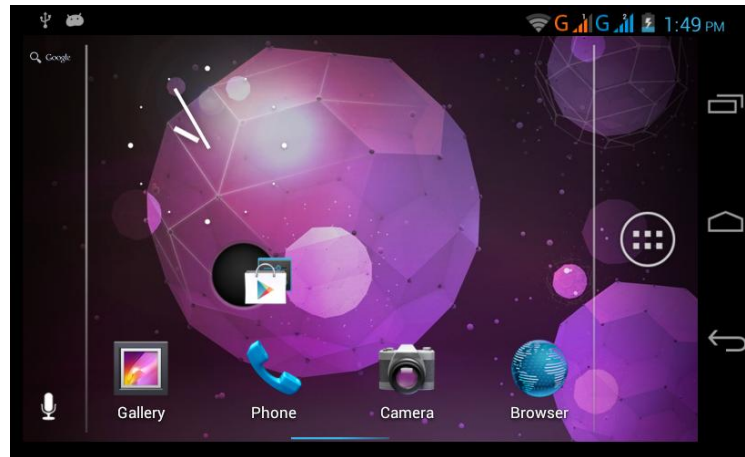

Pulse en el icono creado y se abrirá una nueva carpeta con los iconos agrupados:



Es una forma muy práctica de ahorrar espacio en el escritorio principal y tener las aplicaciones localizadas por tipo, fecha, etc.

Para eliminar los iconos del escritorio mantenga pulsado sobre el icono y arrastre el icono a la papelera.

Para cambiar el fondo de escritorio presione en lugar en el que no haya iconos y elija la opción deseada.

3.6 Aplicaciones

Haz clic en el icono de aplicaciones  y seleccione la aplicación deseada:



3.7 Conexión USB

Antes de transmitir los documentos, hay que realizar la configuración de almacenamiento:

1. Conecte el dispositivo al PC mediante un cable USB. En la barra de notificaciones se mostrará la información.
2. Abra la barra de notificaciones
3. Haga clic en USB"USB Conectado" y clic en "configuración de almacenamiento USB abierto".
4. El USB está conectado correctamente.



Copiar documentos en la tarjeta de memoria

 
1. Conecte el dispositivo al PC por cable USB.
2. Configure la conexión USB.
3. Abra el icono "Mi PC" en su equipo, compruebe las opciones de "disco extraíble".
4. Copie los documentos que necesita en el "disco extraíble".

5. Una vez terminada la copia "cierra la configuración de almacenamiento USB".

Aviso: Cuando el dispositivo esté conectado a un PC y use el almacenamiento USB, no podrá ver la información de la tarjeta microSD en el dispositivo. Para verla, debe desconectar primero el cable USB.

3.8 Sistemas de entrada

Para introducir texto puede utilizar el teclado de pantalla. Se mostrará automáticamente al presentarse la opción de introducir texto o números.

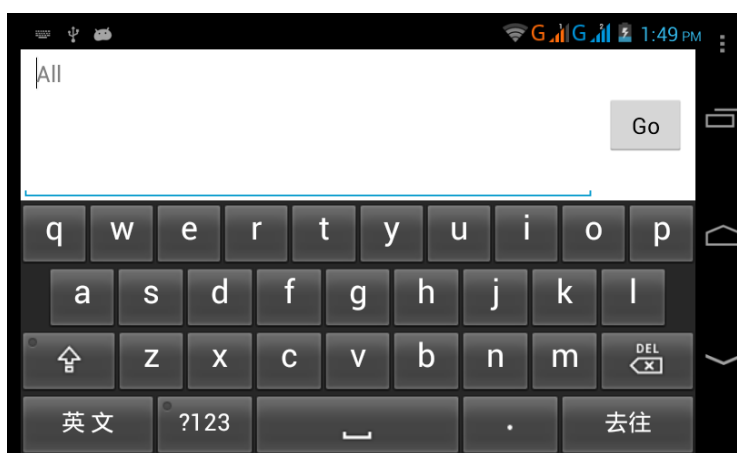

3.9 Técnicas de aplicaciones

 
En la interfaz de la aplicación, haga clic en widgets en la pantalla de arriba. A continuación puede seleccionar cualquier widget pulsándolo para crear el acceso directo, puede entrar en la aplicación a través del icono de acceso directo.

Para crear iconos de acceso directo en el escritorio mantenga pulsado el icono y muévelo hacia el escritorio. Recuerde; Si la posición de destino no tiene espacio, el widget no se añadirá en la pantalla principal.


4. AJUSTES BÁSICOS

4.1 Tarjeta SIM


Haga clic en Configuración en el menú principal, seleccione Gestión de SIM:

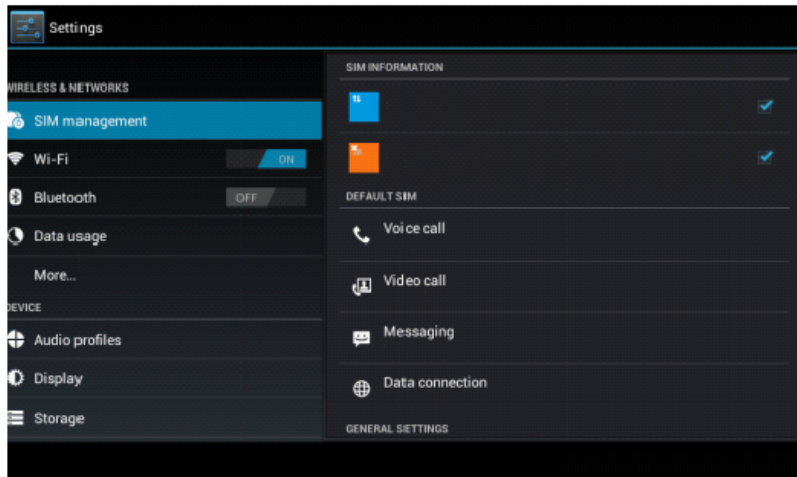

 
Haz clic llamadas de voz, seleccione la tarjeta SIM por defecto:

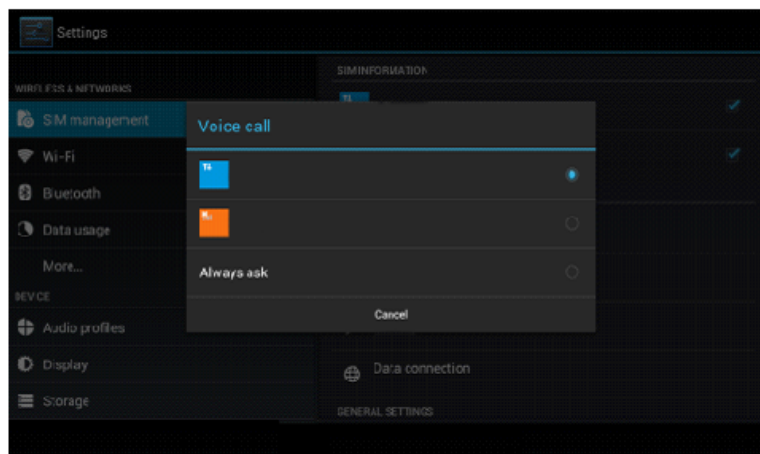

 
Haga clic en Configuración en el menú principal, seleccione Gestión de SIM y haga clic en video llamada, seleccione la tarjeta SIM por defecto:

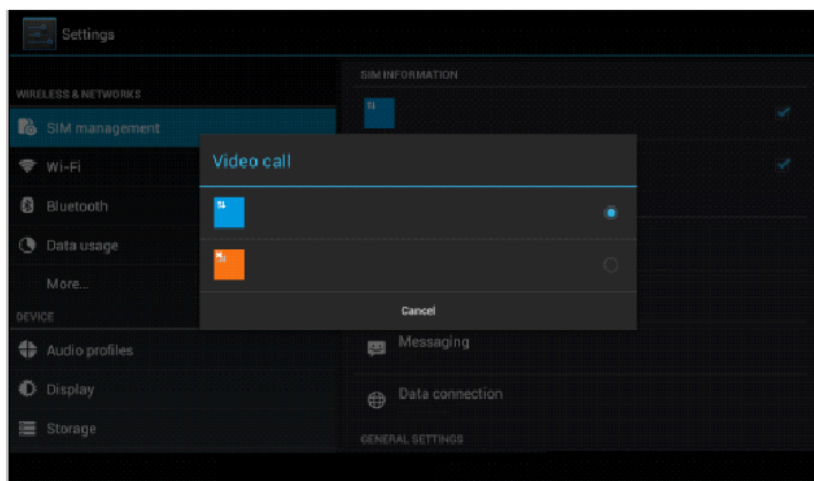

 Haga clic en Configuración en el menú principal, seleccione Gestión de SIM, haga clic en mensaje, elegir la tarjeta SIM por defecto:

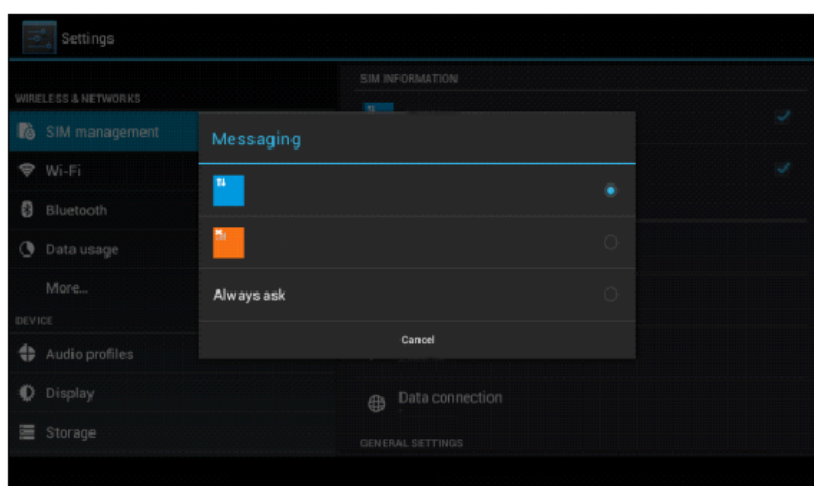

 
Haga clic en Configuración de aplicación en el menú principal, elija la gestión de SIM, haga clic en la conexión de datos, seleccione la tarjeta SIM por defecto:

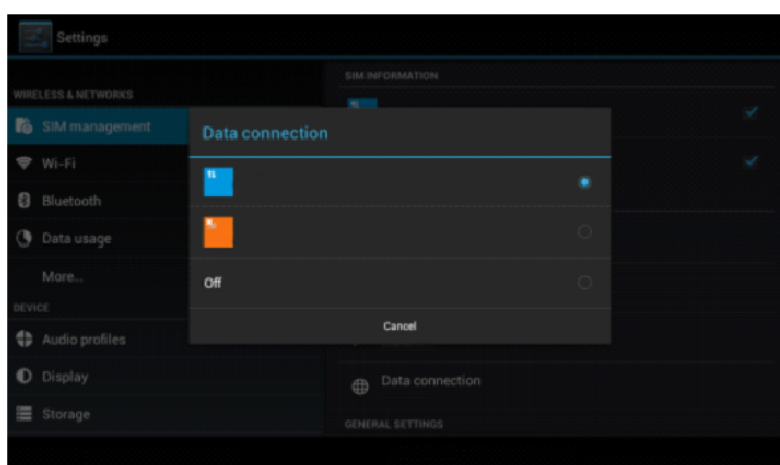


4.2 WiFi

Para conectar a una red WiFi:

 - 1) Vaya al menú de ajustes y active WiFi.
- 2) El dispositivo buscará las redes WiFi dentro del radio de alcance
- 3) Seleccione la red deseada. Si tiene contraseña, establézcala y haga clic en conectar:

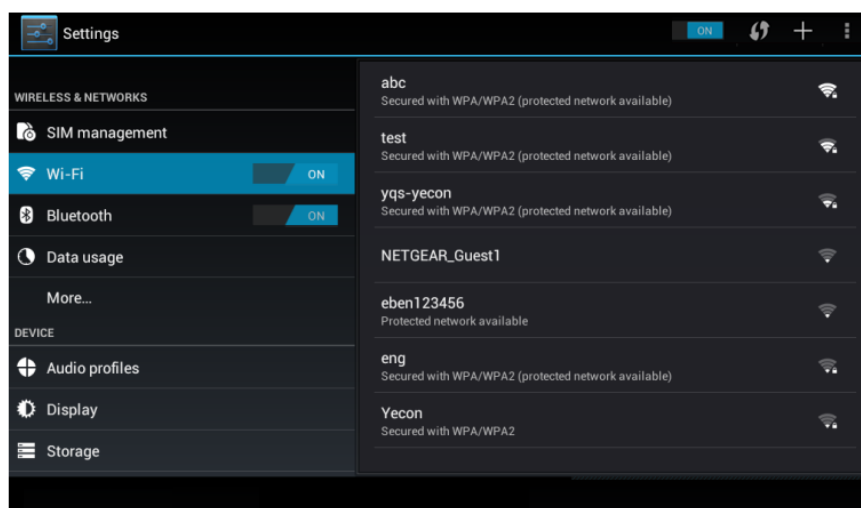


 Para añadir una nueva red WiFi, en el menú de ajustes de WiFi, presione en el icono añadir red. Introduzca el SSID, el nombre de la red inalámbrica y haga clic en Guardar. Haga clic en conectar a la nueva red y siga los pasos:

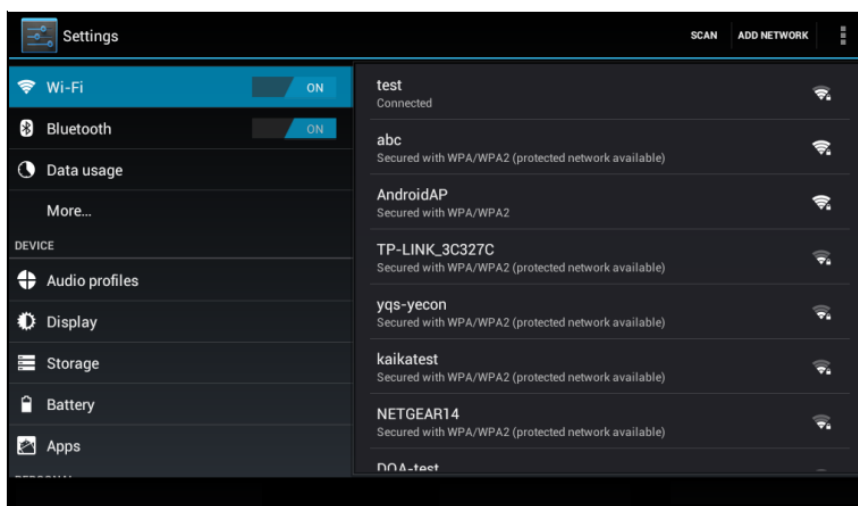


Si abre la barra de avisos podrá ver la red a la que está conectado. Podrá seleccionar en el menú de configuración de WiFi si desea avisos de nuevas redes disponibles.

 Puede mantener la conexión durante el modo standby o desactivarla:

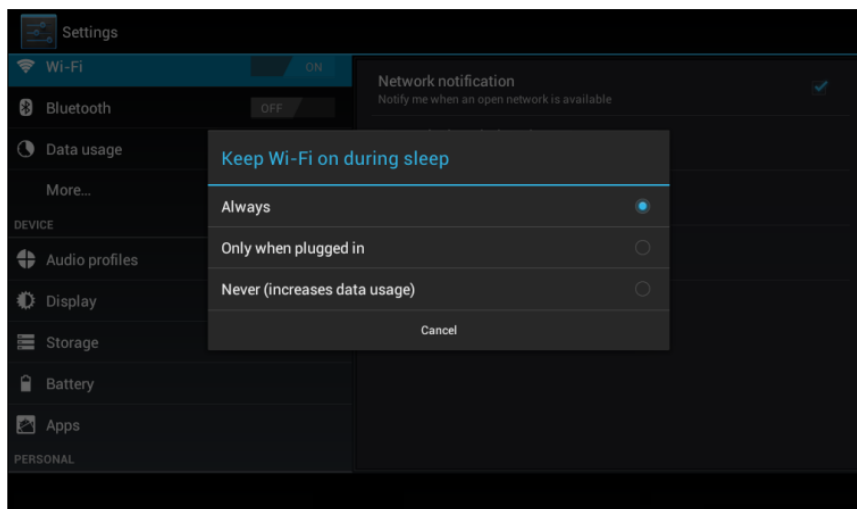


4.3 Bluetooth

 
1. Haga clic en el icono de ajustes
2. Seleccione y active Bluetooth
3. Mostrará la lista de dispositivos disponibles para conectar:

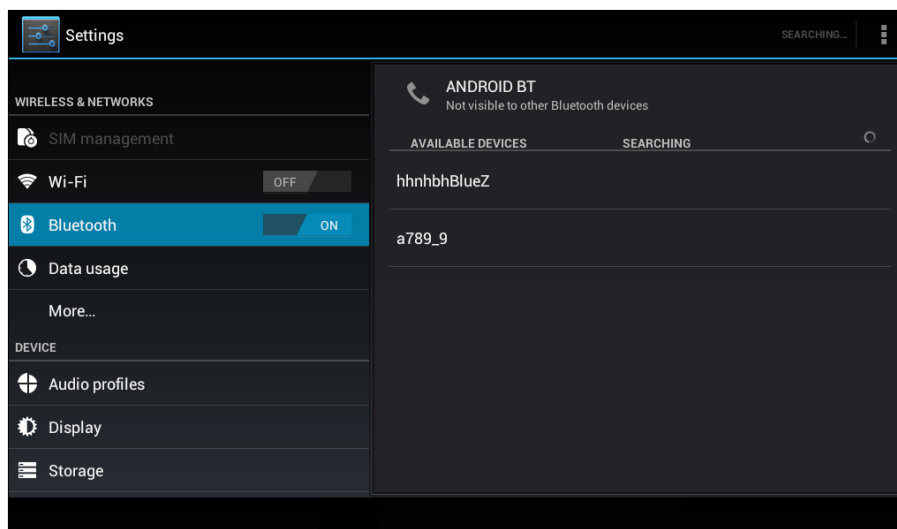

 
Haga clic en el dispositivo Bluetooth disponible y se abrirá la ventana de solicitud. Establezca la contraseña de acuerdo a su dispositivo:

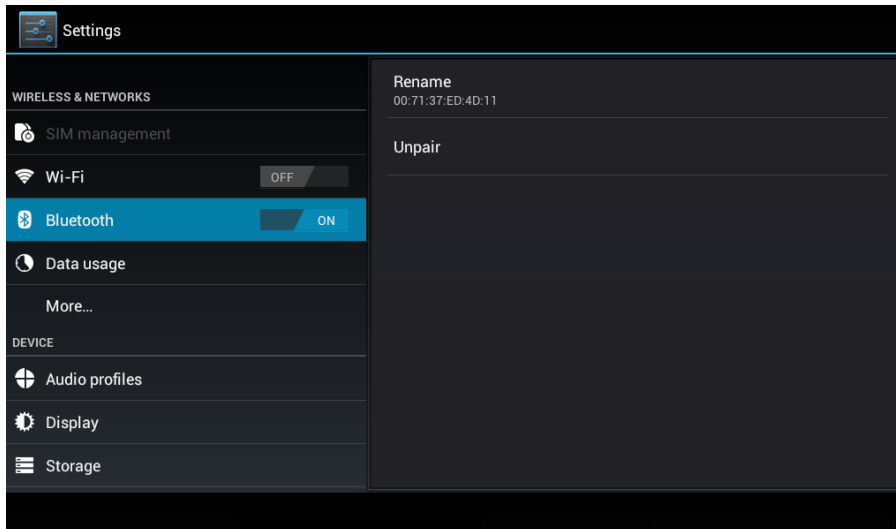

 Puede cambiar el nombre de su dispositivo:

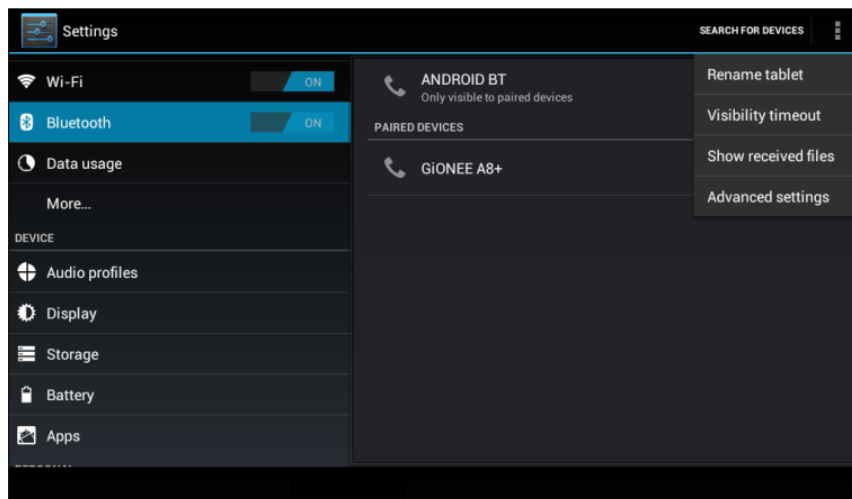


 Para seleccionar la configuración de tiempo de espera de visibilidad:

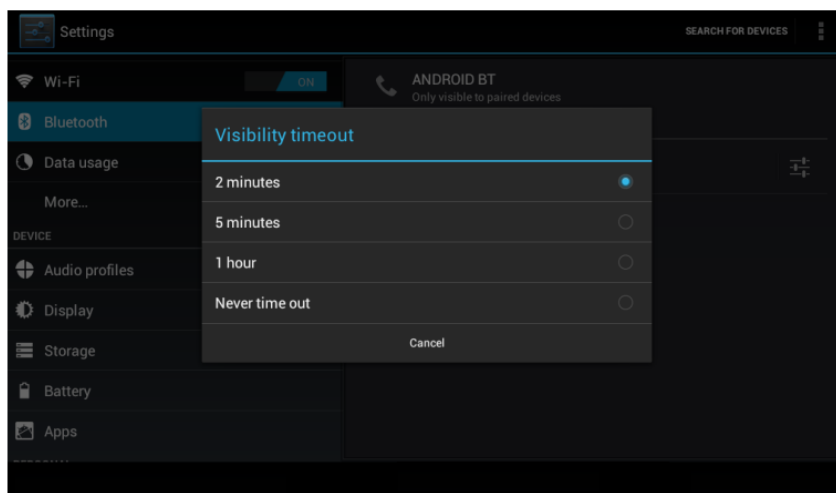

Una vez realizada la transmisión por Bluetooth, seleccione mostrar archivo:

 
Ajustes avanzados de Bluetooth: Elija configuración avanzada de Bluetooth para realizar otros ajustes:

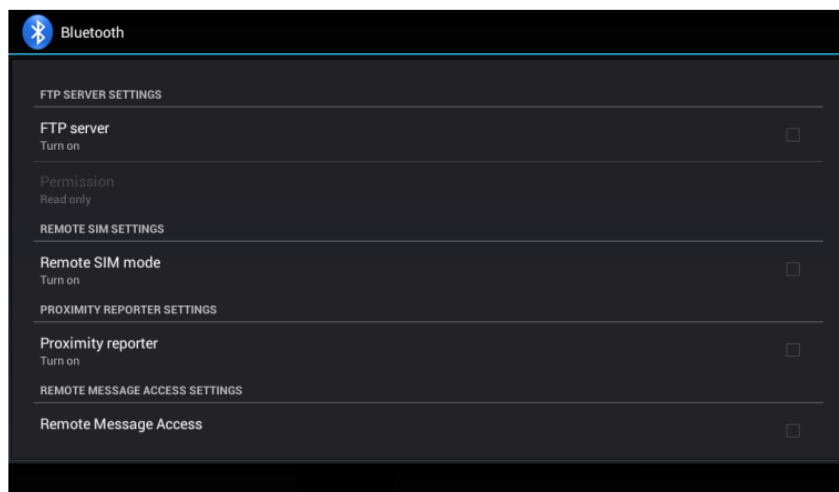

4.4 Uso de datos

 Compruebe el uso de datos de la tarjeta SIM:




Para comprobar el uso de datos WIFI, presione el icono  y haga clic en uso de datos:




4.5 Otras funciones

Modo de avión: Cuando active el modo avión, la conexión WiFi y la conexión SIM se desactivarán


 
VPN: Abra VPN y en Agregar red VPN. Introduzca el nombre y la dirección del servidor, a continuación, guardar:

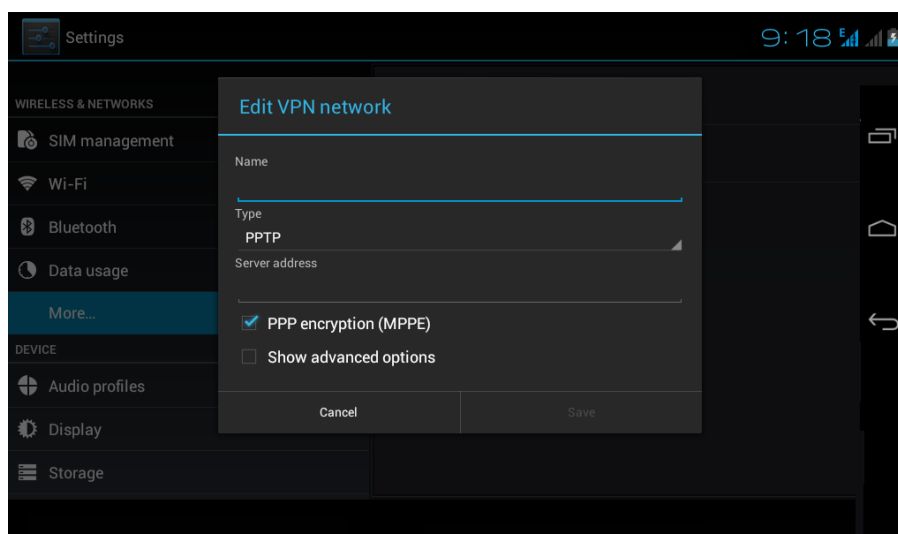


 Haga clic en VPN, para introducir el nombre de usuario de VPN y su contraseña, haga clic en conectarse:

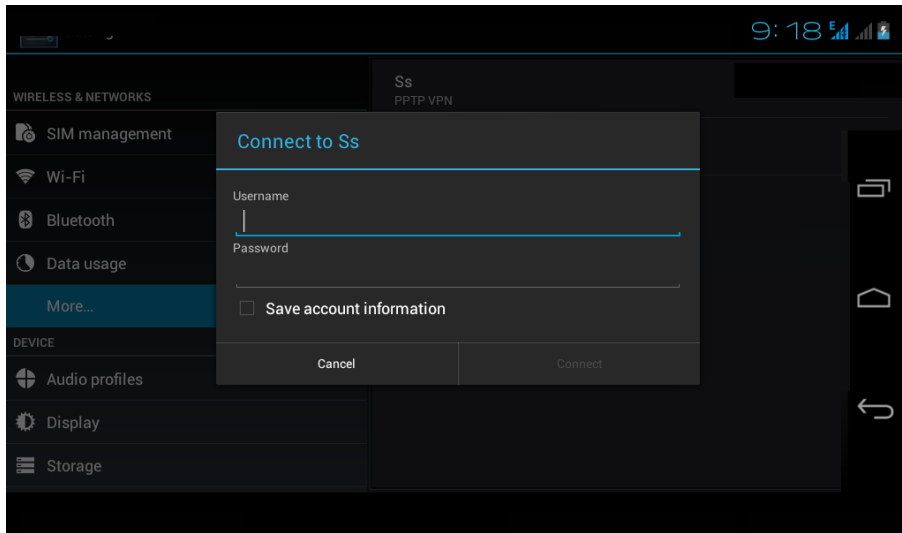

   
Haga clic en más para acceder a otras funciones de WiFi como el uso compartido de redes y puntos de acceso portátiles:

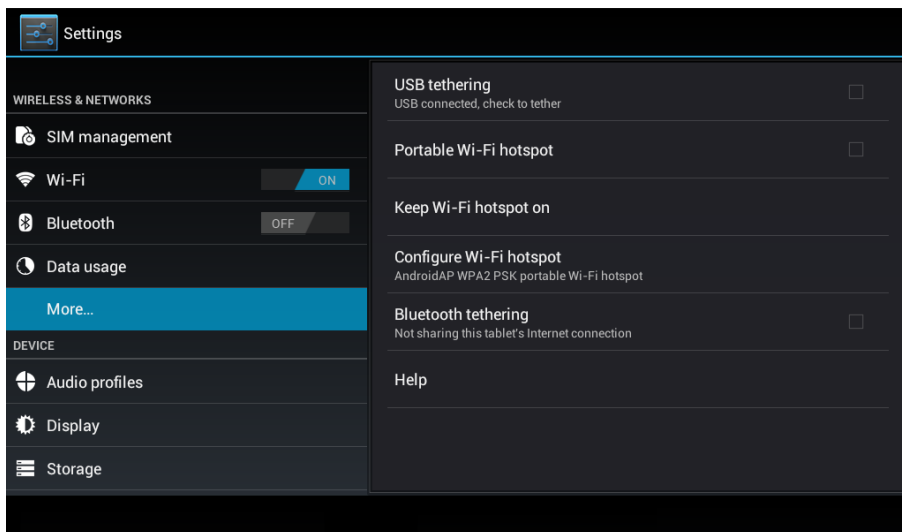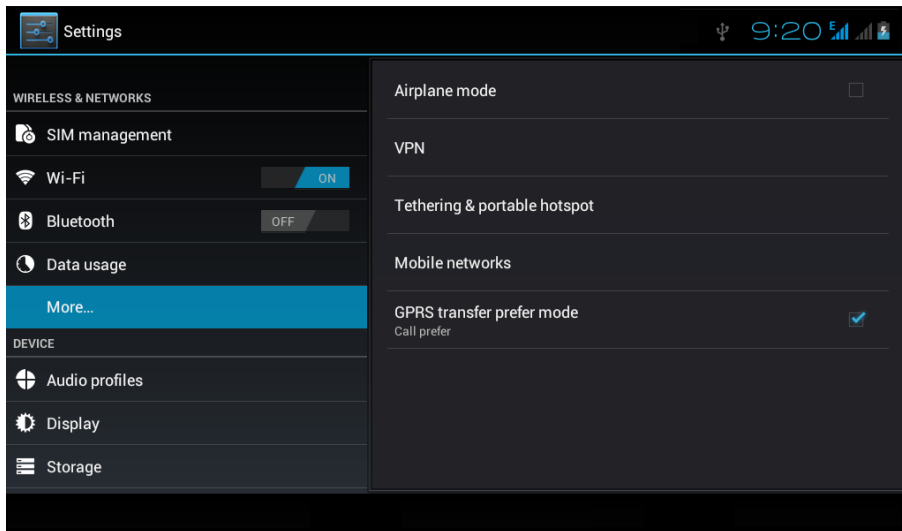

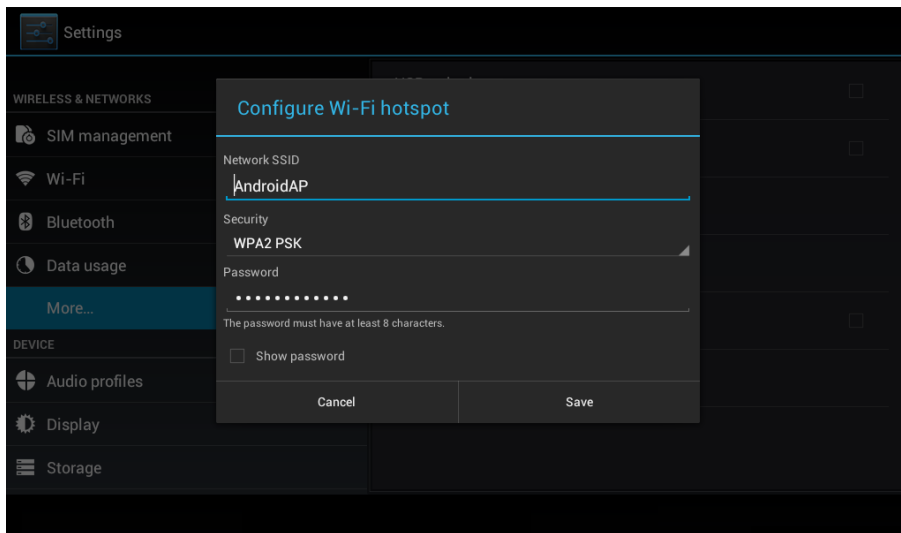


Redes Móviles

 
Servicio 3G: haga clic en servicio 3G y la tarjeta SIM por defecto. GSM es 2G y WCDMA es 3G.

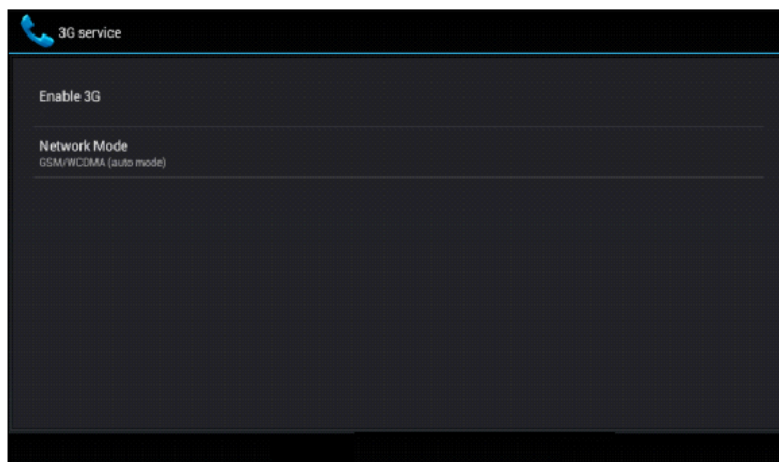

 
Access Point Name (APN): Haga clic en la red móvil:

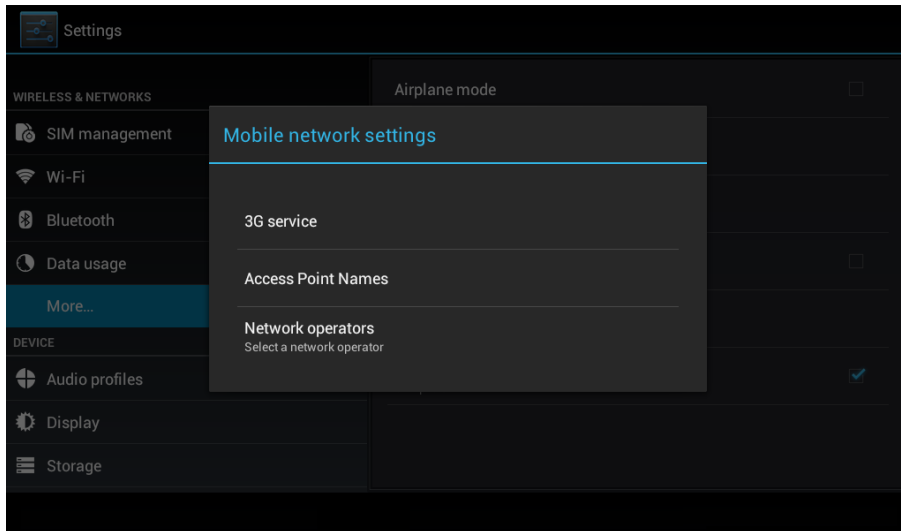

 Elija los puntos de acceso (APN), seleccione la tarjeta SIM que se va a conectar. Elija tipo de conexión:

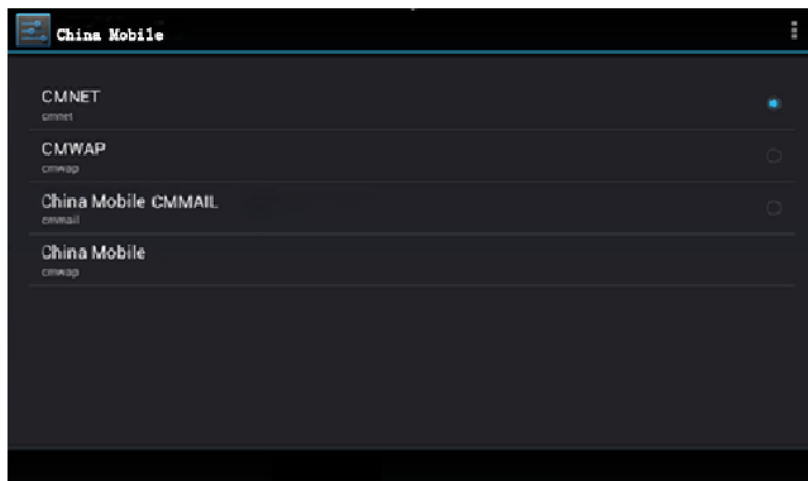


 Operador de Red: Haga clic en el operador de red, seleccione la tarjeta SIM a conectar, el sistema buscará redes GSM y WCDMA disponibles:

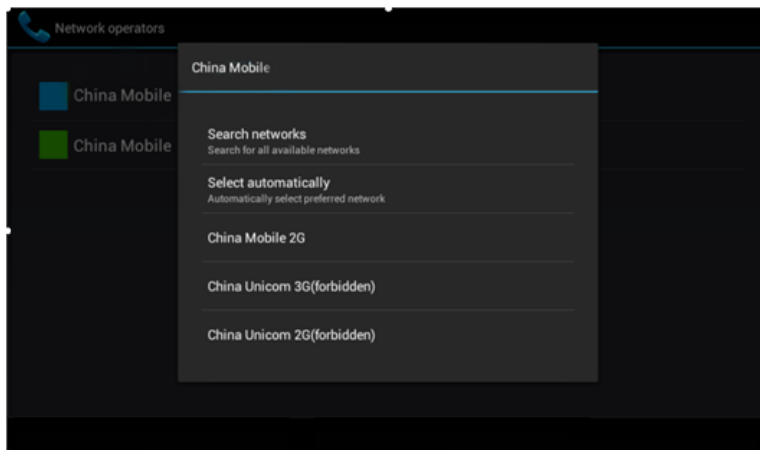


4.6 Perfiles de audio

 
En el menú de ajustes, seleccione Perfiles de audio.

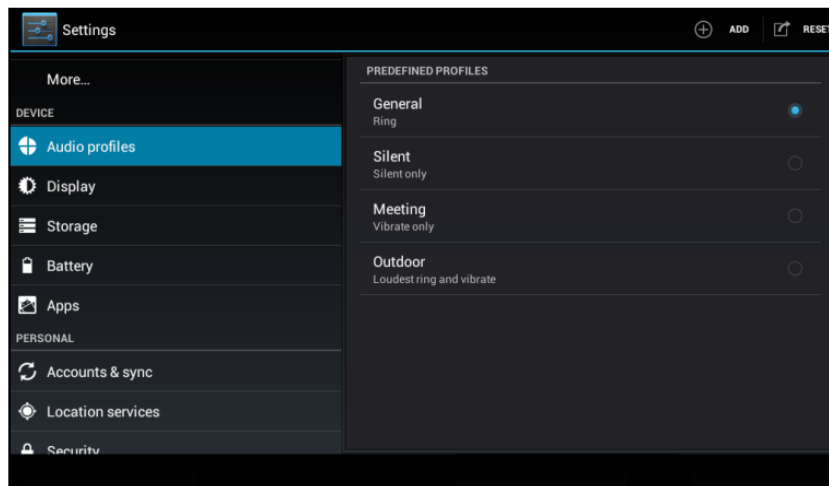

 
Seleccione General para su configuración:

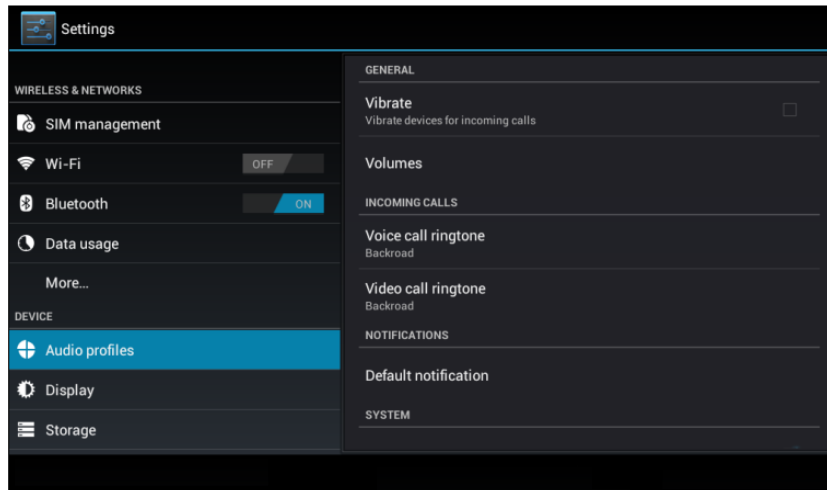


Podrá ajustar: Vibración, Volumen, etc:

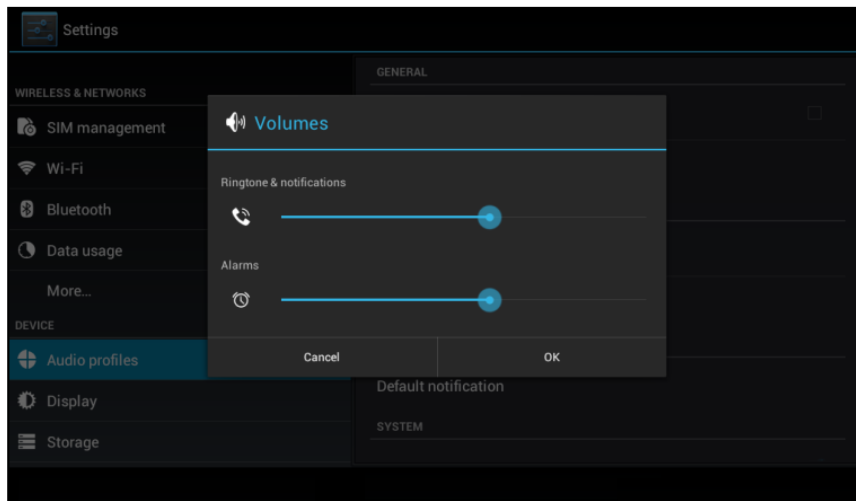 

  
Seleccione el tono para la llamada o video llamada:

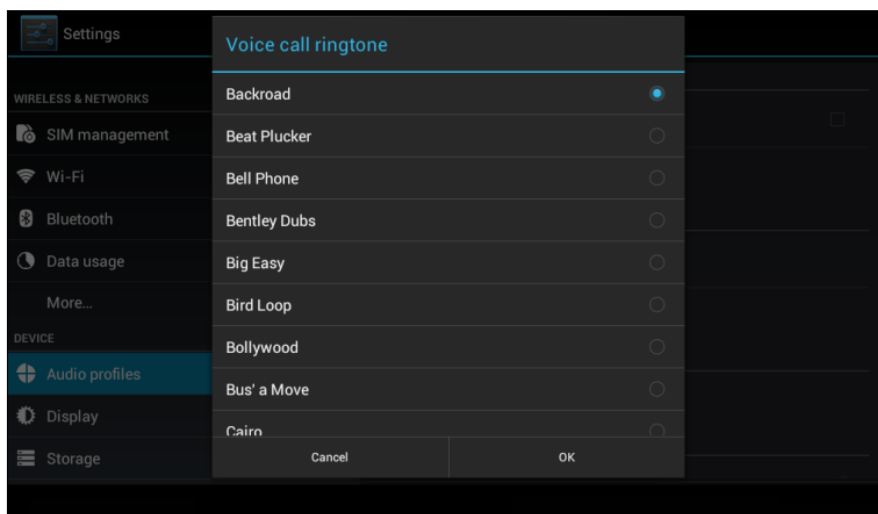

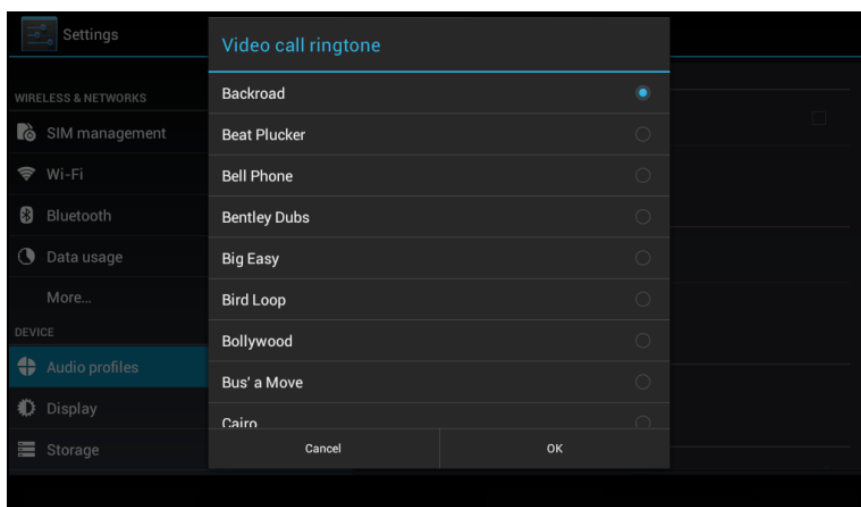


4.7 Pantalla

 En el menú pantalla podrá ajustar el Brillo de la pantalla:

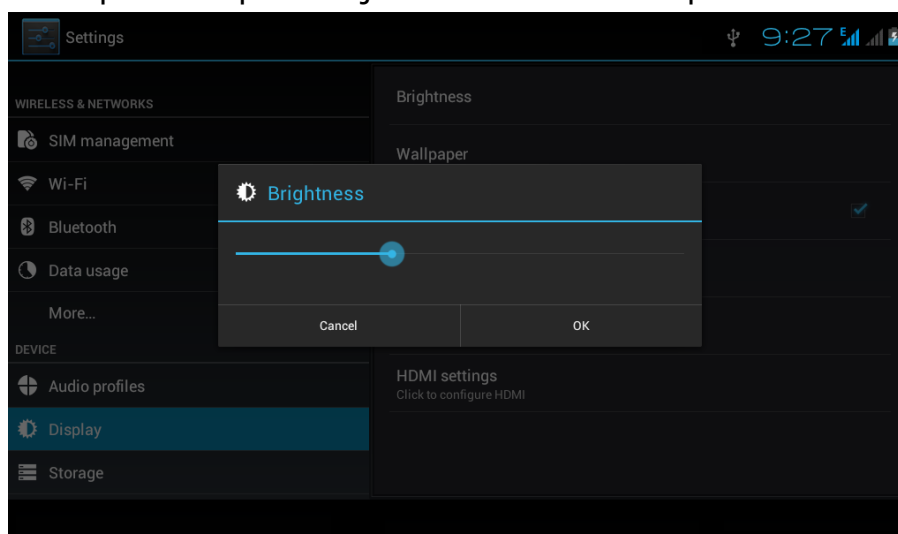


 Podrá seleccionar una foto para el fondo de escritorio:

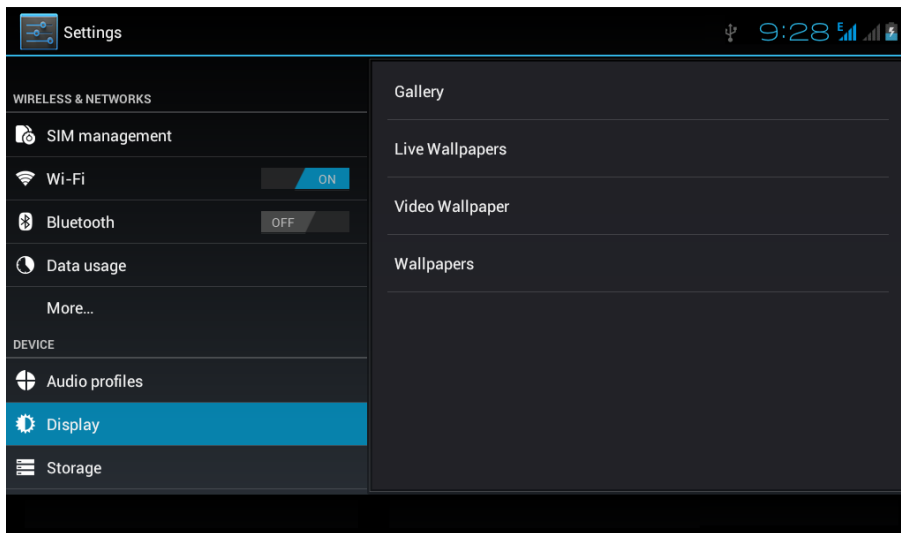


Rotación automática: El dispositivo viene configurado por defecto con rotación automática encendida. Puede cambiar esta función.

 
Función Sleep: seleccione está función para determinar el tiempo de encendido antes de pasar a modo de espera.

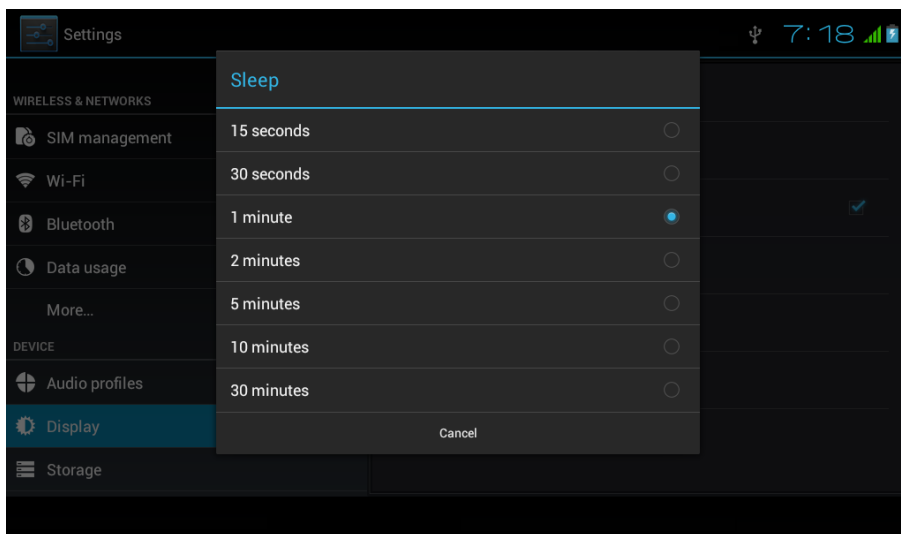

 Para seleccionar el tamaño de la fuente:

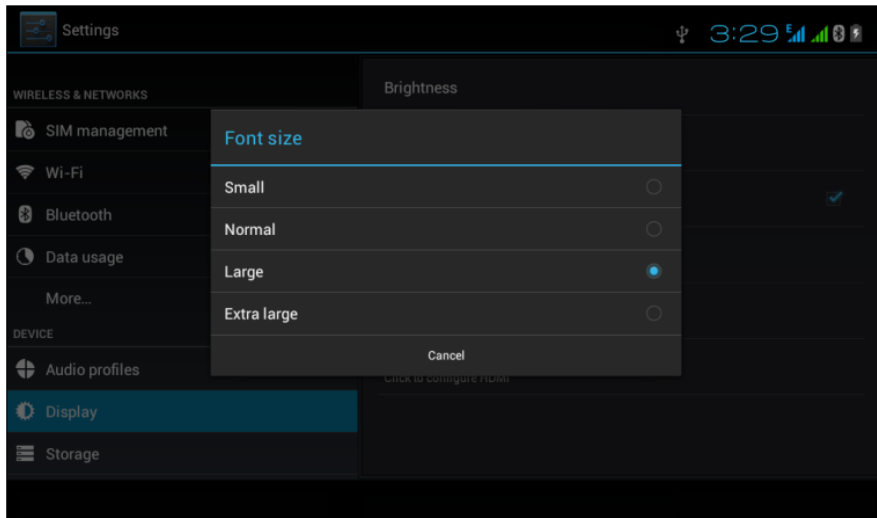

Ajuste de la posición del menú:

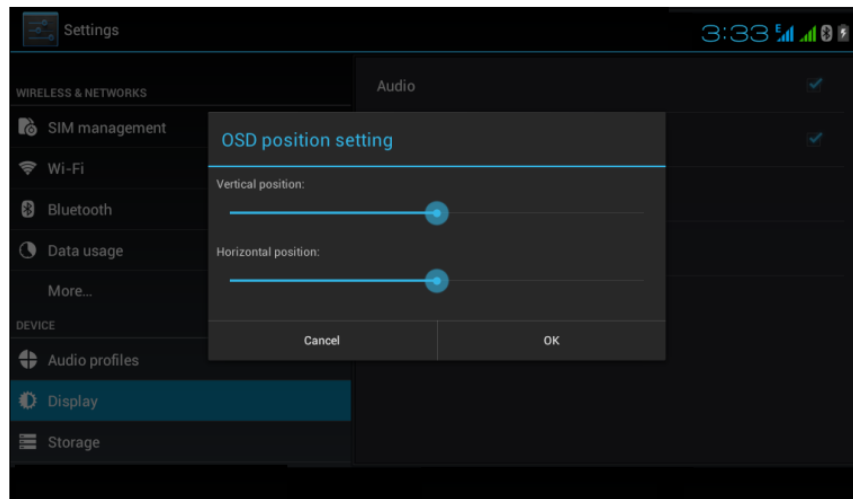 


4.8 Almacenamiento

Vaya al menú de configuración, haga clic en memoria y podrá seleccionar la ubicación preferida para el almacenamiento de información.


Compruebe la tarjeta SD y espacio de almacenamiento del dispositivo.

1. Entre en configuración

 
2. Haga clic almacenamiento y compruebe el espacio de almacenamiento.

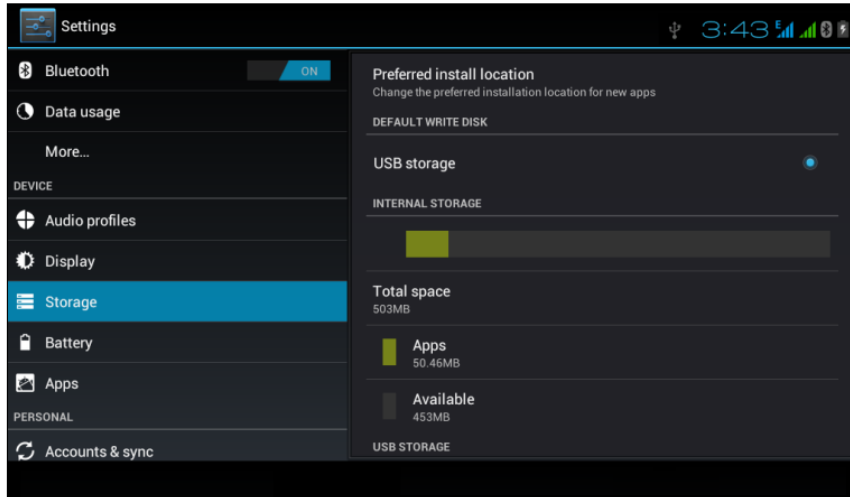

Almacenamiento interno

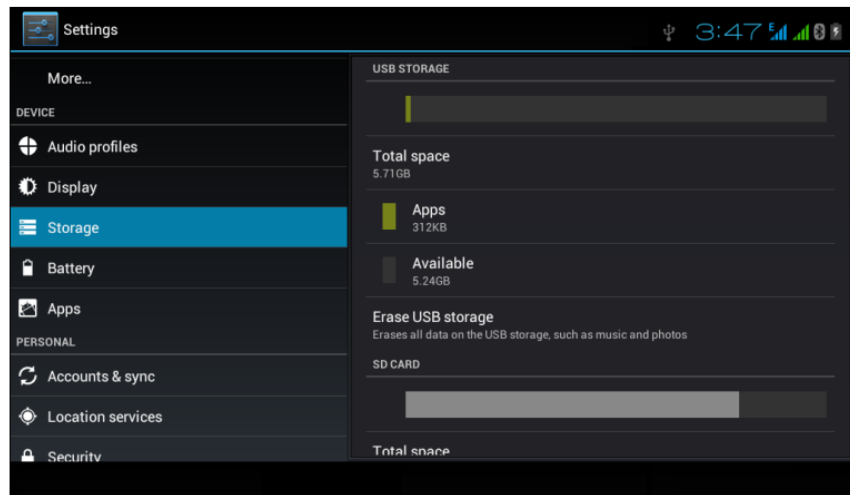 

Tarjeta Micro SD:

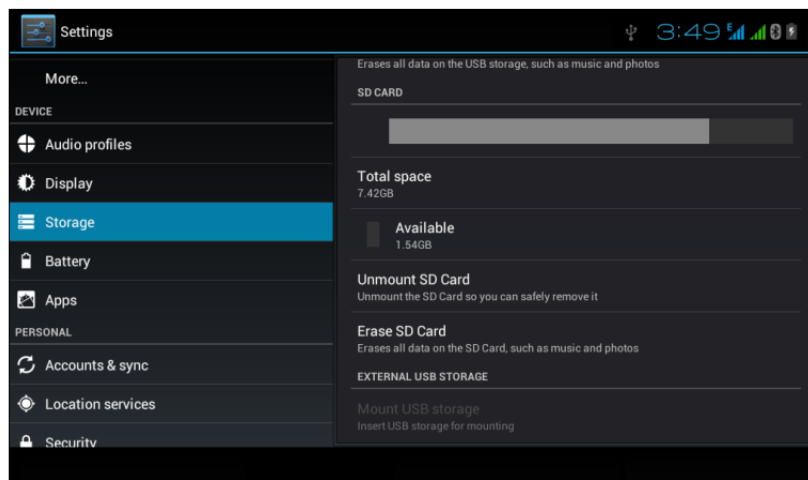 


Extracción segura de la tarjeta SD

1. Haga clic en configuración.
 2. Haga clic en la memoria.
 3. Haga clic en desinstalar la tarjeta SD.
 4. Ahora puede retirar la tarjeta SD de forma segura.
- Nota: Si retira la tarjeta SD con seguridad puede proteger la tarjeta SD y aumentar su vida útil.


4.9 Batería

 Vaya al menú de configuración y seleccione la opción Batería:

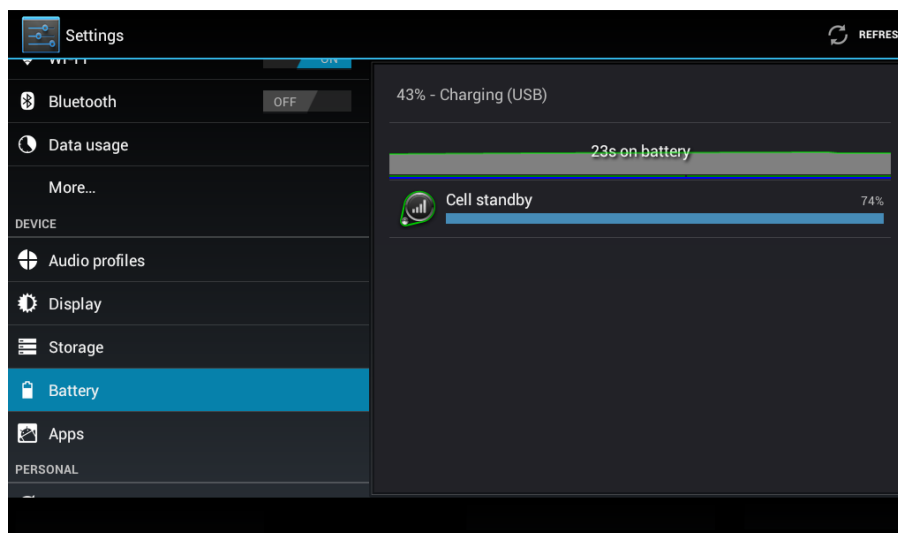


4.10 Aplicaciones y programas

 
1. En el menú de ajustes haga clic en Aplicaciones.
2. Seleccione la aplicación y podrá gestionar y eliminar aplicaciones instaladas y verificar en el sistema el espacio de almacenamiento utilizado y el espacio disponible:

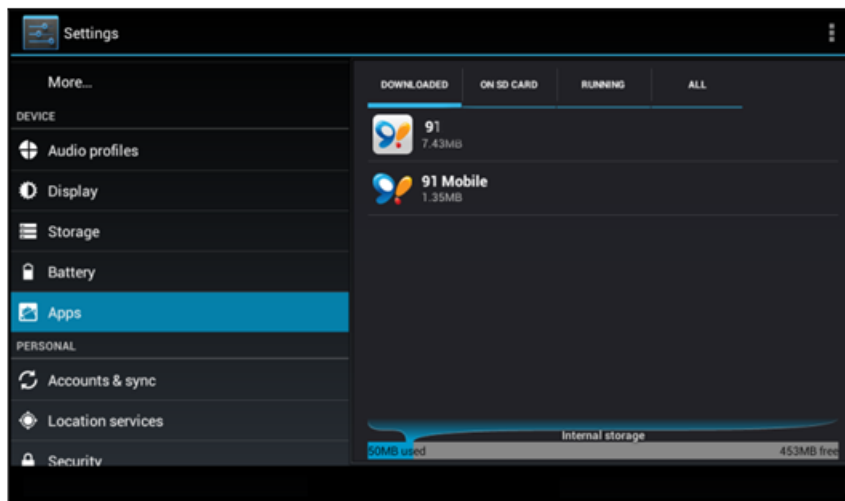

Uso en tarjeta SD

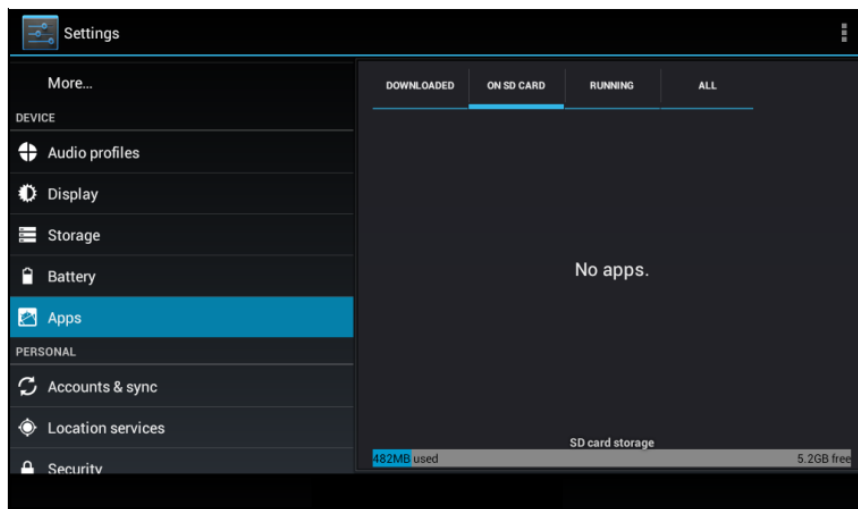 


Aplicaciones en funcionamiento:

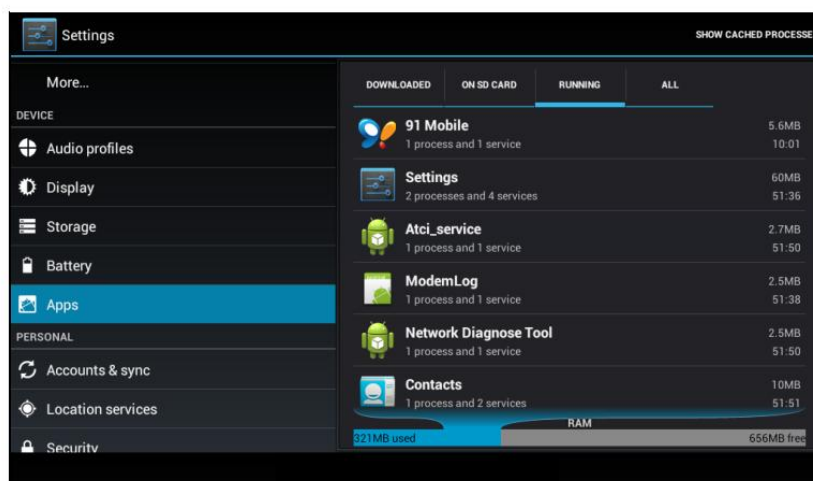 


4.11 Cuentas y sincronización

 
Seleccione ajustes y abra cuentas y sincronización:

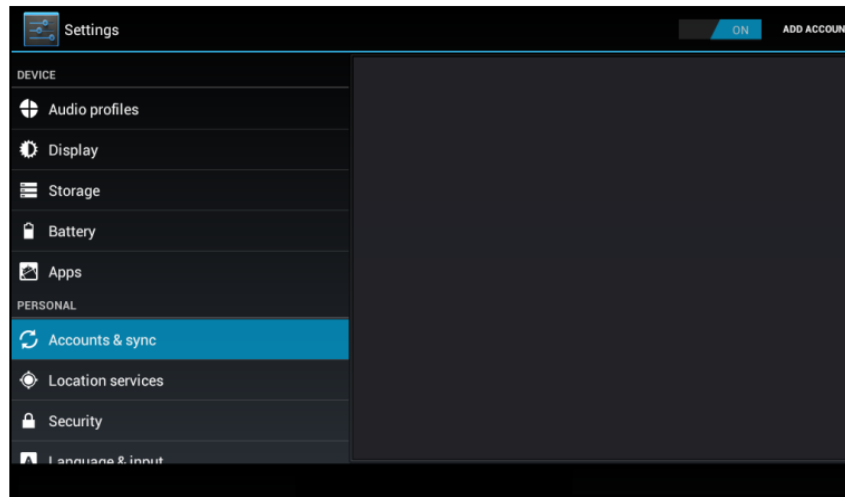

Seleccione una cuenta:

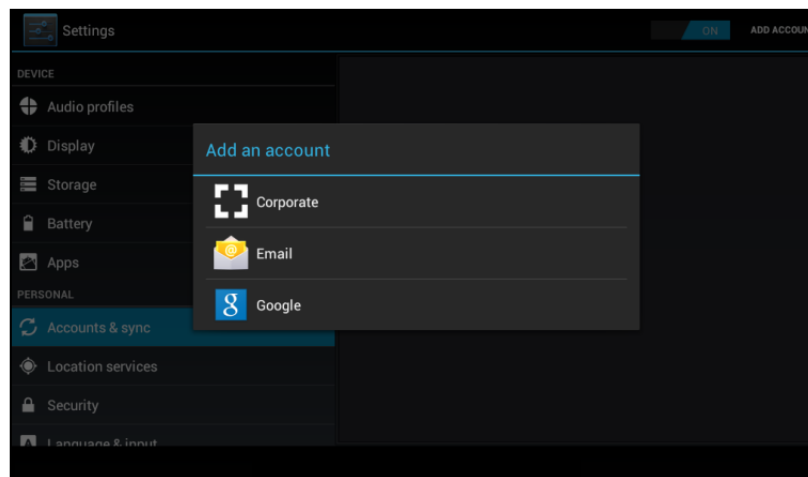 


 Una vez seleccionada, se sincronizará y se mostrará:

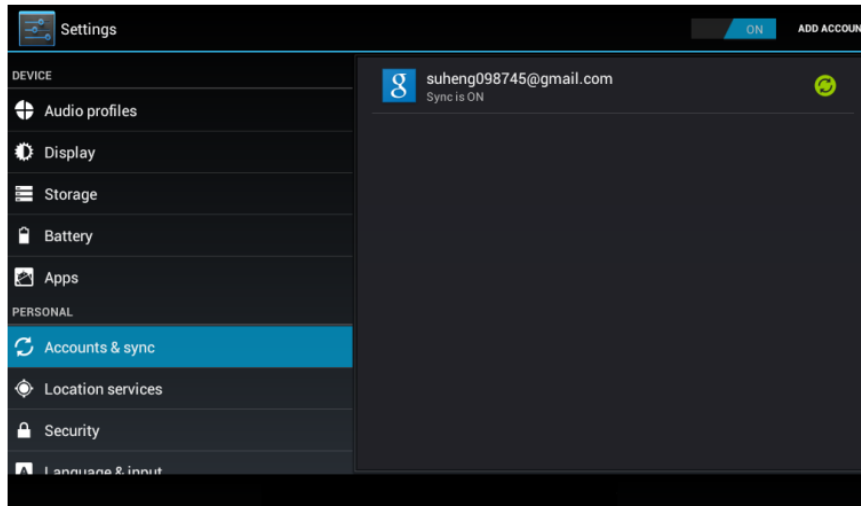


4.12 Servicios de localización

 En el menú de ajustes seleccione servicios de localización:

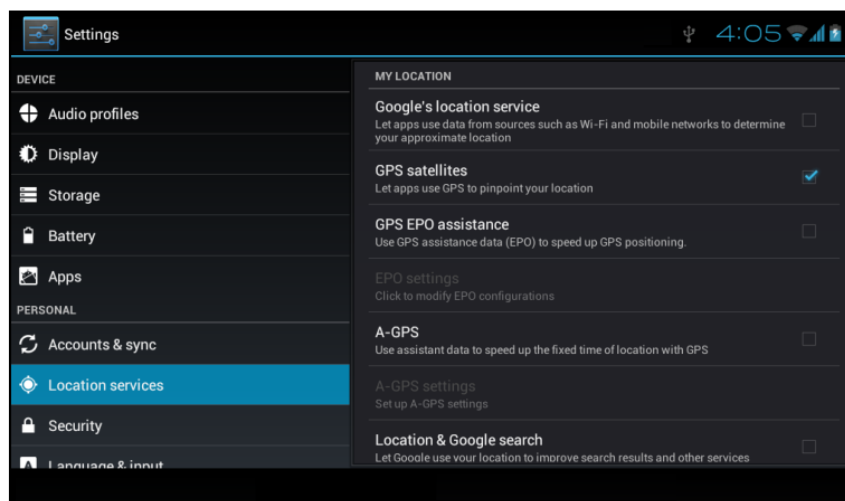


 - Servicio de ubicación de Google: Una vez seleccionado obtendrá su posición a través de WiFi
- GPS: Una vez activado el GPS, podrá obtener la ubicación por GPS.
- Asistencia GPS
- AGPS: Actívelo para usar datos unidos a GPS:

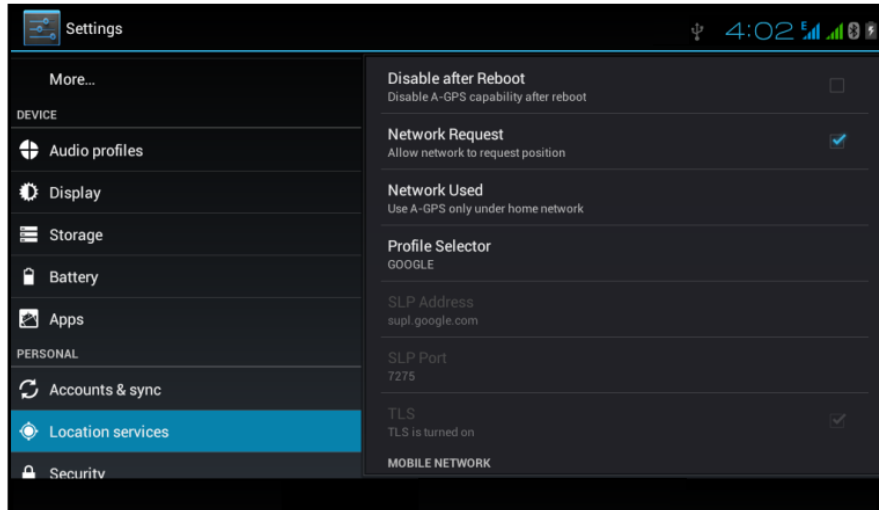


Deshabilitar al iniciar el sistema: Haga clic en Deshabilitar al iniciar el sistema.

 Solicitud Network: Para obtener ubicación a través de red:

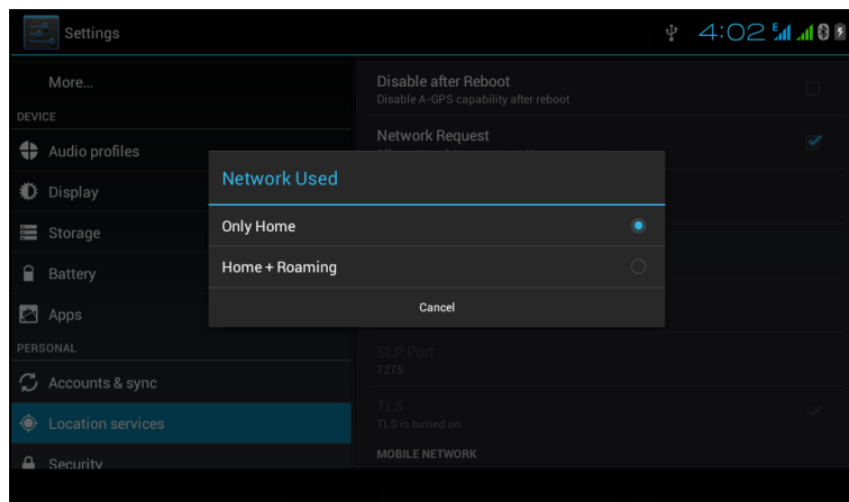

 Server: Para cambiar el servicio de ubicación:

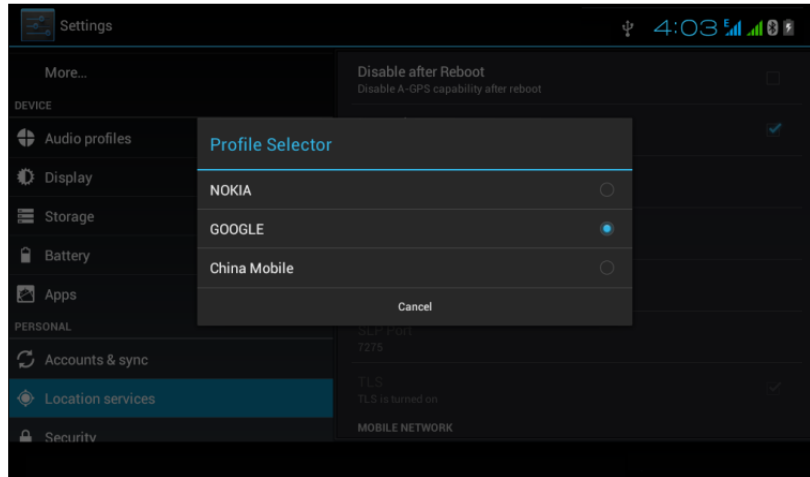


Localización y búsqueda de Google: Puede utilizar su información de ubicación para mejorar los resultados de búsqueda y otros servicios.

4.13 Configuración de seguridad


Ajuste de bloqueo de pantalla: Puede bloquear la pantalla estableciendo un patrón, para ello vaya a configuración , seguridad bloqueo de pantalla:

 Patrón de desbloqueo: seleccione Patrón y elija la forma deseada al menos con 4 puntos. Confirme su selección.

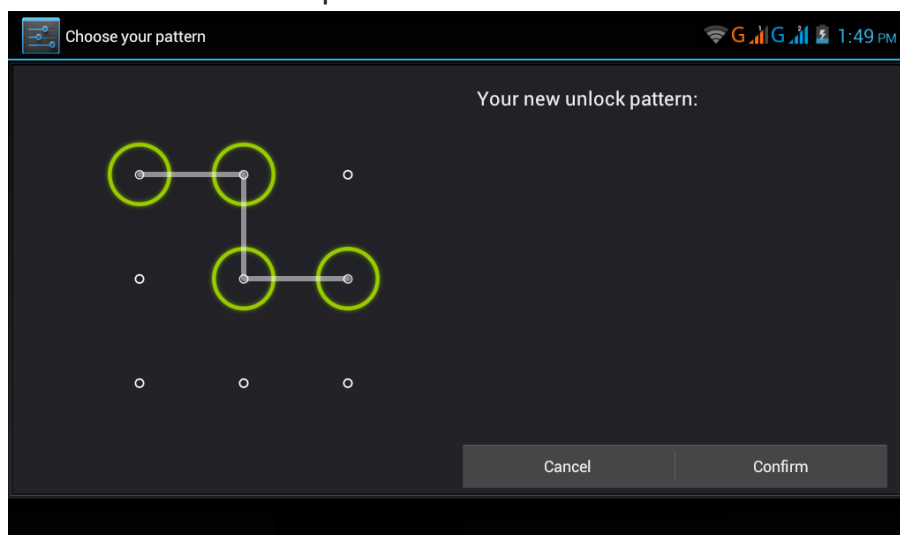


Bloqueo mediante PIN: Introduzca el pin y confirme esta selección.

 Además podrá establecer otros patrones como reconocimiento facial, contraseña, etc. Además podrá ajustar otras opciones de seguridad:


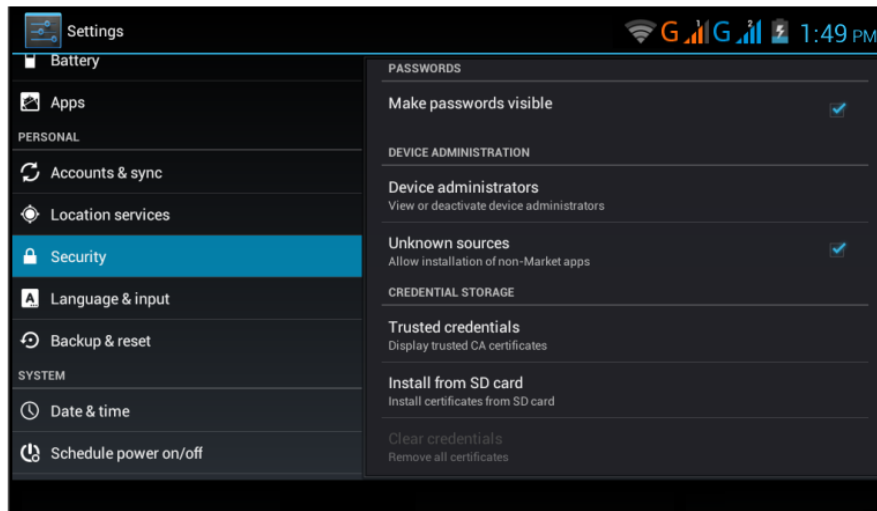


4.14 Idioma y entrada de texto

 
Haga clic en Configuración, seleccione el idioma y el método de entrada, seleccione el idioma para cambiar el idioma:

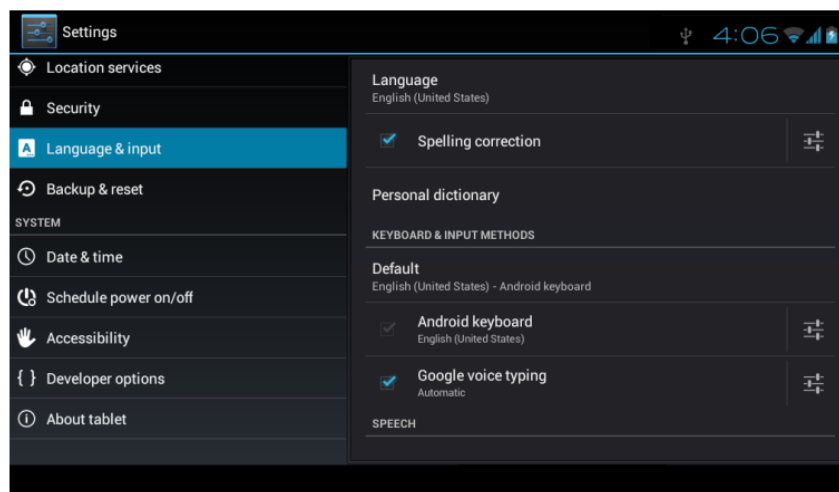

  Haga clic en Configuración, seleccione el idioma y el método de entrada, seleccione configuración del teclado Android:

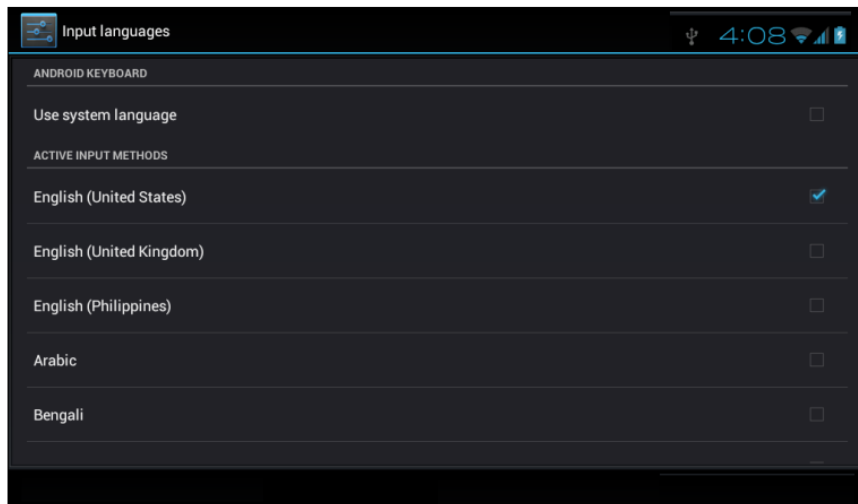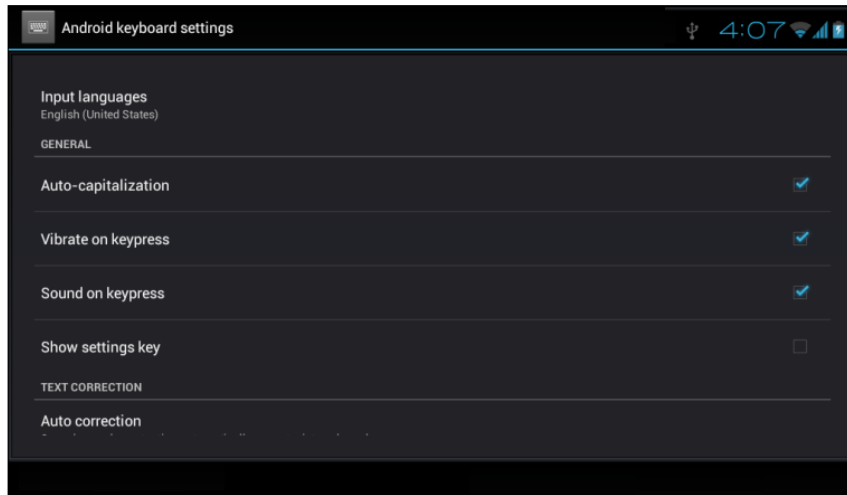

 
Volver a la selección de idioma y de entrada y seleccione el método de entrada que desea utilizar:

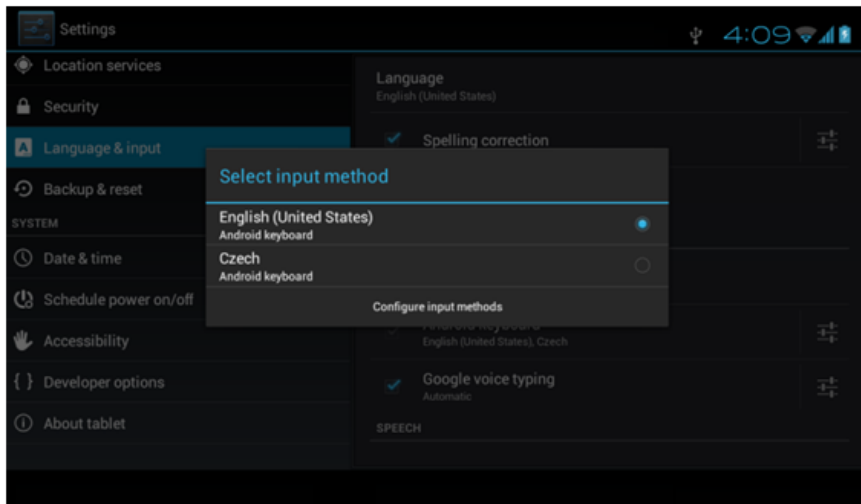

4.15 Copia de seguridad y reset

Conecte la opción WiFi e inicie su sesión en Google, con su cuenta de google, seleccione copia seguridad de datos, el sistema copiará los datos en su servidor de google.

 Si necesita realizar una restauración de fábrica, por favor haga clic en reiniciar:

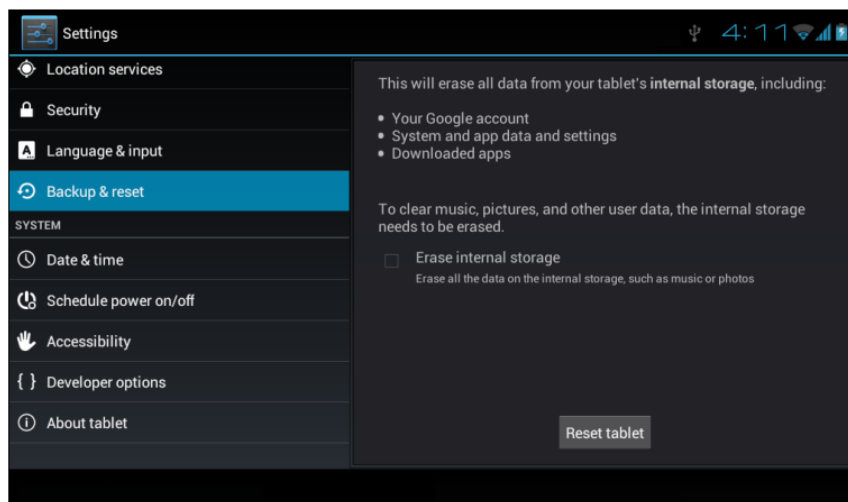


Si necesita restauración de fábrica de recuperación, por favor haga clic en reiniciar.

4.16 Fecha y hora

De acuerdo con el valor preestablecido, el sistema la fecha, la zona y la hora tomando estos datos de la conexión a internet.


Para fijar la fecha y hora manualmente:

 1. Haga clic en configuración.
2. Deslice la pantalla hacia abajo y seleccione fecha y hora.
3. Desactive "ajuste automático de fecha y hora".
4. Desactive "auto ajuste de zona".
5. Haga clic en Zona Seleccionar, a continuación, elija la zona.
6. Haga clic configuración de fecha y, a continuación seleccione la fecha deseada.
7. Haga clic en Ajuste de la hora y haga clic en los botones superior e inferior para ajustar la hora. Seleccione AM/PM y 12/24 horas.

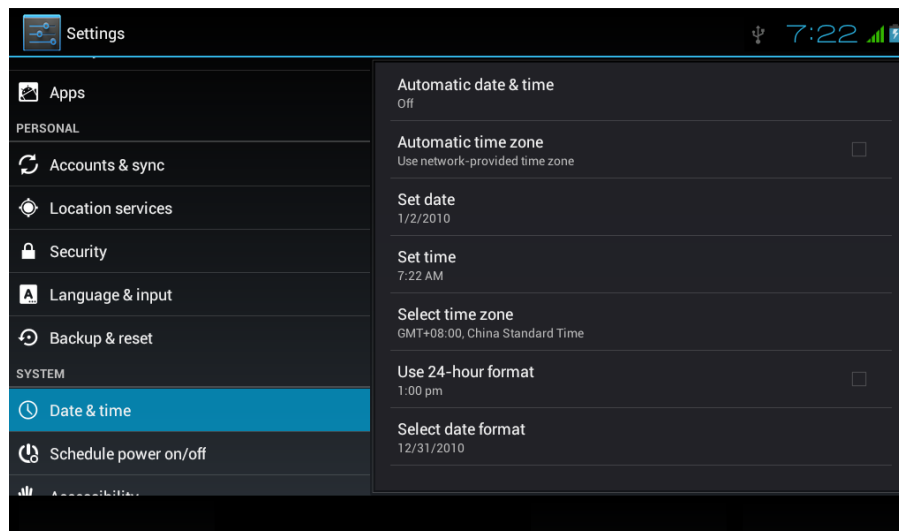

4.17 Programar encendido y apagado

 
En el menú de configuración seleccione programar encendido y apagado.

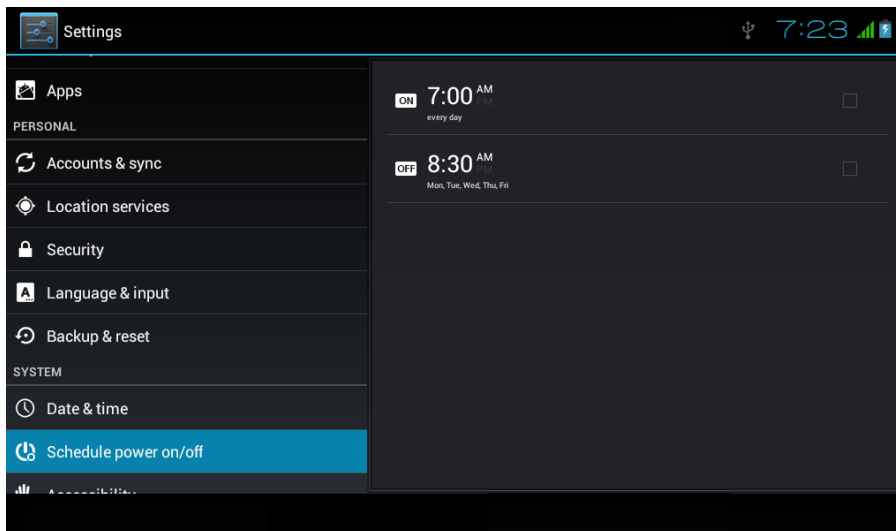

Podrá establecer una hora de encendido y otra de apagado y activar o desactivar cada una de las horas.


4.18 Accesibilidad

 Puede seleccionar el tamaño del texto, finalizar una llamada con el botón ON/OFF, seleccionar si la pantalla gira automáticamente, etc:

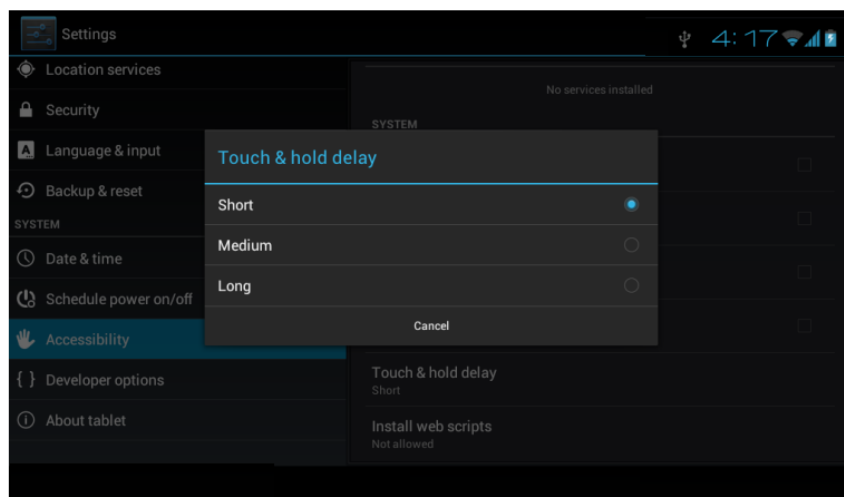

4.19 Opciones de desarrollo

 Cuenta con diferentes opciones para desarrolladores, por favor consulte cada una:

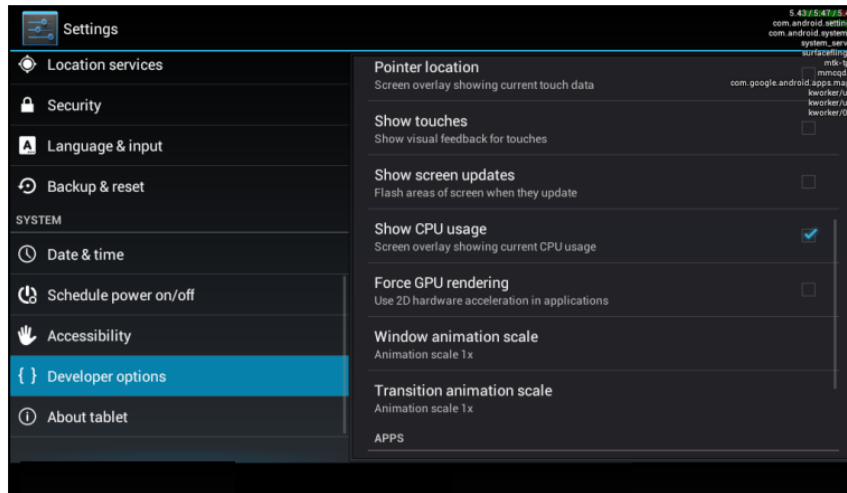



4.20 Acerca del dispositivo

Estado: Muestra información sobre el estado del dispositivo, batería, IMEI, etc.


5. MULTIMEDIA

 5.1 Música

Entre en el reproductor de música :

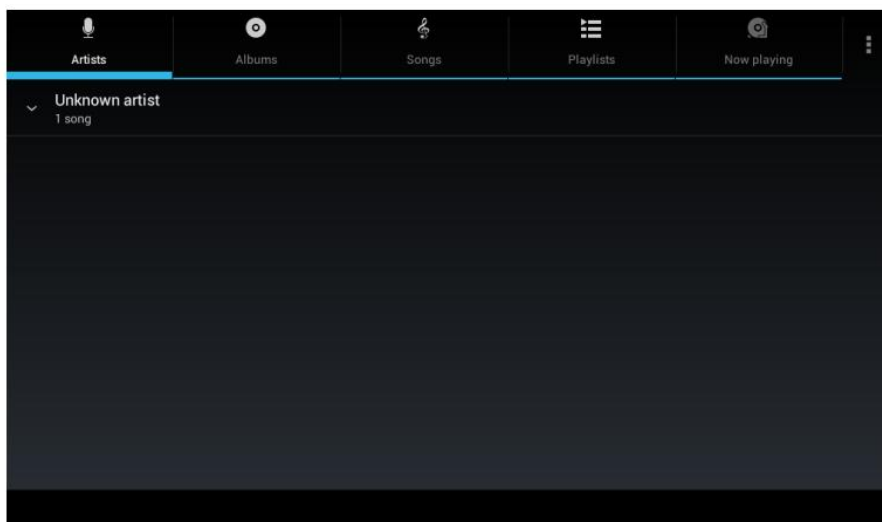 


 En la pantalla del reproductor se muestran las diferentes opciones:

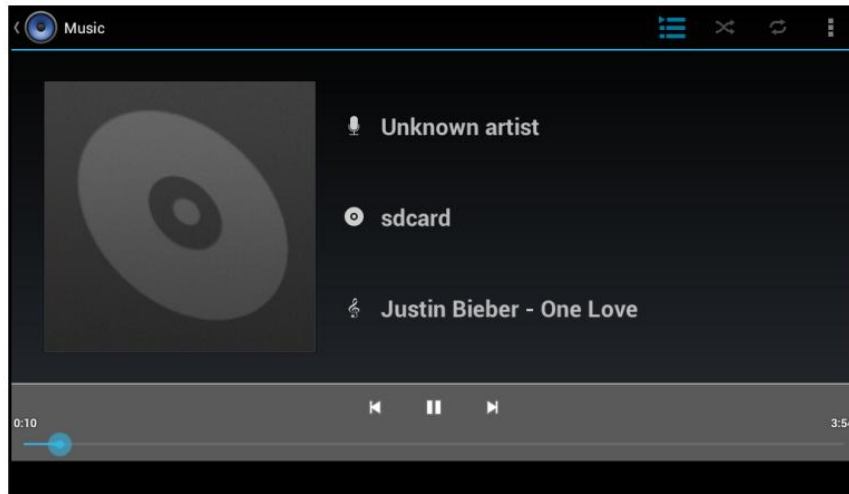

5.2 Vídeo

 Seleccione el reproductor de vídeo :

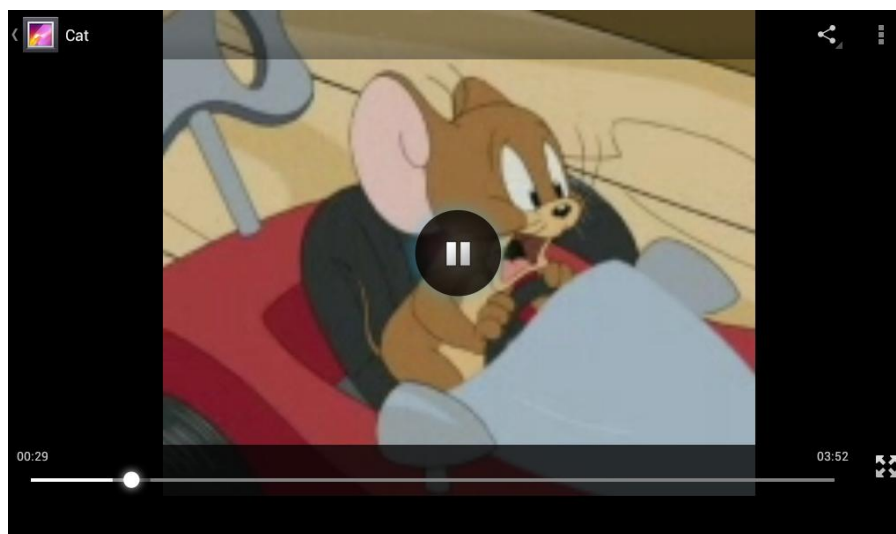

En la ventana del reproductor de vídeo se muestran las diferentes opciones.

5.3 Galería de fotos

En el menú de fotos podrá buscar fotos en el dispositivo y en la tarjeta micros. Podrá ver y editar fotos y configurar fotos como fondo de pantalla

Para ver imágenes

1. Haga clic en la Galería.

2. Haga clic en la carpeta que desea ver.
 3. Haga clic en la imagen que desea ver, el sistema la reproducirá en modo de pantalla completa de forma automática.
 4. Las imágenes se pueden acercar y alejar, coloque dos dedos en la pantalla y acerque y aleje para realizar la función zoom.
- Nota: Para pasar de foto deslice el dedo a la izquierda o derecha.

Editar fotos: Abra una imagen a pantalla completa, haga clic en la tecla de menú para mostrar la selección del menú, seleccione editar:

 
Pase de diapositivas: Seleccione presentación y las imágenes se reproducirán automáticamente.

Recorte: Abra una imagen, seleccione recortar en el menú de fotos, ajuste el tamaño al deseado seleccione recorte.

Editar: En el menú de fotos seleccione editar y podrá cambiar parámetros como brillo, estilo, color, etc.


5.4 Cámara

En el menú principal busque y seleccione el icono de cámara :

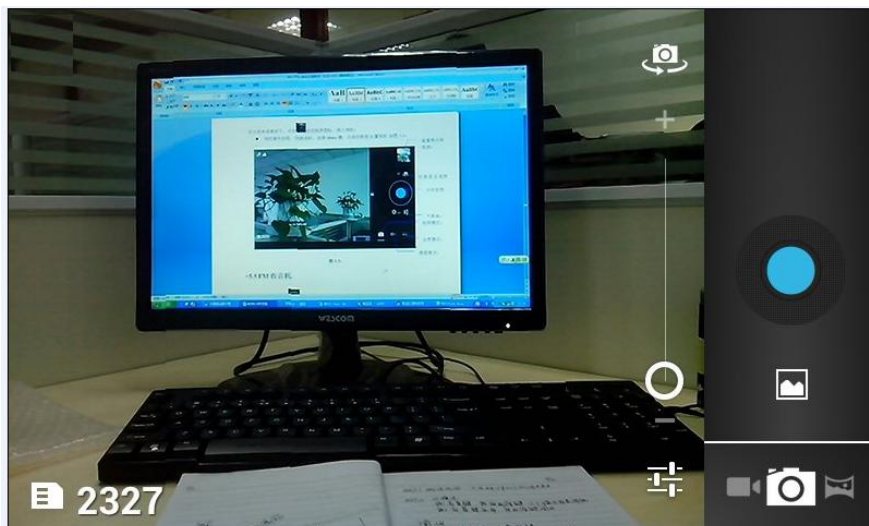


5.5 Radio FM

 
Seleccione el icono de FM radio:

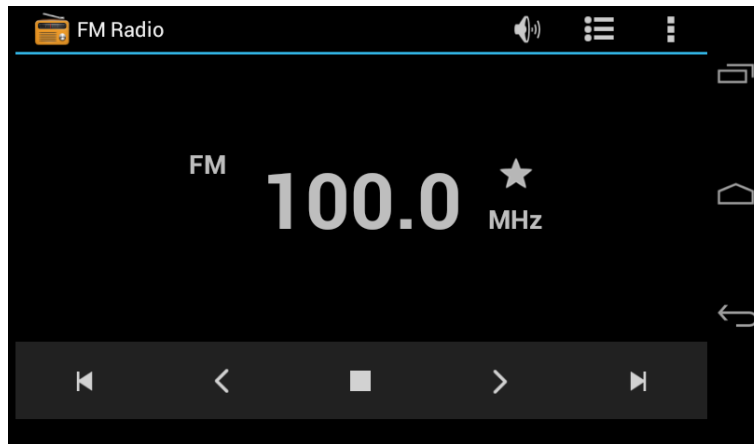

 
Haga clic en el botón superior derecho de menú para acceder a la lista de emisoras:

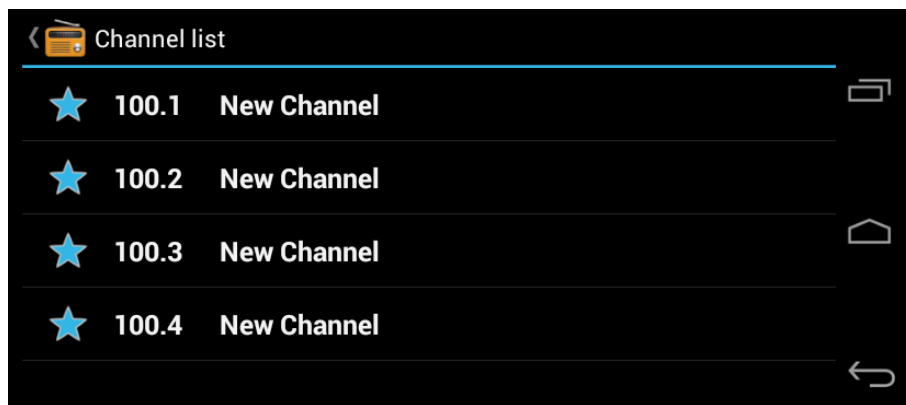

 RDS: Haga clic en la tecla de menú y seleccione los ajustes de RDS:

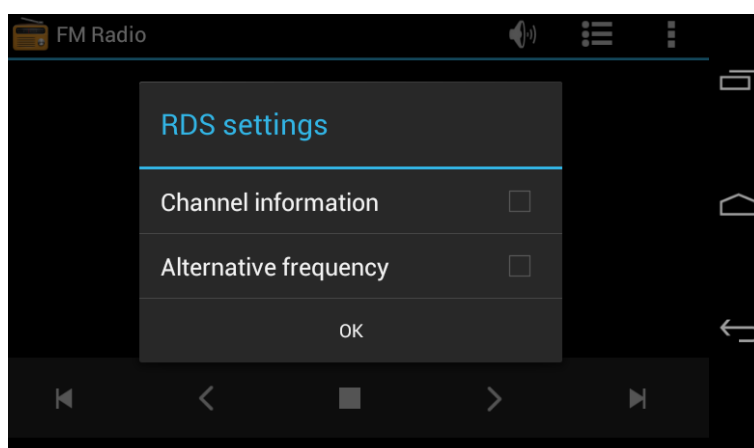

Para guardar emisoras: Pulse el botón  en la interfaz principal para guardar la emisora y el canal se guardará en la lista de canales. Nota: Es necesario insertar los auriculares como antena durante el

uso de la radio FM.

6. FUNCIONES DE COMUNICACIÓN

 
6.1 Teléfono

Seleccione el icono de TELFONO en el menú principal:



6.2 Mensaje de texto


En el menú principal seleccione mensaje de texto .

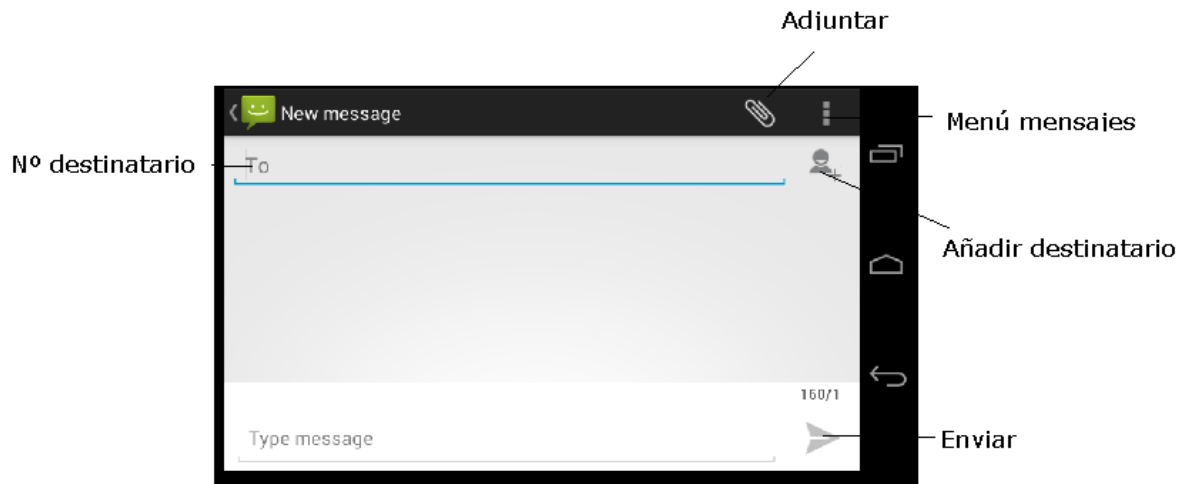

6.3 Lista de contactos



 Seleccione el icono de contactos

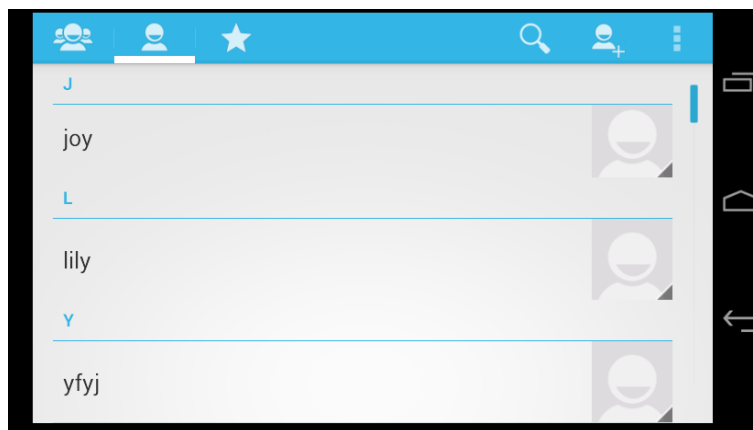

Buscar contacto: 

 
Añadir contacto: 

7. INTERNET


7.1 Navegador

Cuando disponga de conexión móvil o esté conectado a una red WiFi

abra el navegador :

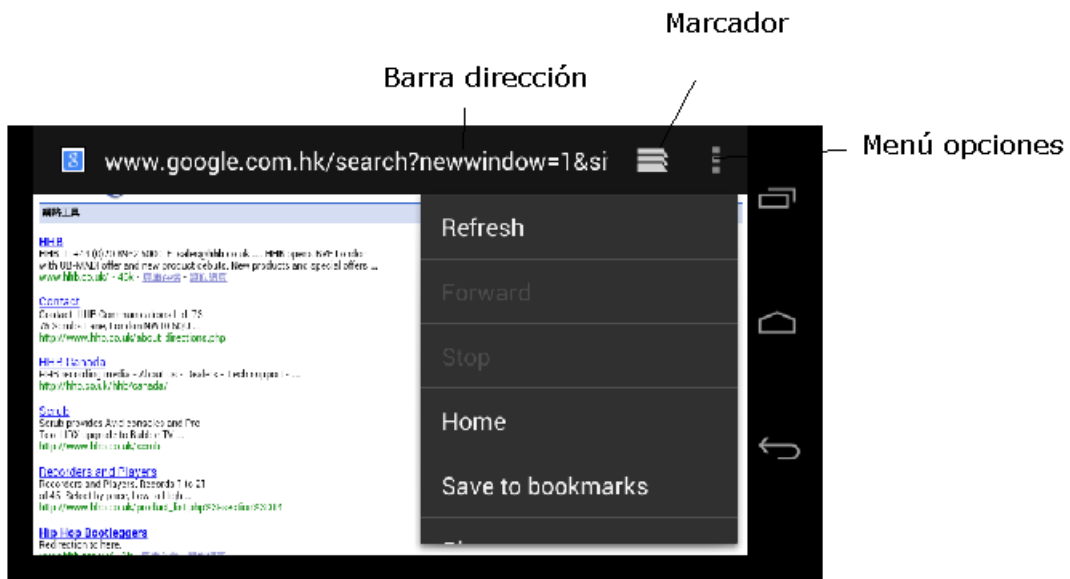


 
Haga clic la barra de direcciones para introducir el sitio web. Puede hacer clic en el menú para actualizar, guardar en favoritos, compartir, página, marcadores, historial, etc:

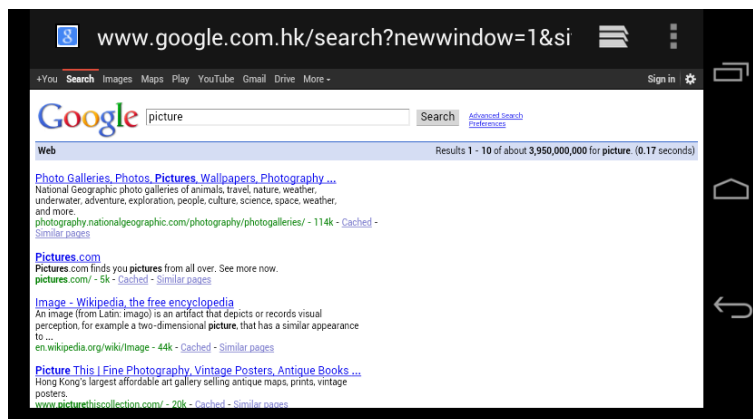


7.2 Correo electrónico

 
Siga los pasos de la guía de configuración de correo electrónico, puede agregar el POP3 o IMAP del proveedor de servicios de correo electrónico:

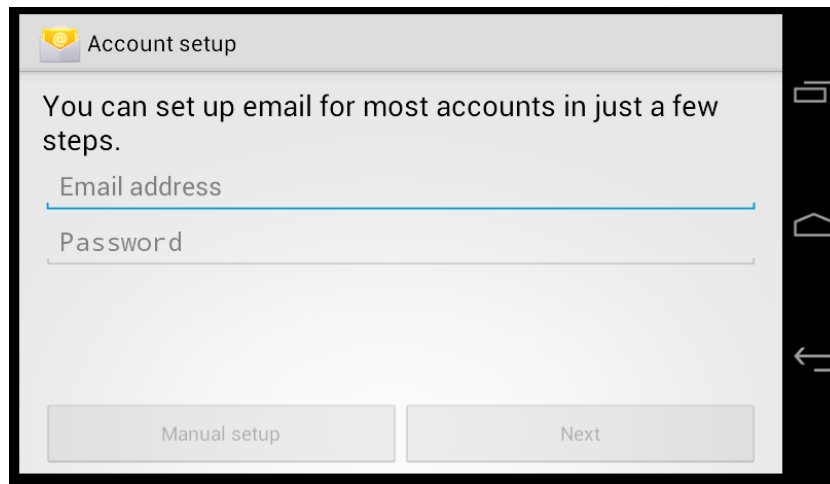

Ajustes de correo electrónico: haga clic en el icono de email , introduzca su dirección de email y contraseña. Haga clic en siguiente y seleccione POP3 o IMAP. Haga clic en siguiente para comprobar si el administrador puede recibir o enviar mensajes de correo electrónico.

Enviar un email: Haga clic en . Haga clic en refrescar para comprobar si hay algún elemento nuevo.

 Haga clic en la tecla menú, en la parte superior derecha, seleccione . Añada el destinatario, texto, asunto, archivos adjuntos, etc:

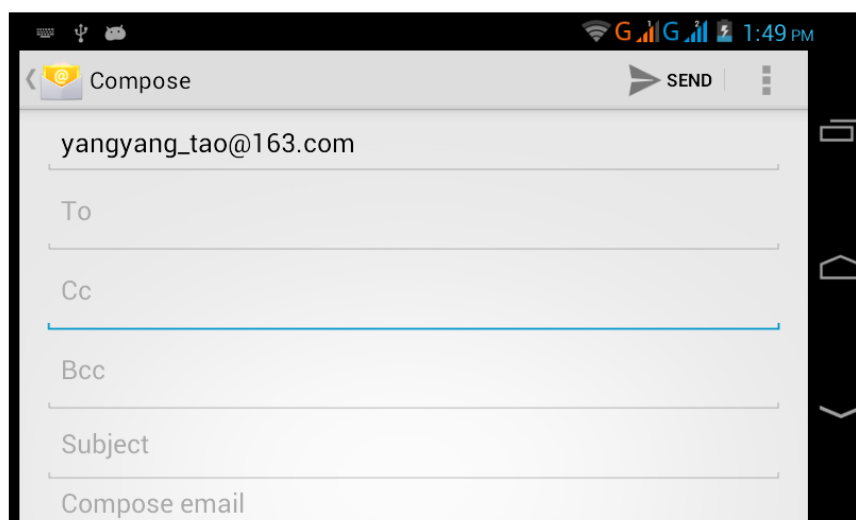

8. GPS

Entre en el menú GPS :



 
Cuando posicionamiento se realice, las barras azules pasarán a color verde y mostrará información como latitud, longitud, altura, velocidad y el tiempo de su ubicación:




9. OTROS APLICACIONES


9.1 Reloj

En el menú principal se puede mostrar la hora:

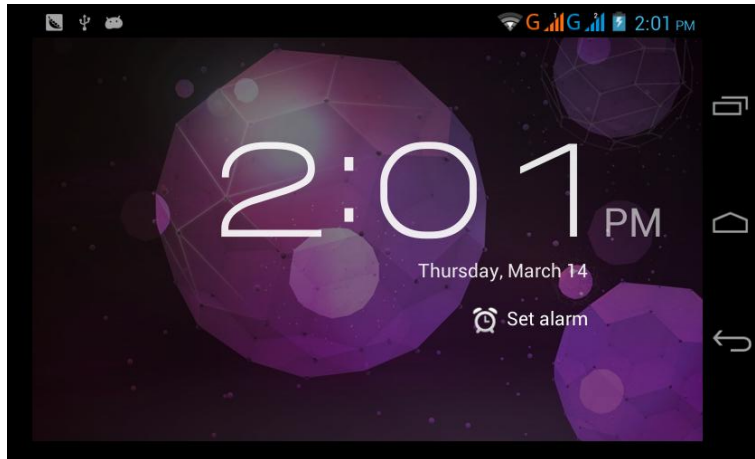


9.2 Calculadora

 Seleccione el icono  :

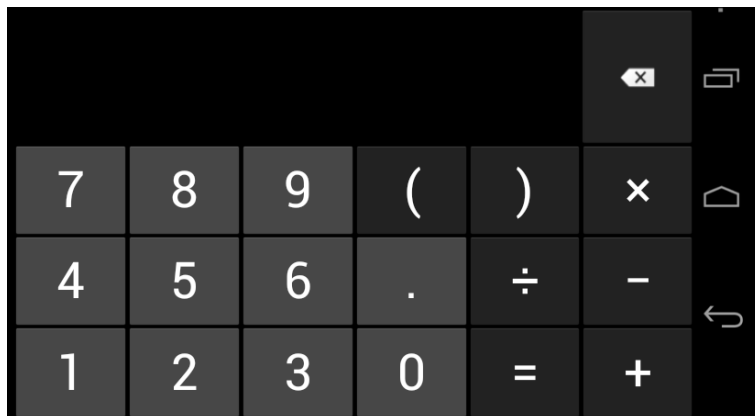



9.3 Administrador de archivos

   
Seleccione el icono de gestión de archivos  :

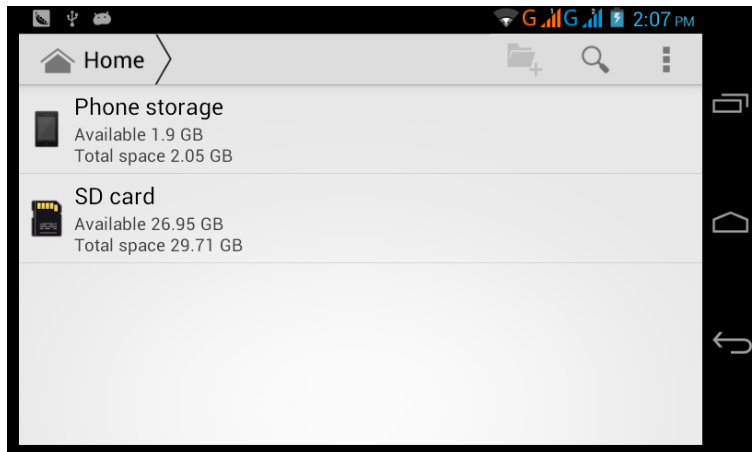


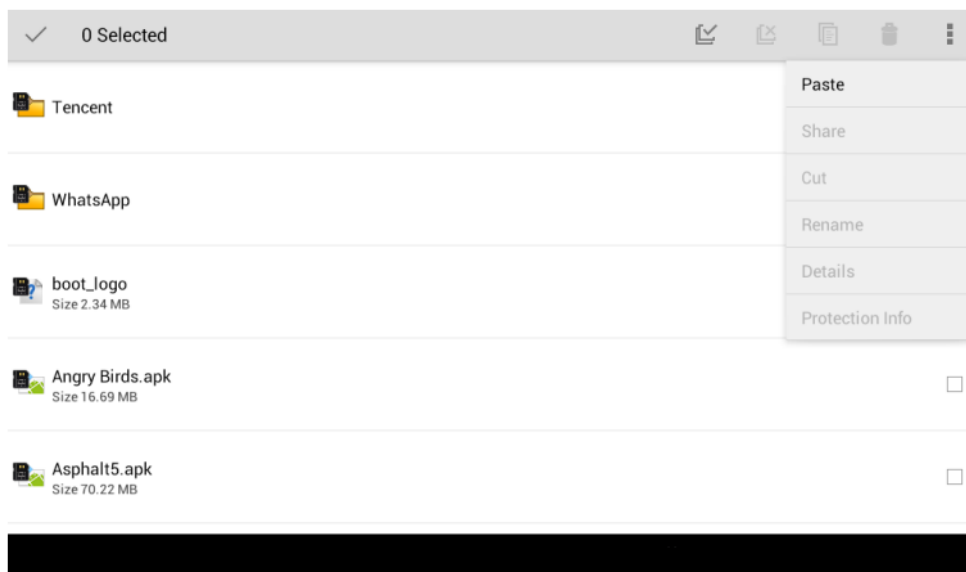 
Puede copiar, cortar, eliminar o cambiar el nombre de los archivos y carpetas: seleccione el archivo o carpeta, mantenga pulsado el archivo para acceder a estas opciones:

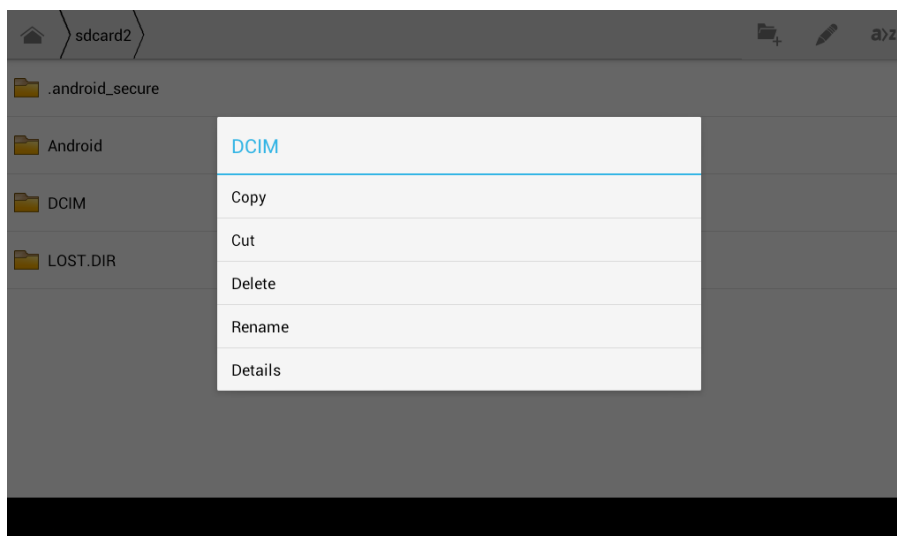


Seleccione el archivo que desea pegar y seleccione 

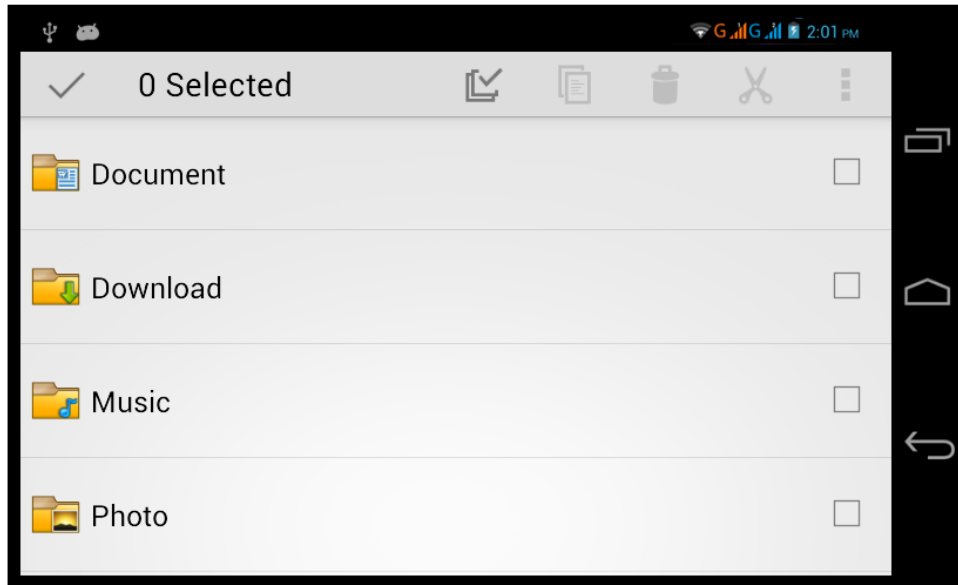

 Luego seleccione  para entrar en el siguiente menú:



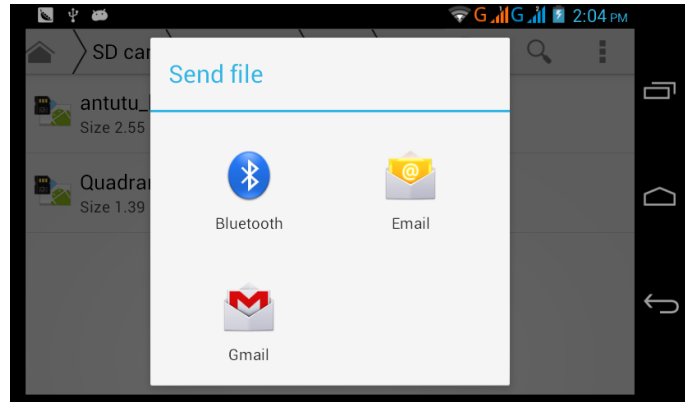

Para compartir un archivo, seleccione el archivo mediante una pulsación seleccione compartir y el sistema mostrará las distintas opciones para compartir:





Para crear una nueva carpeta, seleccione la parte donde desee crearla y haga clic en el icono superior derecho para elegir carpeta nueva

 


9.4 Grabadora

En el menú principal presione el icono de grabadora . Presione el icono de inicio de grabación  para comenzar una grabación.

Puede parar la grabación con el botón  y continuar con la misma con el botón . El sistema recordará

Para reproducir una grabación seleccione el archivo y pulse play.

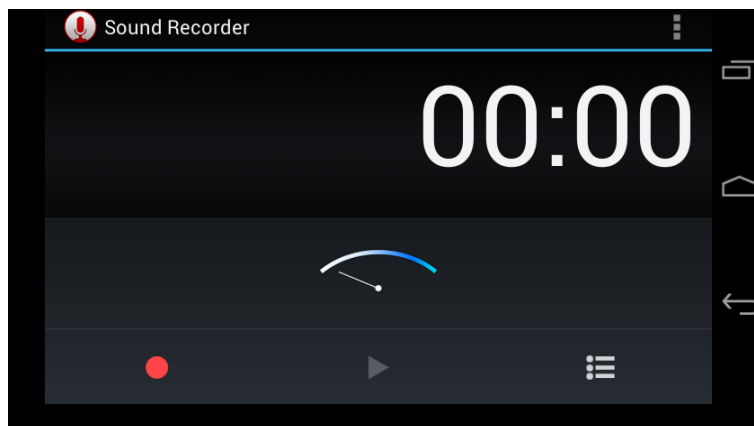

10. PROCEDIMIENTOS DE INSTALACIÓN

10.1 Instalar

Para instalar aplicaciones de fabricante haga clic en el Administrador de Archivos y seleccionar la solicitud a instalar. Nota: los archivos compatibles para instalación y funcionamiento lleven llevar el sufijo .apk.

10.2 Desinstalar

Entre en el Administrador de Archivos, seleccione el elemento a desinstalar y siga los pasos.

11. SOLUCIÓN DE PROBLEMAS

1. Uso por primera vez: cuando use el dispositivo por primera vez puede experimentar un funcionamiento lento debido a que debe actualizar el sistema e instalar software predeterminados. Una vez realizado este primer uso el funcionamiento retomará la fluidez habitual.
2. Si no puede conectarse Wi-Fi: Asegúrese de que el router inalámbrico funciona en condiciones normales. Asegúrese de que el dispositivo se encuentra a una distancia adecuada, evitando los posibles obstáculos. Asegúrese de que el nombre de usuario y contraseña son correctos.
3. Temperatura elevada: Cuando se usa un elevado número de procedimientos y solicitudes y el brillo de la pantalla se encuentra al máximo, el dispositivo puede calentarse.
4. Fallos en Email: Asegúrese que la conexión a internet es correcta. Asegúrese de que su dirección de correo electrónico se encuentra correctamente establecida
5. Funcionamiento anormal: Cuando se instala una aplicación externa de otro fabricante debe asegurarse que es compatible con el dispositivo. Tras cualquier instalación por favor reinicie el sistema por seguridad.
6. Funcionamiento lento: Cuando se usa el dispositivo y no se reinicia

por un periodo de tiempo prolongado, puede provocar un excesivo número de aplicaciones abiertas. Se recomienda reiniciar el dispositivo para su depuración.

"Las especificaciones pueden cambiar sin previo aviso"

IMPORTADO

I.R.P., S.L.

AVDA. SANTA CLARA DE CUBA 5

SEVILLA, SPAIN

BRIGMT



DECLARACIÓN DE CONFORMIDAD

I.R.P., S.L. declara bajo su responsabilidad que el aparato indicado cumple los requisitos de las siguientes directivas:

DIRECTIVAS EMC

EN60950-1:2006/A11:2009/A1:2010

EN 62311: 2088

EN 301 489-1 V1.9.2:2011-09

EN 301 489-17 V2.1.1:2009-05

EN 300 328 V1.7.1: 2006-10

ETSI EN 301 489-1 V1.9.2(2011-09)

ETSI EN 301 489-17 V2.1.1(2009-05)

Descripción del aparato:

Modelo BRIGMTON **BTPC-PH2**

Dispositivo de conexión a internet

Importador: I.R.P., S.L.

Dirección: Avda. Santa Clara de Cuba 5, 41007, Sevilla.

BRIGMT N



BTPC-PH2

**TABLET PC-CAPACITIVE 7"-PHONE-3G-DUAL SIM
Android 4.1.2-GPS-Bluetooth**

Instruction Manual

Content

- 1 Introduction
 - 1.1 Announcements
 - 1.2 Safety Instruction
- 2 MID Introduction
 - 2.1 MID Operation and Preparation
 - 2.3 MID Status and Reminder
- 3 Quick Start Guide
 - 3.1 Keys Function
 - 3.2 Startup and Shutdown
 - 3.3 Open and Close the Screen
 - 3.4 Usage of Touch Screen
 - 3.5 Main Interface
 - 3.6 Visit Application Procedures
 - 3.7 USB Connection
 - 3.8 Words Input
 - 3.9 Application Technique
- 4 Basic Setting
 - 4.1 SIM Card Management Management
 - 4.2 Wireless and Internet
 - 4.3 Bluetooth
 - 4.4 Data Usage Situation
 - 4.5 More
 - 4.6 Contextual Model
 - 4.7 Display
 - 4.8 Storage
 - 4.9 Battery
 - 4.10 Application
 - 4.11 Account and Sync
 - 4.12 Location Service
 - 4.13 Security Setting
 - 4.14 Language and Input Method
 - 4.15 Backup and Reset
 - 4.16 Date and Time
 - 4.17 Fixed-time Startup and Shutdown
 - 4.18 Assistance Function
 - 4.19 Engineer Selection..
 - 4.20 About Tablet
- 5 Multi-Media
 - 5.1 Music
 - 5.2 Video
 - 5.3 Photo Gallery

- 5.4 Camera
- 5.5 FM Radio
- 6 Communication Function
 - 6.1 Phone
 - 6.2 Text Message
 - 6.3 Contact List
- 7 Internet
 - 7.1 Browser
 - 7.2 Email
- 8 GPS Function
- 9 Other Application Procedures
 - 9.1 Clock
 - 9.2 Calculator
 - 9.3 File Manager
 - 9.4 Recorder
- 10 Installation of Procedures
 - 10.1 Installation
 - 10.2 Uninstall
- 11 Troubles Shooting

1 Introduction

1.1 Announcements

Preventive maintenance

- Please always keep the MID dry. To avoid the device short trouble, corrosion fault and electric short, please prevent the device, battery and charger from water and moisture, and don't operate the device or charger by wet hand.
- To avoid failure of device, battery and charger, please prevent the device, battery, charger from violent shock or shake.
- To avoid failure of device, battery and charger, please prevent the device, battery, charger of all over heating or too cold circumstance
- Never shock, throw, prod the MID, or drop, extrude, bend the MID.
- Never disassemble the device and accessories arbitrarily, otherwise the device and accessories are not in our company warranty scope.

1.2 Safety Instruction

Before the operation of the MID, please read this chapter and teach your kids about these information. For further details, please refer to the safety instructions and announcement.

- Never use the MID when driving car, in order to ensure safe driving.
- In the medical area, please abide by related rules and regulations. Please shut down the MID when it is near to the medical area.
- To avoid the wireless signal to interrupt the plane-controlled signal, please shut down the MID or using airplane mode when you are boarding a flight,
- To avoid electronic equipment failure, please shut down the MID in the vicinage of high-accuracy electronic equipments.

- Please don't disassemble the MID and accessories. Only authorized agent has access to service the MID.
- Please keep the MID far away from magnetic equipments, the radiation of MID may erase the data stored in the magnetic equipments.
- Never use the MID in the vicinage of high temperature, inflammable gas (gas station).
- Protect the MID and accessories from kids reach scope, and avoid the kids to use the MID without parents' supervision.
- Please comply with related rules and regulations, and respect others' privacy and legal rights while using the MID.
- Please strictly adhere to related instructions in the manual when using USB cable to ensure the safety of the MID or PC.
- Never use the MID in bathroom or other humid environment, and please protect the MID from liquid wash or wet.

2 Introduction

2.1 MID Operation and Preparation

Battery Charging




 






If this navigator is first used, please use AV adaptor to fully charge it.

1. Apply the power adptor to charge for MID.

2.2 MID Status and Reminder

Reminder icons

When some remind message appears in your reminder window, please click column and slip the screen to open the reminder list. Choose the menu you need, and confirm the information. Then you can close the reminder window through clicking the column to slide up. Please refer to below status icons:

	New email		Airplane Mode on
	USB connected		USB debugging connected
	Return button		Downloading
	Setting button & Display recently-used application		Home button
	Current electric volume.		WIFI connected, internet is available

Reminder board

Reminder icons will work while receiving emails, WIFI is open, you can open the reminder board to view the detailed information.





Open the reminder board

When the reminder column shows new reminder icon, please hold the column and slip down your finger, then the reminder board is opened.

3 Quick Start Guide

3.1 Keys Function

Keys Function Description:

Power button	Short press to sleep/wake up, long press to startup and shutdown.
Volume + (up)	increase the volume
Volume - (down)	decrease the volume
HOME button (home) 	Click it in any interface will return to main interface.
Back button (back) 	click it in any interface will return to previous menu
Menu button 	This button will display in menu interface.
Setting button 	Can set the system and other menus & display recently browsed history

3.2 Startup and Shutdown

Startup

Long press **POWER key for three seconds**, you can enter into startup picture. The system enters into screen lock status, please unlock it.

Shutdown

1. Long press POWER, it will popup shutdown window.
2. Shutdown window contains mute mode, airplane mode, reboot mode and shutdown four options.
3. Click Shutdown is the last step.

3.3 Open and Close of the Screen

 
Screen will be closed on its own when no operation happens.

1. Screen will be closed on its own if no operation happens for some time to save battery power
2. When screen is open, press POWER key, the screen will be

closed immediately.

Open the screen when it is closed.

If the screen is closed, short press POWER to open the screen. The screen will be locked open it, it will show the picture as below picture, left slide to unlock and enter into camera, right slide the unlock icon to unlock the screen.

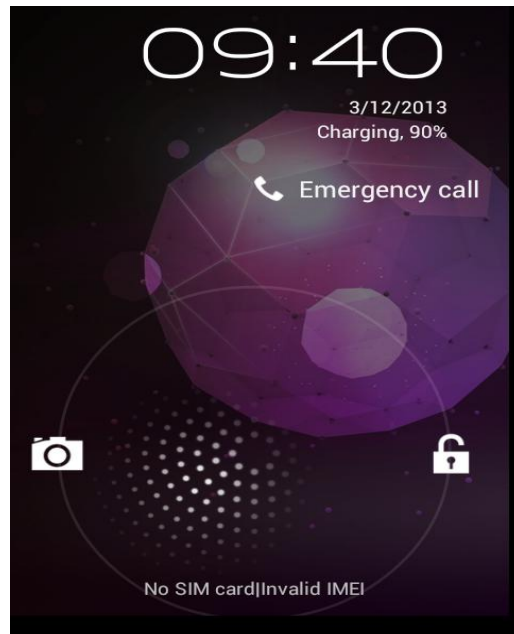

Picture 3.1

3.4 Usage of Touch Screen

MID operating methods

There are below methods to view the main screen, menu and application procedure in your MID.

Click

When you want to use the screen keyboard typing or choose application in the main interface, you only need to touch it by your finger.

Press on

If you want to open some item(textbox or the link in the webpage), or shortcut and main procedure move, you can press on this item.

Quickly slide or slide

Quickly slide or slide indicates make quick vertical or horizontal movement by finger.

Pull

 
Before you pull, you need to hold the it with strength until you pull it into the position you want.

Rotate

For most pictures, you only need to retate the MID sidewise to change the screen direction from horzoncial to vertical. For instance, when you are typing wods, and watching movies.

3.5 Home Page


Main interface as below picture 3.2, long press the blank and it will popup windows to set wallpaper, folder, widgets, and shortcut.

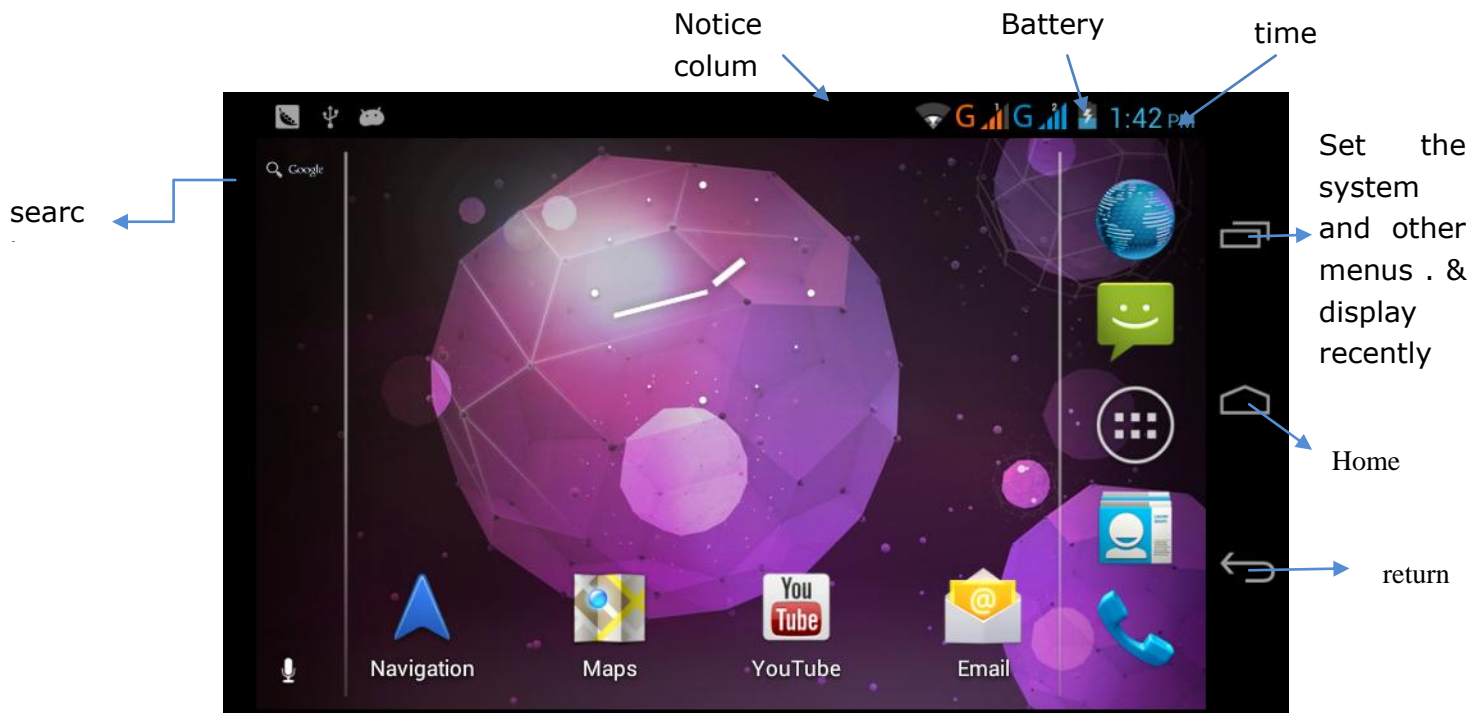

Picture 3.2

The extended home page

 The home page can be extended beyond the wideness of screen to provide more space, which you can put new-added shortcuts and widgets. Click the blank space in home page then slide right or left to extend to the right or left of the screen. In the home page, there are two extended pictures, as Picture 3.3.

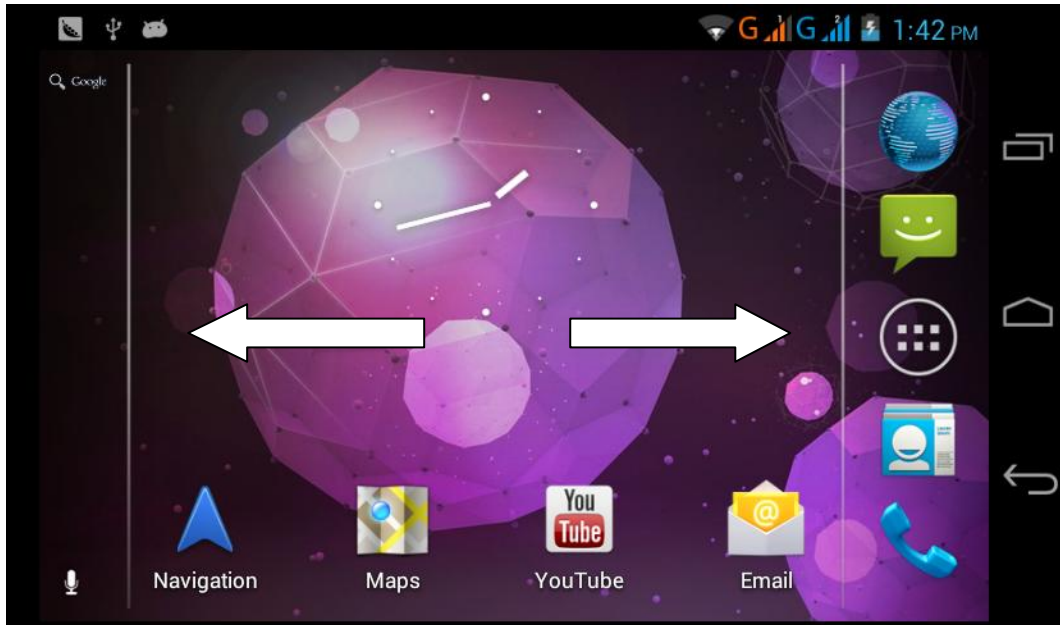


Picture 3.3

The shortcut icons management in desktop application.

Create folder icon in desktop

1. Drag the icons need to be put together on one icon(can also overlay several icons)as Picture 3.4.
2. Then click the overlaid icons, the applications can be folded, as Picture 3.5.

 Click the unnamed folder in the black box, it will popup the hidden keyboard, the folder name can be renamed (this is similiar with Apple IOS system), the icons position can be changed through long press.

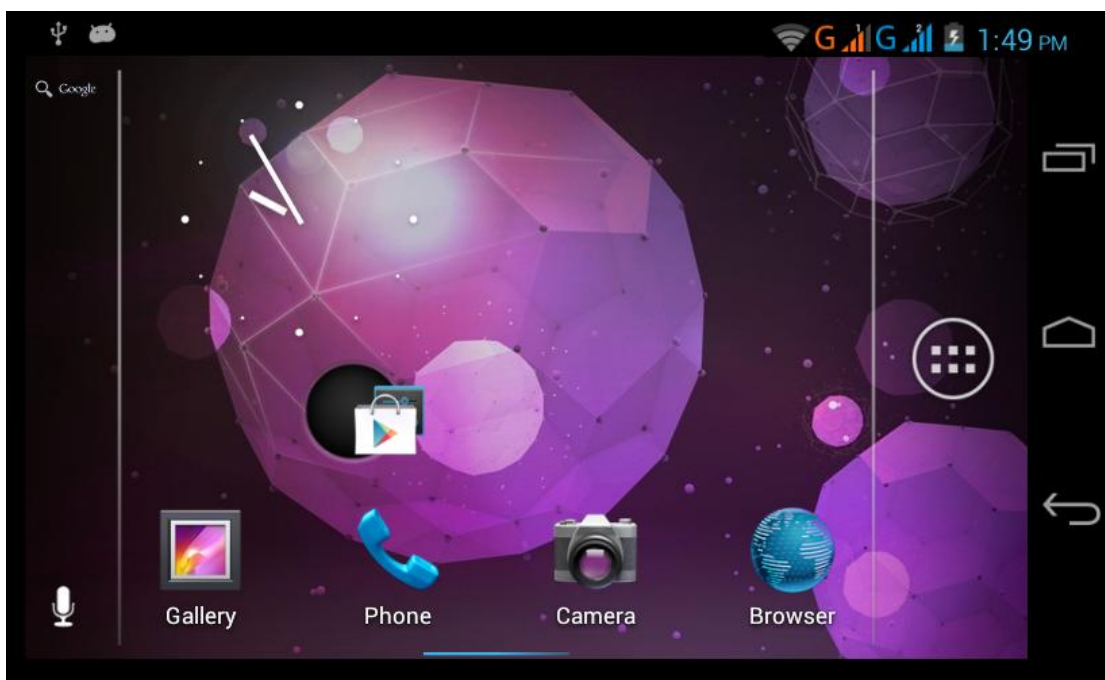


Picture 3.4



Picture 3.5

Remove the icons in desktop

 1. Long press the icons need to be remove, then on the right


above of the screen, it will appear  icons.

2. Drag the icon to the above of the remove icon, till the icon become red, then move your finger to delete the icon.

Change the wallpaper of desktop

1. In home page, long press any blank space in main screen, it will popup a window to change the wallpaper.
2. Click the gallery or wallpaper gallery to select the wallpaper.

3.6 Visit Application Procedures

Click  in right top of Picture 3.2, enter into main interface as Picture 3.6, choose the application procedure you want to visit.



Picture 3.6

3.7 USB Connection

MID storage configuration

Before transmitting documents, you have to conduct storage configuration for your MID:

1. Connect the MID and computer by USB cable, the reminder column will show the remind information.
2. Open the reminder board; please view the MID status and reminder to learn how to open the board.
3. In the reminder board, click the "USB Connected", it will as below Picture 3.4, then click "open USB storage configuration".
4. Now the USB is connected successfully.



Picture 3.7

Copy the document into memory card

1. Connect the MID to computer with USB cable.
2. As MID storage configuration, it is connected with computer successfully.
3. Open the "My computer" in your computer, check the items in "removable disc".
4. Copy the documents you need into "removable disc".
5. After copying finishes, click "shutdown the USB storage configuration" to uninstall.

Notice: When the MID is connected with USB cable, and you open the USB storage configuration, you can't view the memory card through the MID. Only after you detach the USB cable, you can view the memory card in the MID.

3.8 Typing words

Use the screen keyboard

 
When you start the procedure or choose the words or numbers edition, it will show the screen keyboard. The keyboard contains below typing options:

1. Android keyboard
2. Google Pinyin

Choose the typing method you want

1. Click Setting procedure application.
2. Click Language and Keyboard.
3. In the text setting area will reveal all the installed words-typing methods in your MID.
4. Tick the typing method you want.

Use and switch of input method

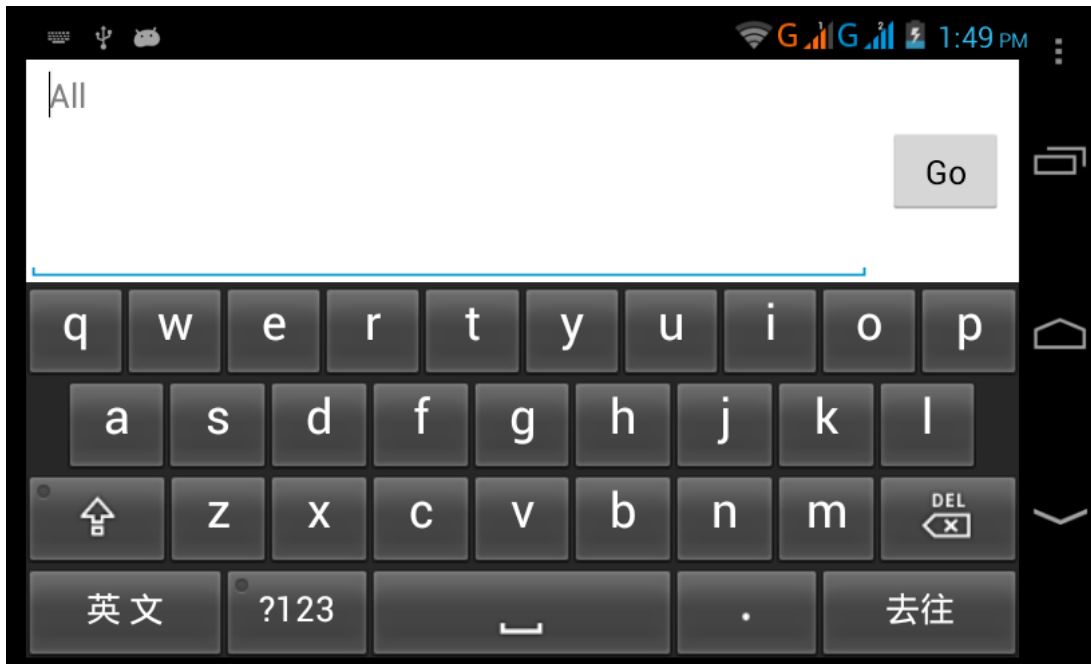

Picture 3.8

3.9 Operation Technique

Enter widgets interface

In the application interface, click widgets on the above of screen, or slide the screen, it will switch into widgets interface. Long press any widget to create its shortcut, then you can enter into the application through the shortcut icon.

Create application shortcut icons in the desktop

In the application interface or widgets interface, long press any icon to switch into desktop automatically, drag and hold the icon, you can move to any position in the desktop.

 
Remind: If the target position has no space, the widget won't be add in the main screen.

4 Basic Setting

4.1 SIM Management


4.1-1 Voice call

Click settings in main menu, choose SIM Management, as Picture 4.1

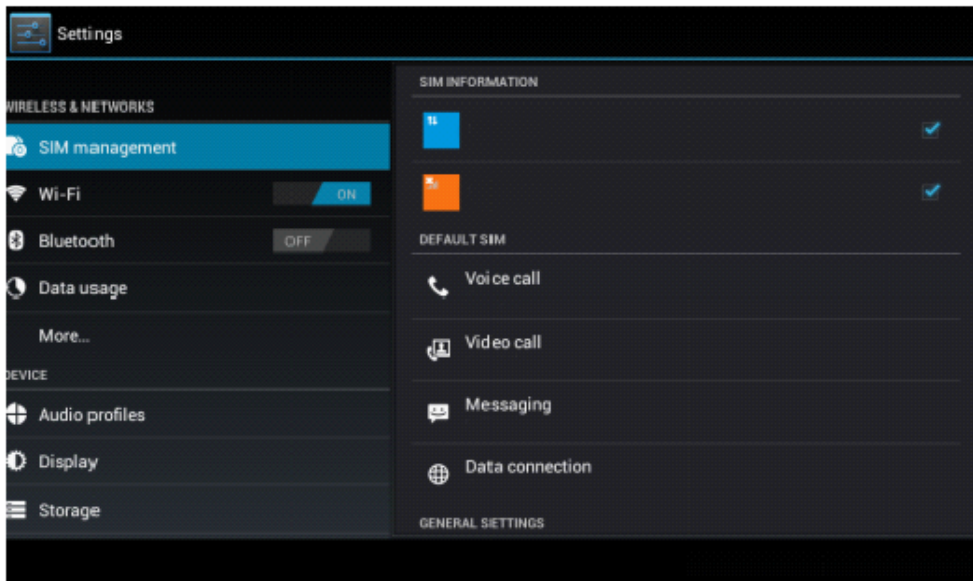

Picture 4.1

 
Click voice call, choose defaulted SIM card, as Picture 4.2

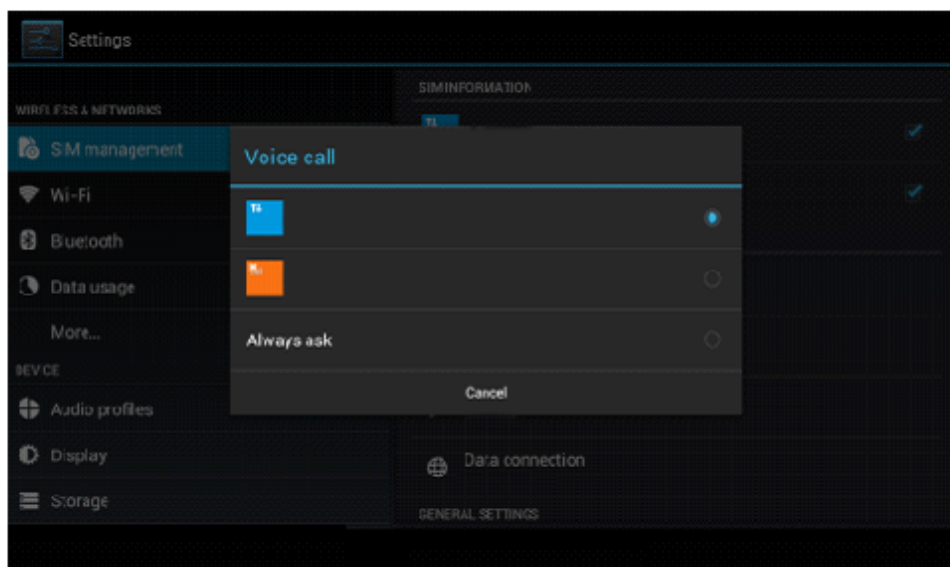

Picture 4.2

4.1-2 Video Call

 
Click settings in main menu, choose SIM Management, and click video call, choose defaulted SIM card when makes video call, as Picture 4.3

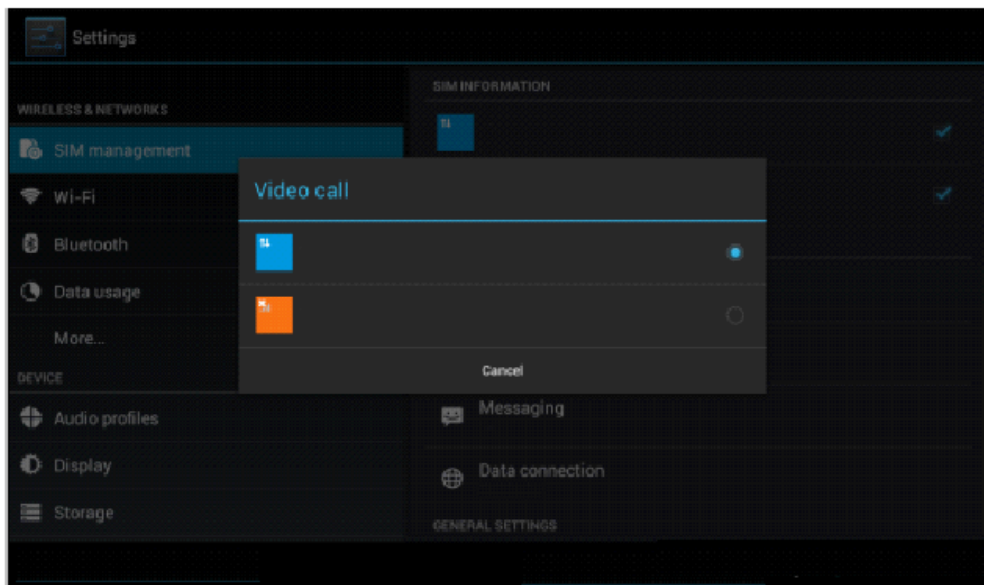

Picture 4.3

4.1-3 Message

 
Click settings in main menu, choose SIM Management, click message, choose the defaulted SIM card when sends message, as Picture 4.4

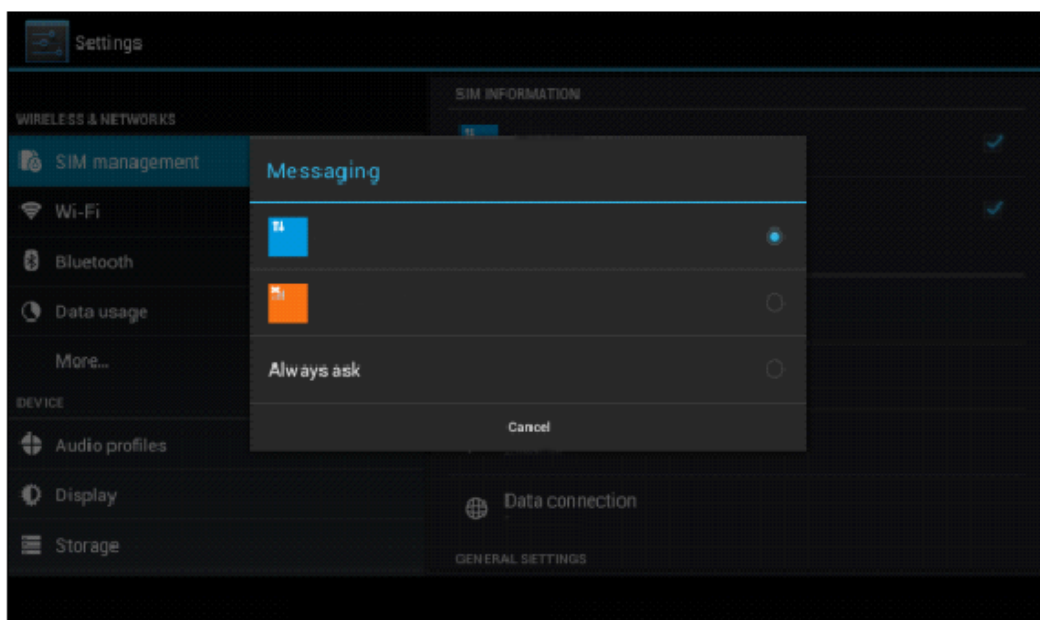

Picture 4.4

4.1-4 Data Connection

 Click setting application in main menu, choose SIM management, click data connection, choose the defaulted SIM card, as Picture 4.5

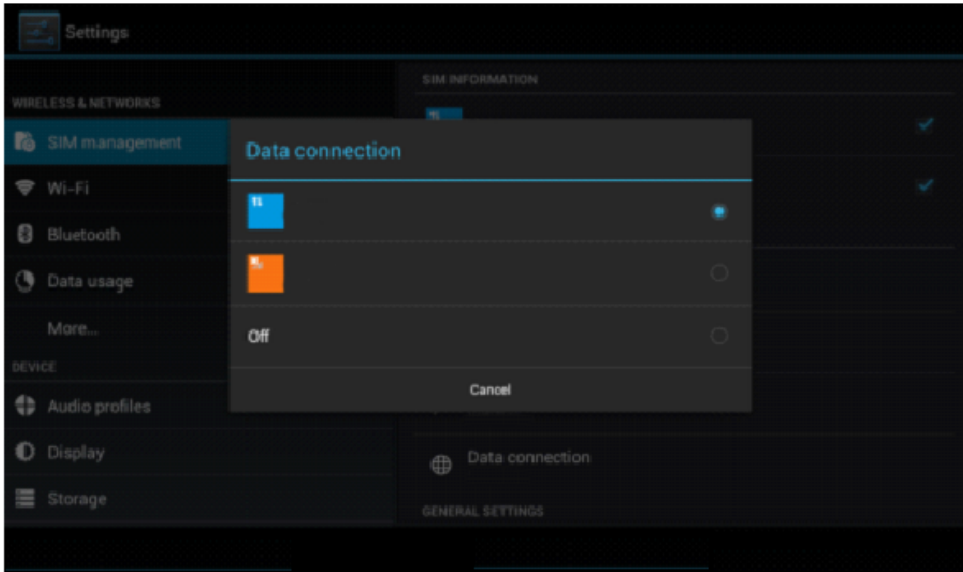


Picture 4.5

4.2 Wireless and Internet

1. Connect Wi-Fi

 
- 1) In the main menu or interface, choose **setting** application procedure.
- 2) Click WLAN, open wifi, MID will automatically search the available Wifi wireless internet. As Picture 4.6
- 3) Choose the Wi-Fi internet you want to connect, if it has password, it will popup the password window, enter password, click connect.

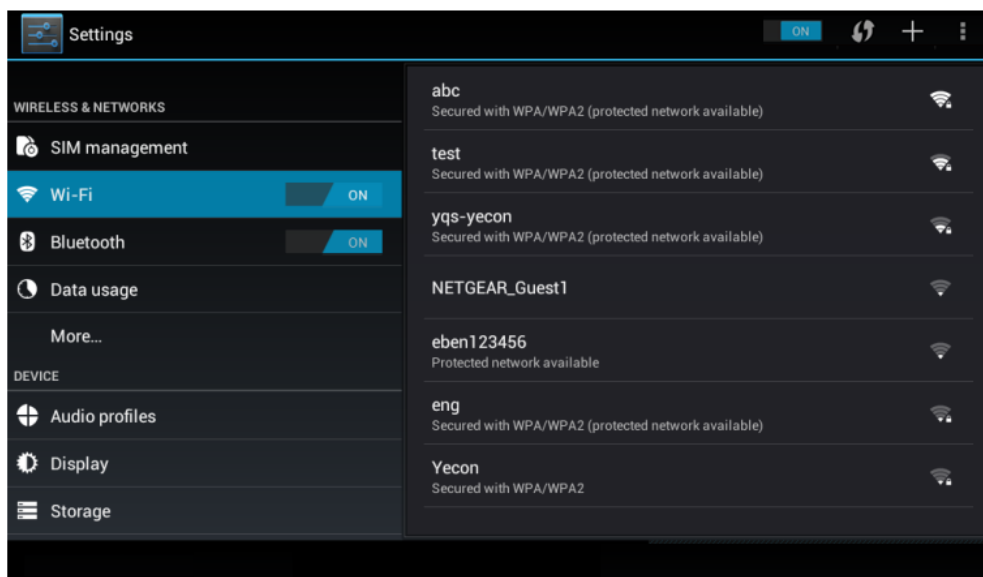

Picture 4.6

2. Add Network

 1) Click **ADD NETWORK** icon in right top, as Picture 4.7

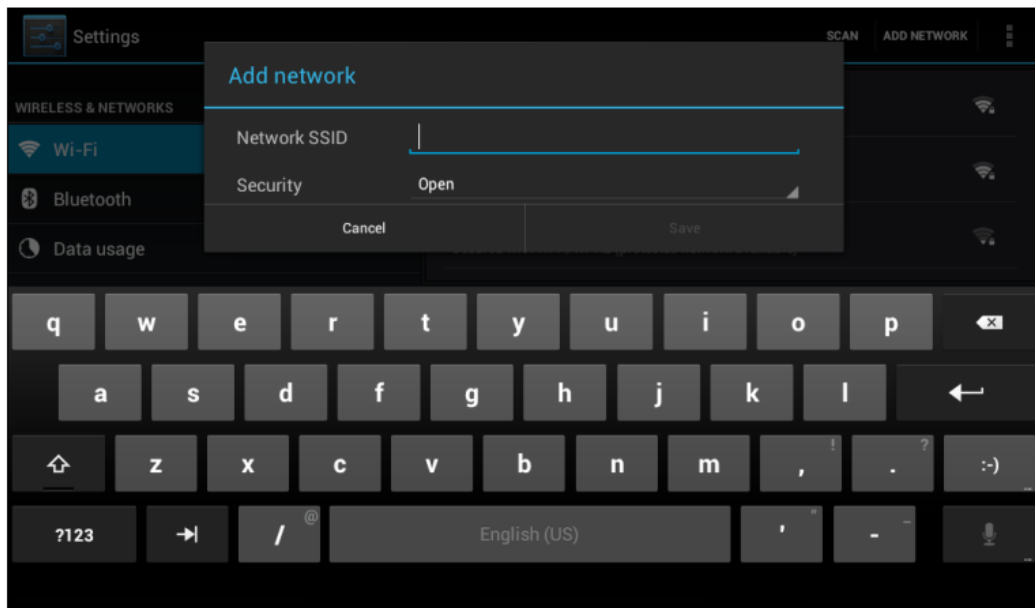

Picture 4.7

2) Input network SSID, the wireless network name, click save.

3) Click user name already saved, click connect to use network, as Picture 4.8




Picture 4.8

3. Network Notice

If you open Network Notice, when WIFI signal appears, the right bottom will remind you available WLAN network, as Picture 4.6

4. Keep WI-FI on during sleep..

 1. Click  icon in right top of Picture 4.8, select **advanced**.
2. Click **Keep WI-FI on during sleep**, as Picture **4.9**

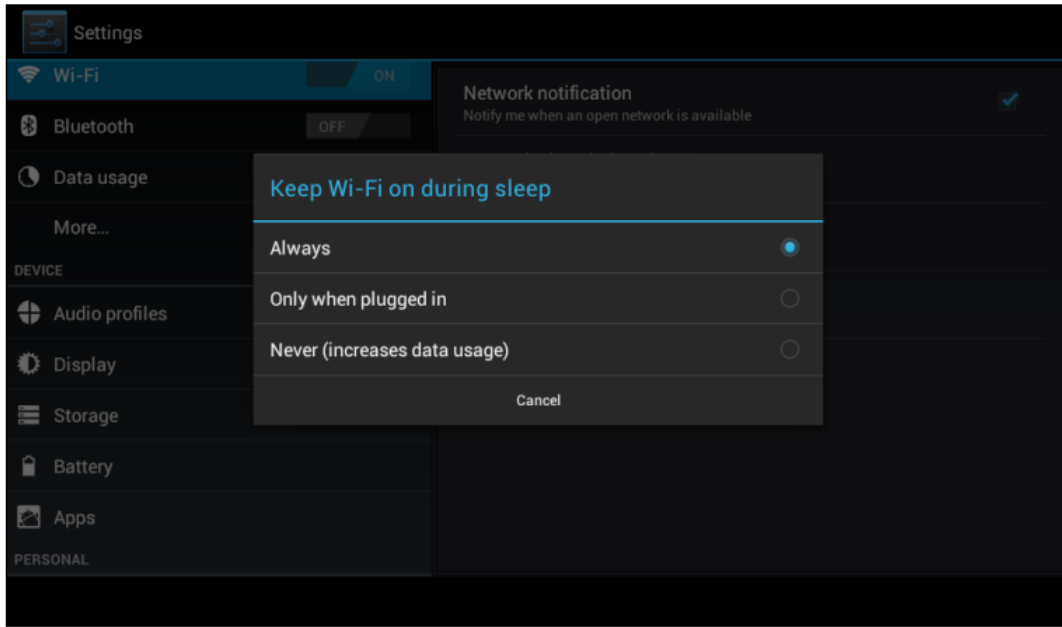


Picture 4.9


4.3 Bluetooth


Bluetooth function operation

 1. Click setting application in main menu interface
2. Click bluetooth and open it.
3. If somebody open bluetooth in your surroundings, click search device in right above, then MID will automatically search the bluetooth device nearby. As picture **4.10**

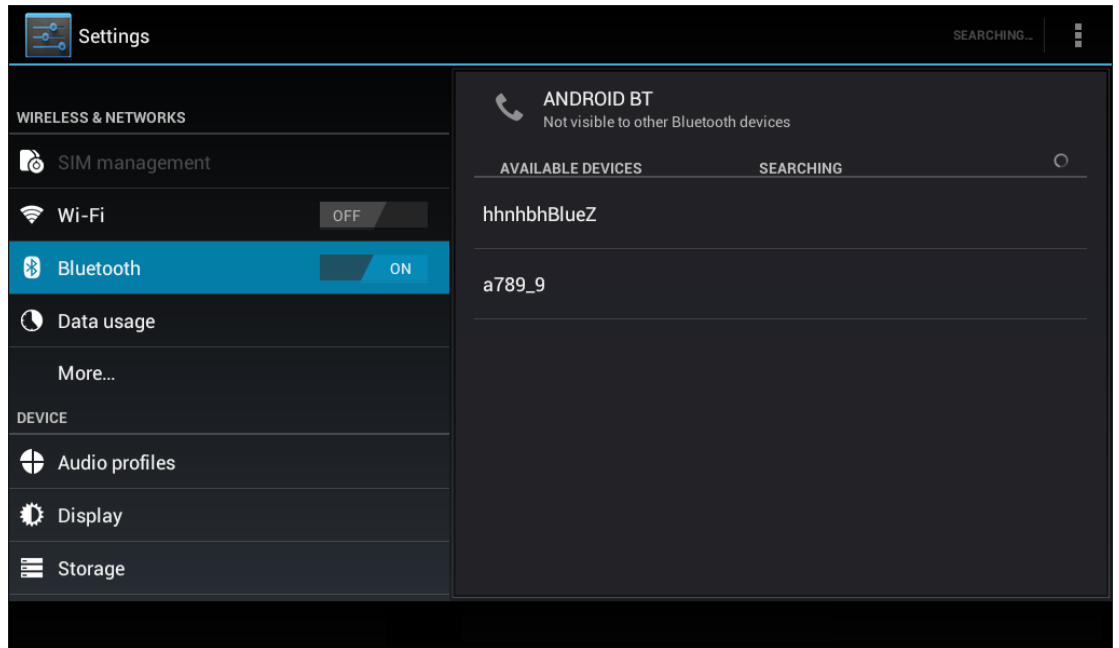

Picture 4.10

 
4. Click the available Bluetooth device, it will popup request window, enter into related password, and match the device to connect.
5. After match successfully, choose the operation you want to, click  to enter into Picture 4.11.

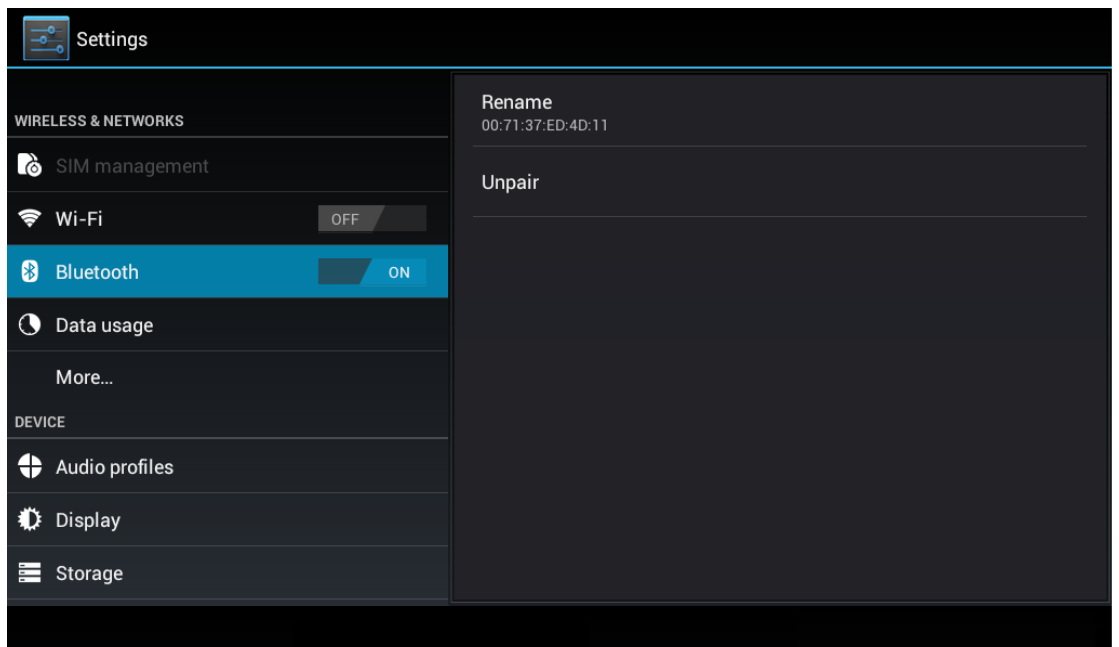


Picture 4.11

Bluetooth setting

1. **Rename tablet**

 
Click  icon in right top of Picture 4.10, as Picture 4.12, select rename tablet, you can rename it as you want

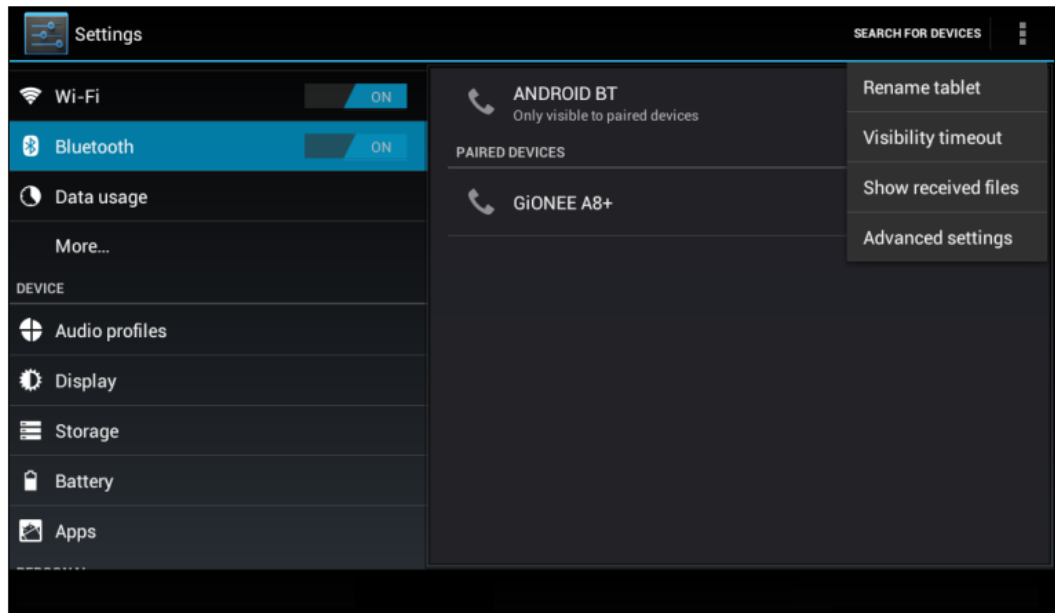

Picture 4.12


2. Check visibility timeout

 Select **visibility timeout setting in Picture 4.12**, choose the time you want to set, as Picture 4.13 (Note: check overtime setting is the time setting when Bluetooth is checked)

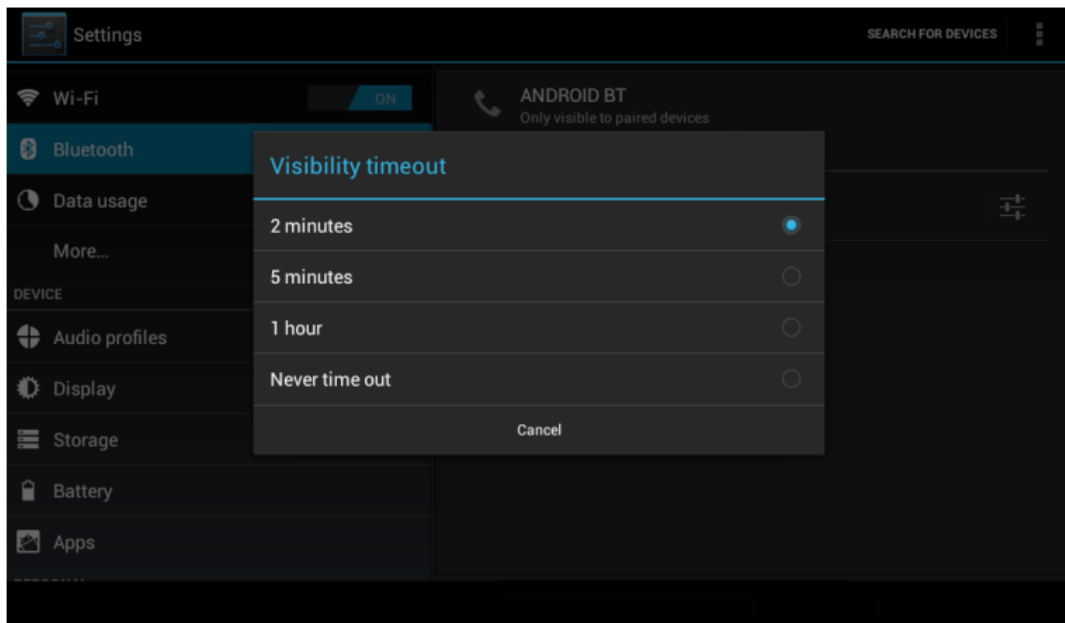

Picture 4.13

 - 3 Display the file you received
Choose display the file you received in Picture 4.12, you can view download and upload files.
4. Bluetooth advanced setting
Choose Bluetooth advanced setting in Picture 4.12, enter into Picture 4.14

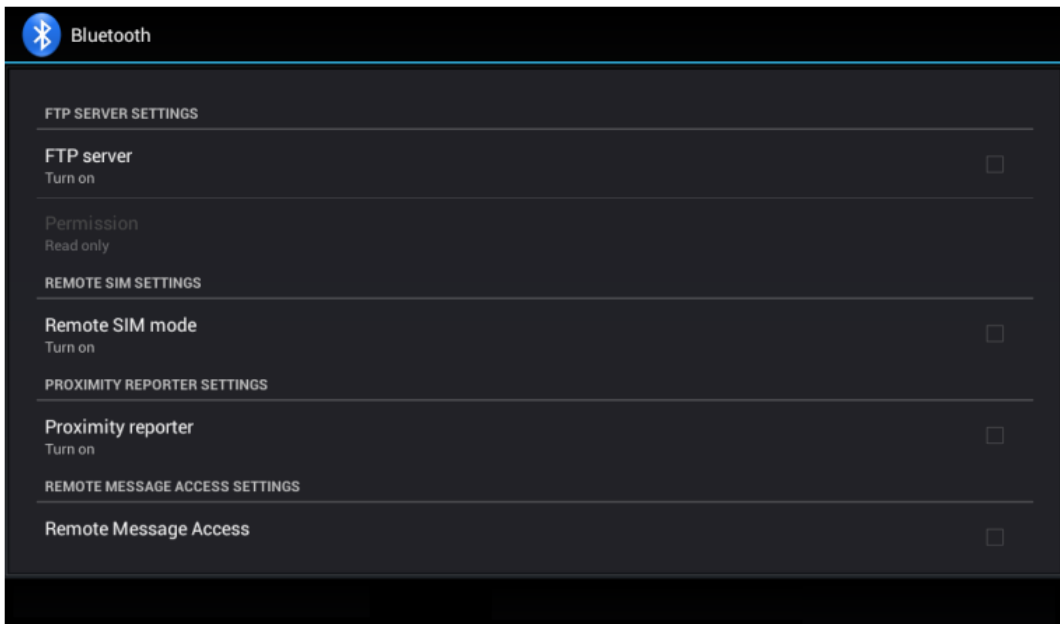

Picture 4.14

1. File transmission,
Open file transmission service, Connect Bluetooth FTP and customer device to visit and operate the file.
2. Bluetooth distance induction device
Open Bluetooth distance induction device, when two Bluetooth devices distance is quite far or connection is cut off, the Bluetooth will remind you with sound.


4.4 Data Usage


Check SIM card data usage, as Picture 4.15



Picture 4.15

 Check WIFI data usage

 Click  icon in right top of Picture 4.15, click **Data Usage**, as Picture 4.16

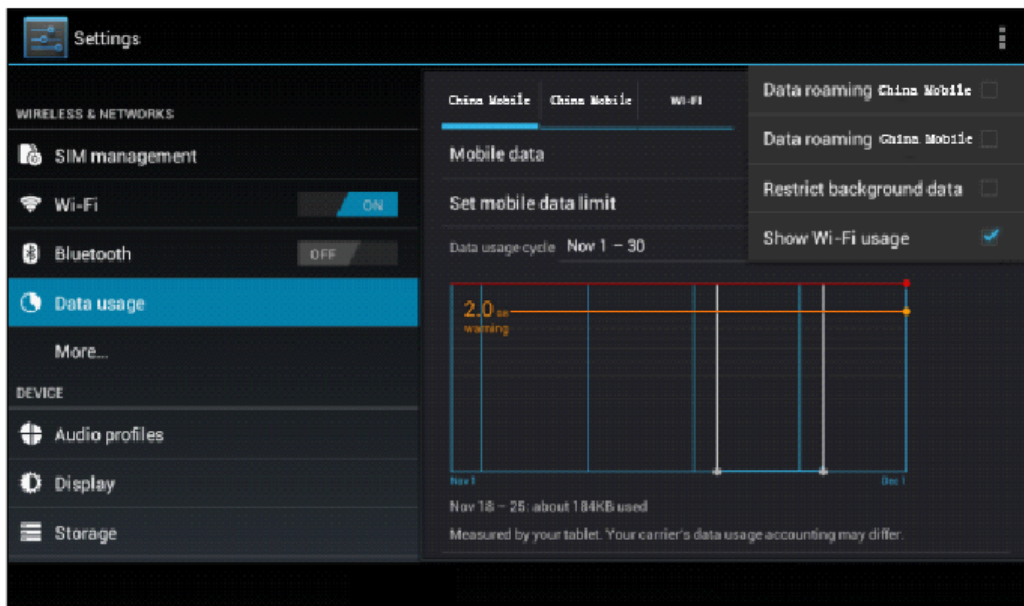

Picture 4.16

 
4.5 More

4.5-1 Airplane Mode

Airplane Mode can turn off WIFI and GSM card function quickly, when airplane mode is turned on, WIFI and GSM can't get any signal, then airplane mode is turned off, WIFI and GSM module will recover to previous state.


4.5-2 VPN

Open VPN, click **add VPN network**, as Picture 4.17. Input **name** and server address, then save.

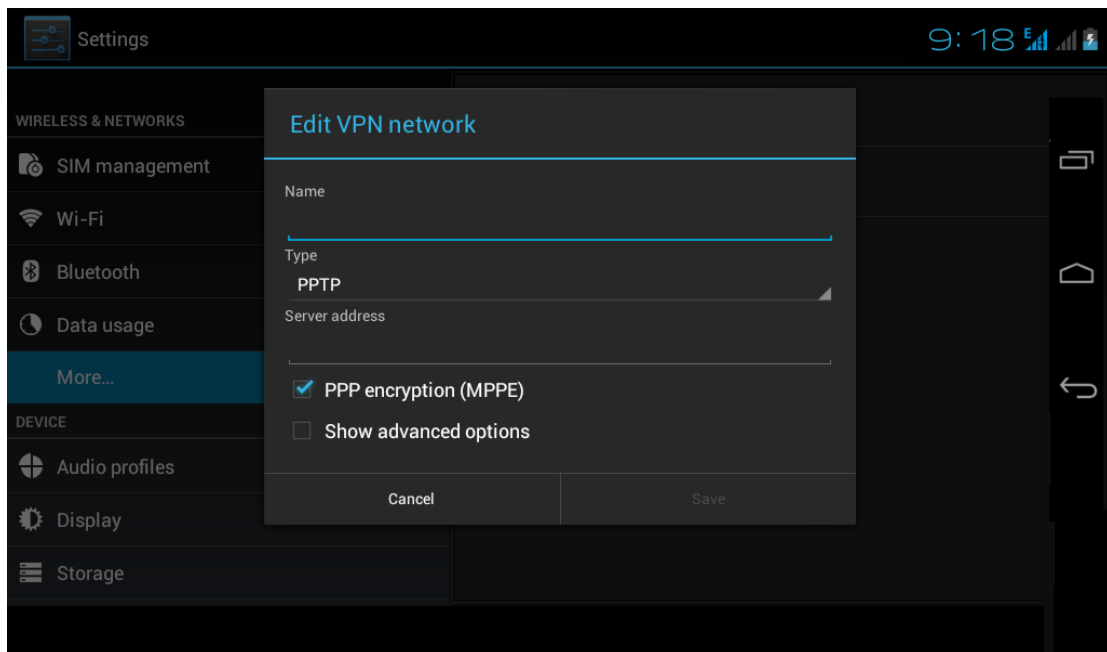

Picture 4.17

 Click **VPN**, as Picture 4.18, input **VPN user name and password**, click **connect**.

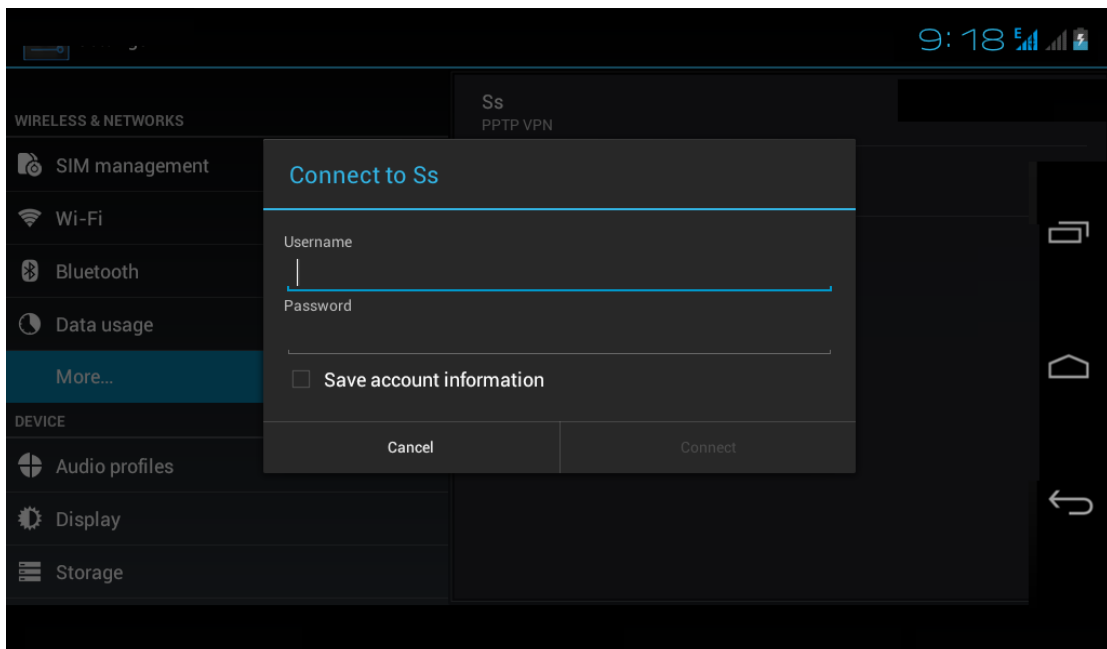


Picture 4.18


4.5-3 Network sharing and portable hotspots

Portable WI-FI hotspots

 1. Click setting application in main menu.
2. Click more when wifi is well connected, open network share and portable hotspot

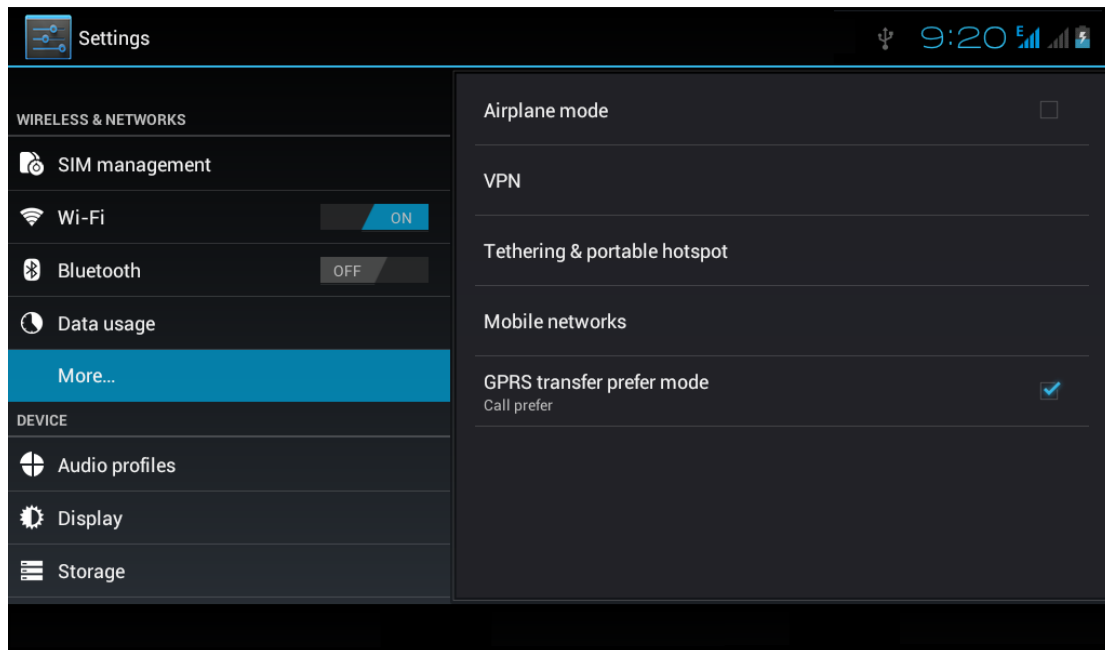


Picture 4.19

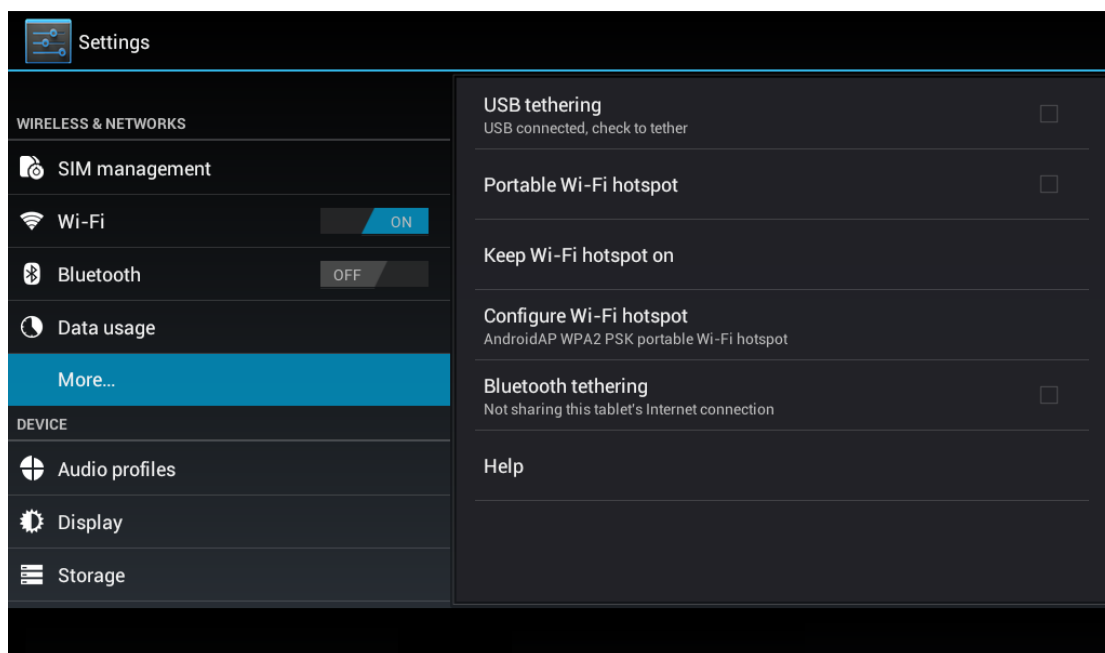 

Picture 4.20

 3. Click **keep WI-FI hotspots on**, choose open time.
4. Return to previous menu, open portable WLAN hotspots, click configure WI-FI hotspots.

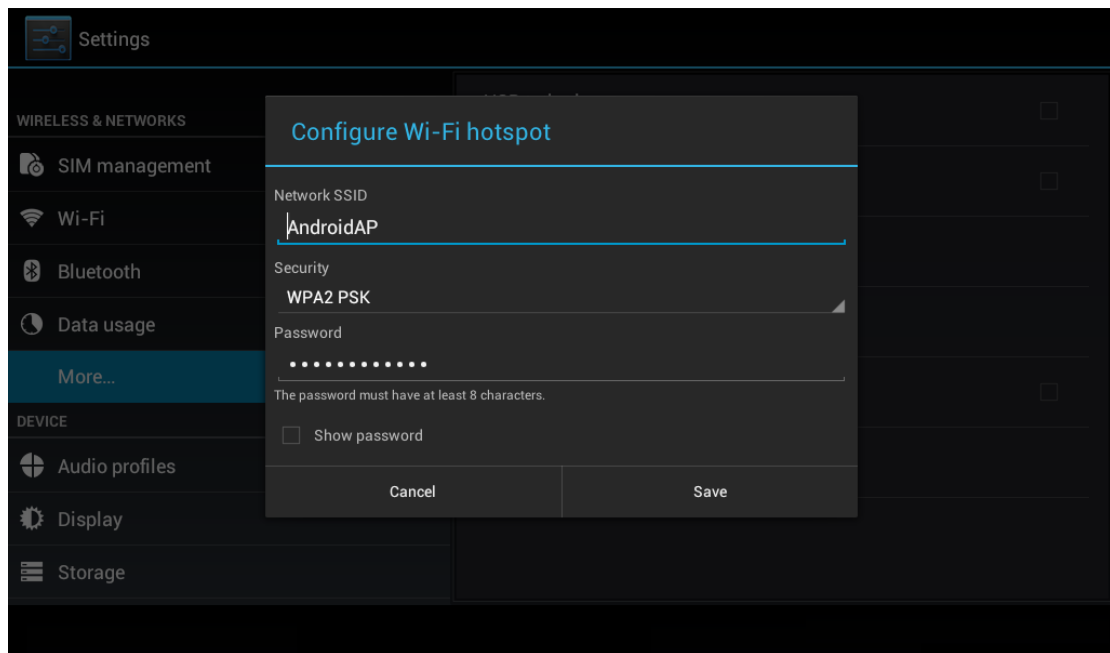


Picture 4.21

5. Set passwords you want to, password should be more than 8 numbers.

4.5-4 Mobile Networks

1. 3G service

 
Click 3G service, as Picture 4.22, choose available defaulted SIM card, GSM is 2G network, WCDMA is 3G network.

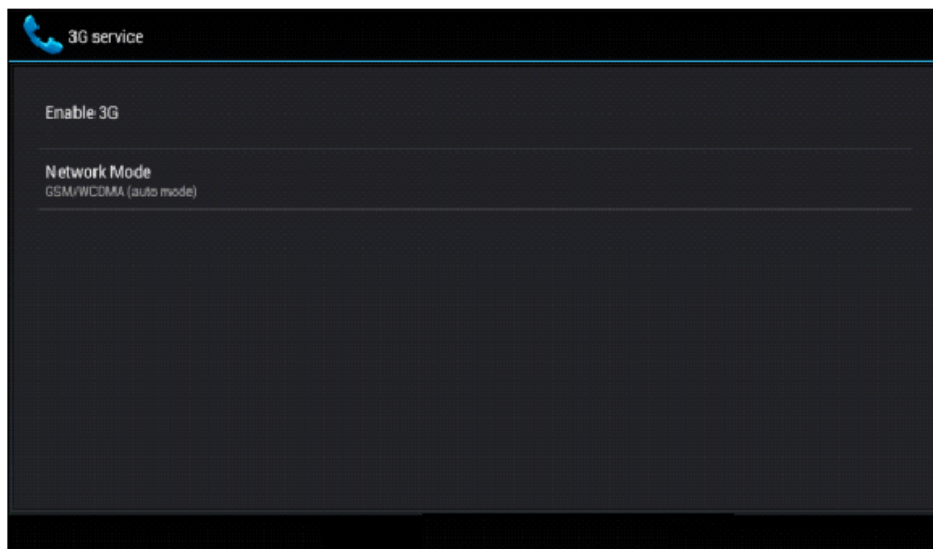

Picture 4.22


2. Access Point Name(APN)

 Click **mobile network**, as **Picture 4.23**

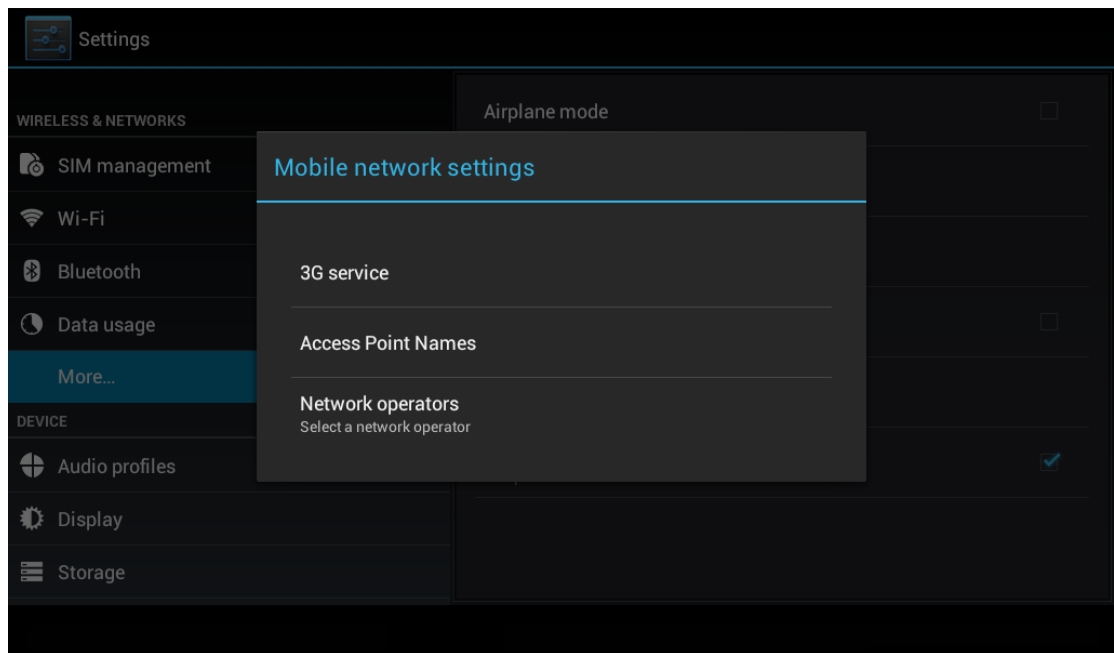

Picture 4.23

 Choose access points name (APN), choose SIM card you need to connect,
Choose connect type, as Picture 4.24

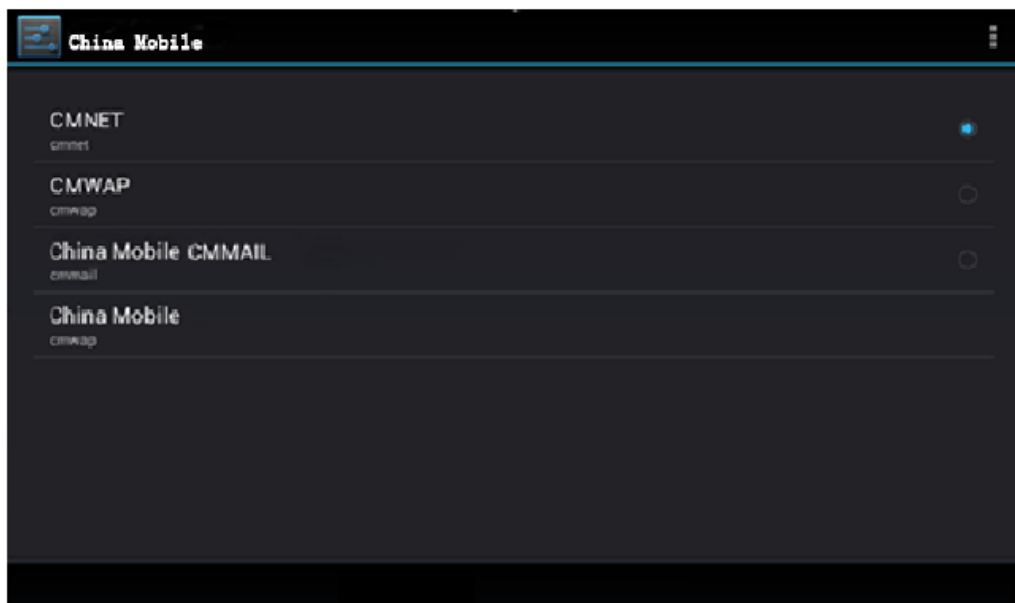


Picture 4.24

Remark: (CMWAP transmitters data through GPRS, the webpage it visit belongs to wap webpage, and CMNET support www browse mobile phone network, it can also log in webpage in computer. And the charges are also different.)

3. Network Operator

 Click network operator, choose SIM card you need to connect, system will search available GSM and WCDMA network, as **Picture 4.25**

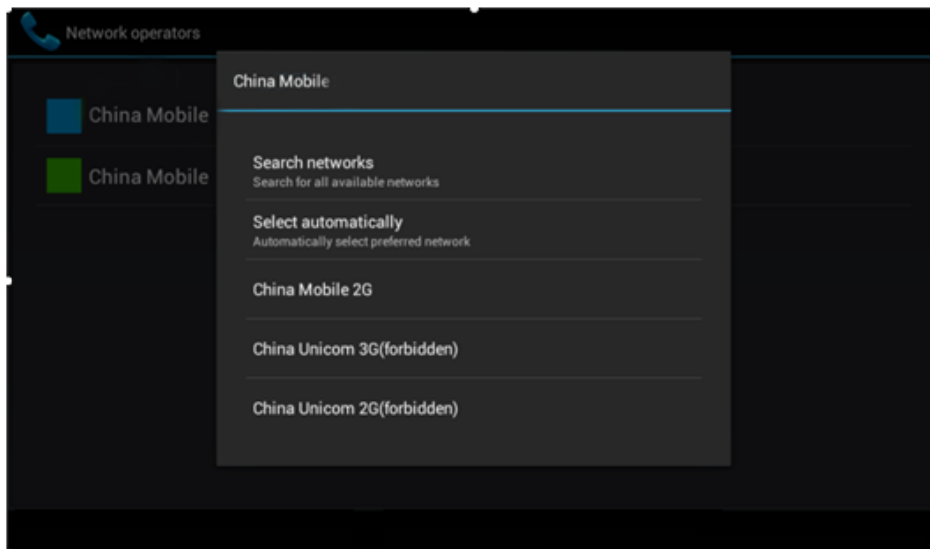


Picture 4.25

4.5-5 GPRS data prior mode

After Open GPRS data prior mode, systems will priority chooses your network.


4.6 Contextual Model

 1. Open settings, click contextual model, as Picture 4.26,

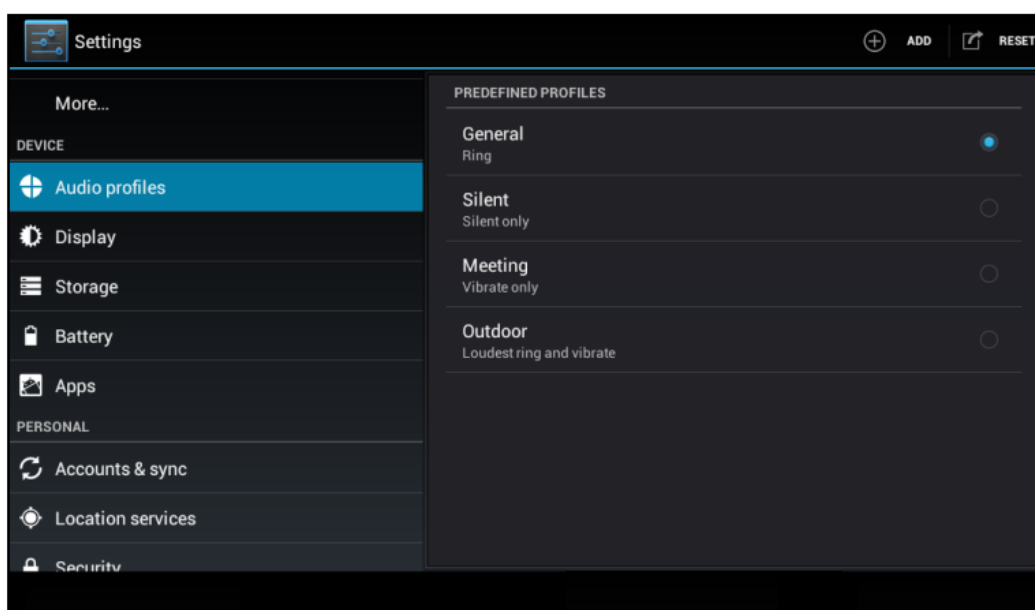

Picture 4.26

 2. Click **standard** to enter into Picture 4.27

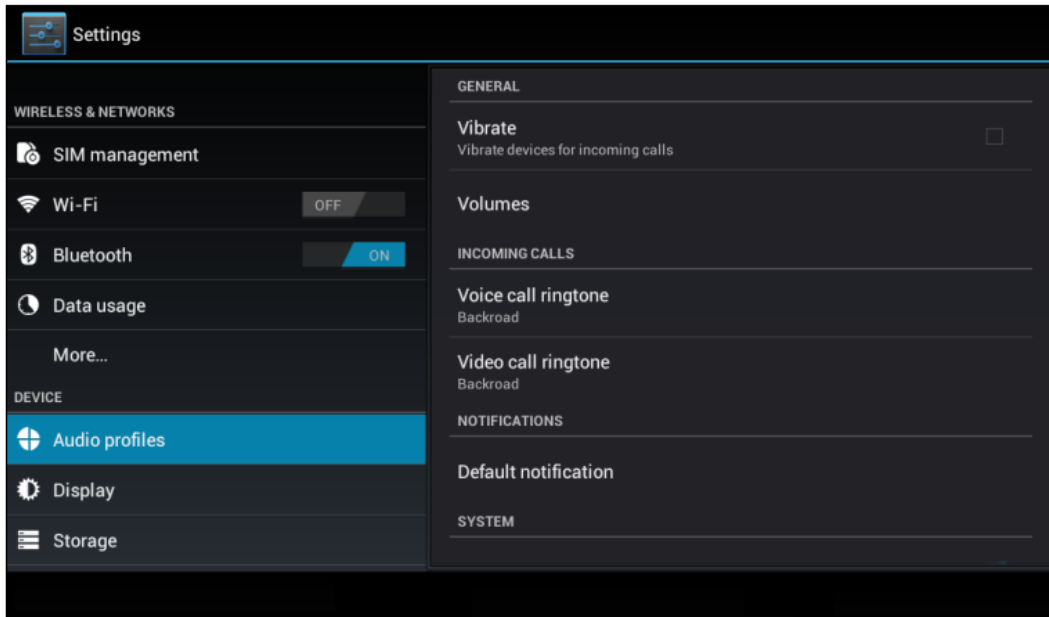


Picture 4.27

1. Vibrate

In picture 4.27, click **vibrate**, MID will vibrate when someone calls you.

2. Volume

 
In picture 4.27, click volume, you can set ringtone, notice, and alarm volume, as Picture 4.28

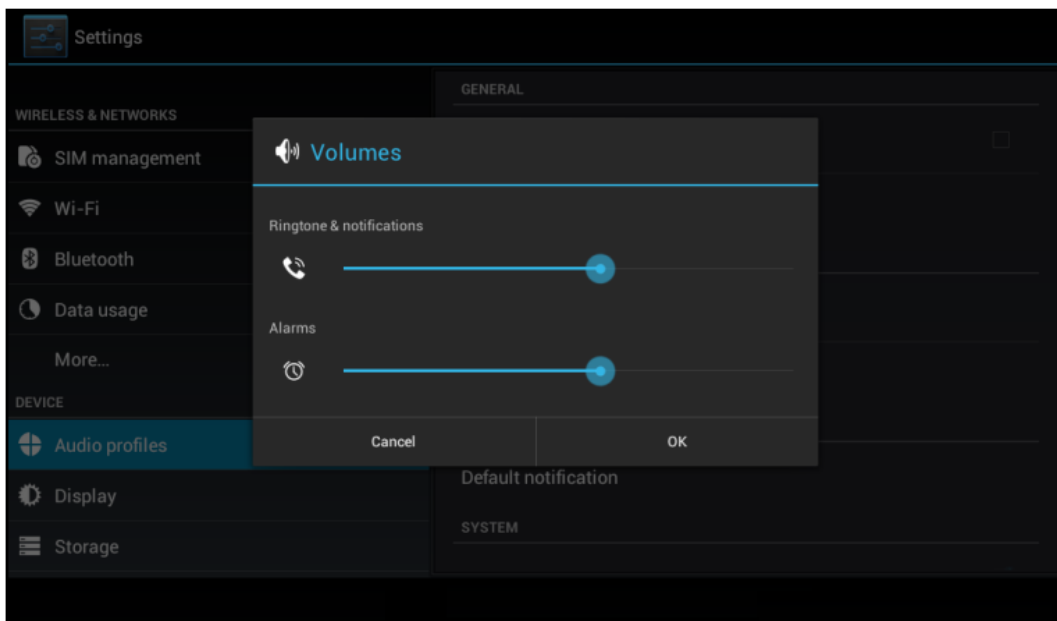

Picture 4.28

3. Voice call Ringtone

 
In picture 4.27, click **voice call ringtone** to choose voice call ringtone, as Picture 4.29

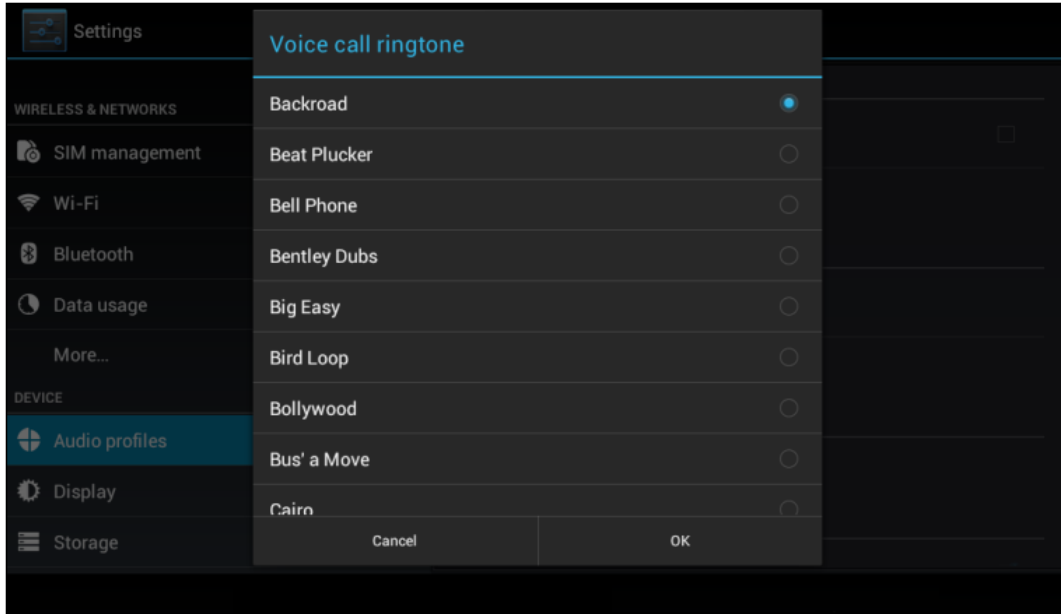

Picture 4.29

ii. Video call ringtone

 In Picture 4.27, click video call ringtone to choose video call ringtone, as Picture 4.30

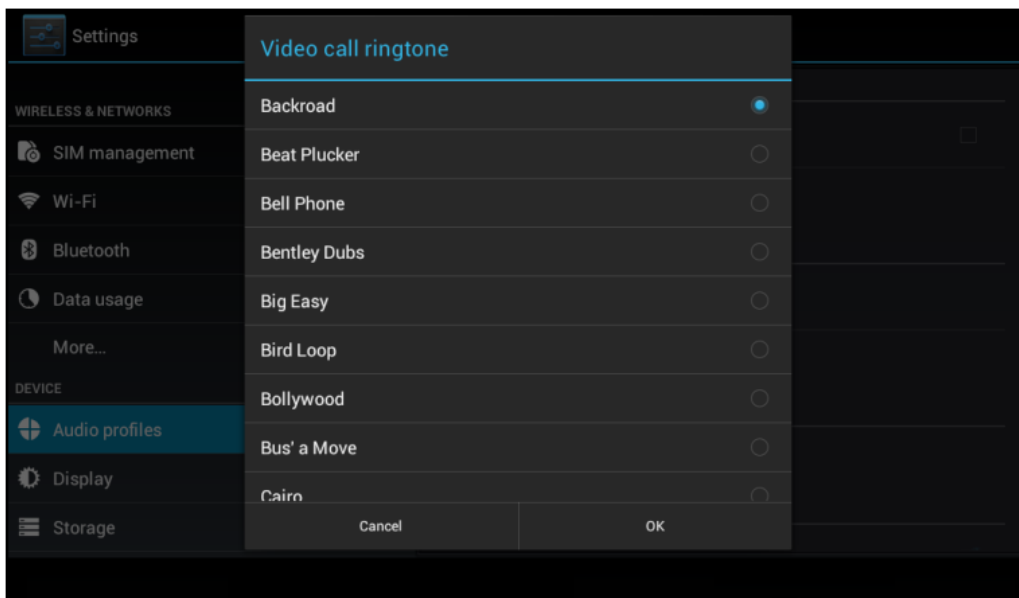

Picture 4.30

 
(Note: Except standard, silent, meet, outdoor are only for selection,

they can't be set.)

4.7 Display

4.7-1 Adjust the screen brightness

1. Click **Setting** application procedure.
2. Click **display**, choose brightness,
3. Drag the portlito to adjust the brightness volume.As Picture 4.31

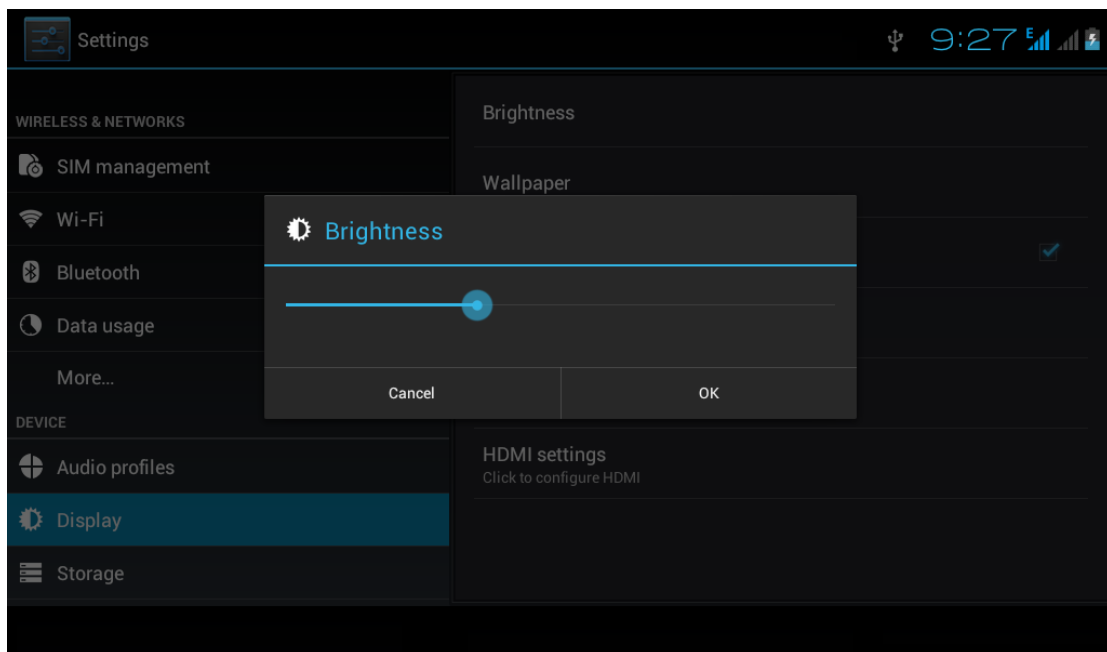


Picture 4.31

4. Click OK after brightness is adjusted.

4.7-2 Wallpapers

 1. Click **setting** application.
2. Click **display**, click **wallpaper**.
3. You can choose different wallpapers as you like—live wallpapers---gallery(user defined)---wallpapers (system defect)---video wallpaper, **as Picture 4.32**

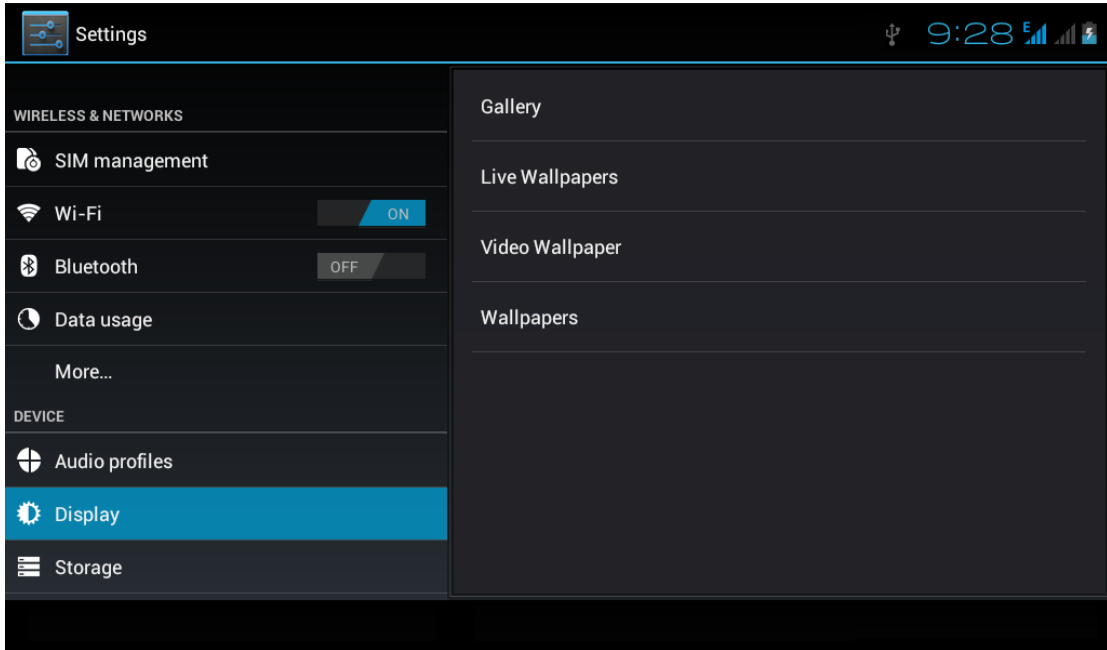


Picture 4.32

4.7-3 Auto rotation

System is defaulted as open auto rotation, when it is turned off, system won't rotate MID screen by G-sensor.

4.7-4 Sleep

 
1. Click setting application.
2. Click display.
3. Click sleep.
4. Set the sleep time as you want, **as Picture 4.33**

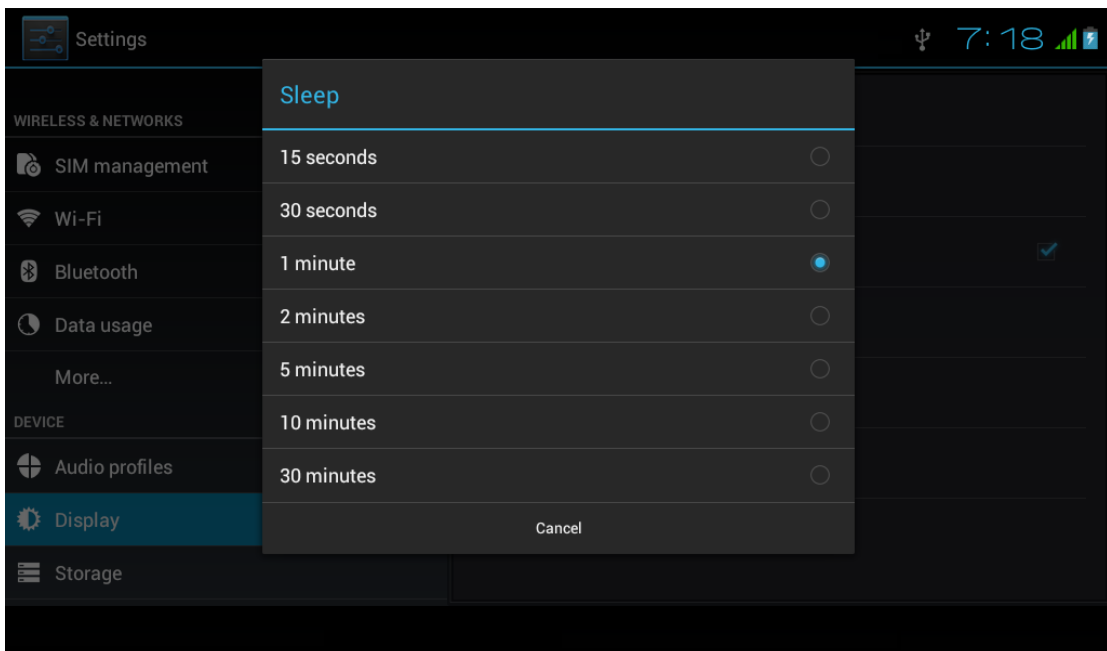

Picture 4.33

4.7-5 Font size

 
Click **font size** to adjust the font size, as **Picture 4.34**

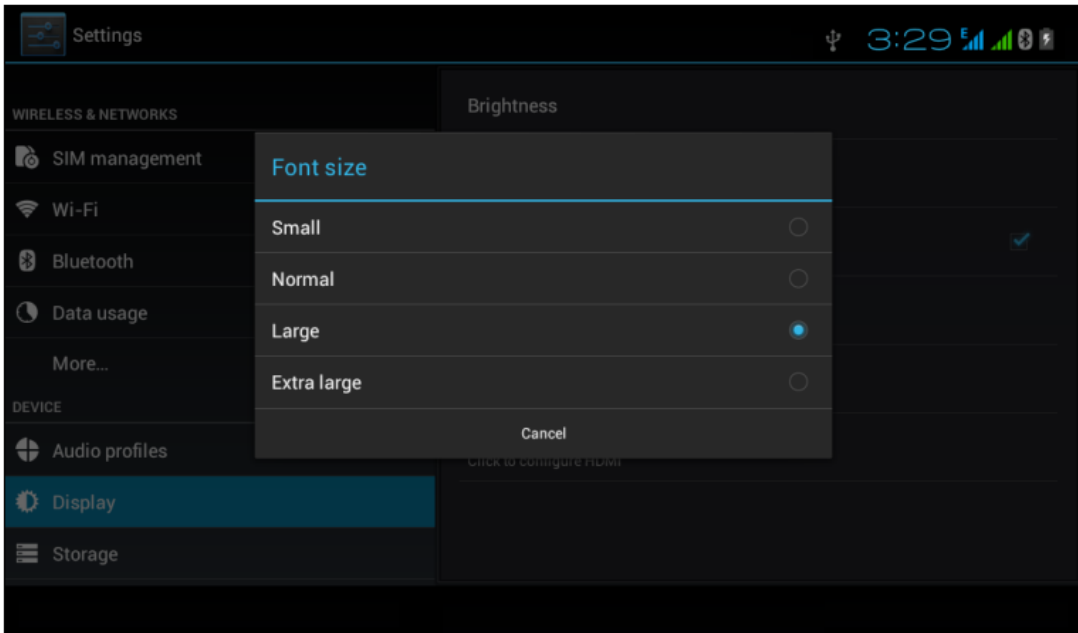

Picture 4.34

(1) OSD position setting

 Click **OSD position setting**, MID will adjust OSD position setting, as Picture 4.37

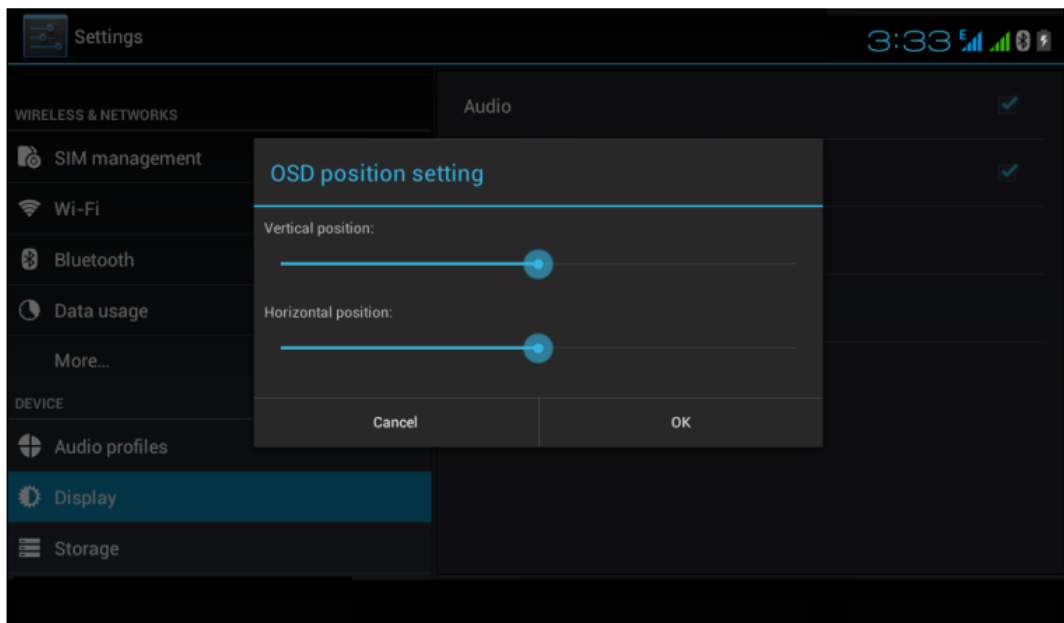

Picture 4.37

4.8 Storage

Open setting function, click memory, click **preferred install location**, you can choose install new application to choose preferred install location.

 
Check SD card and MID storage space.

1. Enter into setting application.
2. Click storage, check storage space.

1. Internal storage

- (1) System storage


System storage is the space MID leave for system file, as Picture 4.38. it can't be viewed.

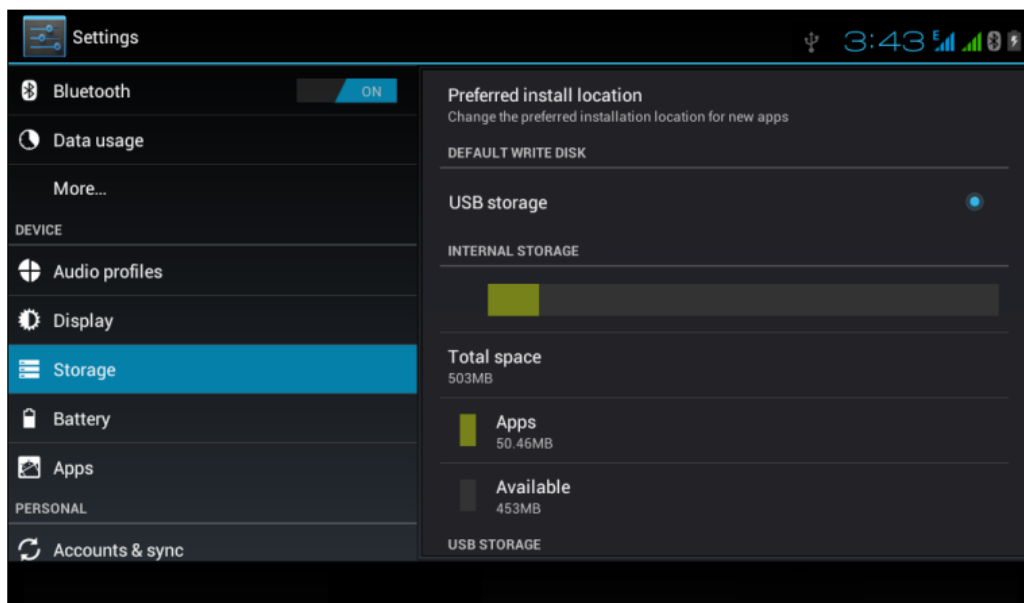

Picture 4.38

- (2) Internal storage

 
Internal storage is MID local NAND storage, as Picture 4.39, if you need to check the storage content, you can check it in main menu.

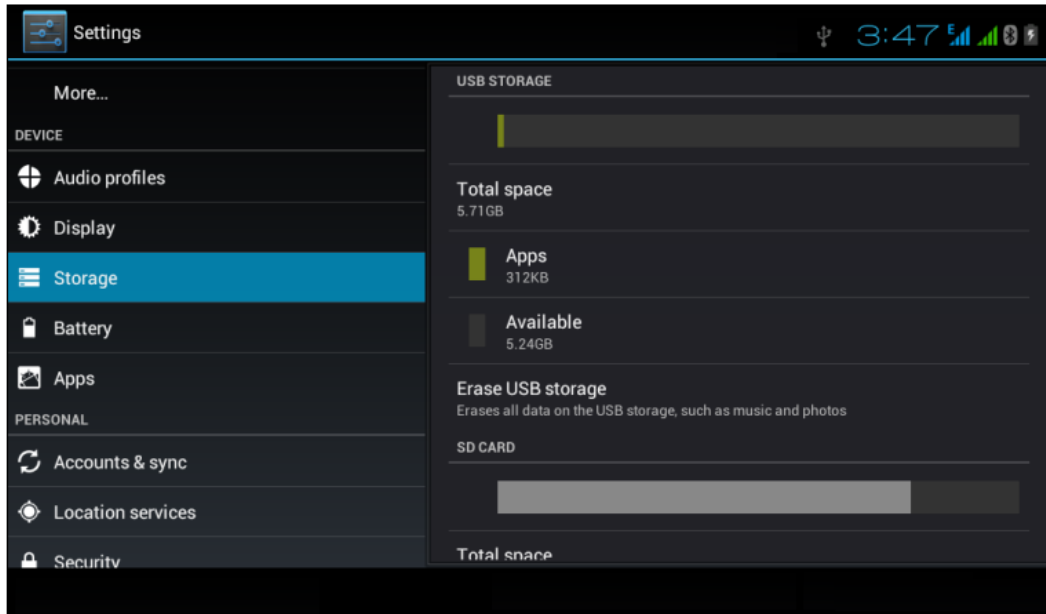

Picture 4.39

2. SD card

 You can check storage space, SD card available space, unmount SD card and erase SD card, as Picture 4.40

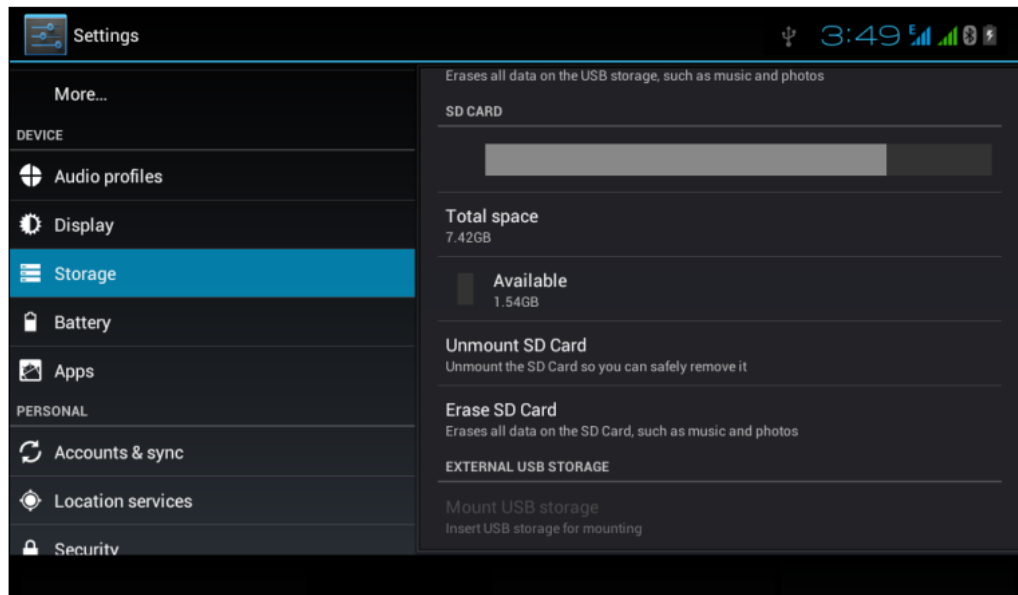

Picture 4.40

Safely remove SD card

 
1. Click setting application.
2. Click memory.
3. Click uninstall SD card.

4. Now you can remove SD card safely.

Note: Removing SD card safely can protect SD card and increase its lifetime.

4.9 Battery


Click setting function, select battery, you can view the battery situation, as Picture 4.41

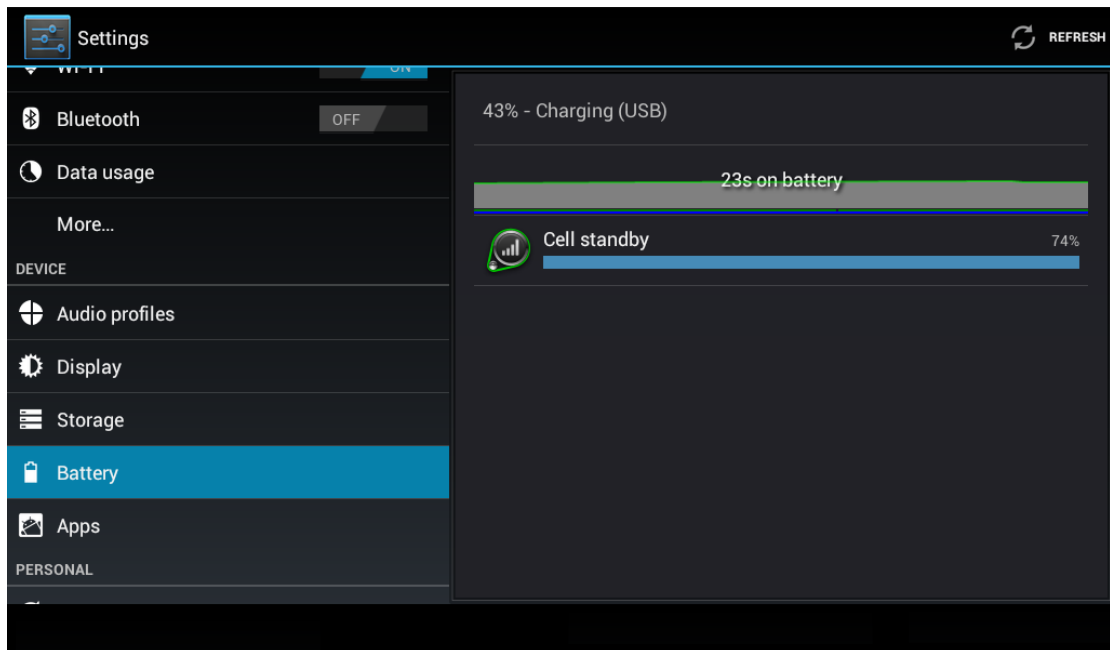

Picture 4.41


4.10 Application program

 1. Click setting application in Apps.
2. Select application, after enter, you can manage and delete installed application and check system used storage space and left space. (As Picture 4.42)

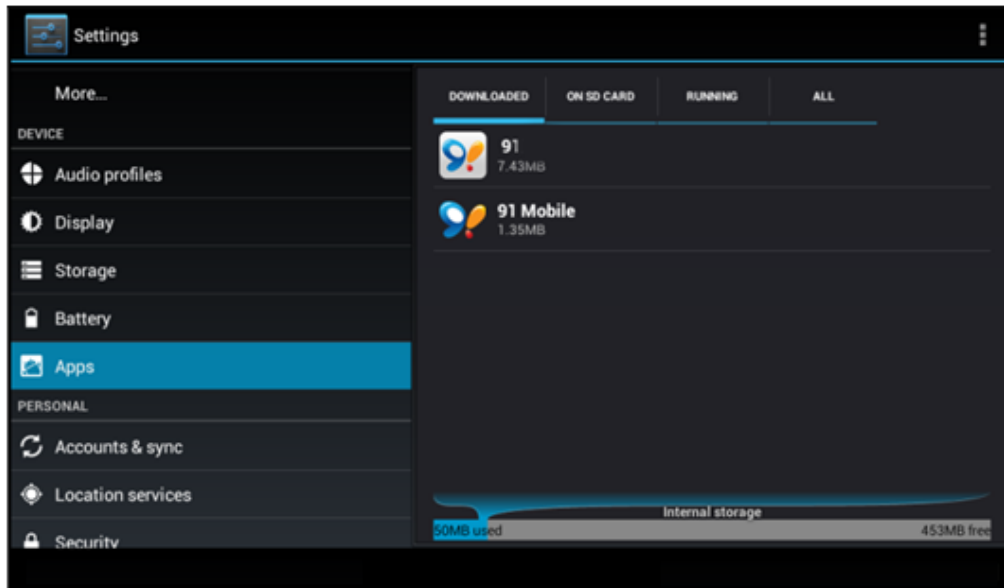


Picture 4.42

 3. View internal storage used space and left space, as Picture 4.43

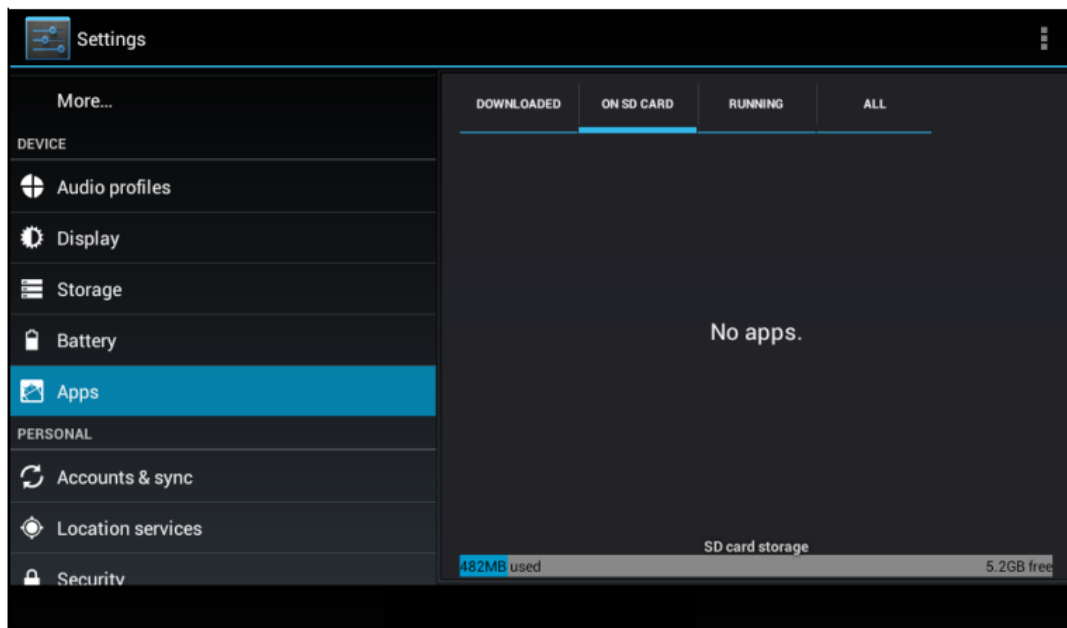

Picture 4.43

 
4. View the working device, used space and available space, as Picture 4.44

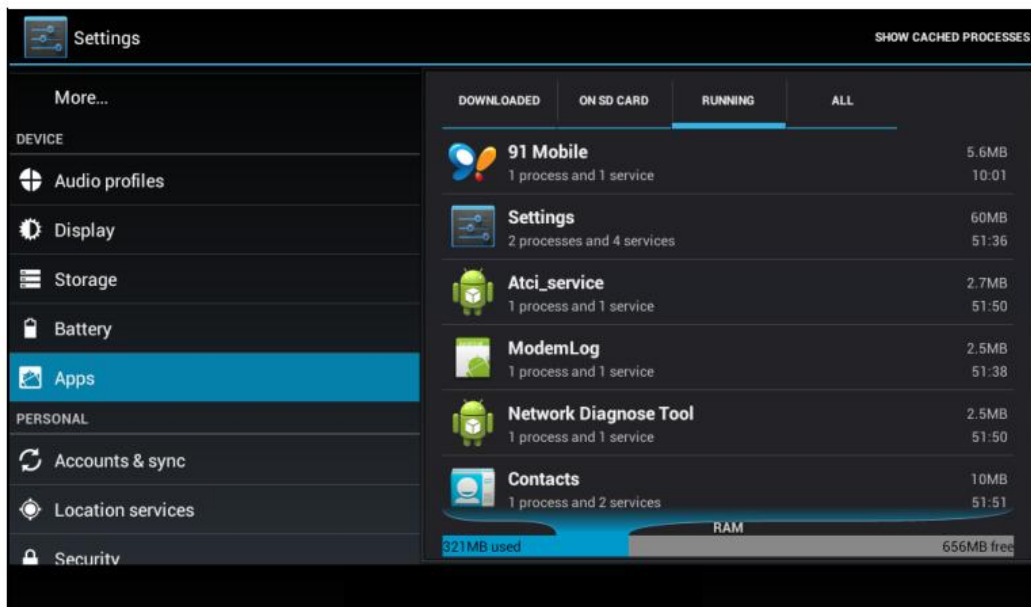

Picture 4.44


4.11 Account and Sync

 1. Select setting application
2. Open account and sync, as Picture 4.45

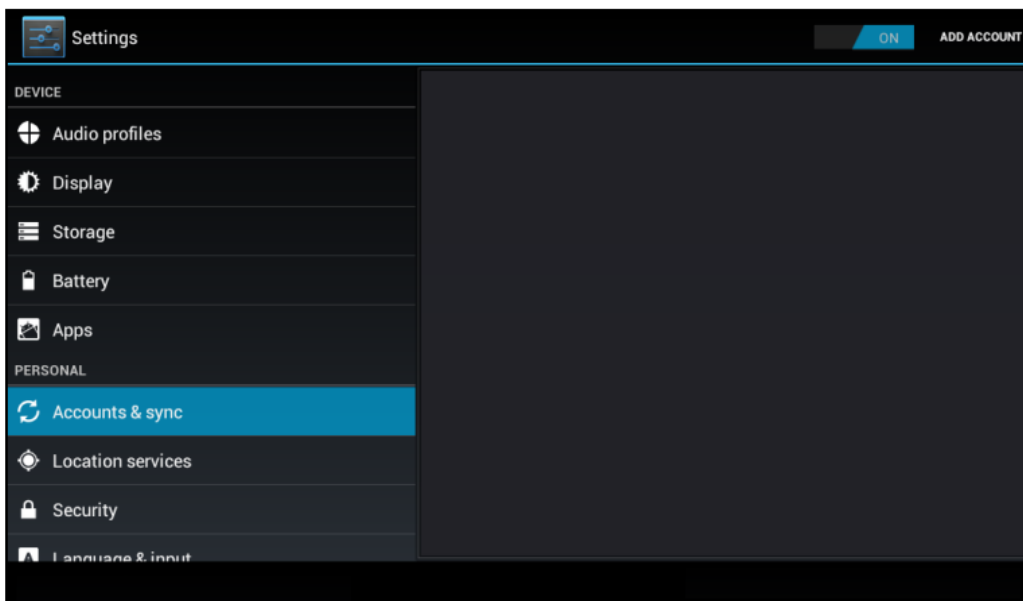


Picture 4.45

 3. Click **add an account**, as Picture 4.46

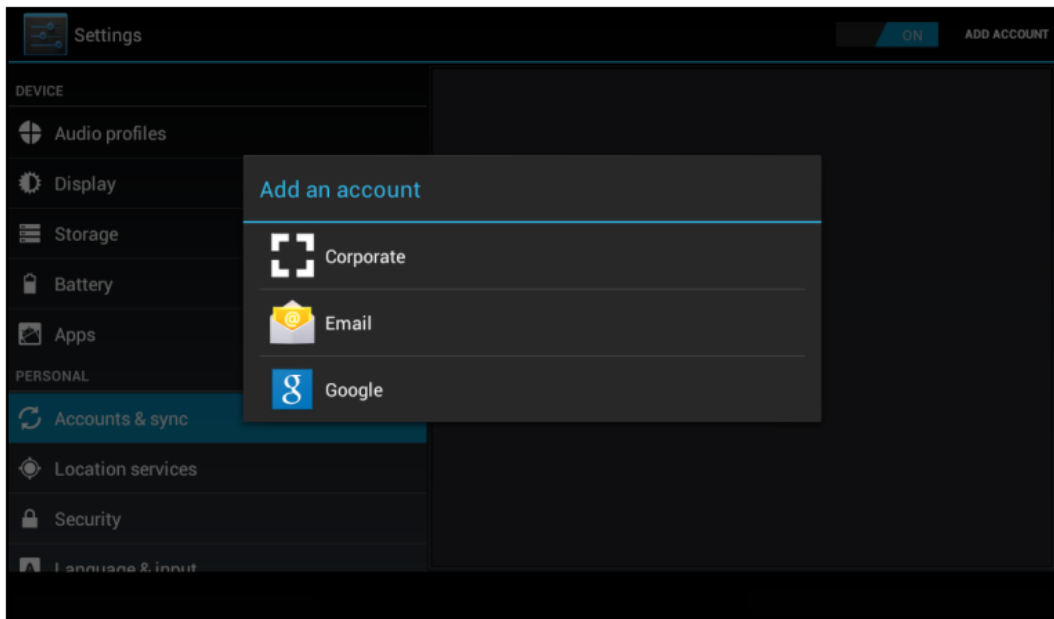

Picture 4.46

 
4. After successfully load, it will open the sync function, as Picture 4.47

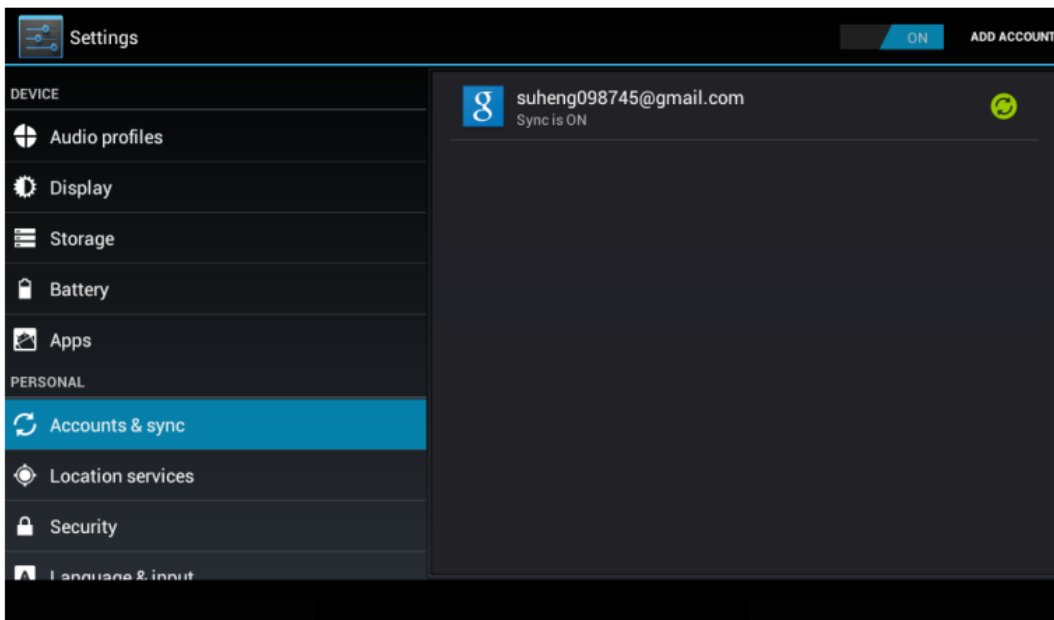

Picture 4.47

4.12 Location service

 Click **setting**, select **location service**, as Picture 4.48

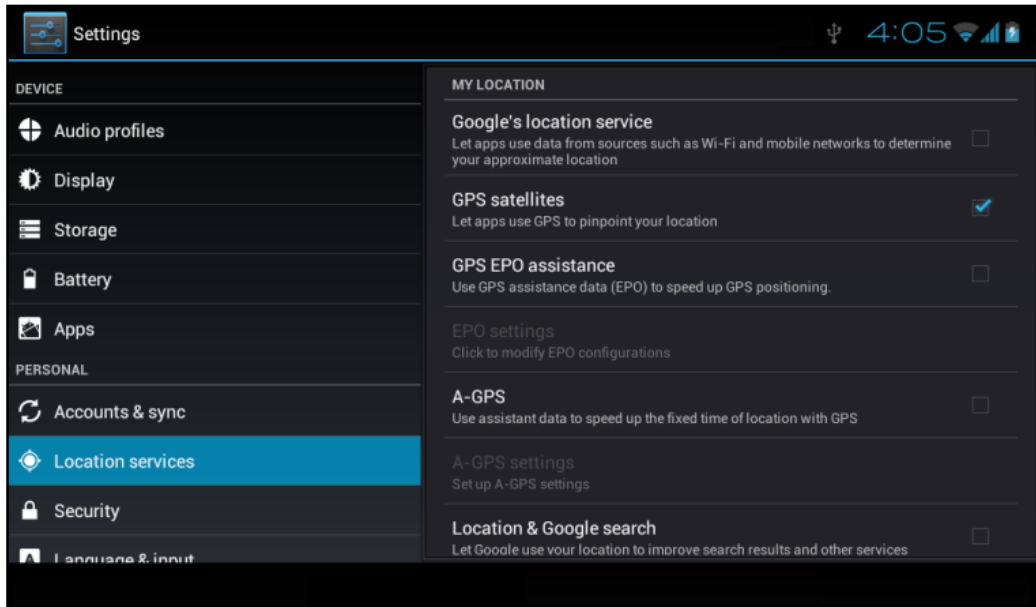

Picture 4.48

1. Google's location service

Open Google location service, you can use WIFI to positioning MID.

2. GPS satellites

Open GPS satellite, you can use GPS to positioning MID.

3. GPS Assistance

 
Open GPS Assistance, it can increase the speed of GPS positioning, but you need to insert SIM card and use data transmission.

4. A-GPS

After opening A-GPS, you can increase positioning speed through network.

5. A-GPS settings

Click A-GPS setting, enter into Picture 4.50

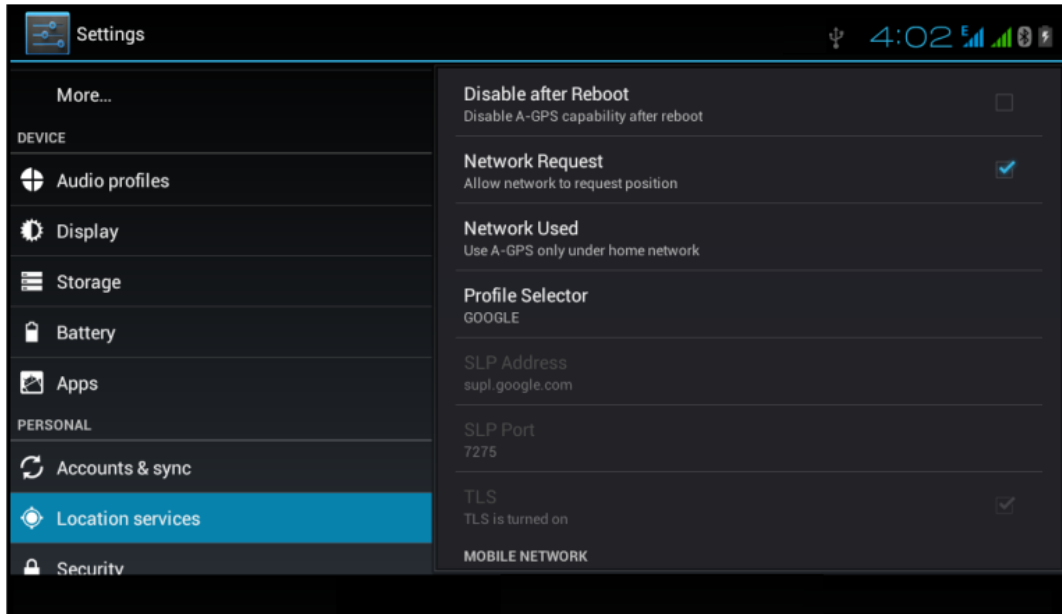

Picture 4.50

4. Disable after reboot

 
Click disable after reboot, when you reboot your MID, A-GPS will auto turn off.

5. Network Request

Click network request, MID can get your location through network.

6. Network used


Open network used, you can choose network type, as Picture 4.51

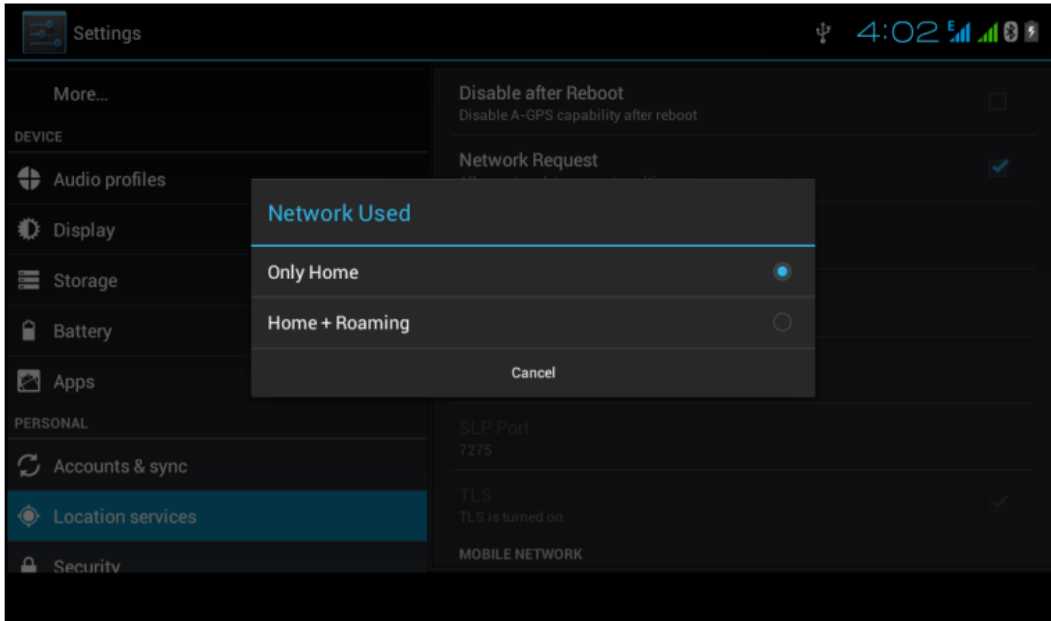

Picture 4.51

4. Server

 Click server, it can switch location service, as Picture 4.52

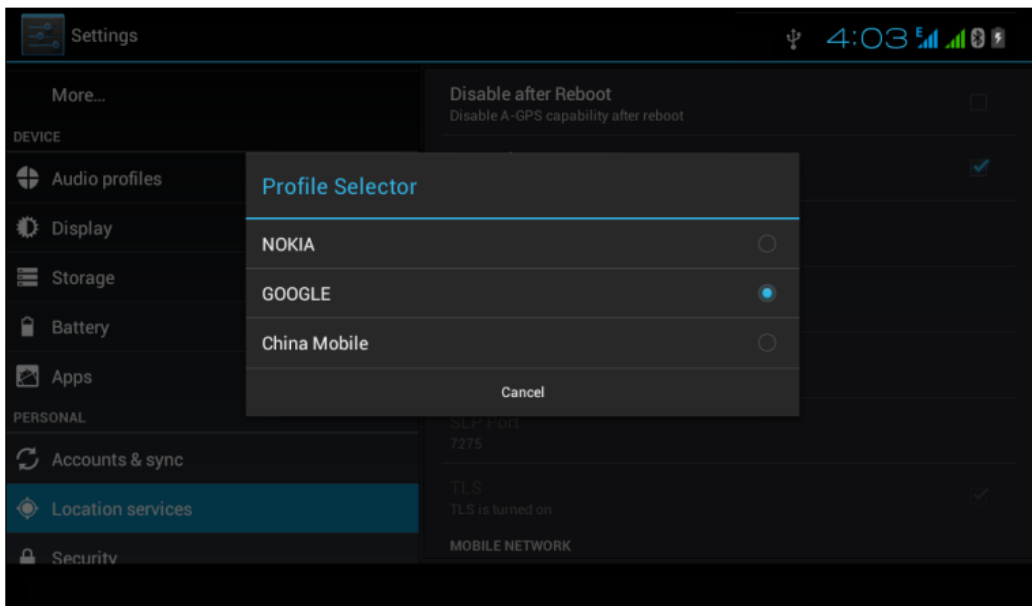

Picture 4.52

5. Location and Google search

Open location and allow google search, you can use your location information to improve search result and other services.

4.13 Safety setting

 
Set locked screen

Lock the touch screen by unlock icon or password to protect your MID.

Note: After setting screen locked, you should enter the passcode each time when you startup or screen is locked

Set unlocked picture

1. Click setting application in main interface.
2. Click **safe**.
3. Click **locked the screen**.
4. Choose **picture** in text setting area.
5. Click next following the remind message.
6. The unlocked pattern board pop up, there are nine touch spots, connect 4 points from vertical, horizontal or diagonal direction. As Picture 4.10, move your finger from the screen when finish. The system will record your new unlock pattern.
7. Click **continue**.
8. When you see the reminder, enter the unlock pattern, then click **confirm**.

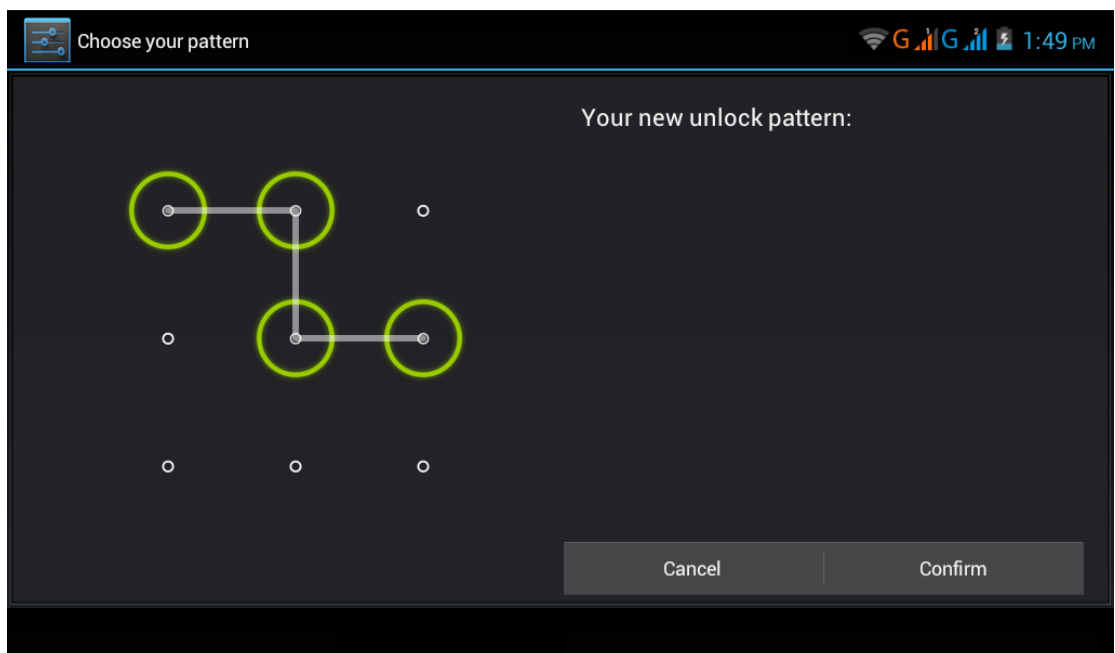

Picture 4.53

Set unlock PIN code

1. Click **setting** application in main interface.
2. Click **safe**.
3. Click **screen locked**.
4. Choose **PIN** in text setting area.
5. Enter new PIN code(numbers) and click **continue**.
6. Eneer new PIN code again and click **confirm**.

Set unlock password

1. Click **setting application** in main interface.
2. Click safe.
3. Click screen locked.
4. Set password in text seting area.
5. Set new password(letters and numbers) and then click continue.
6. Enter the password again and the click **confirm**.

Unknown source

1. In main interface, click setting.
2. Click safety.
3. Click unknown source,as Picture 4.54




Picture 4.54

Note: Manual installing APK files needs to turn on unknown source.


4.14 Language and Input Method

 Click setting, select language and input method, choose language to switch language, as

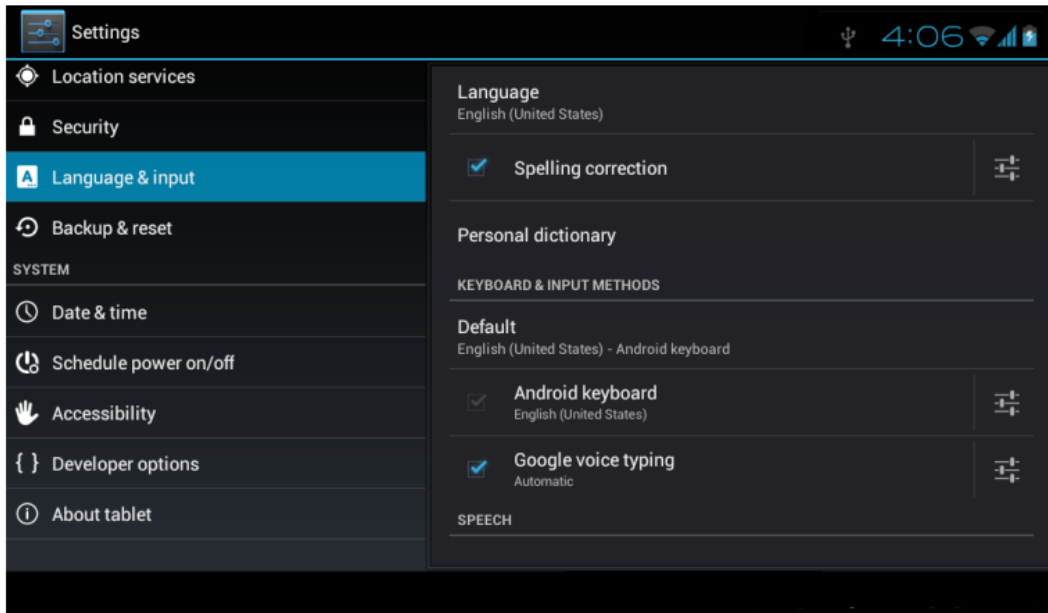

Picture 4.55

 
Click **setting**, choose **language and input**, choose **Android keyboard setting**, click input language, as Picture 4.56

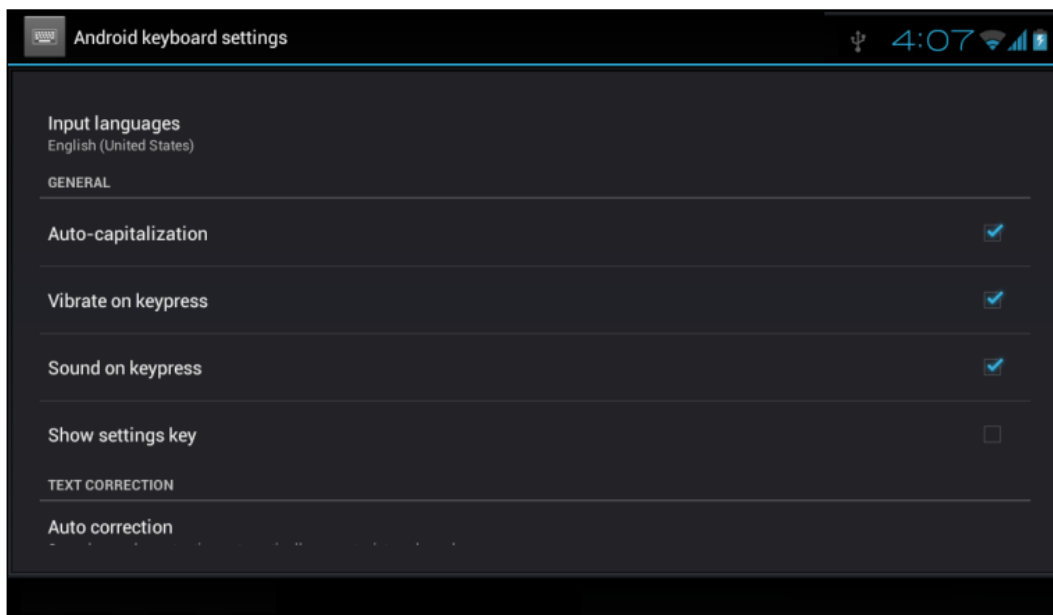

Picture 4.56


Choose the language you want to change in the language list,

 as **Picture 4.57**

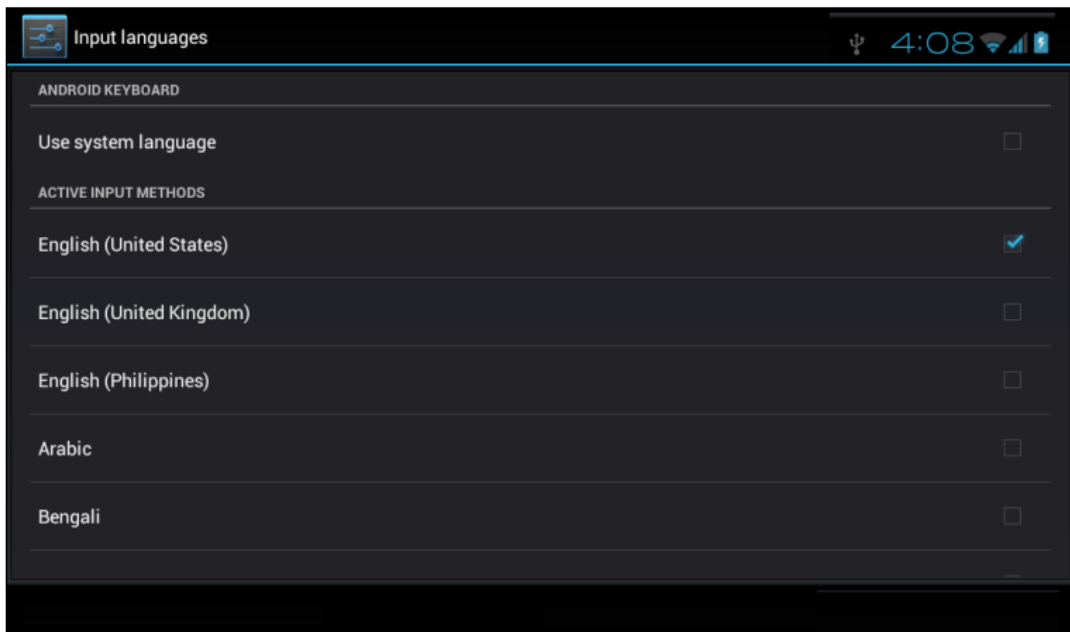

Picture 4.57

 Return to **language and input method**, click **default**, as **Picture 4.58**, select input method you want to use

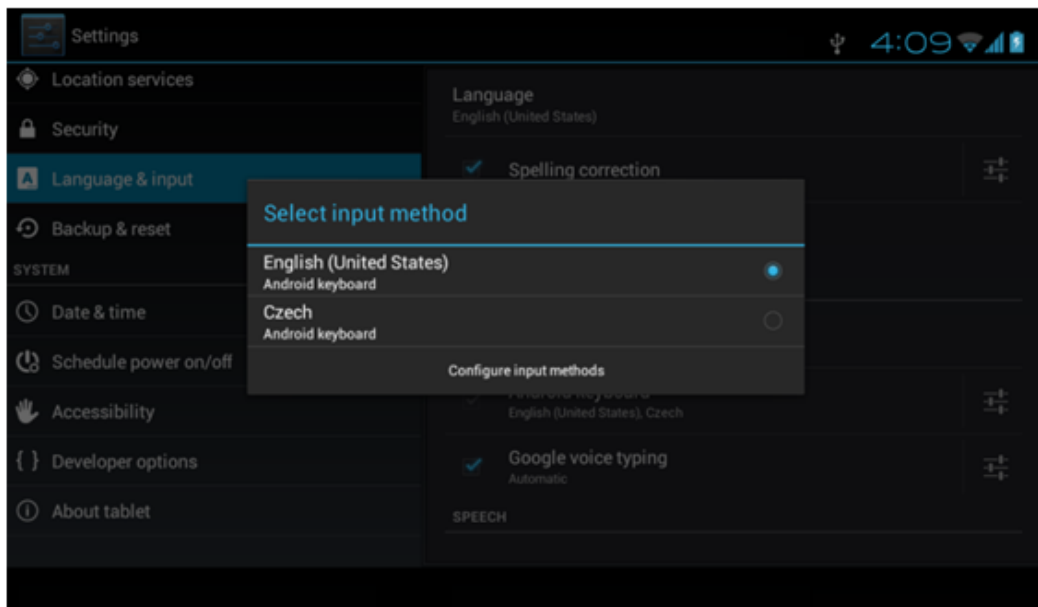


Picture 4.58

4.15 Backup and Reset

Connect WIFI and login your google account, choose **backup my data**, system will backup your data into google server.

 If you need to recovery factory reset, please click reset, as Picture 4.59, if you need to formulate NAND, please click reset tablet.

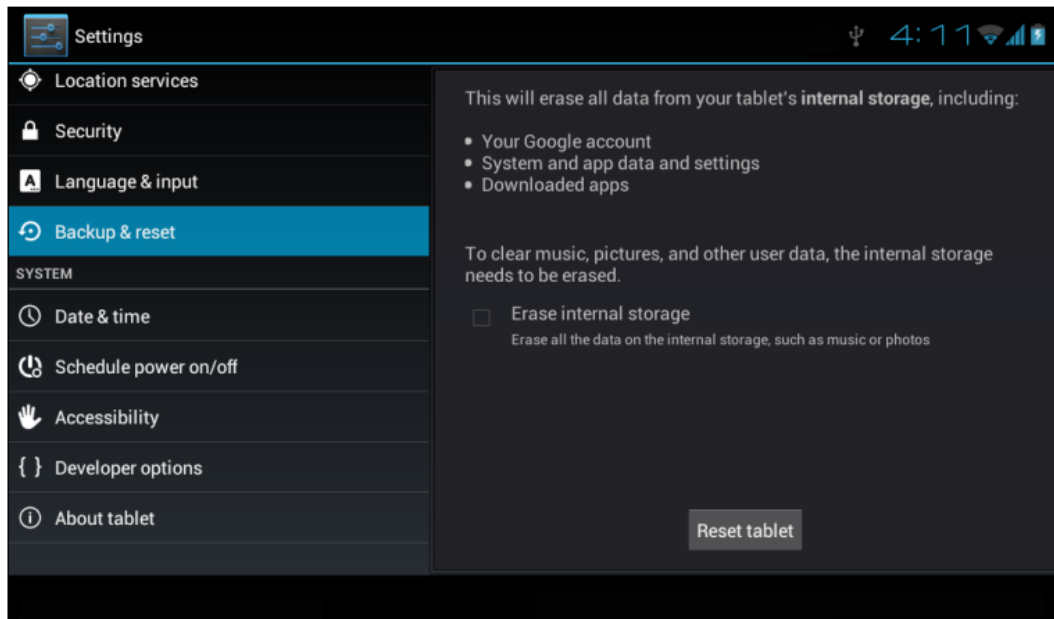

Picture 4.59

 
2.1 4.16 Date and Time

According to the preset, system will voluntarily apply the date, zone, and time provided by internet.

Manual set date, time and zone

1. Click Setting application procedure.
2. Slide down the screen, then click **date and time**.
3. Turn off "auto setting of date and time".
4. Turn off "auto setting zone".
5. Click Zone Selecting, then choose the zone lists. Slide down the list to view more zones.
6. Click **Date setting**, then click upper or down button to adjust date, month, and year, click **setting** when you finish selection.
7. Click **Time setting**, then click upper or down button to adjust hour and minute, click AM or PM to change morning or afternoon (there is no such selection when you se 24-hour format). Click **Setting** to finish.
8. Click **24-hour format**, switch between 12-hour or 24-hour formay, the time format you choose will be used on the alarm clock.

9. Click date format setting, then choose the time format you want to show on MID.

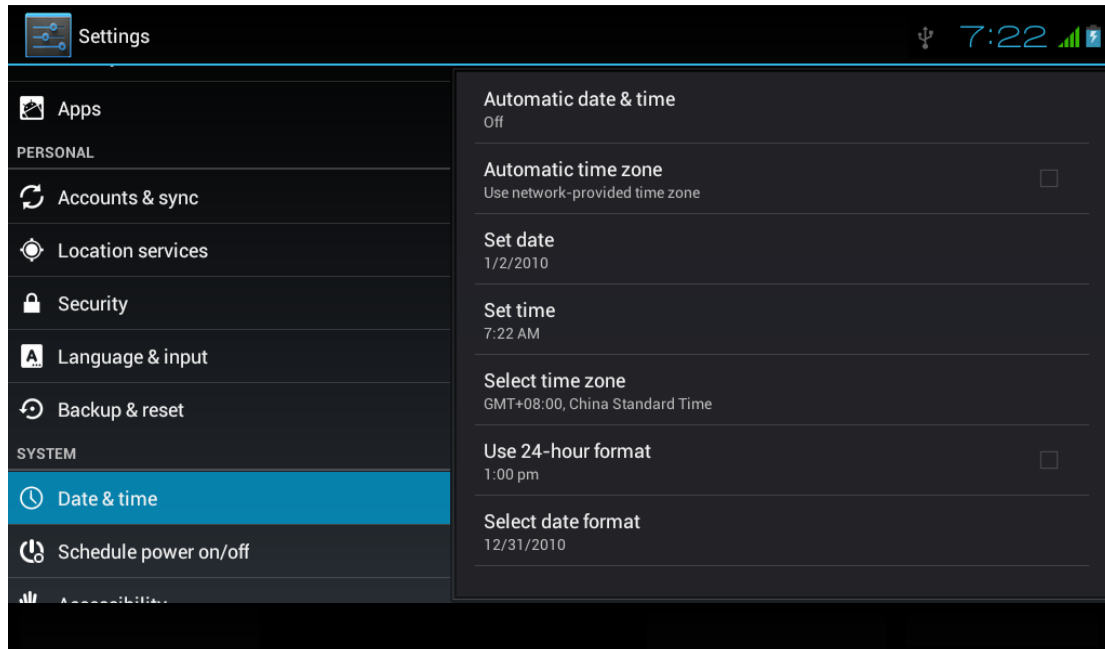


Picture 4.60

Note: If you use the time internet provided, you will not able to set the date, time and time zone.

4.17 Fixed-time Startup and Shutdown

 1. Click **Setting** application procedure
2. Click **fixed-tine startup and shutdown.**
3. Operate as below Picture 4.61

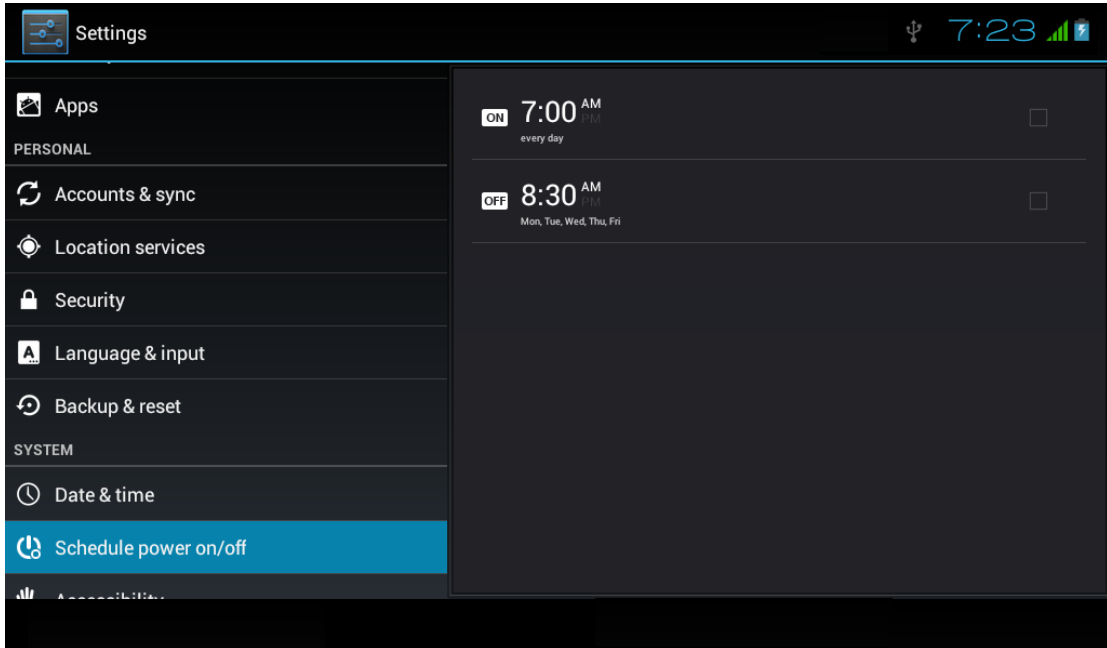

Picture 4.61

4.18 Assistance Function

4.18-1. Large size

 
Click it to make system font large size

4.18-2. Click power button to end calls

When Click call, press "power" button, call will end but not hold.

4.18-3. Touch and hold delay

Click touch and hold delay to increase time, as Picture 4.62

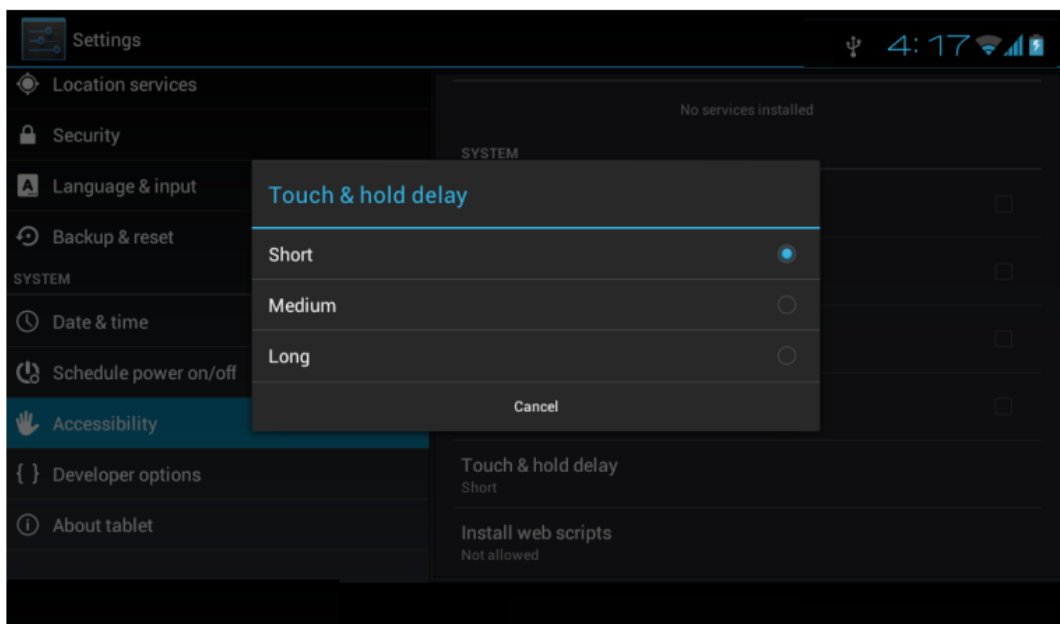

Picture 4.62

4.18-4 Install webpage script

It will allow you install webpage scrip when you open system,, but it will increase the risk when you are browsing webpage.

4.19 Engineer Selection

4.19-1 USB adjustment

After opening USB adjustment, you can use some software to read MID software, but when USB adjustment is turned on, USB storage needs to manual adjust.

4.19-2 Keep awaken state

If you open keep awaken state, it will never auto sleep when your MID is charging.

4.19-3 Pointer Location

If you open pointer location, it will display touch vertical and horizontal direction.

4.19-4 Show touches

 
If you open display touch screen operation, it will display touch opeation on the screen. It is suggested to use with same direction as pointer location.

4.19-5 Show screen update

If you open screen refresh, it will display related area when the area is refreshing.

4.19-6 Show CPU usage

After open CUP usage, in the right top of MID will show CPU usage situation.as Picture 4.63

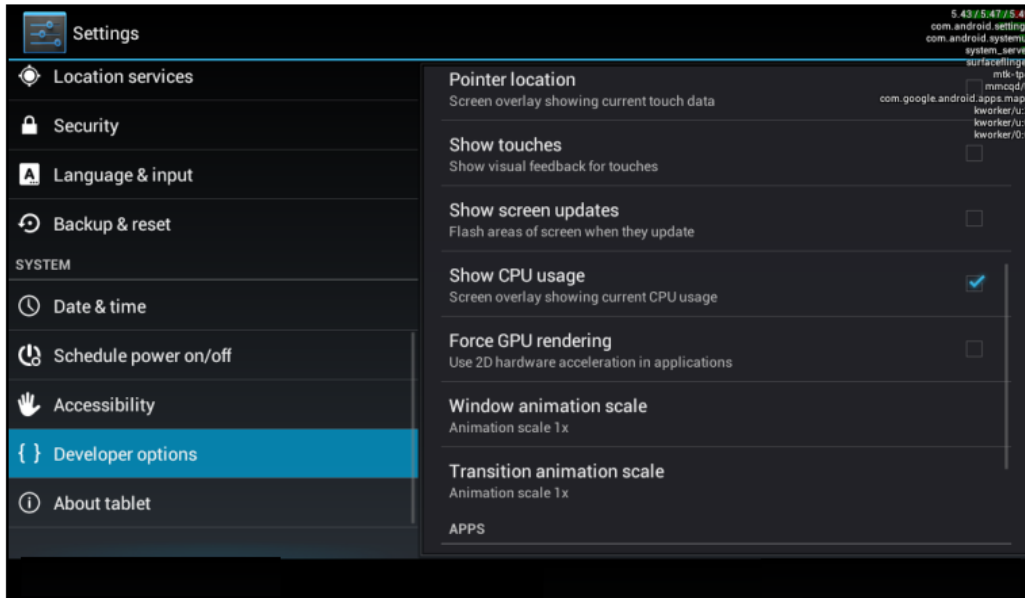

Picture 4.63


4.20 About Tablet

 
Check MID state

1. Check **Setting** application.
2. Click **about tablet**, check **state message**, **model**, **Android version**, **version No** and so on.
3. Click **state message**, check **battery state**, **battery volumne**, **SIM state**, **IMEI number**, **IP address**.


5 Multi-Media

2.2 5.1 Music

Enter into music player: in menu or desktop click music  icon to enter into music player, click the music you want to play, as Picture 5.1:

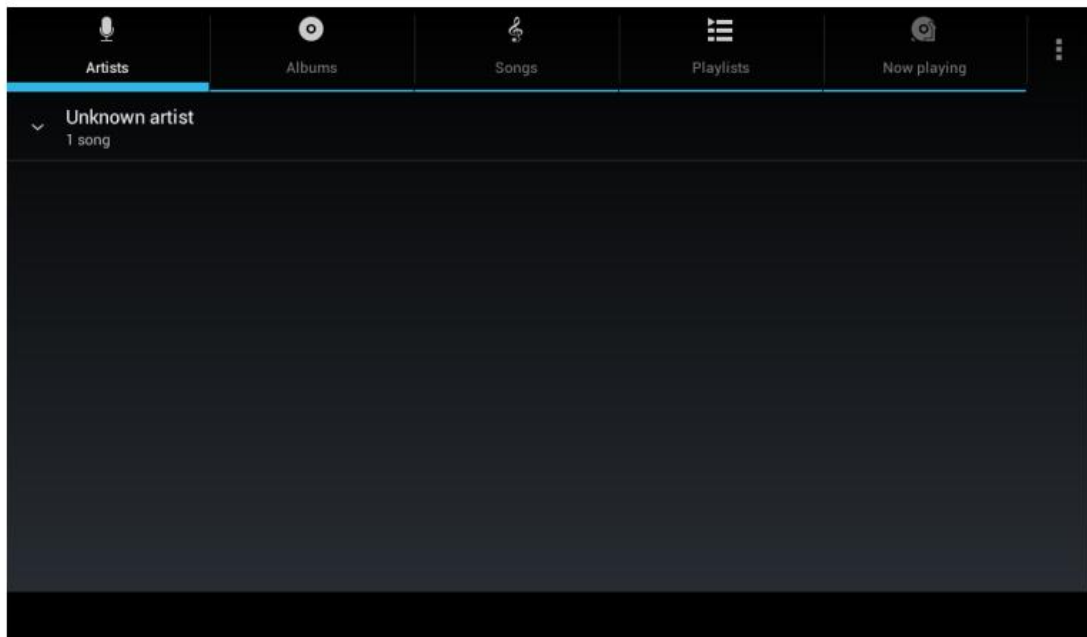


Picture 5.1

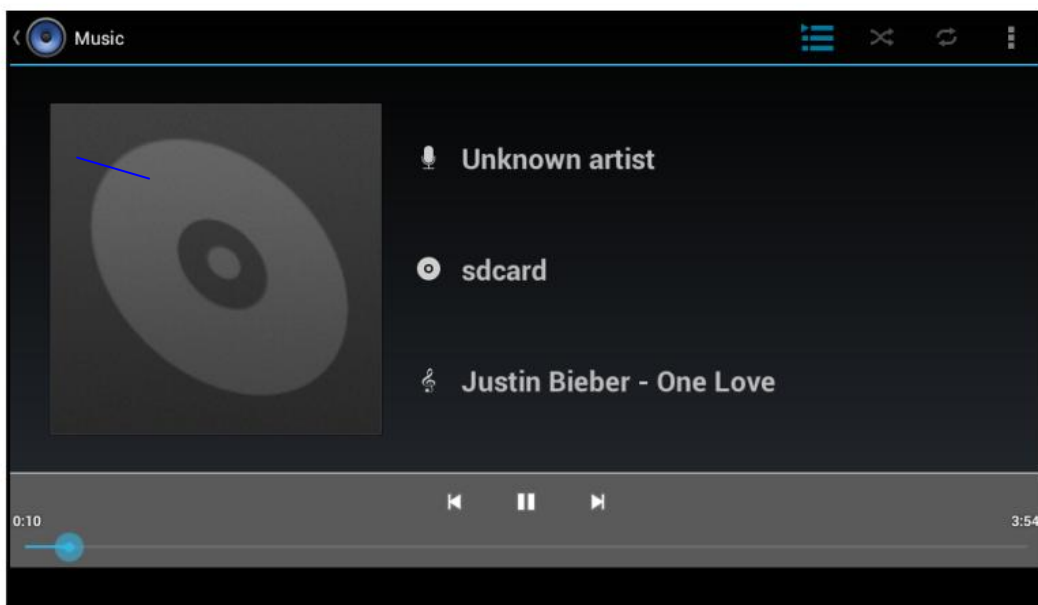 


Picture 5.2

- Drag the progress bar to adjust play progress.
- Operation of music player button as Picture 5.2

2.3 5.2 Video

 - Enter video player: choose  application in main menu, choose the video you want to play.
- Operation of video player button as Picture 5.3

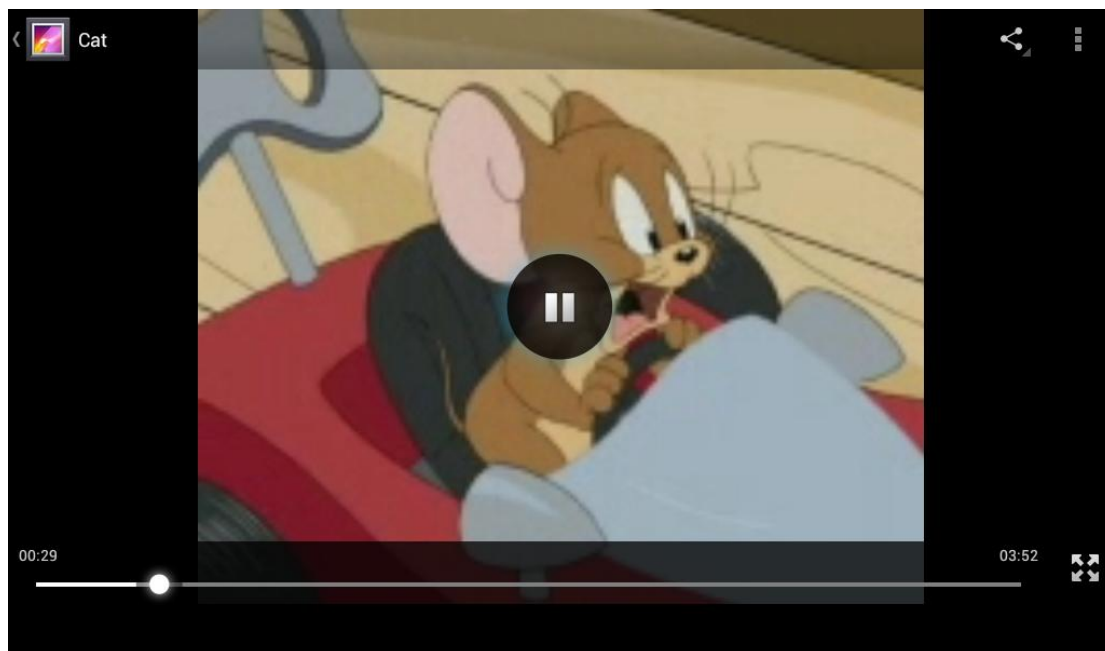

Picture 5.3

2.4 5.3 Photo Gallery

Photo gallery application can auto search photos and video files in SD card, and photo gallery will classify these photos and videos in folder. You can apply photo gallery to view and edit photos, set the photos as wallpaper and watch the video.

View pictures

- Click gallery application in main interface.
- Enter into gallery, click the folder you want to view.
- Click the picture you want to view, the system will play it in full screen mode automatically.
- The pictures can be zoom in and zoom out, put two fingers on the screen, the separate the fingers (gather up the fingers, the picture will be zoom in) or double

click the screen.

Note: when you browse the pictures, slide left or right to view more pictures.

Edit and set pictures

When check the pictures in full screen mode, click menu key to display menu selection, you can choose the selection you need to edit and setting pictures.

- **Slide Show**

1. Open a picture, use virtual key to click menu key, display menu selection.

2. Click **slide show**, it will auto loop play(or choose



button in picture folder)

- **Crop**

1. Click **menu** key to display menu selection.

2. Then click crop, click and drag related area to adjust the cropper.

3. Click cropper and drag it inside and outside to adjust the image.

4. After adjust the size you want, click **crop**.

5. If you wish to give up to crop, click **cancel** to return to picture browse.

- **Edit**

1. Click **menu** key, display the menu selection.

2. Click **edit**.


3. Adjust teh brightness, style, color, antialias setting in selection.

4. Click **save**.

 
5. If you want to give up edit, click **return** key, click **not** to return to picture browse.

2.5 5.4 Camera

In the main interface or desktop, click camera application


procedure , enter into camera

- Operation of camera ,Switch camera: choose **Menu** key, click **switch front/back camera**, as Picture 5.4

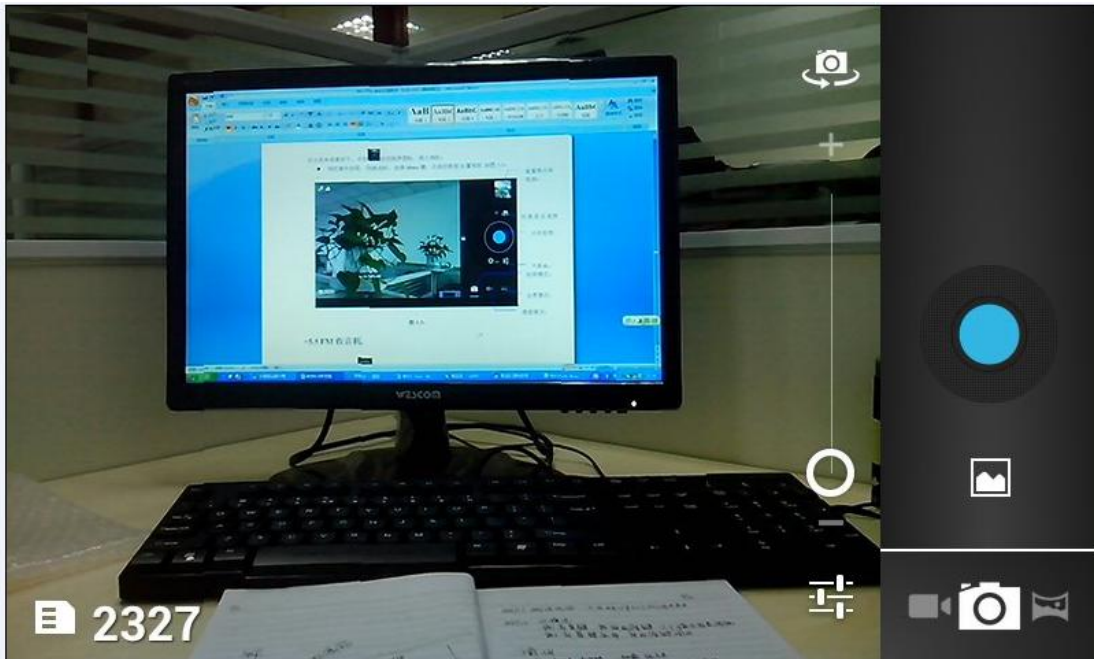


Picture 5.4

2.6 5.5 FM Radio


Click  in the main interface or desktop to enter into FM radio interface:

 - Radio button operation instruction as Picture 5.5:
-

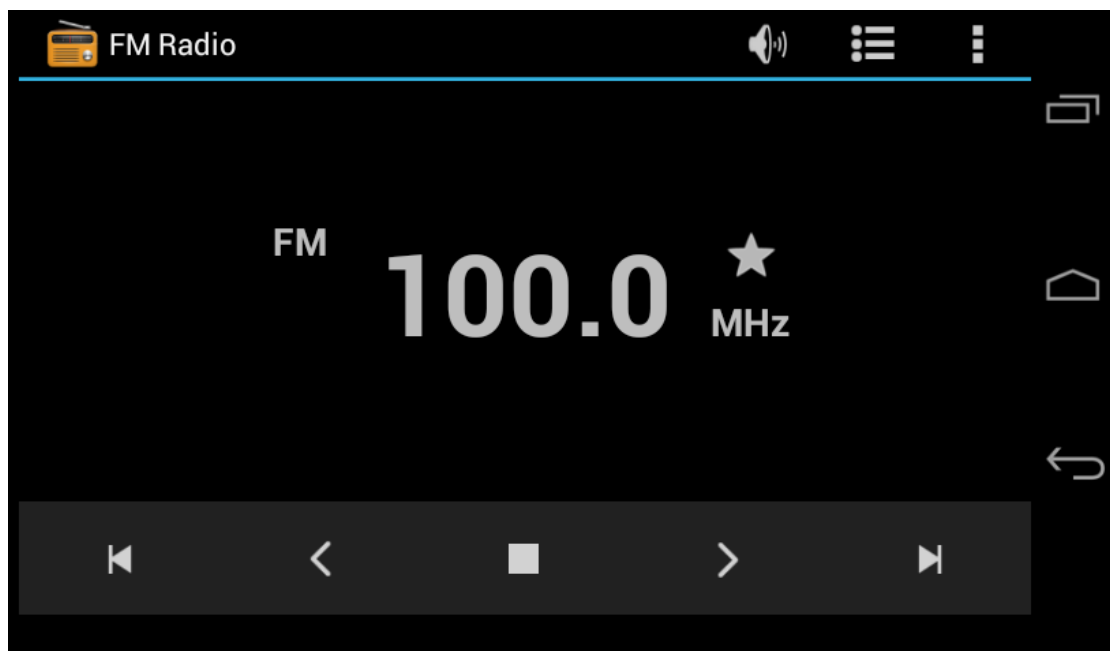


Picture 5.5

 Click search to search FM band, as Picture 5.6

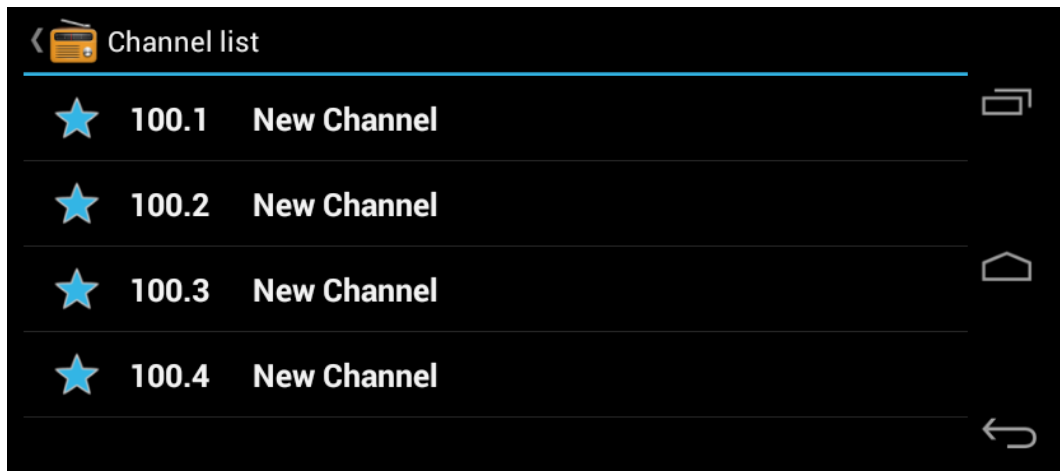


Picture 5.6

 - RDS setting: click Menu key in interface, click the menu button, and choose RDS settings, enter into RDS setting as Picture 5.7, and choose the selection you want to add

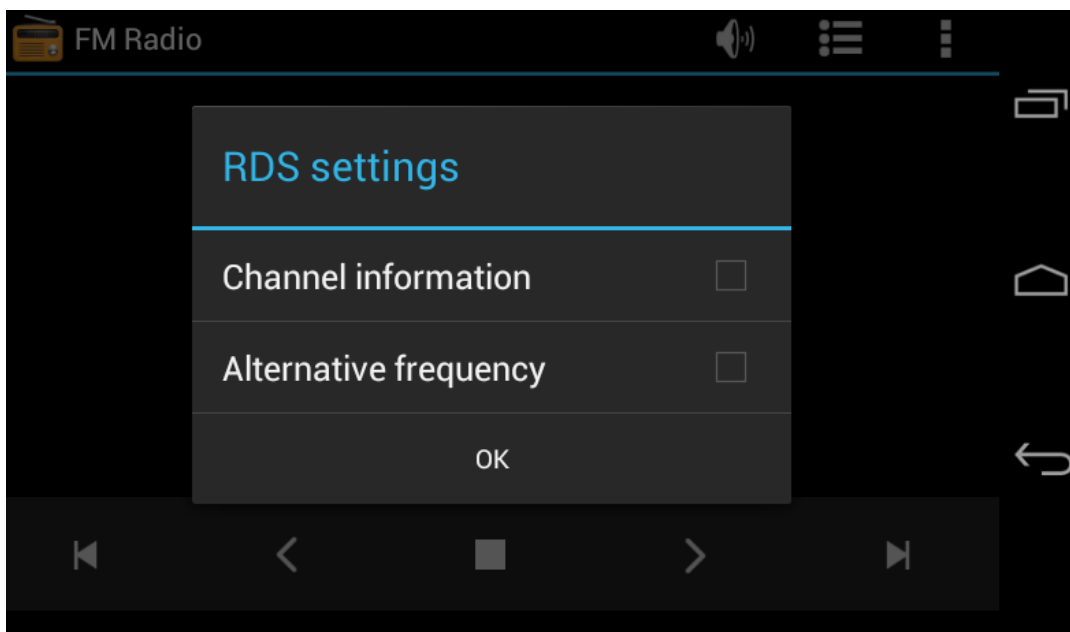

Picture 5.7

 
- Save channels: Click  button in the main interface to save the channel, and the channel will be saved in channels list.

Note: You need to insert earphone as antenna when using FM radio, If no antenna, your MID can't search any frequency band.


6 Communication Function


2.7 6.1 Phone

- 1 Click **Phone** application procedure
- 2 Operate as Picture 6.1

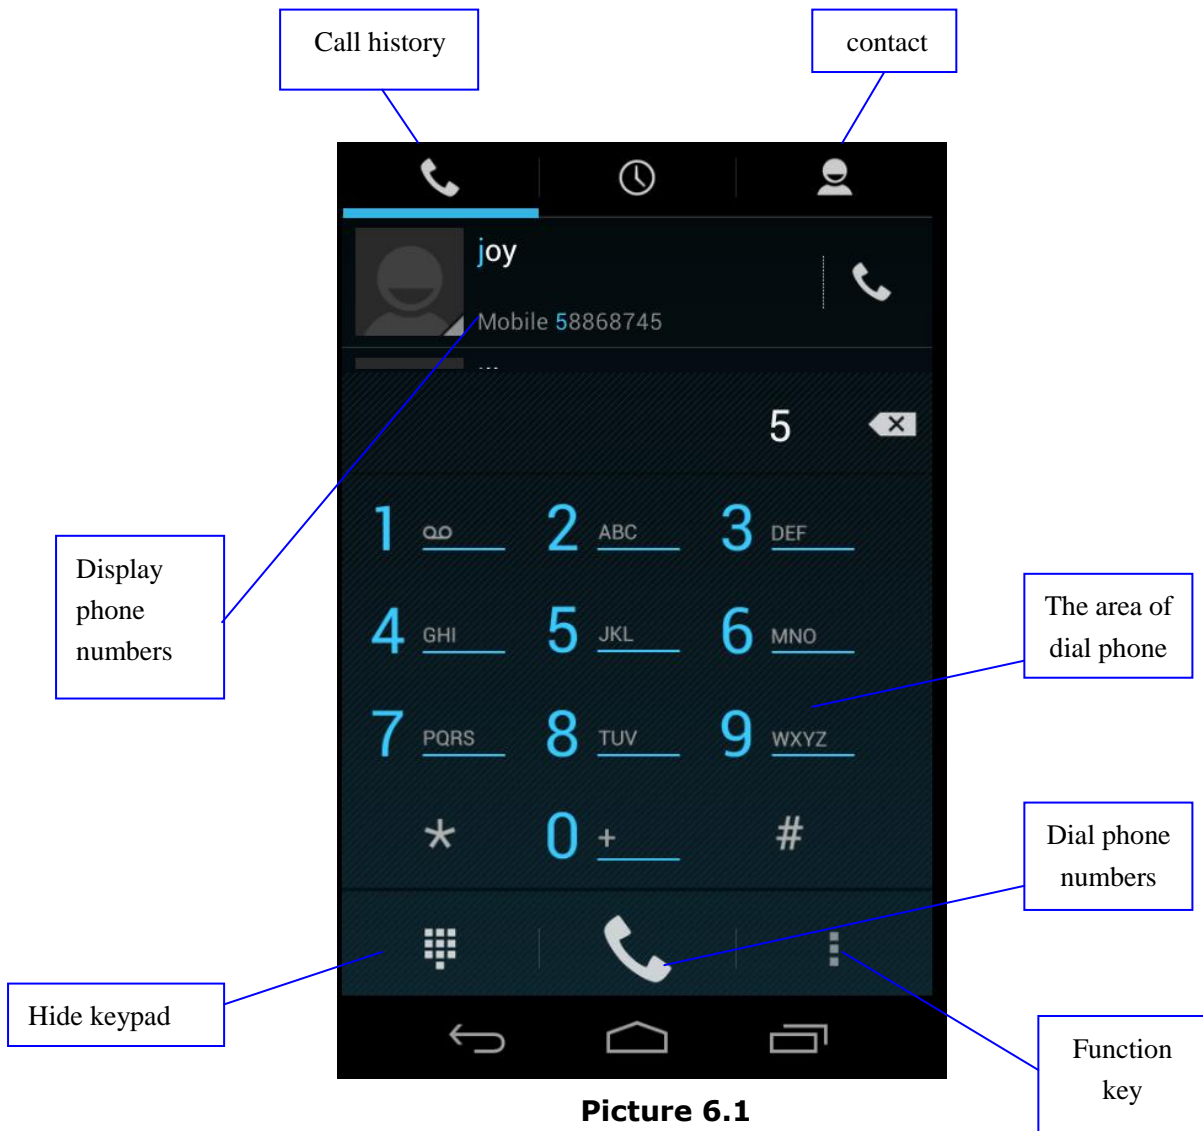


2.8 6.2 Text Message

 
- 1 Enter into main menu, choose  application procedure.

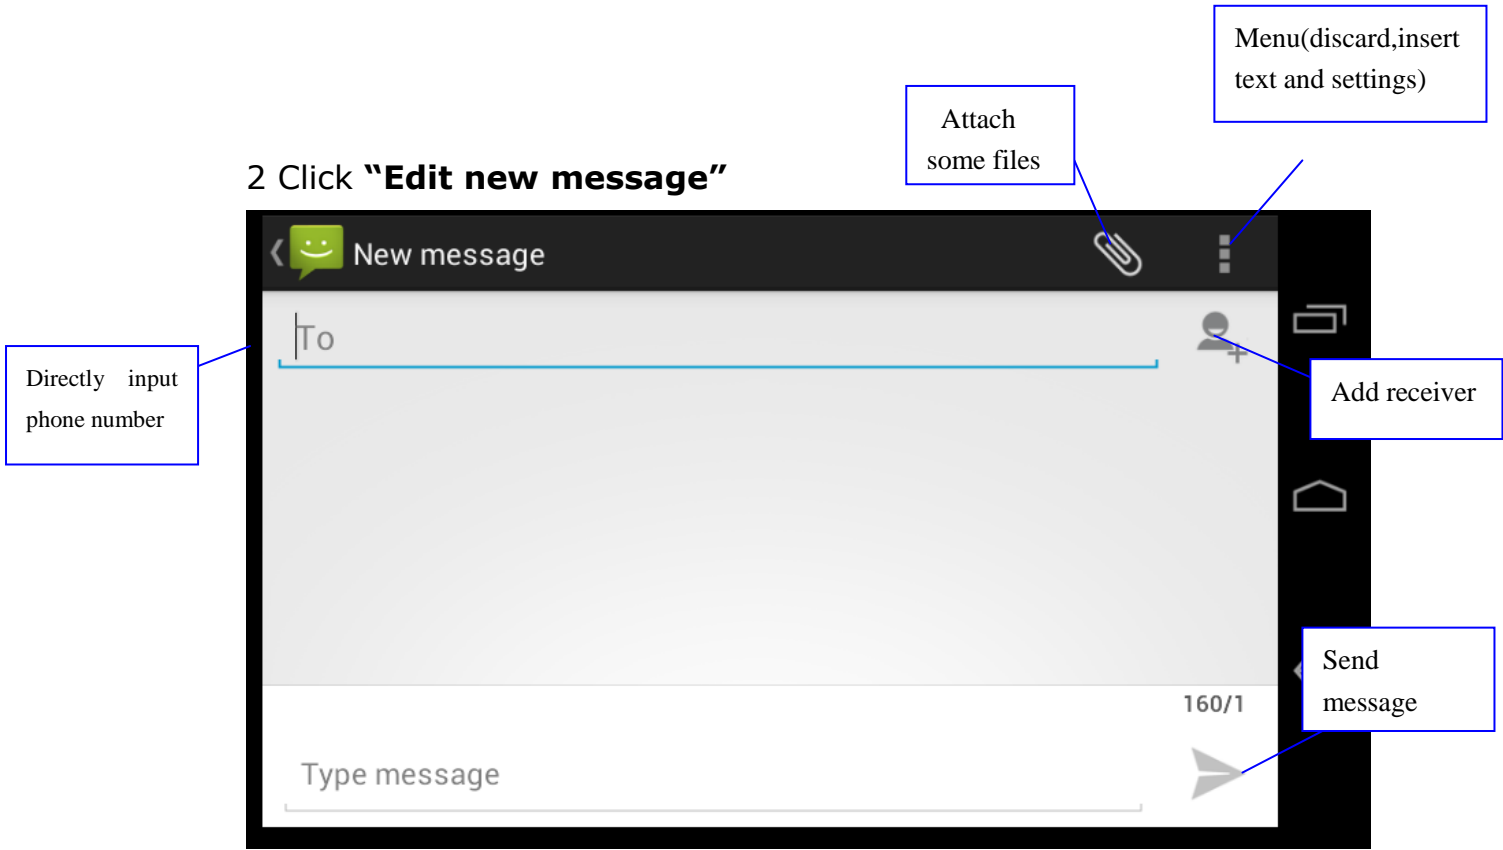



Picture 6.2

 2.9 6.3 Contact List

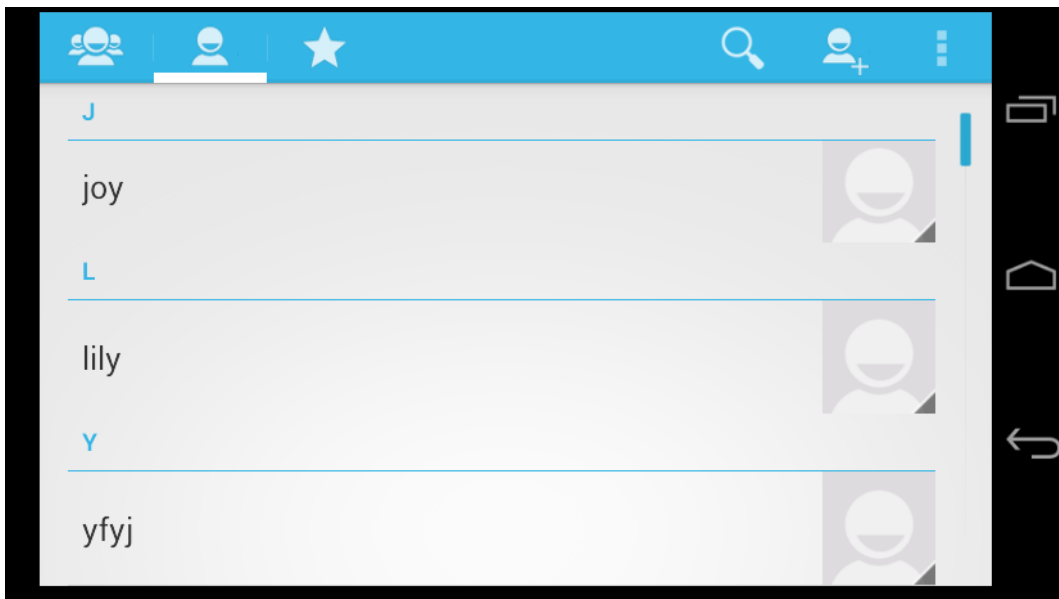Click Contact list  in the main interface, enter into the contact list as Picture 6.3




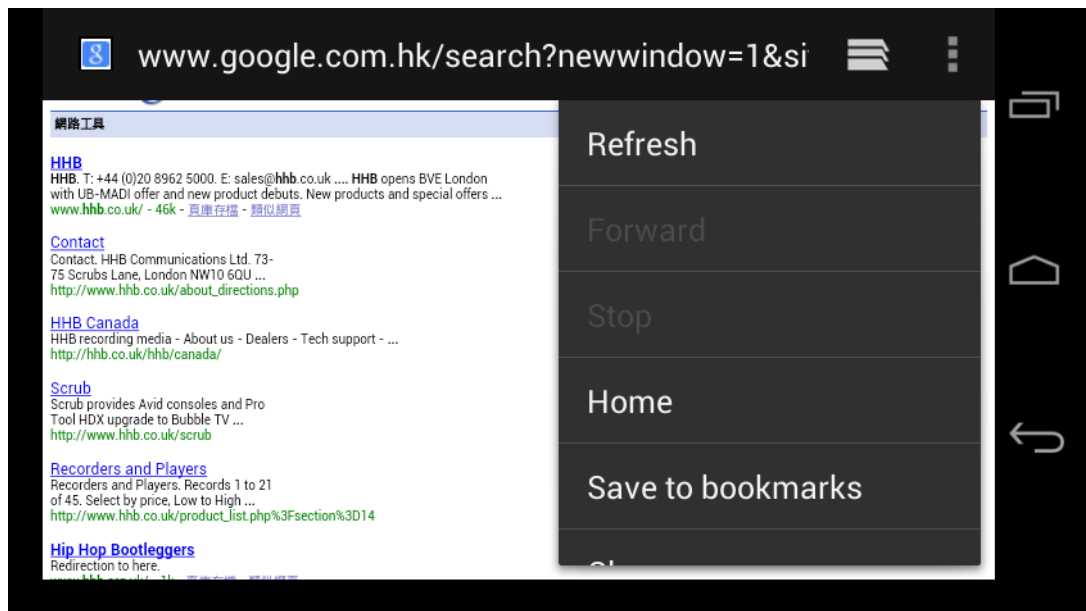 
Picture 6.3

- Search contact: click  button, enter into search function
- Add contact: click  button, enter into add contact interface.

7 Internet


2.107.1 Browser

In case of Wi-Fi or mobile internet is connected well (Please refer to Chapter 4.1 for wireless and internet setting), click IE browser  in the main menu or desktop to enter the IE interface, as Picture 7.1



Picture 7.1

 
Click address bar to input the website, click start, enter into related webpage, then you can browse the website information, as Picture 7.1.2 and you can click the menu you can refresh ,save to bookmarks,,share page,bookmarks,,history and setting the webpage.

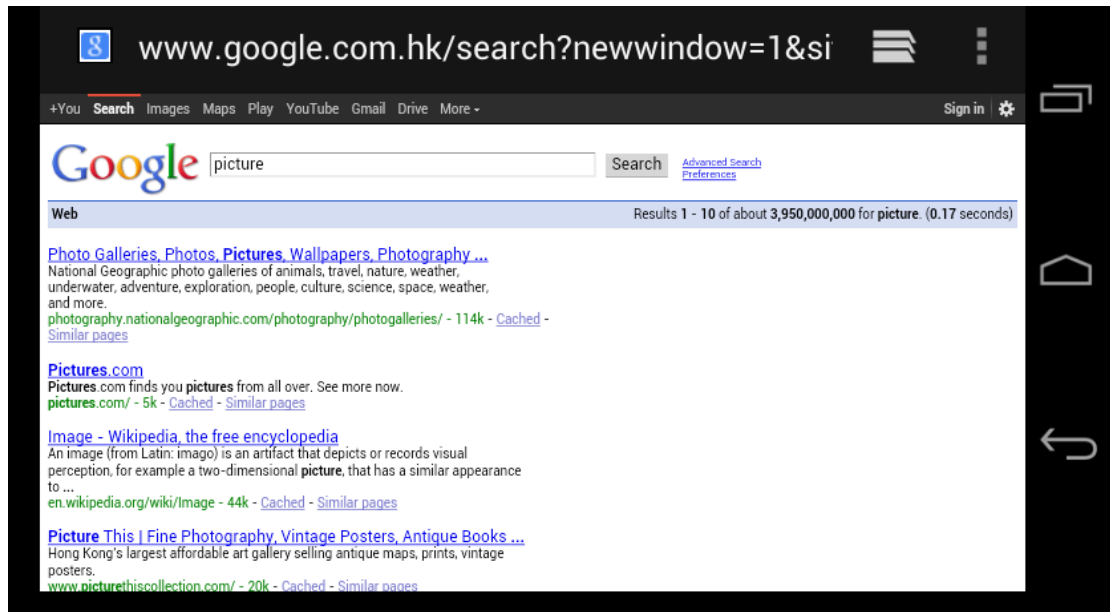

Picture7.1.2


2.11 7.2 Email

 Email application procedure contains email setting guide, you can add the external POP3 OR IMAP email account of normal web email service provider (For instance, Yahoo, Gmail, Hotmail and 163), as Picture 7.2

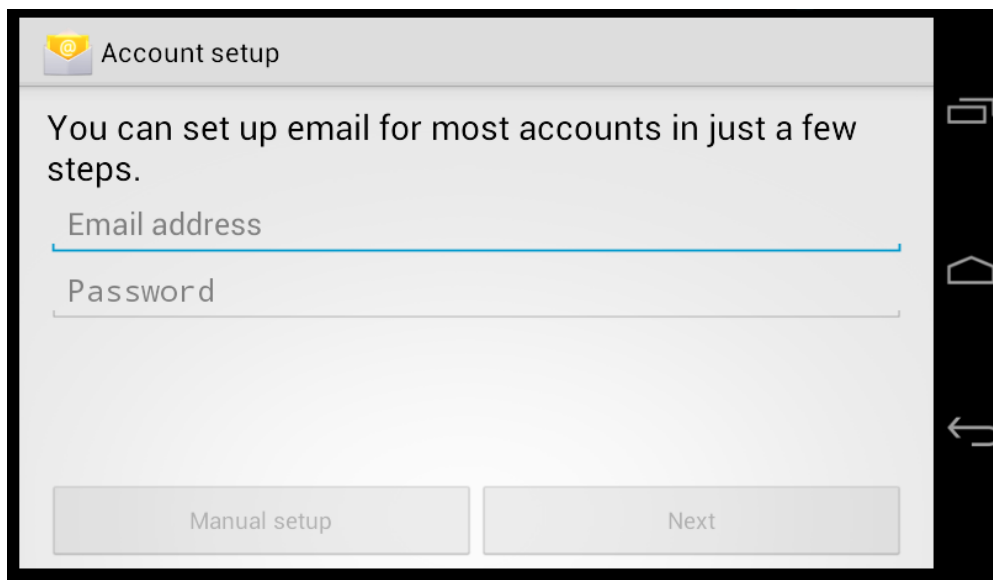

Picture 7.2

a. Email Setting

1. After you click the sending email icon , you can see the email setting guide, which can help you to set.

2. Input your email address and password.
3. Click "Next step" button, choose your email type is POP3 or IMAP.
4. Click "Next Step" button to check whether the email box servicer can receive or send emails
5. Input the email account and display the email subjek, and click **finish**.
6. If the email box is available, you will enter into your mail box automatically.



b. Delete the email account

 
You can delete setted POP3 or IMAP email account from your MID.

Click .

1. Enter into your mail box.
2. Press Menu key.
3. Click Account
4. Press the account you want to delete.
5. Click confirm to remove.

c. Send E-mail

1. Click  to display your mail box.
2. Click the inbox, it will refresh the new emails automatically; click it to read new email.
3. Press Menu key. Menus will popup.
4. Click **Edit**  to enter into new email editing interface.
5. Input the receiver's email address.
6. Input the subject and email content.
7. If you want to add attachment, click menu key, the menu popup.
8. Click "Attach file" (photo,music, video,contacts).
9. Click "send" to send the email out.

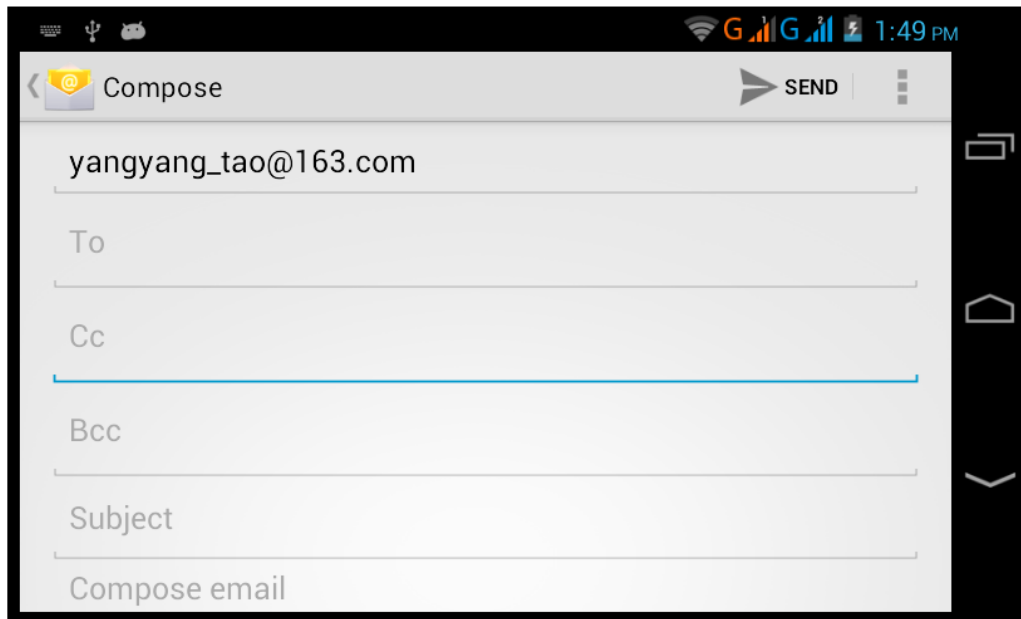


Picture 7.3

8 GPS Function

8.1 GPS Navigation

1. Map of the third parties is required for MID internal GPS satellite signal receiver positioning, after installation the device can accurately implement traffic real-time navigation, meet the needs of outdoor navigation.

2. Enter into setting interface, click  icon, enter into below picture 8.1



Picture 8.1

When positioning successfully, the blue parts will turn to green color, and it shows the latitude, longitude, height, speed, and the time of your location. As Picture 8.2

The value indicates the signal strength, the positioning time is relevant to time zone in your setting, if the time is not inconsistent with real time in your location, please check the time zone in your

setting is correct or not.




Picture 8.2

9 Other Application Procedures


2.129.1 Clock

 
Click **Clock** procedure, enter into below interface as Picture 9.1.
There are clock, picture, music and homepage buttons.

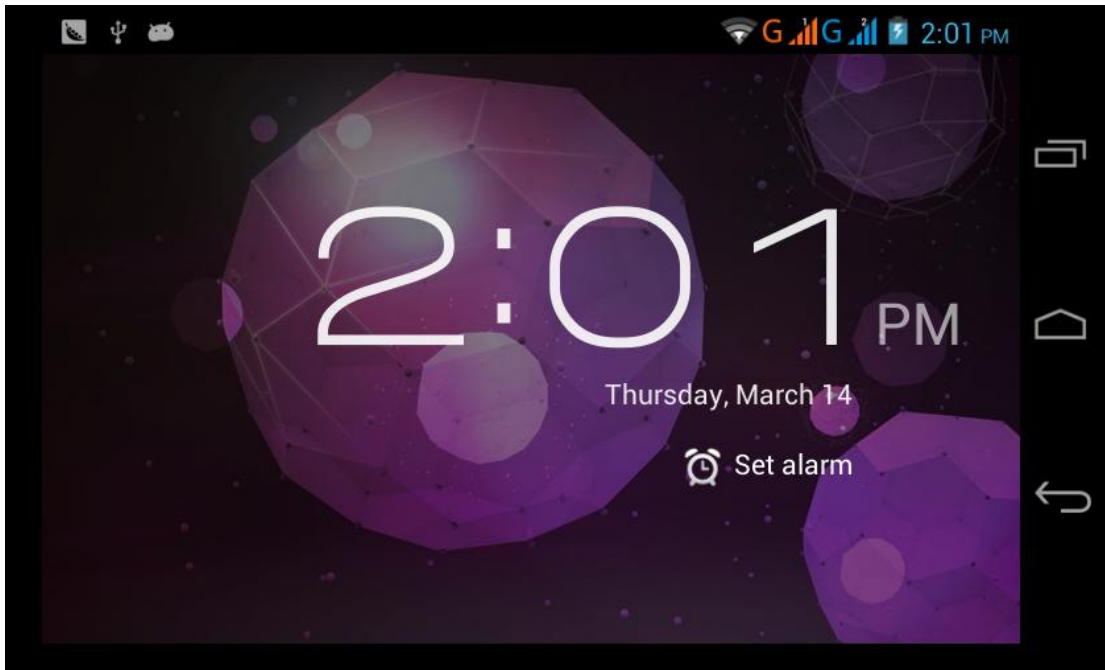

Picture 9.1

2.139.2 Calculator

 1. Click .
2. Enter into the basic board of calculator.
3. Soft touch the numbers or operator in calculator to calculate.

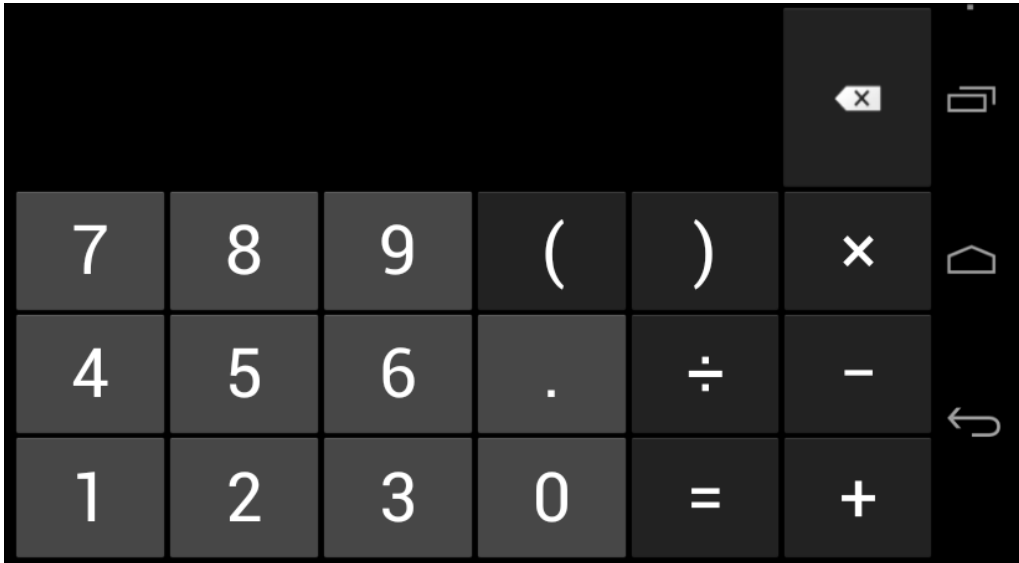


Pictuer 9.2

2.149.3 File Manager

File manager will copy, cut, delete, rename the documents or the folder in the TF card, it also will share the files, install apk etc.

 
In the main menu or desktop, click the document manager icon to enter into documents manager.

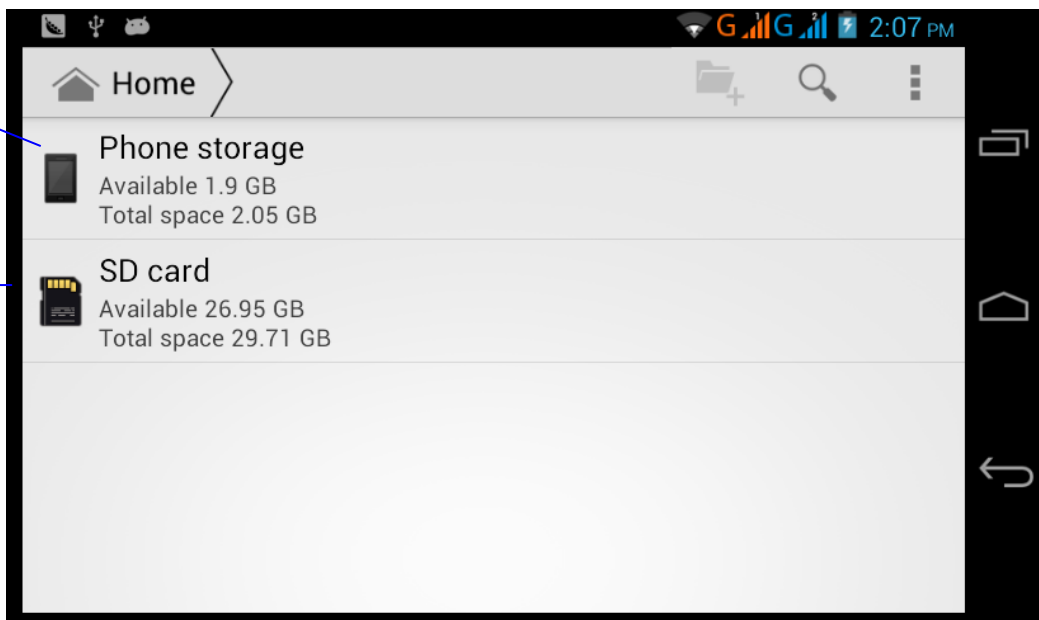



Picture 9.3

 
a、 Copy, cut, delete, rename the files and folder: choose the file or folder, long pressthe file or folder to enter into the interface as Picture

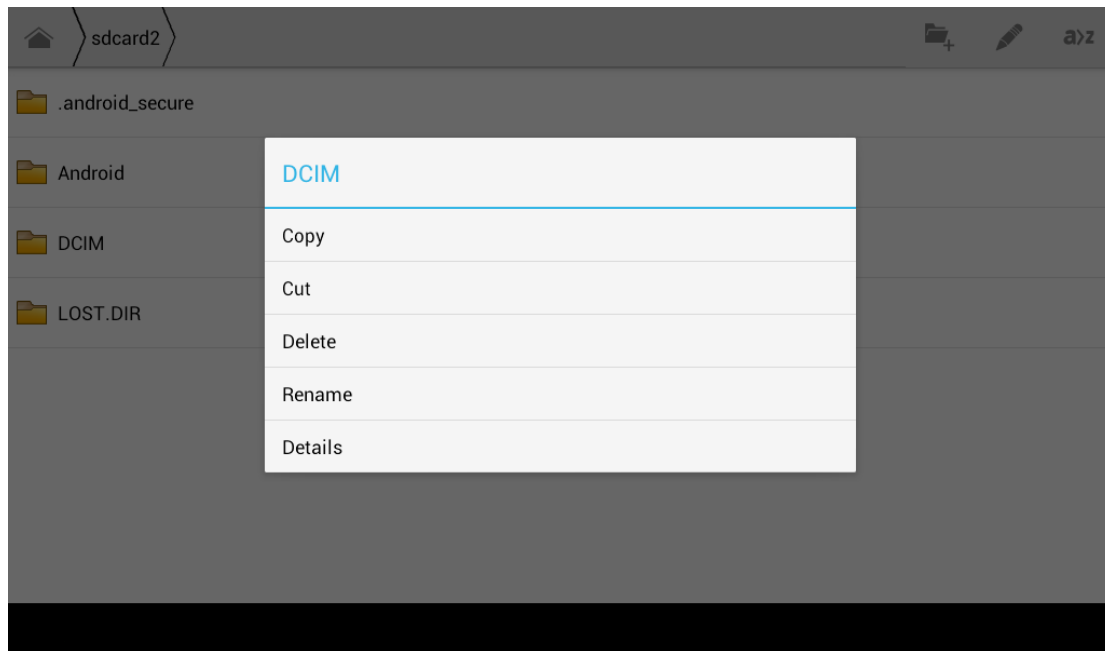9.4, you can operate the file or folder.




Picture 9.4

 b、 Paste the copy or cut file: choose the file you want to paste, choose right top  icon to enter into Picture 9.5, choose right top  icon to enter into Picture 9.6

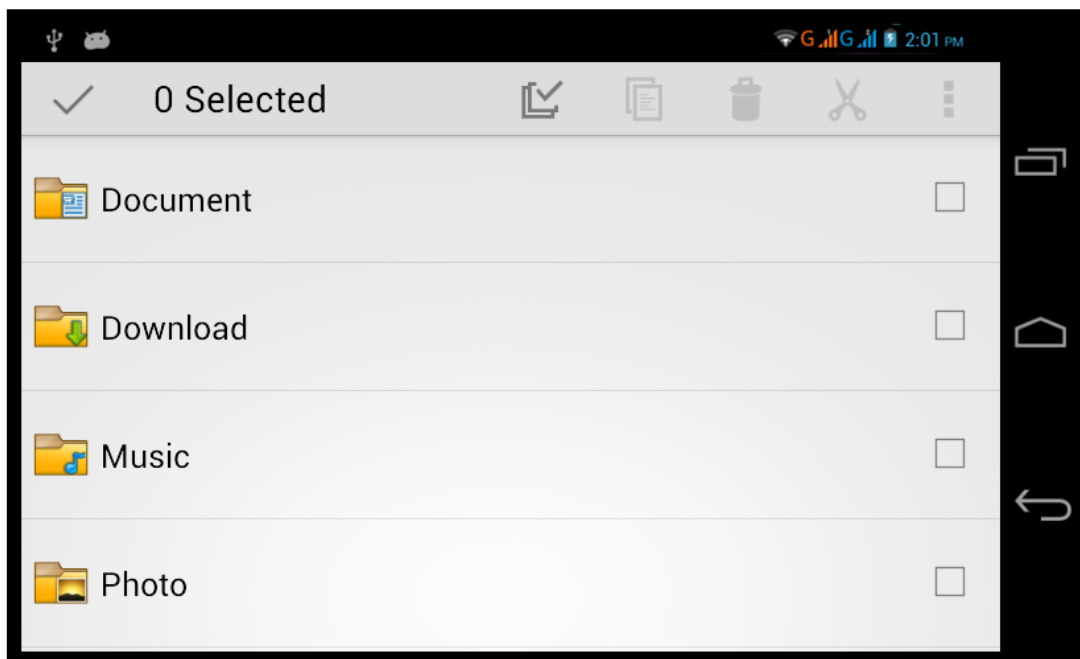


Picture 9.5

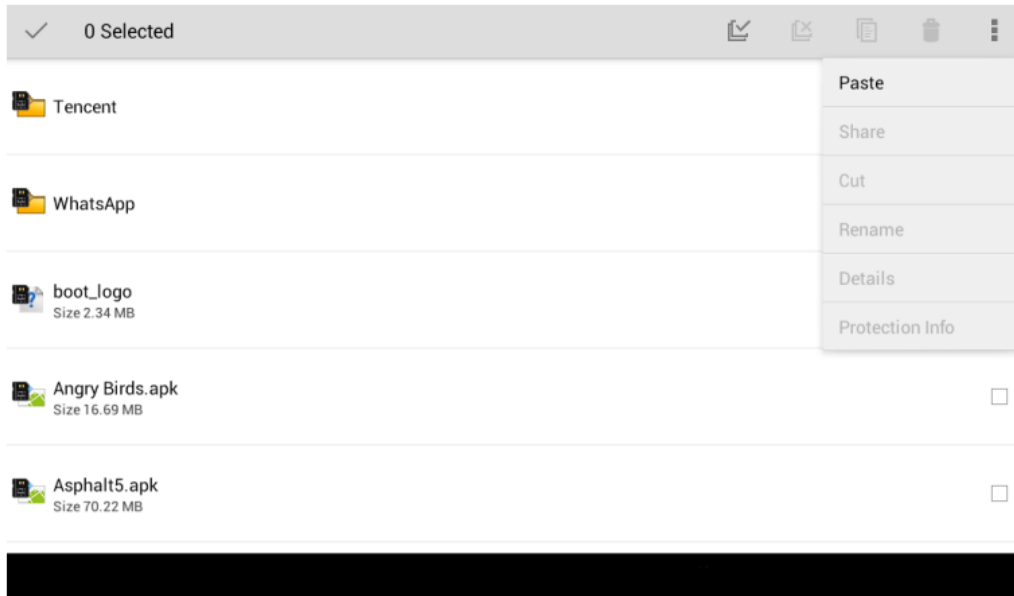 

Picture 9.6

 C. Share file: choose any file, long press it, it will popup “share”, choose the share way you want in the list

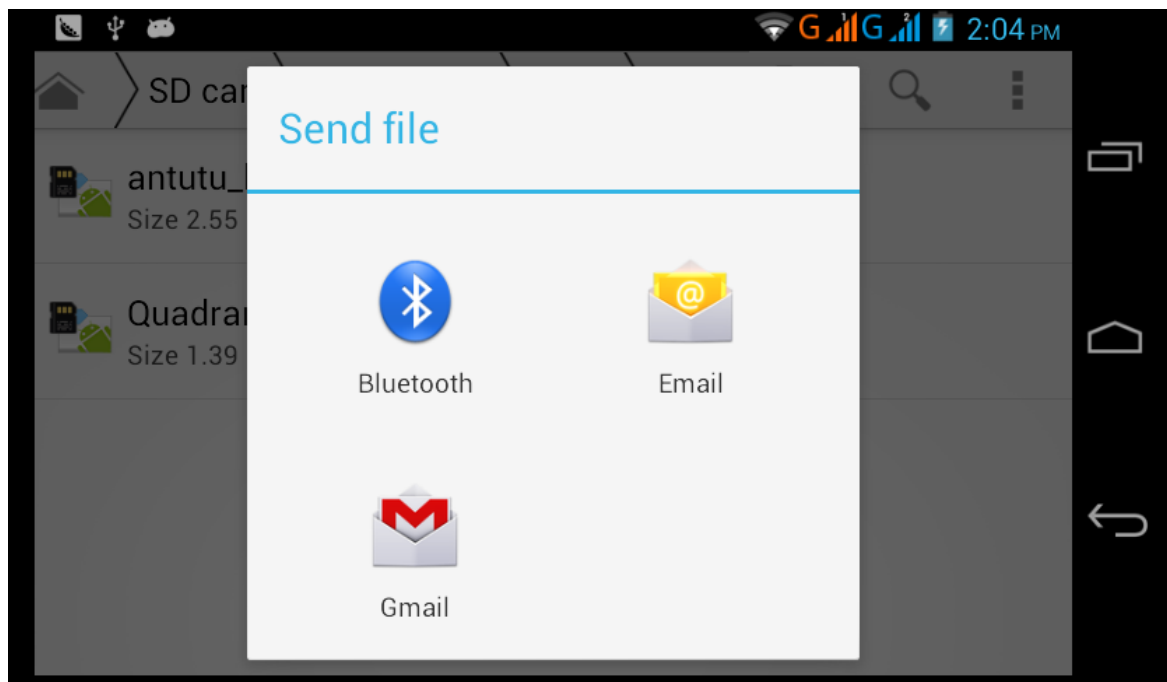





Picture 9.7

 
d. Install apk file: Choose the file suffixed .apk in the file manager, you can install the third part software as reminder.

e. Build new folder: Choose the menu you want to build the file, click

 icon in right top, choose new folder, you can build new folder as reminder.

2.159.4 Recorder

In the main interface or desktop, click recorder icon  to enter into record interface, click record key  to start record. Click Stop key  to stop recording. Click Play key  to play the recorded sound. The system will auto remind you to use or abandon this record, please choose it manually. Play the record: choose the video player to play the recorded sound, choose the recorded sound in the source manager, and click it to play.

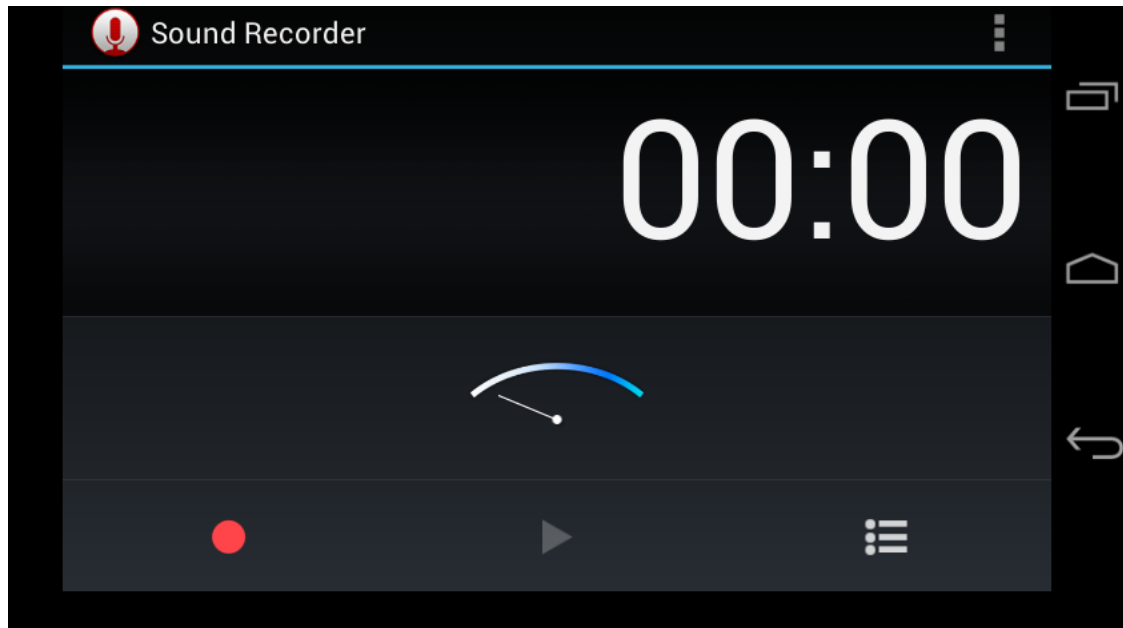

Picture 9.8

10 Installation of Procedures

2.16 10.1 Installation

Install the third party application procedure

1. Click "file manager" application procedure; choose the application procedure you need to install.
2. Hold the application procedure you need to install.
3. It popup **install, click install apk.**
4. Finish the installation as guide, it will operate.

Note: The third party procedure searched from internet to use on the system are all suffixed with .apk.

2.17 10.2 Uninstall

Uninstall application procedure

1. Click setting icon in main interface.
2. Click **manage application procedure**, list all the application procedures installed in the system.
3. Click the APK you want to uninstall, click **uninstall.**
4. Click **confirm** to finish uninstallation.

Skill: The procedure manager installed by system has many convenient methods to uninstall after opening procedure manager, click uninstall, it will list all the application procedures installed by system.

11 Troubles Shooting

1. The first startup of MID is slow

After the MID system upgraded, the first startup need to install the pre-installed application softwares, the lead time is around 2-3 minutes, the startup afterwards will be much quicker.

2. MID can't connect Wi-Fi

- Make sure the wireless router of internet service can work in normal.
- Ensure the MID and wireless router in certain distance, and no wall or other barrier between them.
- Ensure the user name and password both correct.

3. MID feels hot

When many application procedures are used in meanwhile, or the brightness of screen open to the lightest or under charging, MID may feel fever. It is normal.

4. Email can't be set or Registration of application procedure.

- Ensure your internet is well connected.
- Make sure your email setting way is correct.
- Keep your system time and local time consistent.

5. The system is abnormal and can't work.

When you install some third party application procedure, it may cause abnormal work, you can press **Reset key**(next to power port) to reset the system.

6. The webpage can't be opened

- Please keep the distance between from route to MID in effective range.
- Please restart WIFI and try again.

7. MID works terribly slow sometimes

It is normal phenomenon. Please turn off some application you don't need in advanced task management, or uninstall some third party application to release more system resource.

"Features can change without notice"

Imported: I.R.P., S.L.
 Avda. Santa Clara de Cuba 5
 41007 Sevilla
 Spain





DECLARATION OF CONFORMITY

I.R.P., SL declare under our responsibility that the equipment meets the requirements indicated in the following directives:

EMC DIRECTIVES

EN60950-1:2006/A11:2009/A1:2010
EN 62311: 2088
EN 301 489-1 V1.9.2:2011-09
EN 301 489-17 V2.1.1:2009-05
EN 300 328 V1.7.1: 2006-10
ETSI EN 301 489-1 V1.9.2(2011-09)
ETSI EN 301 489-17 V2.1.1(2009-05)

Description of apparatus:

BRIGMTON Model **BTPC-PH2**
Mobile Internet Device

Importer: I.R.P., SL
Address: Avenida Santa Clara de Cuba 5, 41007, Sevilla.

