



AM/FM/WB PORTABLE RADIO

MODEL:VX341


FCC WARNING:

This equipment may generate or use radio frequency energy. Changes or modifications to this equipment may cause harmful interference unless the modifications are expressly approved in the instruction manual. The user could lose the authority to operate this equipment if an unauthorized change or modification is made.

INFORMATION:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

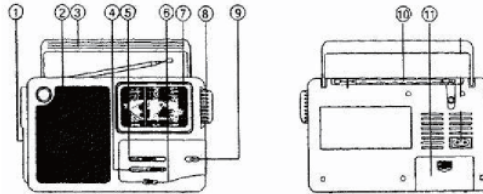

LOCATION OF CONTROLS

- | | |
|---------------------------|----------------------------------|
| 1. HEADPHONE JACK | 7. DIAL SCALE |
| 2. SPEAKER | 8. TURNING CONTROL |
| 3. HANDLE | 9. POWER "ON" INDICATOR |
| 4. VOLUME CONTROL | 10. FM ANTENNA |
| 5. BAND SWITCH (AM/FM/WB) | 11. BATTERY COMPARTMENT |
| 6. POWER ON/OFF SWITCH | (BATTERY COVER PART NO.HK675307) |

BATTERY INSTALLATION

Insert 4 "AA" size (UM-3) batteries into battery compartment. Is sure the correct battery polarity indicated inside the battery compartment. For best performance and longer operating time, we recommended the use of Alkaline Batteries.

BATTERY PRECAUTIONS

Follow these precautions when using batteries in this device:

1. Use only the size and type of batteries specified.
2. Be sure to follow the correct polarity when installing the batteries as indicated next to the battery compartment. Reversed batteries may cause damage to the device.
3. Do not mix different types of batteries together (e.g. Alkaline, Carbon-zinc and rechargeable) or old batteries with fresh ones.
4. If the device is not to be used for a long period of time, remove the batteries to prevent damage or injury from possible battery leakage.
5. Do not try to recharge batteries not intended to be recharged; they can overheat and rupture. (Follow battery manufacturer's directions.)
6. Clean the battery contacts and also those of the device prior to battery installation.
7. Remove used batteries promptly.

RADIO OPERATION

1. Slide the POWER ON/OFF switch to "ON" to turn on the radio.
2. Set the Band selecting switch to AM, FM or WB.
3. Turn the dial to select the desired station, and adjust VOLUME control to desire level.
4. To listen privately, insert the headphone plug (not included) into the Headphone Jack.
5. To turn off the radio, slide the POWER ON/OFF switch to the "OFF" position.

ANTENNA

1. For AM reception radio is built-in a highly sensitive Ferrite core bar antenna, adjust the unit direction for best reception.
2. For FM reception, pull out the telescopic antenna fully and position it for the best reception by adjusting the length and direction.

STATION FOR WB BAND

A very important service available on the weather band is the broadcast of local weather conditions and forecasts. This service is a new service provided 24 hours per day under U.S. Government supervision by the United States Department of Commerce, Environmental Services. The new service is available simply by tuning the dial pointer to (162.55 MHz) on the weather band dial scale.

GENERAL SPECIFICATION

Frequency range: FM 88-108KHz
AM 530-1710MHz
WB 162.55MHz

DC Jack: DC 6V

Output Jack: Earphone Jack(3.5mm)

Power Source: DC 6V "AA" x 4 Alkaline Batteries(not included)

(SPEAKER) Output power: 20 mW

Speaker: 8 Ohm

Dimension: 20x4x11cm

Weight : 0.38 lbs

Specifications and product designs are subject to change without notice.

FOR ADDITIONAL SET-UP OR OPERATING ASSISTANCE, PLEASE CONTACT CUSTOMER SERVICE AT 1-800-819-3647.

PLEASE KEEP ALL PACKAGING MATERIAL FOR AT LEAST 90 DAYS IN CASE YOU NEED TO RETURN THIS PRODUCT TO YOUR PLACE OF PURCHASE.

FOR CONSUMER REPLACEABLE PART(S), SEE PART NUMBER(S) ON THE LOCATION OF CONTROLS ON FRONT PAGE AND THEN CONTACT FOX INTERNATIONAL AT 1-800-321-6993.

"NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the User's authority to operate the equipment."