

Notebook Tour  
User Guide

Antenna House XSL Formatter

© Copyright 2008 Hewlett-Packard  
Development Company, L.P.

Microsoft and Windows are U.S. registered  
trademarks of Microsoft Corporation.  
Bluetooth is a trademark owned by its  
proprietor and used by Hewlett-Packard  
Company under license. SD Logo is a  
trademark of its proprietor. Java is a U.S.  
trademark of Sun Microsystems, Inc.

The information contained herein is subject to  
change without notice. The only warranties  
for HP products and services are set forth in  
the express warranty statements  
accompanying such products and services.  
Nothing herein should be construed as  
constituting an additional warranty. HP shall  
not be liable for technical or editorial errors  
or omissions contained herein.

First Edition: September 2008

Document Part Number: 483212-001

Antenna House XSL Formatter

## Product notice

This user guide describes features that are common to most models. Some features may not be available on your computer.

Antenna House XSL Formatter

# EVALUATION XSL Formatter

---

# Table of contents

## 1 Identifying hardware

### 2 Components

Top components .....	2
Lights .....	2
Buttons, switches, and pointing devices .....	4
Display components .....	5
Keys .....	6
Front components .....	7
Rear components .....	8
Right-side components .....	9
Left-side components .....	10
Bottom components .....	12
Wireless antennae .....	13
Additional hardware components .....	14

### 3 Using the tablet

Tablet display components .....	16
Rotating the display .....	17
Tablet mode .....	17
Notebook mode .....	18

### 4 Labels

<b>Index .....</b>	<b>21</b>
--------------------	-----------

# Antenna House XSL Formatter

---

# 1 Identifying hardware

To see a list of hardware installed in the computer, follow these steps:

1. Select **Start > Computer > System properties**.
2. In the left pane, click **Device Manager**.

You can also add hardware or modify device configurations using Device Manager.

---

 **NOTE:** Windows® includes the User Account Control feature to improve the security of your computer. You may be prompted for your permission or password for tasks such as installing applications, running utilities, or changing Windows settings. Refer to Windows Help for more information.

 
---

---

## 2 Components

### Top components

#### Lights

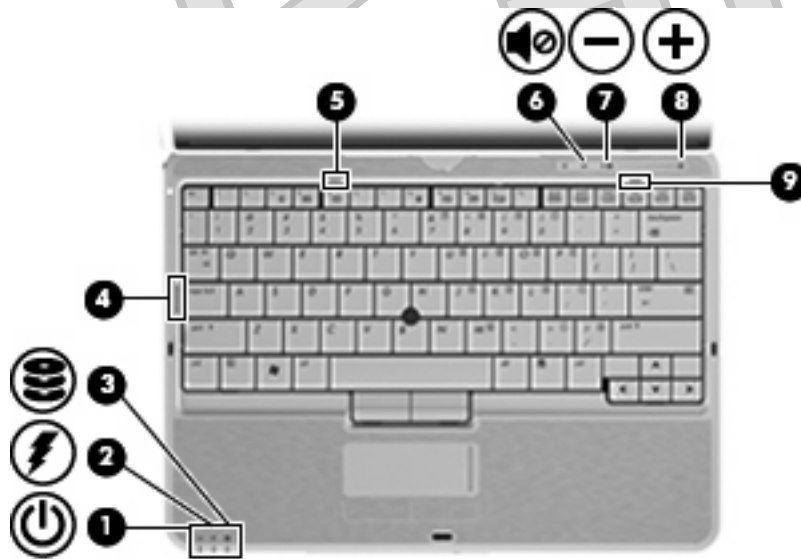

---

#### Component

#### Description

(1) Power light

- On: The computer is on.
- Blinking: The computer is in the Sleep state.
- Blinking rapidly: An AC adapter with a higher power rating should be connected.
- Off: The computer is off or in Hibernation.

 
(2) Battery light

- Amber: A battery is charging.
  - Green: A battery is close to full charge capacity.
  - Blinking amber: A battery that is the only available power source has reached a low battery level. When the battery reaches a critical battery level, the battery light begins blinking rapidly.
  - Off: If the computer is plugged into an external power source, the light turns off when all batteries in the computer are fully charged. If the computer is not plugged into an external power
-




Component	Description
(3) Drive light	source, the light stays off until the battery reaches a low battery level.
(4) Caps lock light	On: Caps lock is on.
(5) TouchPad light	<ul style="list-style-type: none"> <li>• White: TouchPad is enabled.</li> <li>• Amber: TouchPad is disabled.</li> </ul>
(5) Volume mute light	<ul style="list-style-type: none"> <li>• Off: Computer sound is on.</li> <li>• On: Computer sound is off.</li> </ul>
(6) Volume down light	Blinking: The volume scroll zone is being used to decrease speaker volume.
(7) Volume up light	Blinking: The volume scroll zone is being used to increase speaker volume.
(8) Num lock light	On: Num lock is on or the embedded numeric keypad is enabled.

## Buttons, switches, and pointing devices

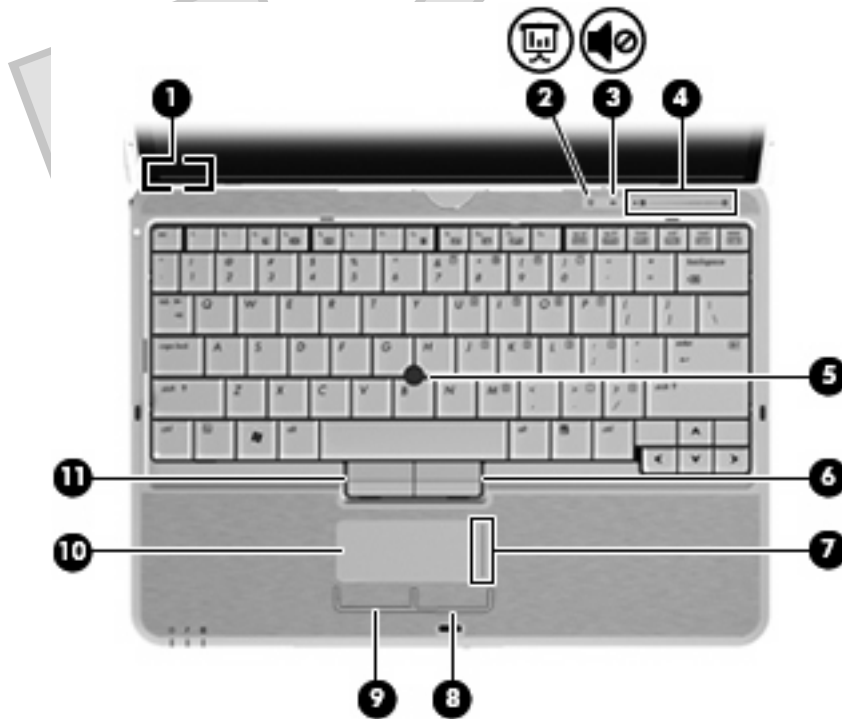

Component	Description
<b>(1)</b> Internal display switch	Turns off the display if the display is closed while the power is on.
<b>(2)</b> Presentation button	Starts the presentation feature.
<b>(3)</b> Volume mute button	Mutes and restores speaker sound.
<b>(4)</b> Volume scroll zone	Adjusts speaker volume: <ul style="list-style-type: none"> <li>To decrease volume, slide your finger across the volume scroll zone from right to left. You can also tap or press the left half of the volume scroll zone.</li> <li>To increase volume, slide your finger across the volume scroll zone from left to right. You can also tap or press the right half of the volume scroll zone.</li> </ul>
<b>(5)</b> Pointing stick	Moves the pointer and selects or activates items on the screen.
<b>(6)</b> Right pointing stick button	Functions like the right button on an external mouse.
<b>(7)</b> TouchPad scroll zone	Scrolls up or down.
<b>(8)</b> Right TouchPad button	Functions like the right button on an external mouse.
<b>(9)</b> Left TouchPad button	Functions like the left button on an external mouse.
<b>(10)</b> TouchPad	Moves the pointer and selects or activates items on the screen.
<b>(11)</b> Left pointing stick button	Functions like the left button on an external mouse.

## Display components

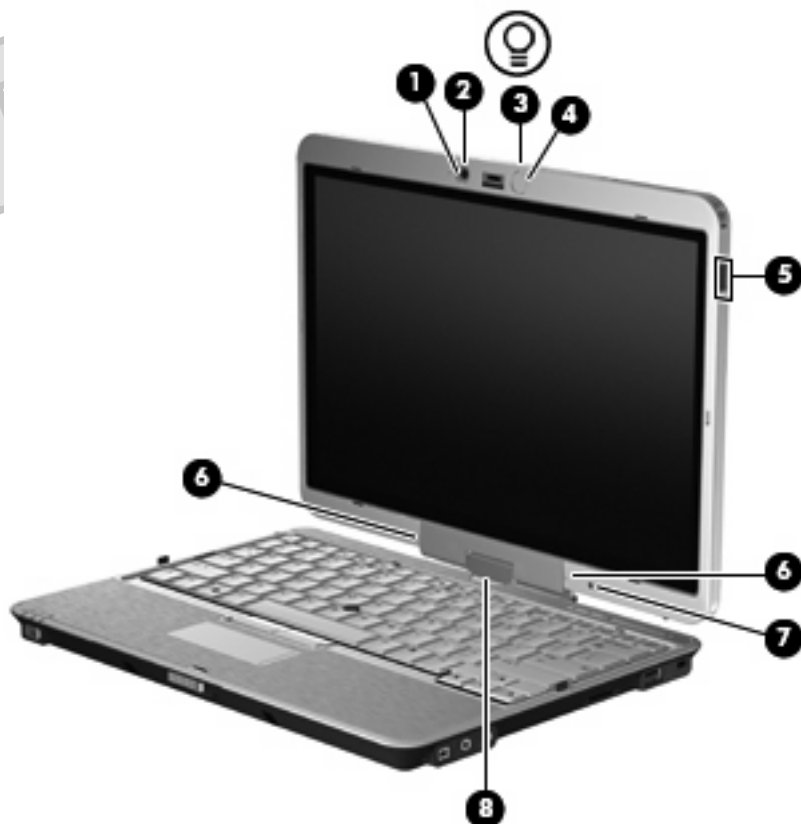 

Component	Description
(1) Webcam light (select models only)	On: The webcam is recording or streaming video or capturing a still photograph.
(2) Integrated Webcam (select models only)	Records audio and video and captures still photographs.
(3) Keyboard light	Illuminates the keyboard in low-light conditions when the keyboard light button is pressed.
(4) Keyboard light button	Opens and turns on the keyboard light.
(5) HP Fingerprint Sensor (fingerprint reader)	Allows a fingerprint logon to Windows instead of a password logon.
(6) Internal microphones (2)	Record sound and transmit sound for video conferencing.
(7) Ambient light sensor	Automatically adjusts the display brightness based on the lighting conditions in your environment.
(8) Convertible hinge	Swivels the display and converts the computer from traditional notebook mode into tablet mode or vice versa.


\* These controls can be accidentally activated while you are carrying the computer. To disable the controls, press and hold both the Q Menu button and the rotate button for several seconds. To reenable these controls, press and hold both buttons again.

## Keys



 
Component	Description
(1) <code>esc</code> key	Displays system information when pressed in combination with the <code>fn</code> key.
(2) <code>fn</code> key	Executes frequently used system functions when pressed in combination with a function key or the <code>esc</code> key.
(3) Windows logo key	Displays the Windows Start menu.
(4) Windows applications key	Displays a shortcut menu for items beneath the pointer.
(5) Embedded numeric keypad keys	Can be used like the keys on an external numeric keypad.
(6) Function keys	Execute frequently used system functions when pressed in combination with the <code>fn</code> key.

## Front components

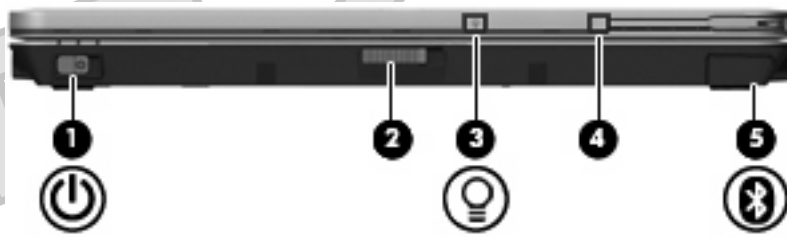

Component	Description
(1) Power switch	<ul style="list-style-type: none"><li>When the computer is off, slide the switch to the right to turn on the computer.</li><li>When the computer is on, slide the switch to the right to shut down the computer.</li><li>When the computer is in the Sleep state, slide the switch to the right briefly to exit Sleep.</li><li>When the computer is in Hibernation, slide the switch to the right briefly to exit Hibernation.</li></ul> <p>If the computer has stopped responding and Windows® shutdown procedures are ineffective, slide the switch to the right and hold for at least 5 seconds to turn off the computer.</p> <p>To learn more about your power settings, select <b>Start &gt; Control Panel &gt; System and Maintenance &gt; Power Options</b>.</p>
(2) Display release latch	Opens the computer.
(3) Keyboard light button	Opens and turns on the keyboard light.
(4) External WWAN antenna button	Opens the external WWAN antenna.
(5) Bluetooth® compartment	Contains an optional Bluetooth device.


## Rear components

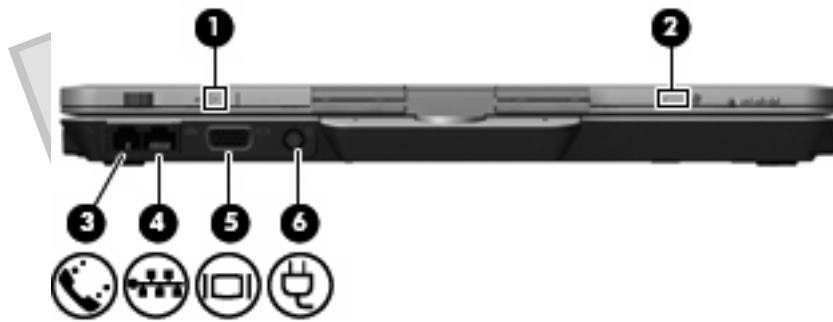 

Component	Description
(1) Windows security button*	<ul style="list-style-type: none"><li>While Windows is running, press the button with the pen to enter the ctrl+alt+delete command.</li><li>While the Computer Setup utility is running, press the button with the pen to enter the reset command. The computer resets and all unsaved information is lost. The reset function can be used to restore functionality when the system has become unresponsive.</li></ul>
(2) Rotate button	Switches the image between landscape and portrait orientation.
(3) RJ-11 (modem) jack	Connects a modem cable.
(4) RJ-45 (network) jack	Connects a network cable.
(5) External monitor port	Connects an external VGA monitor or projector.
(6) Power connector	Connects an AC adapter.

\*To protect your work and the system, the ctrl+alt+delete command cannot be entered using the **ctrl**, **alt**, and **del** keys on the on-screen keyboard.

## Right-side components

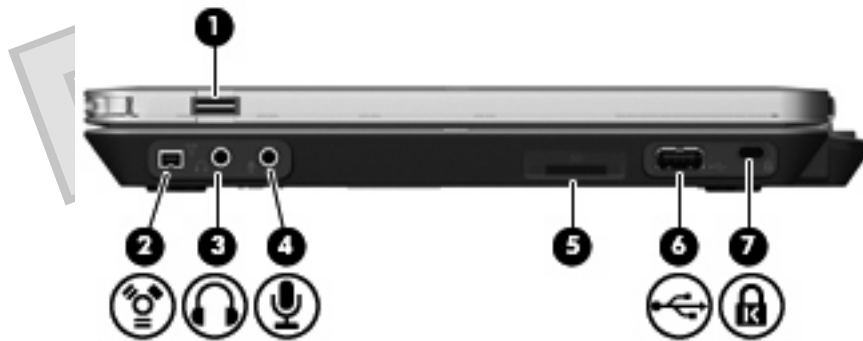 


Component	Description
(1) HP Fingerprint Sensor (fingerprint reader)	Allows a fingerprint logon to Windows instead of a password logon.
(2) 1394 port	Connects an optional IEEE 1394 or 1394a device, such as a camcorder.
(3) Audio-out (headphone) jack	Produces sound when connected to optional powered stereo speakers, headphones, ear buds, a headset, or television audio.
(4) Audio-in (microphone) jack	Connects an optional computer headset microphone, stereo array microphone, or monaural microphone.
(5) Media Card Reader	Supports the following optional digital card formats: Secure Digital (SD) Memory Card and MultiMediaCard (MMC).
(6) USB port	Connects an optional USB device.
(7) Security cable slot	Attaches an optional security cable to the computer.

**NOTE:** The security cable is designed to act as a deterrent, but it may not prevent the computer from being mishandled or stolen.


## Left-side components

  **NOTE:** Refer to the illustration that most closely matches your computer.

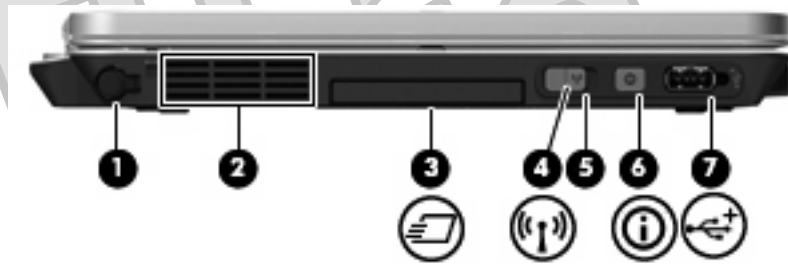


Component	Description
(1) Pen holder	Stores the pen.
(2) Vent	Enables airflow to cool internal components.  <b>WARNING!</b> To reduce the possibility of heat-related injuries or of overheating the computer, do not place the computer directly on your lap or obstruct the computer air vents. Use the computer only on a hard, flat surface. Do not allow another hard surface, such as an adjoining optional printer, or a soft surface, such as pillows or rugs or clothing, to block airflow. Also, do not allow the AC adapter to contact the skin or a soft surface, such as pillows or rugs or clothing, during operation. The computer and the AC adapter comply with the user-accessible surface temperature limits defined by the International Standard for Safety of Information Technology Equipment (IEC 60950).  <b>NOTE:</b> The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation.
(3) ExpressCard slot (select models only)	Supports optional ExpressCards.
(4) Wireless light	<ul style="list-style-type: none"><li>Blue: An integrated wireless device, such as a wireless local area network (WLAN) device, the HP Broadband Wireless Module, and/or a Bluetooth device, is on.</li><li>Amber: All wireless devices are off.</li></ul>
(5) Wireless switch	Turns the wireless feature on or off, but does not create a wireless connection.  <b>NOTE:</b> A wireless network must be set up in order to establish a wireless connection.
(6) Info button	Launches Info Center, which enables you to open various software solutions.
(7) Powered USB port	Provides power to a USB device, such as an optional external MultiBay, if used with a powered USB cable.



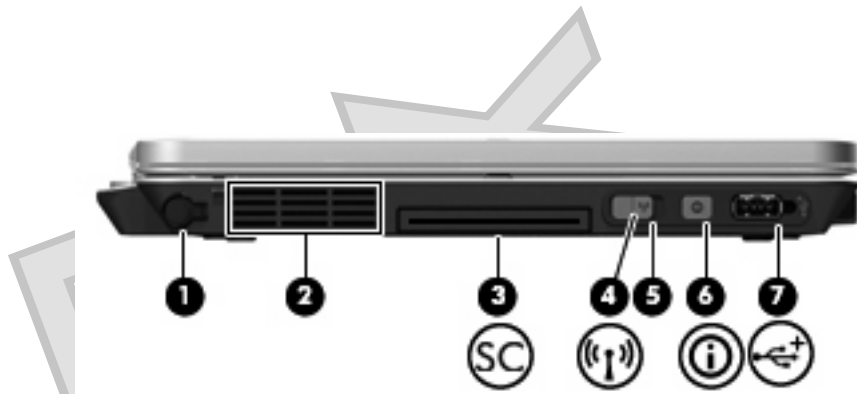 

Component	Description
(1) Pen holder	Stores the pen.
(2) Vent	<p data-bbox="839 579 1251 606">Enables airflow to cool internal components.</p> <p data-bbox="839 632 1465 919"><b>WARNING!</b> To reduce the possibility of heat-related injuries or of overheating the computer, do not place the computer directly on your lap or obstruct the computer air vents. Use the computer only on a hard, flat surface. Do not allow another hard surface, such as an adjoining optional printer, or a soft surface, such as pillows or rugs or clothing, to block airflow. Also, do not allow the AC adapter to contact the skin or a soft surface, such as pillows or rugs or clothing, during operation. The computer and the AC adapter comply with the user-accessible surface temperature limits defined by the International Standard for Safety of Information Technology Equipment (IEC 60950).</p> <p data-bbox="839 947 1465 1024"><b>NOTE:</b> The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation.</p>
(3) Smart card reader (select models only)	Supports smart cards and Java™ cards.
(4) Wireless light	<ul data-bbox="839 1094 1465 1226" style="list-style-type: none"> <li data-bbox="839 1094 1465 1178">• Blue: An integrated wireless device, such as a wireless local area network (WLAN) device, the HP Broadband Wireless Module, and/or a Bluetooth device, is on.</li> <li data-bbox="839 1199 1219 1226">• Amber: All wireless devices are off.</li> </ul>
(5) Wireless switch	<p data-bbox="839 1247 1465 1304">Turns the wireless feature on or off, but does not create a wireless connection.</p> <p data-bbox="839 1325 1465 1379"><b>NOTE:</b> A wireless network must be set up in order to establish a wireless connection.</p>
(6) Info button	Launches Info Center, which enables you to open various software solutions.
(7) Powered USB port	Provides power to a USB device, such as an optional external MultiBay, if used with a powered USB cable.

## Bottom components

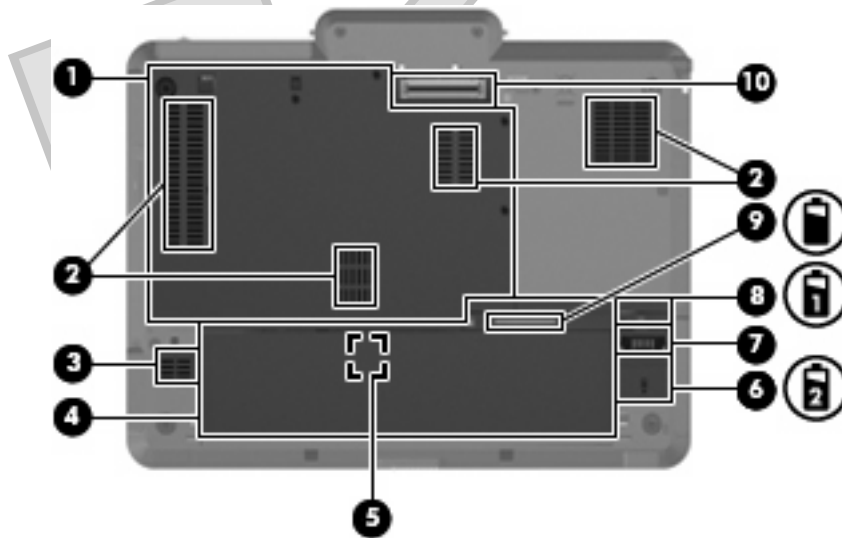 

Component	Description
(1) Hard drive compartment	Holds the hard drive, memory module slots, WLAN module (select models only) and WWAN module (select models only).
(2) Vents (2)	Enable airflow to cool internal components.  <b>WARNING!</b> To reduce the possibility of heat-related injuries or of overheating the computer, do not place the computer directly on your lap or obstruct the computer air vents. Use the computer only on a hard, flat surface. Do not allow another hard surface, such as an adjoining optional printer, or a soft surface, such as pillows or rugs or clothing, to block airflow. Also, do not allow the AC adapter to contact the skin or a soft surface, such as pillows or clothing, during operation. The computer and the AC adapter comply with the user-accessible surface temperature limits defined by the International Standard for Safety of Information Technology Equipment (IEC 60950).  <b>NOTE:</b> The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation.
(3) Speaker	Produces sound.
(4) Battery bay	Holds the battery.
(5) SIM slot	Contains a subscriber identity module (SIM). The SIM slot is located inside the battery bay.
(6) Accessory battery connector door	Slides open to expose the accessory battery connector.
(7) Accessory battery connector	Connects an optional accessory battery.
(8) Battery release latch	Releases the battery from the battery bay.
(9) Charge level indicator	Displays the approximate remaining battery charge.
(10) Docking connector	Connects an optional docking device.

## Wireless antennae

On select computer models, wireless antennae send and receive signals from one or more wireless devices. These antennae are not visible from the outside of the computer.



Component	Description
(1) WWAN antenna*	Sends and receives wireless signals to communicate with wireless wide area networks (WWAN).
(2) WLAN antennae (2)*	Send and receive wireless signals to communicate with wireless local area networks (WLAN).
(3) External WWAN antenna	Sends and receives wireless signals to communicate with wireless wide area networks (WWAN).

\*The antennae are not visible from the outside of the computer. For optimal transmission, keep the areas immediately around the antennae free from obstructions.

To see wireless regulatory notices, refer to the section of the *Regulatory, Safety and Environmental Notices* that applies to your country or region. These notices are located in Help and Support.

## Additional hardware components



Component	Description
(1) Power cord*	Connects an AC adapter to an AC outlet.
(2) AC adapter	Converts AC power to DC power.
(3) Battery*	Powers the computer when the computer is not plugged into external power.

\*Batteries and power cords vary in appearance by region and country.

---

## 3 Using the tablet

Antenna House XSL FORMATTER

## Tablet display components



Component	Description
(1) Windows security button*	When pressed while <ul style="list-style-type: none"> <li>Windows is open, enters the ctrl+alt+delete command.**</li> <li>Computer Setup utility is open, enters the reset command.</li> </ul>
(2) Convertible hinge	Swivels the display and converts the computer from traditional notebook mode into tablet mode or vice versa.
(3) Jog dial*	Functions like the enter key and the up and down arrow keys on a standard keyboard: <ul style="list-style-type: none"> <li>Press inward to enter a command.</li> <li>Rotate up to scroll up.</li> <li>Rotate down to scroll down.</li> </ul>
(4) Pen holder	Stores the pen.

\*This table describes default settings. For information about changing the functions of the Windows security button and jog dial, select **Start > Control Panel > Hardware and Sound > Tablet PC Settings**.

\*\*To protect your work and the system, the ctrl+alt+delete command cannot be entered using the ctrl, alt, and del keys on the on-screen keyboard.

## Rotating the display

The computer display can rotate from traditional notebook mode to tablet mode

 **NOTE:** When the computer is docked in either notebook mode or tablet mode, the display will not rotate.

---

### Tablet mode

To change the computer from notebook mode to tablet mode:


1. Slide the display release latch to release the display, then open the computer display.
2. Rotate the computer display clockwise until it snaps into place facing away from the keyboard.



3. Tilt the computer display downward onto the keyboard until it snaps into place.



In tablet mode, the screen display automatically rotates from portrait to landscape as it is being turned.

 **NOTE:** If antennae on the computer are held in close proximity to the body, the antennae may disable automatic rotation of the screen display.

## Notebook mode

To change the computer from tablet mode to notebook mode:

1. Slide the display release latch **(1)**.




2. Open the computer display (2).



3. Rotate the computer display counterclockwise until it snaps into place facing the keyboard.



 **NOTE:** To prevent a lack of response when you turn on the computer, make sure the battery is firmly seated.

---

## 4 Labels

The labels affixed to the computer provide information you may need when you troubleshoot system problems or travel internationally with the computer.

- Service tag - Provides the product brand and series name, serial number (s/n), and product number (p/n) of your computer. Have this information available when you contact technical support. The service tag label is affixed to the bottom of the computer.
- Microsoft® Certificate of Authenticity - Contains the Windows® Product Key. You may need the Product Key to update or troubleshoot the operating system. This certificate is affixed to the bottom of the computer.
- Regulatory label - Provides regulatory information about the computer. The regulatory label is affixed inside the battery bay.
- Modem approval label - Provides regulatory information about the modem and lists the agency approval markings required by some of the countries in which the modem has been approved for use. You may need this information when traveling internationally. The modem approval label is affixed inside the battery bay.
- Wireless certification label(s) (select models only) - Provide information about optional wireless devices and the approval markings of some of the countries in which the devices have been approved for use. An optional device may be a wireless local area network (WLAN) device or an optional Bluetooth® device. If your computer model includes one or more wireless devices, one or more certification labels are included with your computer. You may need this information when traveling internationally. Wireless certification labels are affixed inside the battery bay and the hard drive bay.
- SIM (subscriber identity module) label (select models only) - Provides the ICCID (Integrated Circuit Card Identifier) of your SIM. This label is located inside the battery bay.
- HP Broadband Wireless Module serial number label (select models only) - Provides the serial number of your HP Broadband Wireless Module. This label is located inside the battery bay.

# Index

## Symbols/Numerics

1394 port, identifying 9

## A

AC adapter, identifying 14

accessory battery connector,  
identifying 12

ambient light sensor, identifying 5

applications key, Windows 6

audio-in (microphone) jack,  
identifying 9

audio-out (headphone) jack,  
identifying 9

## B

battery bay 12, 20

battery light, identifying 2

battery release latch,  
identifying 12

battery, identifying 14

bays

battery 12, 20

Bluetooth compartment,  
identifying 7

Bluetooth label 20

buttons

external WWAN antenna 7

keyboard light 5, 7

Presentation 4

rotate 8

TouchPad 4

volume mute 4

Windows security 8, 16

## C

caps lock light, identifying 3

Certificate of Authenticity label 20

charge level indicator,  
identifying 12

compartments

hard drive 12

memory module 12

wireless devices 12

components

additional hardware 14

bottom 12

display 5

front 7

left-side 10

rear 8

right-side 9

top 2

wireless antennae 13

connector, power 8

convertible hinge, identifying 5,  
16

cord, power 14

## D

display

notebook mode 18

rotating 17

tablet mode 17

display release latch,  
identifying 7

display switch, identifying 4

docking connector, identifying 12

drive light, identifying 3

## E

esc key, identifying 6

ExpressCard slot 10

external monitor port,  
identifying 8

external WWAN antenna button,  
identifying 7

external WWAN antenna,  
identifying 13

## F

fingerprint reader, identifying 5,  
9

fn key, identifying 6

function keys, identifying 6

## H

hard drive compartment,  
identifying 12

headphone (audio-out) jack 9

hinge, convertible 5, 16

holder, pen 16

HP Broadband Wireless Module  
serial number label 20

## I

IEEE 1394 port, identifying 9

internal display switch,  
identifying 4

internal microphone, identifying 5

## J

jacks

audio-in (microphone) 9

audio-out (headphone) 9

RJ-11 (modem) 8

RJ-45 (network) 8

Jog dial 16

## K

keyboard light button,  
identifying 5, 7

keyboard light, identifying 5

keypad keys, identifying 6

keys

esc 6

fn 6

function 6

keypad 6

Windows applications 6  
Windows logo 6

## L

### labels

Bluetooth 20  
HP Broadband 20  
Microsoft Certificate of Authenticity 20  
modem approval 20  
regulatory 20  
service tag 20  
SIM 20  
wireless certification 20  
WLAN 20

latch, battery release 12

### lights

battery 2  
caps lock 3  
drive 3  
keyboard 5  
mute 3  
num lock 3  
power 2  
TouchPad 3  
volume down 3  
volume mute 3  
volume up 3  
webcam 5  
wireless 10, 11

## M

Media Card Reader, identifying 9  
memory module compartment 12  
microphone (audio-in) jack 9  
microphone, internal 5  
Microsoft Certificate of Authenticity label 20  
modem approval label 20  
monitor port, external 8  
mute button, identifying 4  
mute light, identifying 3

## N

num lock light, identifying 3

## O

### operating system

Microsoft Certificate of Authenticity label 20  
Product Key 20

## P

pen holder 10, 16  
pen holder, identifying 11  
pointing stick buttons, identifying 4  
pointing stick, identifying 4  
ports  
1394 9  
external monitor 8  
USB 9  
power connector, identifying 8  
power cord, identifying 14  
power light, identifying 2  
Presentation button, identifying 4  
Product Key 20  
product name and number, computer 20

## R

reader, fingerprint 5, 9  
regulatory information  
modem approval label 20  
regulatory label 20  
wireless certification labels 20  
release latch, battery 12  
RJ-11 (modem) jack, identifying 8  
RJ-45 (network) jack, identifying 8  
rotate button 8

## S

security cable slot, identifying 9  
serial number, computer 20  
service tag 20  
SIM label 20  
SIM slot, identifying 12  
slots  
ExpressCard 10  
Media Card Reader 9  
smart card reader, identifying 11  
speaker, identifying 12  
switches  
wireless 10, 11

## T

tablet display components 16  
TouchPad buttons 4  
TouchPad light 3  
TouchPad scroll zone 4  
TouchPad, identifying 4

traveling with the computer  
modem approval label 20  
wireless certification labels 20

## U

USB port, powered 10, 11  
USB ports, identifying 9

## V

vent 10, 11  
vents, identifying 12  
volume down light, identifying 3  
volume mute button, identifying 4  
volume mute light, identifying 3  
volume scroll zone, identifying 4  
volume up light, identifying 3

## W

webcam light, identifying 5  
webcam, identifying 5  
Windows applications key, identifying 6  
Windows logo key, identifying 6  
Windows security button 16  
Windows security button, identifying 8  
wireless certification label 20  
wireless device compartment 12  
wireless light, identifying 10, 11  
wireless switch, identifying 10, 11  
WLAN antenna, identifying 13  
WLAN device 20  
WLAN label 20  
WWAN antenna, identifying 13

Antenna House XSL FORMATTER  
EVALUATION