

Lenovo IdeaPad Yoga11

User Guide V1.0



Notes

- Before using the product, be sure to read *Lenovo Safety and General Information Guide* first.
- Some instructions in this guide may assume that you are using Windows® 7. If you are using other Windows operating system, some operations may be slightly different. If you are using other operating systems, some operations may not apply to you.
- The features described in this guide are common to most models. Some features may not be available on your computer and/or your computer may include features that are not described in this user guide.

Regulatory Notice -

- The *Regulatory Notice* provides information about the radio frequency and safety standards. Be sure to read it before using wireless devices on your computer.
- To refer to it, go to http://www.lenovo.com, click Support, and then click User's guides and manuals.

First Edition (March 2012)

© Copyright Lenovo 2012.


LIMITED AND RESTRICTED RIGHTS NOTICE: If data or software is delivered pursuant a General Services Administration "GSA" contract, use, reproduction, or disclosure is subject to restrictions set forth in Contract No. GS-35F-05925.

Contents

Chapter 1. Getting to know your computer	
Top view	
Left-side view	3
Right-side view	4
Front view	5
Back view	6
Chapter 2. New Features	7
Rapid Boot (Select models only)	
Intel Rapid Start Technology	
Hybrid Power Supply	
Battery Protection	8
Quick Charge	8
Chapter 3. Learning the basics	g
First use	g
Using AC adapter and battery	
Using the touchpad	
Using the keyboard	13
Connecting external devices	
Special keys and buttons	
System status indicators	
Securing your computer	
Chapter 4. Connecting to the Internet	20
Wireless connection	20
Chapter 5. OneKey Rescue system	21
OneKey Rescue system	
Trademarks	
Index	23

Chapter 1. Getting to know your computer

■ Top view

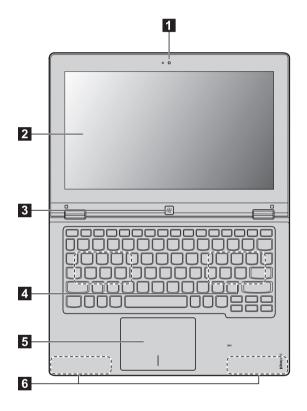

Note: The illustrations in this manual may differ from the actual product. Please refer to the actual product.

• Attention:


- The dashed part is invisible.
- When closing the display panel, be careful NOT to leave pens or any other objects in between the display panel and the keyboard. Otherwise, the display panel may be damaged.

Chapter 1. Getting to know your computer

models only)

Use the camera for video communication. 1 Integrated camera (Select models only) 2 Computer display The LCD display provides brilliant visual output. 3 MS Button 4 **Speakers** The stereo speakers provide rich and powerful sound. 5 Touchpad The touchpad functions as a conventional mouse. **Note:** For details, see "Using the touchpad" on page 12. Wireless module The built-in antennas ensure optimal reception of wireless radio. 6 antennas (Select

 ■■ Left-side view



- **Volume button** Adjusts system sound.
- 2 Speaker Provides audio output.
- **Built-in microphone** Captures sound and can be used for video conferencing, voice narration, or audio recording.
- 4 HDMI port Connects to devices with HDMI input such as a TV or a display.
- **5 USB port** Connects to USB devices.

Note: For details, see "Connecting a universal serial bus (USB) device" on page 16.


6 Combo audio jack Connects to the headset.

Attention:

• Listening to music at high volume over extended periods of time may damage your hearing.

Chapter 1. Getting to know your computer

 ■■ Right-side view



- **Screen rotation lock** Keeps the screen in portrait or landscape orientation.
- 2 Speaker Provides audio output.
- 3 USB port Connects to USB devices.

Note: For details, see "Connecting a universal serial bus (USB) device" on page 16.

4 Memory card slot Insert memory cards (not supplied) here.

Note: For details, see "Using memory cards (not supplied)" on page 17..

5 AC power adapter Connect the AC adapter here. jack

Note: For details, see "Using AC adapter and battery" on page 11.

■ Front view -



System status indicators" on page 18. indicators
 Power button
 Press this button to turn on the computer.

Chapter 1. Getting to know your computer

■ Back view -



SIM card slot (Select models only)

Insert a SIM card (not supplied) for using Mobile Broadband.

Chapter 2. New Features

■■ Rapid Boot (Select models only)

The Rapid Boot technology shortens the boot time of your computer.

■ Enabling Rapid Boot

To enable the rapid boot function, do the following:

- ① Open the BIOS Setup menu.

 In the power-off mode, press the OneKey Rescue System button to power your computer on, and select <Enter Setup> to open the BIOS Setup menu.
- ② Open the **<Configuration>** page, and select the **<Boot Speed>** option to set the rapid boot function.
- **3** Select **<Fast>** to enable the rapid boot function, or select **<Normal>** to disable this function.

Note: If the rapid boot function is not enabled, you can press Fn+F2 (or F2) immediately after your computer boots up to the Lenovo logo screen, to enter the BIOS setup program.

■ How to enter the BIOS setup program when Rapid Boot is enabled

To enter the BIOS setup program when Rapid Boot is enabled, do the following:

- 1 Turn off the computer.
- **2** Press the OneKey key, and select **<Enter Setup>** when the option menu appears.

How to select a boot device when Rapid Boot is enabled

To select a boot device when Rapid Boot is enabled, do the following:

- 1 Turn off the computer.
- 2 Press the OneKey key, and select **<Enter Setup>** when the option menu appears.

Intel Rapid Start Technology

Intel Rapid Start Technology gets your system up and running faster from the hibernation mode.

Note: Intel Rapid Start Technology is applicable only to computers with solid-state hard disks.

How to put your computer into hibernation

To put your computer into the hibernation mode, click the Start icon and select **Sleep**. The computer will enter the hibernation mode after it remains in the sleep mode for 75 minutes.

Note: If Intel Rapid Start Technology is incorporated, you cannot put your computer into the hibernation mode by clicking the **Start** menu and then selecting **Hibernation**.

Hybrid Power Supply

A hybrid power supply system incorporates a power adapter and battery pack to power a computer. With the hybrid power supply technology, the system continuously monitors the power level required by the computer. When the required power level exceeds what the power adapter can supply (for example, when Intel Turbo Boost Technology is enabled), the power adapter stops charging the battery pack and the battery back starts to power the computer as well.

Note: The computer must be connected to the power adapter when the hybrid power supply is enabled. When the hybrid power supply is enabled, the power adapter and the battery pack work together to power the computer. Then, you may note that the power level of the battery pack becomes lower. When the hybrid power supply is disabled, the power adapter resumes charging the battery pack.

Battery Protection

If the battery pack remains idle for a long time, the battery may be over-discharged, and its degradation speed may be increased. The battery pack of IdeaPad U series uses the battery protection technology. When your computer remains idle for a long time, the battery pack enters the sleep mode to avoid over-discharge. After the battery pack enters the sleep mode, you cannot turn the computer on without using the power adapter. Please connect the power adapter to the computer to activate the battery pack.

Note: The batter pack is in the sleep mode by default. When you use the computer for the first time, please plug the power adapter into it. Otherwise, the computer cannot be turned on.

Quick Charge

This function achieves the best result in the power-off mode, when it takes about 40 minutes to charge the battery from 0% to 70% of full power.

■ First use-

Reading the manuals

Read the supplied manuals before using your computer.

Conncting to the power

The built-in battery pack is not fully charged at purchase.

To charge the battery and begin using your computer, connect the computer to an electrical outlet. The battery is automatically charged while the computer is running on AC power.

Connecting the computer to an electrical outlet

- 1 Connect the power cord to the AC adapter.
- 2 Connect the AC adapter to the AC power adapter jack of the computer firmly.
- 3 Plug the power cord into an electrical outlet.

Turning on the computer

Press the power button to turn on the computer.

■ Configuring the operating system

You may need to configure the operating system when it is first used. The configuration process may include the procedures below.

- Accepting the end user license agreement
- Configuring the Internet connection
- Registering the operating system
- · Creating a user account

Putting your computer into sleep state or shutting it down

When you finish working with your computer, you can put it into sleep state or shut it down.

Putting your computer into sleep state

If you will be away from your computer for only a short time, put the computer into sleep state. When the computer is in sleep state, you can quickly wake it to resume use, and bypass the startup process.

To put the computer into sleep state, do the following.

Click and select Sleep from the Start menu.

Note: Wait until the power indicator light starts blinking (indicating that the computer is in sleep state) before you move your computer. Moving your computer while the hard disk is spinning can damage the hard disk, causing loss of data.

To wake the computer, do one of the following.

- Press the power button.
- Press any key on the keyboard.

Shutting down your computer

If you are not going to use your computer for a day or two, shut it down.

To shut down your computer, click 📵 and select **Shut down** from the Start menu.

Using AC adapter and battery

Checking battery status

You can determine the percentage of battery power remaining by checking the battery icon in the notification area.

Note: As each computer user has different habits and needs, it is difficult to predict how long a battery charge will last. There are two main factors:

- The amount of energy stored in the battery when you commence work.
- The way you use your computer: for example, how often you access the hard disk drive and how bright you make the computer display.

Charging the battery

If the battery power is low, you need to charge the battery.


You need to charge the battery in any of the following situations:

- When you purchase a new battery
- · If the battery status indicator starts blinking
- If the battery has not been used for a long time

Notes:

- To increase the life of the battery pack, the computer does not start recharging the battery immediately after it drops from fully charged.
- Charge the battery at a temperature between 50 °F and 86 °F (10 °C-30 °C).
- Full charge or discharge is not required.

Using the touchpad

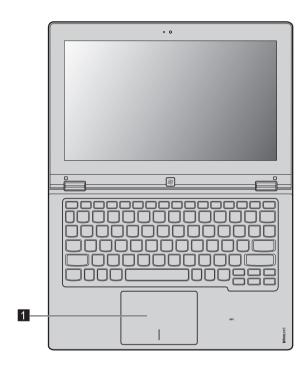

1 Touchpad

To move the cursor on the screen, slide your fingertip over the pad in the direction in which you want the cursor to move.

Note: You can enable/disable the touchpad using **F6**.

Using the keyboard

Your computer has the function keys incorporated in its standard keyboard.

■ Function key combinations

Through the use of the function keys, you can change operational features instantly. To use this function, press and hold Fn 1 , then press one of the function keys 2.



The following describes the features of each function key.

The following describes the reatures of each function key.		
Fn + PrtSc:	pop-up CD/DVD disk.	
Fn + Home:	Activate the pause function.	
Fn + End:	Activate the break function.	
Fn + PgUp:	Enable/Disable the scroll lock.	
Fn + PgDn:	Activate the insert function.	

■ Hotkey

Using Hotkey

The hotkeys are located on the function key row on the keyboard. You can access certain system settings quickly by pressing the appropriate hotkey.



[M F1]:	Mute/Unmute the sound.	[4]- ;	Quick decrease volume level.
	Quick increase volume level.		Close same function for main and secondary function.
₹† F5 :	Refresh same function for main and secondary function.	<u>□</u> :	Enable/Disable the touchpad.
('E') :	Open the interface for integrated wireless devices settings (on/off).	× F8 :	Enable/Disable the microphone.
(S) F9 :	Turn on/off the integrated camera.	FID:	Open the interface for the display device switch to select this notebook or an external display.
	Decrease display brightness.		Increase display brightness.

Note: In the **Hotkey mode**, press **Fn** + **F1**~**F12** to achieve the functions of **F1**~**F12**.

Setting the Hotkey Mode

By default, the hotkey functions are accessible by pressing one single function key (F1~F12). However, you can disable the Hotkey mode in the BIOS setup interface. To disable the Hotkey mode, do the following:

1 Restart the computer. Press Fn + F2 to open the BIOS setup interface right after the Lenovo logo appears.

Note: If Lenovo **<Fast Boot>** has been enabled for your computer, you can press **Fn + F2** at startup to open the BIOS setup interface. In such case, turn off the computer, press the OneKey Rescue System button, and then select **<Enter Setup>** to open the BIOS setup interface.

② In the BIOS setup interface, open the **<Configuration>** menu, and change the setting of **<Hotkey mode>** from **Enable** to **Disable** (or, change the setting of **<Hotkey Switch>** from **Hotkey mode** to **Legacy Mode**.

Note: In the Legacy mode, you may access the hotkey function by pressing the appropriate hotkey while holding the **Fn** key.

Connecting external devices

Your computer has a wide range of built-in features and connection capabilities.

Connecting a universal serial bus (USB) device

Your computer comes with two USB ports compatible with USB devices.

Note: When using a high power consumption USB device such as USB ODD, use the external device's power adapter. Otherwise, the device may not be recognized, and system shut down may result.

■ Connecting a Bluetooth device

If your computer has an integrated *Bluetooth* adapter card, it can connect to and transfer data wirelessly to other *Bluetooth* enabled devices, such as notebook computers, PDAs and cell phones. You can transfer data between these devices without cables and up to 10 meters range in open space.

Note: The actual maximum range may vary due to interference and transmission barriers. To get the best possible connection speed, place the device as near your computer as possible.


Enabling Bluetooth communications on your computer

1 Press F7 to make configuration.

Notes:

- When you do not need to use the *Bluetooth* function, turn it off to save battery power.
- You need to pair the Bluetooth enabled device with your computer before you can transfer data between them. Read the documentation supplied with the Bluetooth enabled device for details on how to pair the device with your computer.


■■ Special keys and buttons

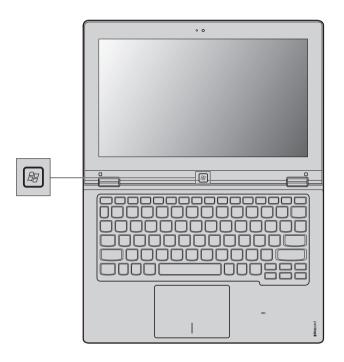

■ MS Button

■■ System status indicators

 These indicators inform you of the computer status.



■ Battery status indicator =

■ Securing your computer

This section provides information about how to help protect your computer from theft and unauthorized use.

Using passwords

Using passwords helps prevent your computer from being used by others. Once you set a password and enable it, a prompt appears on the screen each time you power on the computer. Enter your password at the prompt. The computer cannot be used unless you enter the correct password.

Note: This password can be from one to seven alphanumeric characters in any combination.

For details about how to set the password, see the Help to the right of the screen in BIOS setup utility.

Note: To enter BIOS setup utility, press Fn + F2 when the Lenovo logo appears on the screen while the computer is starting up.

Chapter 4. Connecting to the Internet

As a global network, the Internet connects computers worldwide, providing services such as e-mailing, information searching, electronic commerce, Web browsing and entertainment.

You can connect the computer to the Internet in the following ways:

Wireless network technology: connect without wiring.

■ Wireless connection

Wireless connections provide mobile access to the Internet, allowing you to stay online anywhere the wireless signal covers.

Divided by the signal scales, wireless connection to the Internet can be built based on the following standards.

Wi-Fi	Wi-Fi networks cover a small physical area, like a home, office, or small group of buildings. An access point is necessary for the connection.
WiMAX	WiMAX networks connect several Wireless LAN systems to cover a metropolitan area, providing high-speed broadband access without the need for cables.

Note: Your computer may not support all wireless connection methods.

 
■ Using Wi-Fi/WiMAX

Enabling wireless connection

To enable wireless communications, do the following:

1 Press **F7** to make configuration.

Hardware connection





Software configuration

Consult your Internet Service Provider (ISP) and search Windows Help and Support Center for details on how to configure your computer.

^{*} Not supplied

Chapter 5. OneKey Rescue system

■ OneKey Rescue system

Introduction

The Lenovo OneKey Rescue system is an easy-to-use application that can be used to back up the data on your system partition (C drive) for easy restore when required. You can run Lenovo OneKey Recovery under the Windows operating system, and the OneKey Rescue system without starting the Windows operating system.

• Attention:

In order to utilize the features of the OneKey Rescue system, your hard disk already includes a hidden partition by default to store the system image file and OneKey Rescue system program files. This default partition is hidden for security reasons and is the reason the available disk space is less than it claims. The exact available hard disk space depends on the file size of the mirror image file (based on the size of operating system and preinstalled software).

Using Lenovo OneKey Recovery (within Windows operating system)

In Windows operating system, double click the OneKey Recovery system Icon on the desktop to launch Lenovo OneKey Recovery.

Within the program, you can back up the system partition on the hard disk drive, other storage devices, or by creating recovery discs.

Notes:

- The backup process and creation of recovery discs may take some time, connect the AC adapter and battery pack to your computer.
- After the recovery discs are burned, please number them so that you can use them in the correct order.
- Computers without an integrated optical drive support the creation of recovery discs; however an
 appropriate external optical drive is needed to physically create the recovery discs.

For more instructions, see the Help file of Lenovo OneKey Recovery.

Using Lenovo OneKey Rescue system (without Windows operating system)

In the event that the operating system cannot be loaded, follow the steps below to access OneKey Rescue system.

- Shut down your computer.
- Press the \(\bullet \) key to launch OneKey Rescue system.

Within the program, you can choose to restore your system partition to the original factory status, or to a previously generated backup.

Note: The recovery process is irreversible. Make sure to back up any critical data before using the recovery feature.

Trademarks

The following terms are trademarks or registered trademarks of Lenovo in the United States, other countries, or both.

Lenovo

IdeaPad

OneKey

Microsoft and Windows are trademarks of Microsoft Corporation in the United States, other countries, or both.



is a trademark of SRS Labs, Inc.

Premium Surround Sound technology is incorporated under license from SRS Labs, Inc. SRS Premium Surround Sound TM provides the ultimate audio experience for music, movies and games on the PC.

Other company, products, or service names may be trademarks or service marks of others.

Index

Α	0
AC adapter Using11	OneKey Rescue system button2
	Р
Battery Charging11	Password Using19
Bluetooth Connecting	Q
С	Quick Charge
Camera 2	R
F	Rapid Boot
Function key combinations	S
Н	Security19
Hybrid Power Supply8	Т
K	Touchpad
Keyboard Using13	U
	USB port3, 4, 10





If your product is not working correctly, DO NOT RETURN IT TO THE STORE.

For technical assistance, contact a Lenovo support specialist 24 hours a day by calling toll free **1-877-4 LENOVO** (**1-877-453-6686**).

Additionally, you can find support information and updates on the Lenovo Web site located at http://consumersupport.lenovo.com.

^{*} Only for the users from the United States.

lenovo.

New World. New Thinking. TM www.lenovo.com