

CHARGING THE BATTERY

Charge the battery before first use. A full charge takes approximately 1.5 hours. After charging, the device can be used without the power connection. When the battery is low, the LED indicator flashes red once per minute.

If the device is not used for an extended period of time, the battery may require recharging.

To charge the battery:

1. Plug the USB connector into a USB port on an active device.
2. Plug the Micro USB end of the USB connector into the Micro USB port on the earbuds. The LED light turns red during charging. The light turns blue when the earbuds are fully charged.

PAIRING WITH BLUETOOTH®

1. Prepare your device (e.g., smartphone) to pair using Bluetooth®, making sure that the device is within 33 feet of the earbuds. Refer to your device's owner's manual for information on using the Bluetooth® function.
2. Press and hold the earbud's Multi-Function Button (MFB) for about 4 seconds, until the LED alternates between red and blue, indicating that the earbuds are in pairing mode.
3. On your device, search the list of available devices and select Big Blue Earbuds. Note that it may take a few seconds for the earbuds to be listed as an available device. Depending on your device, you may have to tap SCAN to update the device list. Consult your device's owner's manual.
4. If prompted, type the password or PIN 0000.

A message will display on your device confirming that your device is now paired/connected and the earbud's LED will flash blue three times quickly, indicating that the device is paired.

The devices will remain paired, even after being turned off, until you cancel the pairing. Consult your device's owner's manual for information on cancelling pairing.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Brookstone is under license.

OPERATION

After pairing with your device, you can listen to music or answer phone calls using your Big Blue Wireless Earbuds.

Function	Operation	LED Indicator
Power on	Press and hold MFB for 2 seconds	Red and blue for 1 second
Power off	Press and hold MFB for 3 seconds	
MUSIC OPTIONS		
Play/Pause	Press MFB	
Volume Up	Press Volume +	
Volume Down	Press Volume –	
Next Track	Press and hold Volume + for 2 seconds	
Previous Track	Press and hold Volume – for 2 seconds	

Function	Operation	LED Indicator
PHONE OPTIONS		
Answer a call	If not already on a call, press MFB once	Blue, flashes slowly???
Answer a call while in a call (if supported by cell phone)	Double-click MFB to answer the new call without ending the first call	
Answer a call for three-way calling (if supported by cell phone)	Double-click MFB, transfer to original call. You can switch between two calls(????)	
End a call	While on a call, press MFB once	
Refuse call	While on a call, press and hold MFB for 1 second	
Last Number Redial	Double-click MFB	

LED INDICATOR

The color displayed by the LED Indicator reflects the current operation and status.

Blue	Quick flash	Preparing to pair
	Flash 3 times fast	Pairing success
	Slow flash	Incoming call
	Flash twice per second	Standby mode (music)
	Flash twice every three seconds	Stand by (connected)
	Solid	Fully charged
Red	Solid	Charging in progress
	Flashing once per minute	Battery low
Red and Blue	Alternating	In pairing mode
	Flash for 1 second	Power on

CARE AND MAINTENANCE

Clean the earbuds with a soft cloth or damp chamois leather.
Never use solvents.

SPECIFICATIONS

Bluetooth Support.....V4.2 or later
BatteryLithium Polymer 3.7 V, ~100 mAh
Battery Life.....Standby up to 150 hours, Talk Time up to 5.5 hours
Operating Range.....Up to 33 feet (10 meters)
Charging Time.....<1.5 hours
Charging Input Voltage.....4.7V - 6 V
Leakage Current (Power Off mode, DC=3.7V) Up to 10 uA
RF Frequency Range.....2.402 - 2.480 GHz
Speaker Output Frequency Range.....20Hz - 20kHz
Microphone Input Frequency Range.....100 Hz - 10kHz
Drivers.....8.6mm (is on pkg, didn't see in specs)

ONE (1) YEAR LIMITED WARRANTY

Brookstone® warrants this product against defects in materials and/or workmanship under normal use for a period of ONE (1) YEAR from the date of purchase by the original purchaser ("Warranty Period"). If a defect arises and a valid claim is received within the Warranty Period, at its option, Brookstone will either 1) repair the defect at no charge, using new or refurbished replacement parts, or 2) replace the product with a new product that is at least functionally equivalent to the original product, or 3) provide a store credit in the amount of the purchase price of the original product. A replacement product or part, including a user-installable part installed in accordance with instructions provided by Brookstone, assumes the remaining warranty of the original product. When a product or part is exchanged, any replacement item becomes your property and the replaced item becomes Brookstone's property. When a store credit is given, the original product must be returned to Brookstone and becomes Brookstone's property.

Obtaining Service: To obtain warranty service, call Brookstone Limited Warranty Service at 1-800-292-9819. Please be prepared to describe the product that needs service and the nature of the problem. A purchase receipt is required. All repairs and replacements must be authorized in advance. Service options, parts availability and response times will vary. You are responsible for delivery and the cost of delivery of the product or any parts to the authorized service center for replacement, per our instructions.

Limits and Exclusions: Coverage under this Limited Warranty is limited to the United States of America, including the District of Columbia and the U.S. Territories of Guam, Puerto Rico, and the U.S. Virgin Islands. This Limited Warranty applies only to products manufactured for Brookstone that can be identified by the "Brookstone" trademark, trade name, or logo affixed to them or their packaging. The Limited Warranty does not apply to any non-Brookstone products. Manufacturers or suppliers other than

Brookstone may provide their own warranties to the purchaser, but Brookstone, in so far as permitted by law, provides these products "as is." This warranty does not apply to: a) damage caused by failure to follow instructions relating to product's use or the installation of components; b) damage caused by accident, abuse, misuse, fire, floods, earthquake or other external causes; c) damage caused by service performed by anyone who is not a representative of Brookstone; d) accessories used in conjunction with a covered product; e) a product or part that has been modified to alter functionality or capability; f) items intended to be periodically replaced by the purchaser during the normal life of the product including, without limitation, batteries or light bulbs; g) any product sold "as is" including, without limitation, floor demonstration models and refurbished items; or h) a product that is used commercially or for a commercial purpose.

BROOKSTONE SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT, OR ARISING OUT OF ANY BREACH OF THIS WARRANTY. TO THE EXTENT PERMITTED BY APPLICABLE LAW, BROOKSTONE DISCLAIMS ANY AND ALL STATUTORY OR IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND WARRANTIES AGAINST HIDDEN OR LATENT DEFECTS. IF BROOKSTONE CANNOT LAWFULLY DISCLAIM STATUTORY OR IMPLIED WARRANTIES, THEN TO THE EXTENT PERMITTED BY LAW, ALL SUCH WARRANTIES SHALL BE LIMITED IN DURATION TO THE DURATION OF THIS EXPRESS WARRANTY.

Some states disallow the exclusion or limitation of incidental or consequential damages or how long an implied warranty lasts, so the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.