

brother®

At your side.


User's Guide

- General Description
- Operating Procedures
- Appendix, etc.

M**P****R****I****N****T**

MW-140BT

Mobile Printer

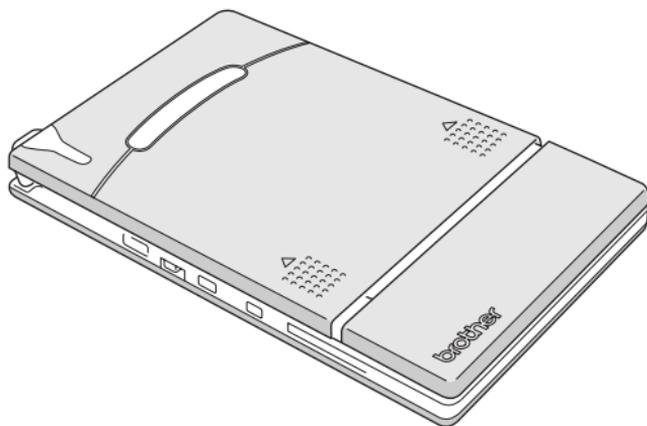

- Before using this printer, be sure to read this User's Guide.
- We suggest that you keep this manual in a handy place for future reference.

Introduction

Thank you for purchasing the MPrint MW-140BT (hereafter referred to as “the printer”).

This monochrome thermal mobile printer is ultra-portable and can be connected to a Pocket PC (PDA running Pocket PC) or a computer to make quick printouts.

This User's Guide contains operating precautions and instructions. Before using this printer, be sure to read this manual for information on its correct operation.

In addition, we suggest that you keep this manual in a handy place for future reference.

Declaration of Conformity

We BROTHER INDUSTRIES, LTD.
15-1, Naesiro-cho, Mizuho-ku,
Nagoya 467-8561, Japan

declare that the MPrint MW-140BT conforms with the following normative documents:

EMC: EN 55022:1998 Class B
 EN 55024:1998
 EN 61000-3-2:1995
 EN 61000-3-3:1995

and follows the provisions of the Electromagnetic Compatibility Directive 89/336/EEC (as amended by 91/263/EEC and 92/31/EEC). The optional AC adapter also conforms with EN 60950 and follows the provisions of the Low Voltage Directive 73/23/EEC.

Issued by: BROTHER INDUSTRIES, LTD.
 P & H company
 Development DIV.



○ This products bearing the CE marking comply with the R&TTE Directive (1995/5/EC), EMC Directive (89/336/EEC) and the Low Voltage Directive (73/23/EEC) issued by the Commission of the European Community.

- The contents of this manual are subject to change without notice.
- The contents of this manual may not be duplicated or reproduced, partially or in full, without permission.
- Please note that we assume no responsibility for damages arising from earthquakes, fire, other disasters, actions of third parties, the user's intentional or negligent operation, misuse or operation under other special conditions.
- Please note that we assume no responsibility for damage (such as losses, loss of business profits, lost profits, business disruptions or a lost means of communication) that may result from the use or inability to use this printer.
- If this printer should be defective due to faulty manufacturing, we shall replace it during the warranty period.
- We assume no responsibility for damages that may result from incorrect operation of this printer by connecting incompatible equipment or using incompatible software.

- Microsoft® and Windows® are registered trademarks of Microsoft Corporation in the United States and other countries.
- The Bluetooth® word mark and logos are owned by the Bluetooth® SIG, Inc. and any use of such marks by Brother Industries, Ltd. under license.
- This printer is installed with BTFront from ACCESS CO., LTD. Copyright (C) 1996–2003 ACCESS CO., LTD.
- All other software and product names mentioned are trademarks or registered trademarks of their respective companies.

Precautions

Precautions indicated as shown below contain important safety information and should be strictly observed.

If the printer malfunctions, immediately stop using it, and then contact the sales representative where it was purchased.

The meanings for marks used in this manual are described below.

 Warning	Failure to observe instructions marked with this symbol may result in death or serious injuries.
 Caution	Failure to observe instructions marked with this symbol may result in injuries or property damage.

Meanings for symbols used in this manual

	Indicates danger
	Indicates danger of fire under certain circumstances
	Indicates danger of electric shock under certain circumstances
	Indicates danger of burns under certain circumstances
	Indicates an action that must not be performed
	Indicates danger of combustion if fire is nearby
	Indicates danger of sustaining injuries if the indicated part of the printer is touched
	Indicates danger of injuries, such as electric shock, if the indicated part if the printer is disassembled
	Indicates danger of electric shock if the operation is performed with wet hands
	Indicates danger of electric shock if the printer is exposed to water



Indicates an action that must be performed



Indicates that the power supply cord must be unplugged from the electrical outlet

Concerning this printer (including the built-in lithium ion battery)

 Warning	
	<ul style="list-style-type: none"> Do not use this printer wherever it is prohibited, for example, on an airplane, otherwise it may affect equipment, resulting in an accident.
	<ul style="list-style-type: none"> If this printer is to be used in special environments, for example, near medical equipment, make sure in advance that there would be no harmful effects from electromagnetic waves. Please note that we assume no responsibility for injuries resulting from interference from electromagnetic waves.
 	<ul style="list-style-type: none"> Do not insert foreign objects into the printer or its connectors and ports, otherwise a fire, an electric shock or damage may result.
  	<ul style="list-style-type: none"> If foreign objects are dropped into the printer, immediately turn it off, unplug the AC adapter from the electrical outlet, and then contact the sales representative where it was purchased. If you continue to operate the printer, a fire, an electric shock or damage may result.
   	<ul style="list-style-type: none"> Do not operate, recharge or store the printer in the following locations, otherwise it may leak or fire, electric shock or damage may result. <ul style="list-style-type: none"> ○Near water, such as in a bathroom or near a water heater, or in an extremely humid location ○In a location where it is exposed to rain or moisture ○In an extremely dusty location ○In an extremely hot location, such as near flames or heaters or in direct sunlight ○In a closed car under a hot sun ○In a location where condensation may form

Warning



- Liquid leaking from the printer may indicate that the built-in battery is damaged. Immediately move the printer away from flames, otherwise a fire may result. In addition, do not touch the leaking liquid. This liquid may damage your eyes or skin if brought in contact with them. If the liquid makes contact with your eyes, immediately rinse them with water and consult a medical professional. If the liquid makes contact with your skin or clothing, immediately rinse them with water.



- Do not try to disassemble or alter this printer, otherwise fire, electric shock or damage may result. For servicing, adjustments or repairs, contact the sales representative where it was purchased. (The warranty does not cover repairs for damage resulting from disassembly or alterations performed by the user.)



- The printer may be damaged if it is dropped or subjected to strong shocks, for example, from being stepped on. If you continue to operate a damaged printer, a fire or an electric shock may result. If the printer is damaged, immediately turn it off, unplug the AC adapter from the electrical outlet, and then contact the sales representative where it was purchased.



- If the printer operates abnormally, for example, if it produces smoke, an unusual odor or an unusual noise, stop using it, otherwise fire, electric shock or damage may result. Immediately turn off the printer, unplug the AC adapter from the electrical outlet, and then contact the sales representative where it was purchased for repairs.



- Do not charge the printer with a charger other than that specified.

Warning



- If the printer is not fully charged after the specified amount of time has passed, stop charging it, otherwise fire, electric shock or damage may result.



Caution



- Keep the printer out of the reach of children, particularly infants, otherwise injuries may result.



- Stop operating the printer if it leaks or becomes discolored, deformed or otherwise defective.

Others



- The built-in lithium ion battery is slightly charged so that the operation of the printer can be verified; however, the battery should be fully charged with the AC adapter before the printer is used.



- Do not leave the printer in a closed car under a hot sun, otherwise it may be damaged.



- If the printer is not to be used for a long period of time, be sure to charge the lithium ion battery at least once every six months in order to prevent a reduction in the efficiency and life of the battery.



- This printer is powered with a built-in lithium ion battery. If this printer can only be used for a short period of time, even though it is fully charged, the battery may have reached the end of its service life. Replace the lithium ion battery with a new one.
Contact the sales representative where the printer was purchased to have the built-in lithium ion battery replaced.



Concerning the AC adapter

 Warning	
  	<ul style="list-style-type: none">• Only use the AC adapter designed specifically for this printer, otherwise fire, electric shock or damage may result.
  	<ul style="list-style-type: none">• Do not plug the printer into an electrical outlet other than a household outlet (AC 100 V – 240 V), otherwise fire, electric shock or damage may result.
 	<ul style="list-style-type: none">• Do not touch the AC adapter or the power supply plug with wet hands, otherwise electric shock may occur.
  	<ul style="list-style-type: none">• Do not try to disassemble, alter or repair the AC adapter, otherwise fire, electric shock or injuries may result. For servicing, adjustments or repairs, contact the sales representative where the printer was purchased.
  	<ul style="list-style-type: none">• Do not spill water or drinks, such as coffee or juice, on the AC adapter. In addition, do not use the adapter in a location where it may get wet, otherwise combustion or electric shock may result.
 	<ul style="list-style-type: none">• If the power supply plug becomes dirty, for example, with dust, unplug it from the electrical outlet, and then wipe it with a dry cloth. If you continue to use a dirty power supply plug, a fire may result.

 Warning			
  	<ul style="list-style-type: none"> When unplugging the power supply cord, do not pull on the cord, otherwise fire or electric shock may result. 		
  	<ul style="list-style-type: none"> Do not insert foreign objects into the terminals of the AC adapter, otherwise burns or electric shock may result. 		
 	<ul style="list-style-type: none"> Incorrectly using the AC adapter may result in fire or electric shock. Therefore, observe the following precautions. <table style="width: 100%; border: none;"> <tr> <td style="width: 50%; vertical-align: top;"> <ul style="list-style-type: none"> ○ Do not damage it. ○ Do not modify it. ○ Do not twist it. ○ Do not severely bend it. ○ Do not pull on it. </td> <td style="width: 50%; vertical-align: top;"> <ul style="list-style-type: none"> ○ Do not place objects on it. ○ Do not subject it to heat. ○ Do not bind it. ○ Do not allow it to be pinched. </td> </tr> </table> 	<ul style="list-style-type: none"> ○ Do not damage it. ○ Do not modify it. ○ Do not twist it. ○ Do not severely bend it. ○ Do not pull on it. 	<ul style="list-style-type: none"> ○ Do not place objects on it. ○ Do not subject it to heat. ○ Do not bind it. ○ Do not allow it to be pinched.
<ul style="list-style-type: none"> ○ Do not damage it. ○ Do not modify it. ○ Do not twist it. ○ Do not severely bend it. ○ Do not pull on it. 	<ul style="list-style-type: none"> ○ Do not place objects on it. ○ Do not subject it to heat. ○ Do not bind it. ○ Do not allow it to be pinched. 		
	<ul style="list-style-type: none"> If the AC adapter is damaged, request a new one from the sales representative where the printer was purchased. 		
	<ul style="list-style-type: none"> Keep the AC adapter out of the reach of children, particularly infants, otherwise injuries may result. 		
	<ul style="list-style-type: none"> Do not use the AC adapter near microwave ovens, otherwise damage may result. 		
  	<ul style="list-style-type: none"> Do not use the AC adapter near flames or heaters. If the covering of the AC adapter cord melts, fire or electric shock may result. 		
 	<ul style="list-style-type: none"> Before maintaining the printer, for example, when cleaning it, unplug the AC adapter from the electrical outlet, otherwise electric shock may result. 		



Warning



- If the printer is not to be used for a long period of time, be sure to unplug the AC adapter from the unit and the electrical outlet for safety reasons.



- Do not wind the AC adapter cable around the adapter or bend the cable, otherwise the cable may be damaged.

Operating precautions

- Operate this printer in an environment that meets the following requirements.
 - Temperature: 0 – 40 °C
 - Humidity: 20 – 80 % (Maximum wet-bulb temperature: 27 °C)
 - Do not operate or store this printer in a location exposed to extremely high or extremely low temperatures, extreme humidity, extreme dust, or extreme vibrations, otherwise the printer may be damaged or malfunction.
 - Do not use the printer in a location exposed to extreme temperature fluctuations, otherwise condensation may occur, resulting in the printer being damaged or malfunctioning.
 - If condensation occurs, allow it to dry naturally before operating the printer.
- The AC adapter case and the printer may become hot while the printer is charging or printing. This does not indicate a malfunction.
- When the printer is not used, unplug the power supply plug from the electrical outlet.
- Do not block the paper output slot.
- If the AC adapter connector or USB port becomes dirty, incorrect connection or incorrect charging may result. Periodically clean the connector and port with a dry cotton swab.
- When cleaning the printer, use a soft, dry cloth. Do not use benzene or paint thinners, otherwise the printer may become discolored or deformed. (→ Refer to page 14.)
- When using optional accessories, use them as described in their instruction manuals.
- Use thermal paper with this printer. If printed text is written over or stamped, the text may disappear or become discolored. In addition, it may take some time for the ink to dry.
- Do not touch the printer with wet hands.
- Do not leave paper cassette cover open when storing as this may cause paper misfeeding or a paper sensor error.

- Concerning the paper cassette and the handling of the paper
 - Store the paper cassette away from extremely hot, extremely humid or extremely dusty locations and out of direct sunlight, otherwise the paper may become discolored or a malfunction may result.
 - Be sure to close the lid of the paper cassette before storing it, otherwise the paper may become discolored.
 - Do not leave paper cassettes in a closed car under a hot sun, otherwise they may become discolored.
 - After opening the package of paper cassettes, close it again as soon as possible, otherwise the paper may become discolored.
 - Do not use paper that has been exposed to condensation.
 - Do not try to use paper transferred from one paper cassette to another, otherwise a malfunction may result.
 - Do not try to reuse paper that has already passed through the printer, otherwise a malfunction may result.
 - Do not open the paper cassette cover or pull out or push in the paper while the printer is printing, otherwise a malfunction may result.
 - Do not use folded, curled, cut, wet or damp paper, otherwise a paper misfeed or a malfunction may result.
 - Do not touch paper cassettes or paper with wet hands, otherwise a malfunction may result.
 - Do not prepare or replace the paper cassette in an extremely humid location, otherwise a malfunction may result.


- Depending on the environmental conditions of the location and the quality of the material that the adhesive-backed paper is attached to, the adhesive-backed paper may become discolored, peel off, be difficult to remove, leave adhesive behind or damage the surface that it was affixed to. Before using the adhesive-backed paper, test it by affixing a small piece to an inconspicuous area of the intended surface.
- Do not affix the adhesive-backed paper to people, animals or plants. Also, do not affix it to public property or other peoples' possessions without permission.

CONTENTS


Introduction	i
Precautions	iii
Operating precautions	xi
CONTENTS	1
General Description	2
Operating Procedures	3
Charging	3
Selecting Bluetooth communication ON/OFF	5
Turning on/off the printer	6
Preparing the paper	7
Installing the paper cassette	9
Sending data from a Pocket PC or computer	11
Feeding paper	13
Maintenance	14
Disposing of this printer	16
Appendix	17
Product specifications	17
Troubleshooting	18
Indicator lights	21

1 General Description

Right side

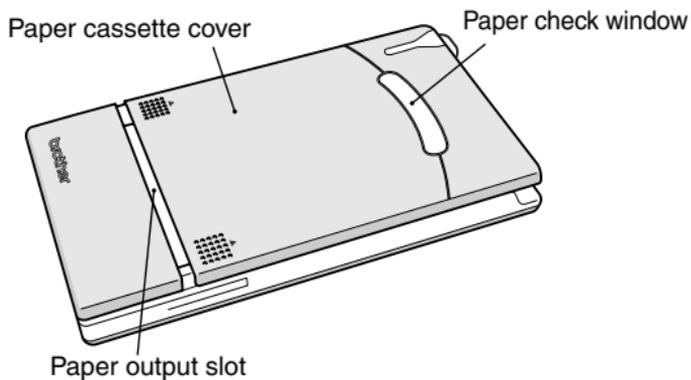

Left side

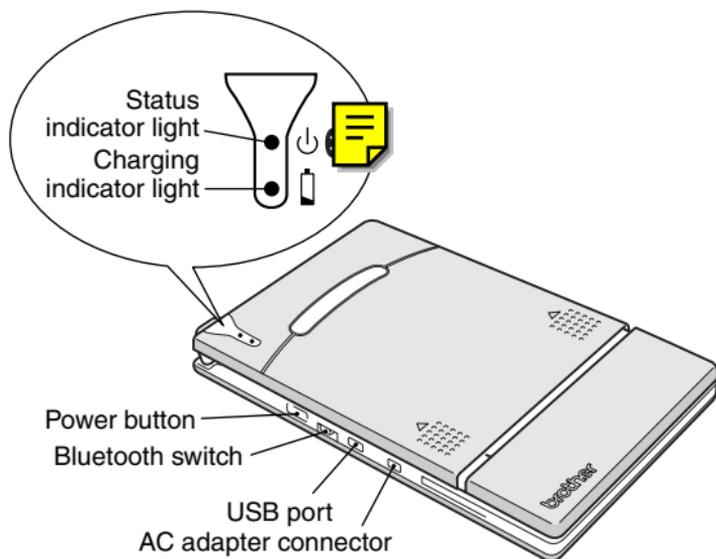

2 Operating Procedures

Charging


This printer is equipped with a built-in lithium ion battery. Use the AC adapter designed specifically for this printer to charge the battery.

After purchasing this printer, be sure to charge the battery fully before using it.


- 1** Plug the AC adapter cable into the AC adapter connector on the printer.

- 2** Plug the AC adapter plug into a household electrical outlet (AC 100 V – 240 V).

Charging of the built-in lithium ion battery automatically begins.

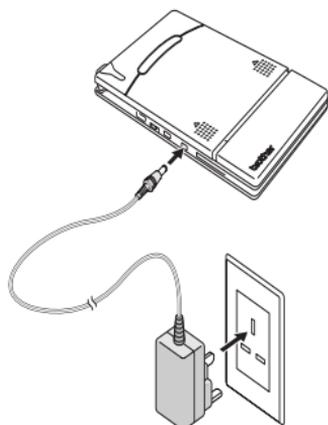

- The charging indicator light comes on in orange.
- When charging is finished, the charging indicator light goes off.

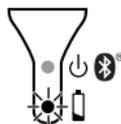

- 3** After charging is finished, disconnect the AC adapter.




- In order to protect the circuitry, the battery cannot be charged if the unit is in a location exposed to extremely high or extremely low temperatures.
- Do not wind the AC adapter cable around the adapter or bend the cable, otherwise the cable may be damaged.



- It takes approximately three hours for the battery to be recharged from completely empty to fully charged (with the printer turned off).

Selecting Bluetooth communication ON/OFF

- 1 Using the Bluetooth switch, select whether or not to use Bluetooth communication.

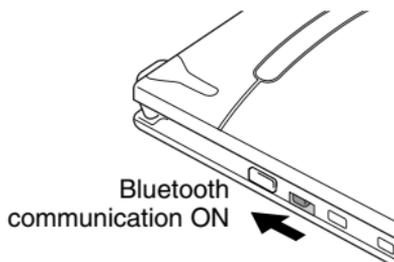


→ Set the switch to ON to use Bluetooth communication.



- Printing can still be carried out using USB communication even if “Bluetooth communication ON” is selected (except during the sleep mode). (→ Refer to page 21.)

Turning on/off the printer

- 1** Press and hold the power button for a short while, until the green or blue status indicator light illuminates.

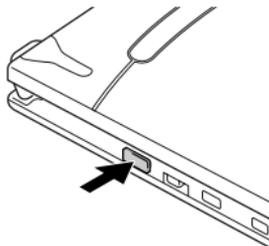

- When the power comes on, selecting Bluetooth Switch ON, the status indicator light will be blue. Selecting Bluetooth Switch OFF, the status indicator light will be green. (→ Refer to page 21.)



■ In order to prevent this printer from accidentally being turned on, it will not come on if the power button is lightly pressed. Therefore, if the printer does not come on, hold the power button pressed for a little while.

■ In order to conserve the built-in lithium battery during use, follow the operations below.

○ When the Bluetooth communication ON/OFF switch is set to "ON", the printer automatically enters the sleep mode (→ refer to page 21) if no operation is performed or if no data is sent to the printer within a specified time.

(The length of time [auto sleep time] until the printer automatically enters the sleep mode can be specified using the Utility software. [→ Refer to the Software Guide.])

○ When the Bluetooth communication ON/OFF switch is set to OFF, the printer automatically powers off if no operation is performed or if no data is sent to the printer for five minutes. (The length of time [auto power-off time] until the printer automatically powers off can be specified using the Utility software. [→ Refer to the Software Guide.])

Preparing the paper


Use only the paper cassette designed exclusively for this printer. Use of any other paper will result in damage.

To prepare the paper cassette


Prepare the paper cassette before installing it into the printer.

- Be careful not to drop any paper while the paper cassette is being prepared.

- 1** Open the lid of the paper cassette, and then tear off the two pieces (①) on the sides.

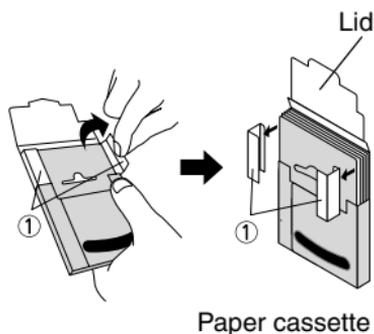

- 2** **Firmly** fold the lid back along the fold (②).

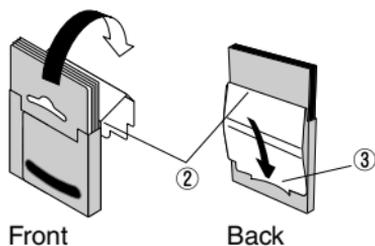

- 3** Insert the tab on the lid into the slit (③) at the back of the cassette.




■ Handling the paper cassette

- This printer determines the paper type depending on the installed paper cassette, then automatically selects the settings appropriate for that type of paper. Do not transfer paper to a different paper cassette.
- Do not try to reuse paper that has already passed through the printer.
- The paper cassette is made of cardboard. After all of the paper is used, dispose of the cassette according to local regulations.
- Do not use a torn or deformed paper cassette, otherwise damage may result.
- Do not prepare the paper cassette in an extremely humid location, otherwise a malfunction may result.
- Do not touch paper cassettes or paper with wet hands, otherwise a malfunction may result.
- Store the paper cassette out of extremely hot, extremely humid or extremely dusty locations and out of direct sunlight.
- When storing the paper cassette, be sure to close its lid.
- Do not leave paper cassettes in a closed car under a hot sun.
- Use the paper as quickly as possible, otherwise it may become discolored.

Installing the paper cassette

- 1 Slide the paper cassette cover (on the top of the printer) in direction ①.


→ The paper cassette cover will open in the direction indicated by ②.

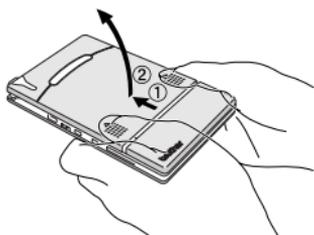

- 2 Insert the paper cassette.


The paper type indication on the paper cassette should face up. The end of the paper should point toward you.

Paper type indication

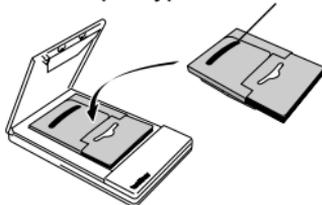


- When loading the paper cassette, make sure that it is correctly aligned and that the end of the paper is not folded, otherwise a paper misfeed may result.


- 3** Close the paper cassette cover in direction ③.

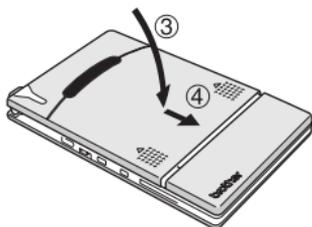

- 4** Slide the paper cassette cover in direction ④.
If the paper cassette is correctly loaded, the paper type indication on the cassette can be seen through the paper check window, and the paper cassette cover will be locked.

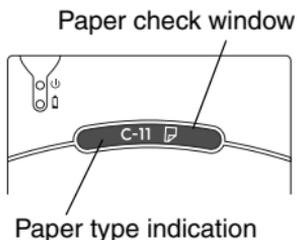

- Do not remove the paper from the paper cassette and load it directly into the printer.
- To change the paper type, install a different paper cassette.
- While the printer is printing, do not apply pressure to the paper output slot or place anything on the printer.

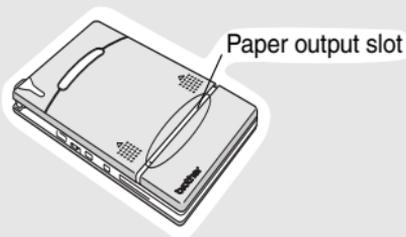


Sending data from a Pocket PC or computer

In order use this printer to print data from a Pocket PC (PDA running Pocket PC) or computer, the software must first be installed onto the Pocket PC or computer as described in the 'software guide' supplied with the printer.

Communication using Bluetooth technology

A computer and Pocket PC with Bluetooth wireless technology can connect to the printer using Bluetooth technology.

- 1** Set the computer or Pocket PC so that Bluetooth communication will be valid and the printer will be recognized.
(→ Refer to the Software Guide.)

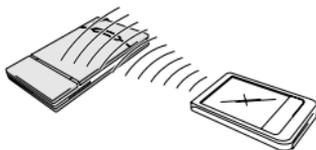

- 2** Start printing.


→ While data is being transmitted, the status indicator light flashes in blue.



- Communication with the printer using Bluetooth technology cannot be performed if the printer is already communicating with another computer using the USB.
- For more details, refer to the instruction manual for the computer or the Pocket PC.

Sending data through a USB connection

Using the enclosed USB cable, this printer can be connected to a computer or a Pocket PC supporting a USB host interface.

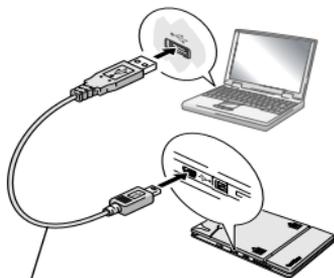


Enclosed USB cable

Feeding paper

If a paper misfeed occurs, remove the paper according to the following procedure.

If the paper has fed out of the paper output slot:

- 1** Pull the paper out from the paper output slot.

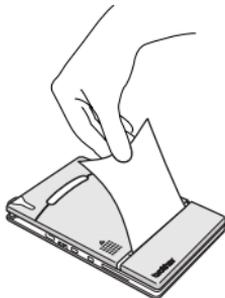

- When pulling out the paper, be sure not to tear it.

If the paper has not fed out of the paper output slot:

- 1** Open the paper cassette cover.
- 2** Remove the paper cassette.
- 3** Pull out the misfed paper.



- When pulling out the paper, be sure not to tear it.



- Pulling out the paper will not affect the operation of the printer.

Maintenance



- Be sure to turn off the printer before cleaning it.

Cleaning the printer

Clean the front of the printer.

- 1** Clean off any dust or other dirt from the printer by wiping it with a soft, dry cloth.

If the printer is extremely dirty, wipe it with a slightly damp cloth.




- Do not use benzene or paint thinners, otherwise the printer may become discolored or deformed.

Cleaning the paper cassette sensor

If the paper cassette sensor is dirty, it will not be able to correctly detect the paper cassette, and a malfunction may result.

- 1** Clean the paper cassette sensor with a dry cotton swab.

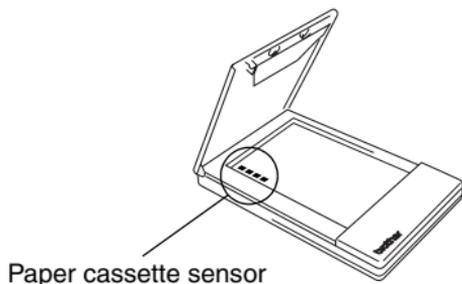


Cleaning the pick-up roller

If the pick-up roller is dirty, paper may not be fed correctly.

1 Affix a piece of cellophane tape to the pick-up roller.

2 Remove the cellophane tape from the pick-up roller.

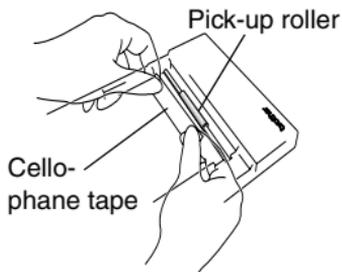

→ Any dirt on the pick-up roller is removed with the tape.


Rotate the pick-up roller and repeat the procedure to clean the entire surface of the roller.

Disposing of this printer

Before disposing of this printer, be sure to remove the built-in lithium ion battery.

Removing the lithium ion battery

- 1** Turn off the printer, and then disconnect the AC adapter.
- 2** Using a screwdriver, loosen the four screws at the back of the printer, and then remove the back cover.
- 3** Disconnect the connector, and then remove the lithium ion battery.

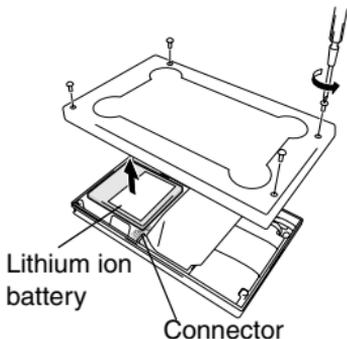

- Removing the back cover will void the warranty. Do not remove the back cover unless the printer is to be disposed of.
- The lithium ion battery is attached to the printer with adhesive tape. When removing the lithium ion battery, grasp it, and then pull it off of the printer. Be careful not to pull on the cable.
- When unplugging the connector, do not pull on the cable.



3 Appendix

Product specifications

Printer specifications

Indicators		Status indicator light (blue/green/red) Charging indicator light (orange)
Printing	Method	Direct thermal printing with a line thermal print head
	Resolution	300 dpi × 300 dpi
	Print speed	15 seconds/sheet (standard text on thermal paper with 7 % coverage at an ambient temperature of 25 °C)
	No. of pages that can be printed	Approximately 100 pages can be printed continuously if the battery is fully charged (standard text on thermal paper with 7 % coverage at an ambient temperature of 25 °C)
Paper supply method		Brother paper cassette, automatic paper feed mechanism
Paper		Brother A7 cut paper (74 mm × 105 mm)
Power supply		Compact switching AC adapter for charging, lithium ion battery (built in) 780 mAh (7.4 V)
Interface		Complies with USB Ver. 1.1 and compliant with Bluetooth ver. 1.1 class 2 serial port profile supported
Dimensions		100 mm (W) × 160 mm (not including projection) (D) × 17.5 mm (H)
Weight		300 g (including the built-in lithium ion battery and a paper cassette containing 50 sheets of plain thermal paper)

Paper sizes (print area)

Normal type	A7 size: 74 mm × 105 mm (69 mm × 100 mm)
Label sheets (four down)	74 mm × 26.25 mm (69 mm × 21.25 mm)
Label sheets (two down)	74 mm × 52.5 mm (69 mm × 47.5 mm)

Troubleshooting

Symptoms & remedies


Symptom: The printer cannot be turned on.	Remedy: Press and hold the power button for a short while. (→ Refer to page 6.) Remedy: The built-in lithium ion battery needs recharging. (→ Refer to page 3.)
Symptom: Although the print command was issued, the printer does not print.	With a Bluetooth connection: Remedy: Make sure that Bluetooth communication will be valid using the settings of the computer or Pocket PC. (→ Refer to the Software Guide.) Remedy: Make sure that another computer or Pocket PC is not transmitting data to the printer using the USB or Bluetooth. (→ Refer to page 11.) With a USB connection: Remedy: Check that this printer is securely connected to the computer with the USB cable. (→ Refer to page 12.) Remedy: Make sure that another computer or Pocket PC is not transmitting data to the printer using Bluetooth. (→ Refer to page 12.)
Symptom: There is a paper misfeed.	Remedy: Remove the paper. (→ Refer to page 13.)
Symptom: Even though the misfed paper was removed, the error cannot be cancelled.	Remedy: Some torn paper may still remain in the printer. Contact the sales representative where the printer was purchased.
Symptom: An indicator light is lit or flashing.	Remedy: Refer to the explanation in “Indicator lights” on page 21.

Symptom: The paper does not feed.	<p>Remedy: Make sure that the lid of the paper cassette is firmly folded along the fold (②). (→ Refer to page 7.)</p> <p>Remedy: Make sure that the paper cassette cover is securely closed. (→ Refer to page 10.)</p> <p>Remedy: The paper may be dirty. Pull out the first sheet from the back of the paper cassette, and then install the paper cassette again. (→ Refer to pages 7 and 9.)</p> <p>Remedy: Clean the pick-up roller. (→ Refer to page 15.)</p>
Symptom: The print is faint (light).	<p>Remedy: Make sure that the paper cassette cover is securely closed. (→ Refer to page 10.)</p>

Symptom: The paper cassette cover cannot be closed.


Remedy: The parts indicated by "A" in the illustration below have locked up. Refer to the illustration and use the tip of a ball-point pen to slide the indicated part in the direction of the arrow to free it.

Paper cassette cover

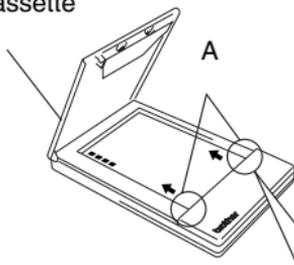


Push with the tip of a ball-point pen to slide it.

①

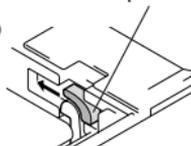

②

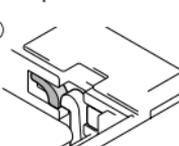

Free the part on the opposite side using the same method

Indicator lights

■ Status indicator light

A blue or green light indicates the printer is operating correctly, while a red light indicates an error has occurred.



Indicator light color	Indicator light status	Printer status
Blue	Constantly lit	Waiting to receive data using Bluetooth or the USB
	Flashing	Receiving data using Bluetooth
	Flashing in long intervals	Sleep mode (power-saving standby condition, possible only when receiving data using Bluetooth)
Green	Constantly lit	Waiting to receive data
	Flashing	Receiving data
Red	Flashing	An error has occurred.
	Constantly lit	A system error has occurred.

When the status indicator light is blue, it is possible to receive data using both the Bluetooth and USB interfaces. However, once a connection is established using one of the interfaces, data cannot be received using the other interface until printing is complete. If an error has occurred, check for the following causes.

Error description	Remedy
There is no paper cassette installed. The paper cassette is installed facing the wrong direction. There is no more paper.	Correctly install a paper cassette containing paper.
A paper misfeed occurred.	Remove the misfed paper.
A transmission error occurred.	Check the transmission status.
An overheat error occurred.	The inside of the printer has started to overheat. Wait until it cools down

If a system error has occurred:
The printer may be damaged. Contact the sales representative where it was purchased.

■ Charging indicator light

With the charging indicator light, the status of the power supply can be checked. The charging indicator light has two functions.



① Checking the charging status (when the AC adapter is connected)

Indicator light color	Indicator light status	Printer status
Orange	Constantly lit	Charging
	Off	Finished charging
	Flashing	Malfunctioning built-in battery

② Checking the battery level (while running off the built-in lithium ion battery)

Indicator light status	Battery level
Off	More than 60% charged
Flashes once	Less than 60% charged
Flashes twice	Less than 30% charged
Continues to flash 3 times	Almost empty



- When the battery level is less than 60% charged, recharge the battery.
- If the charging indicator light flashes while the printer is printing, immediately connect the AC adapter and charge the battery. The printer may stop printing.

MW-140BT Accessories

Stock No.	Description
C-11	A7 Thermal paper (105 mm x 74 mm)
C-21	A7 Label (105 mm x 74 mm)
C-41	A7 Cut label sheet (4/sheet) (26.25 mm x 74 mm)
C-42	A7 Cut label sheet (2/sheet) (52.5 mm x 74 mm)

Count:

50 sheets/cassette (thermal paper)

30 sheets/cassette (all others)

brother®