

brother[®]

Brother International Corporation
100 Somerset Corporate Boulevard
P.O. Box 6911
Bridgewater, NJ 08807-0911 USA

Brother International Corporation (Canada) Ltd.
1 rue Hôtel de Ville,
Dollard-des-Ormeaux, QC, CANADA H9B 3H6

Visit us on the World Wide Web
<http://www.brother.com>

FAX-1800C Quick Setup Guide

brother
LE6607001

THANK YOU!

CONGRATULATIONS ON PURCHASING THE ULTIMATE BROTHER MACHINE. WE ARE SURE YOU WILL BE THRILLED WITH THE CONVENIENT WAY YOUR NEW MACHINE PERFORMS SO MANY TASKS WITH DAZZLING RESULTS!

Follow these simple instructions in numerical order.

For more details, press (Reports) while holding down (Shift), and then press (1) on your machine or see your Owner's Manual.

If you cannot solve a problem:

Refer to **Frequently Asked Questions (FAQs)** on Brother World Wide Web;

URL: <http://solutions.brother.com>

Call Brother Customer Service at;

 
USA: 1-800-284-4329 (9 AM - 5 PM EST)

1-800-284-3238 (TTY service for the hearing impaired)

In Canada: 1-800-853-6660 (8 AM - 8 PM EST)

1-514-685-6464 (in Montreal)

1 Packing List

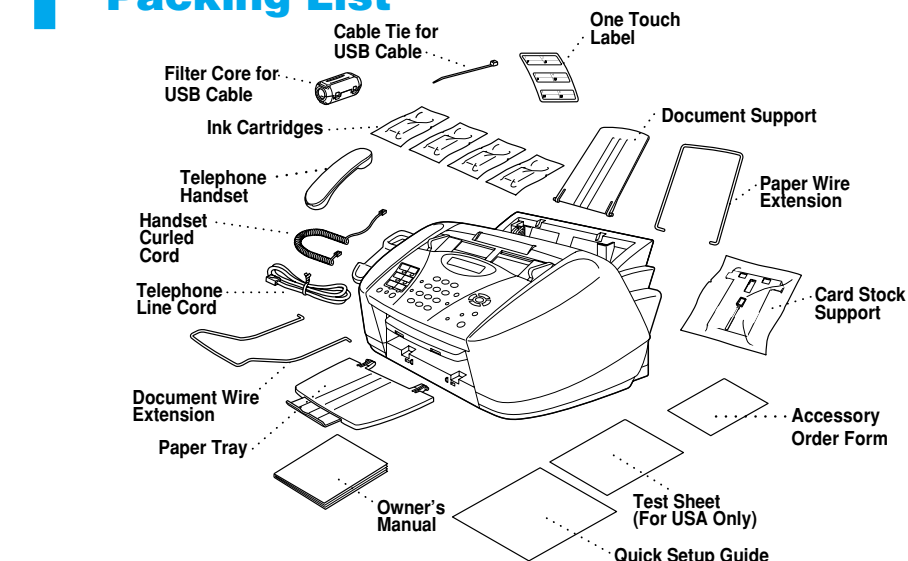

Keep the packing materials for possible future transport. If you do not pack the machine properly, it may void your warranty.

 
2 Remove the Protective Yellow Bar

A. Open the control panel cover by pulling it toward you (1), and then lift the top cover toward the back (2).


B. Pull the protective yellow bar out of the machine.

Do not throw away the protective yellow bar. You will need it for future transportation.


C. Close the top cover, and then close the control panel cover.

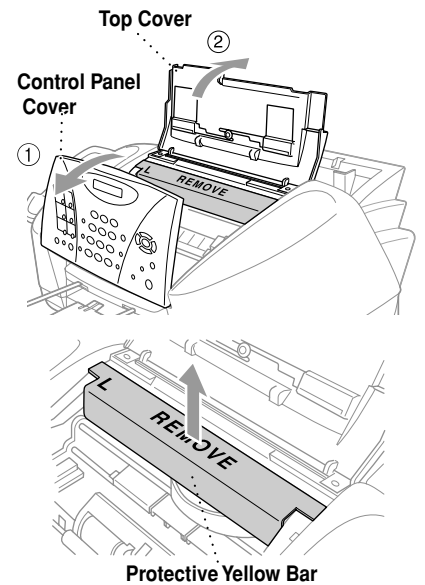


3 Install Handset

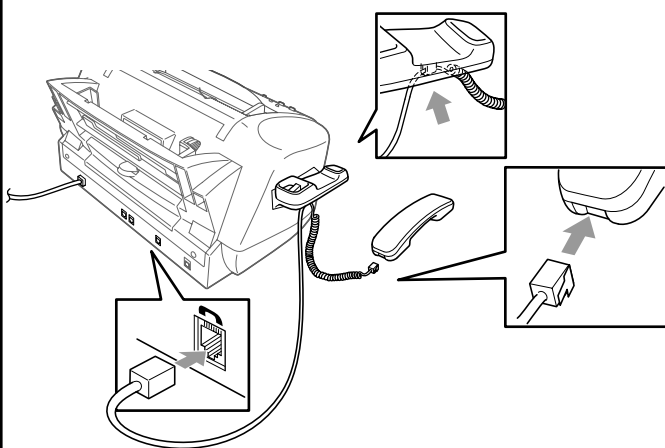 

4 Install Phone Line and Power Cord

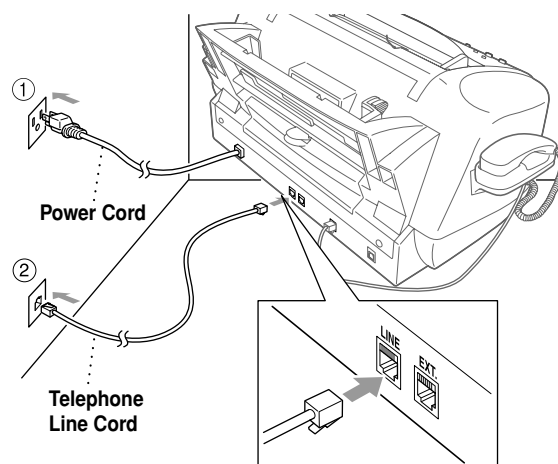 


 5 If you are sharing one phone line with an external telephone answering device, connect it now to the external jack.

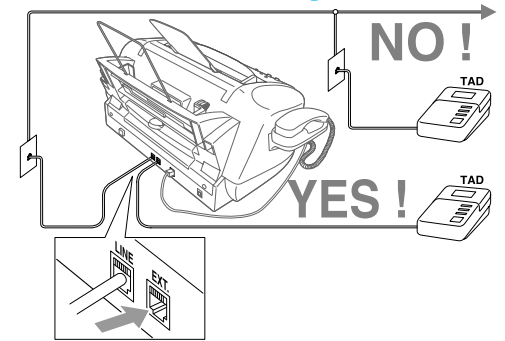

Note: Please select "TAD" on your machine if you have an external answering machine. (For more details, see page 2-13 to 2-15 in Owner's Manual.)

 6 Attach Trays and Extensions

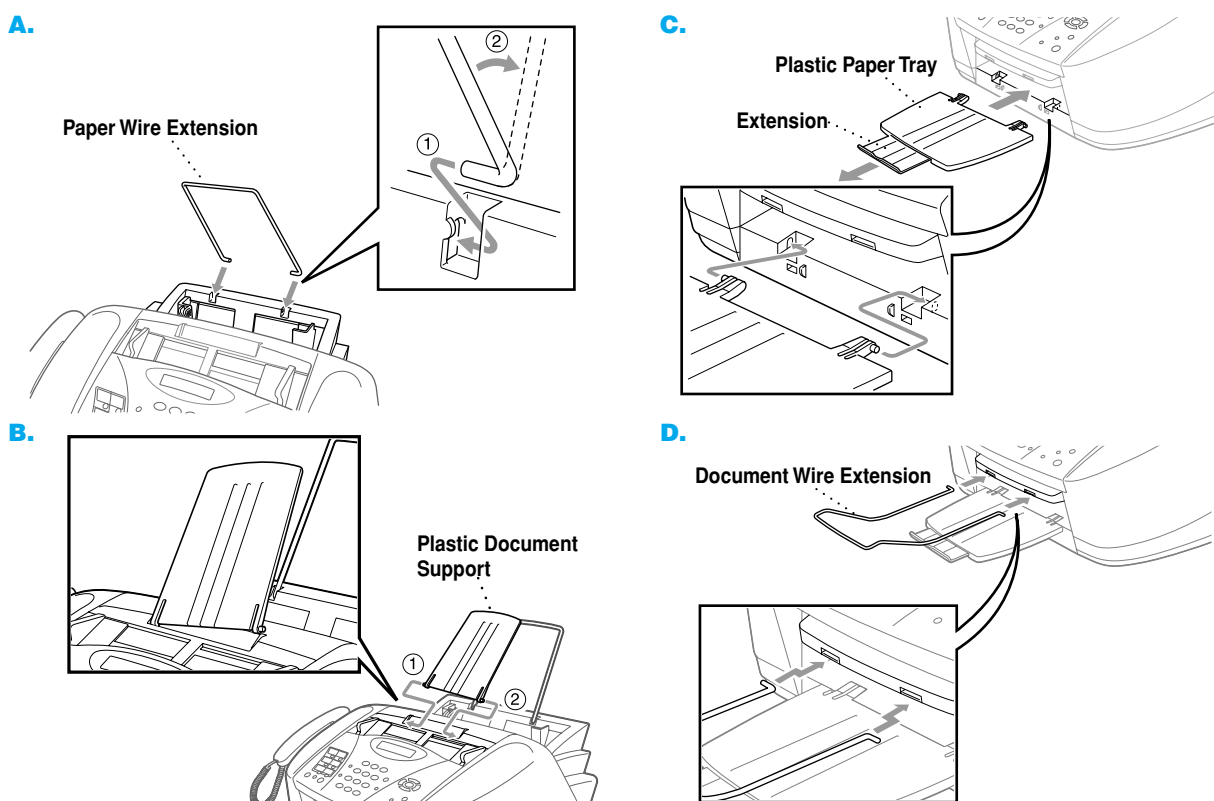


Please attach the trays to prevent jams and to maintain print quality.

7 Load Paper

You can load up to 100 sheets of 20lb (75g/m²) plain paper. For more details, see Chapter 3 in Owner's Manual.

A. Fan the paper well. Gently insert the paper. Make sure the print side is toward you and the paper level is stacked below the paper guide line.

 B. Press and slide the guide to fit the paper width.

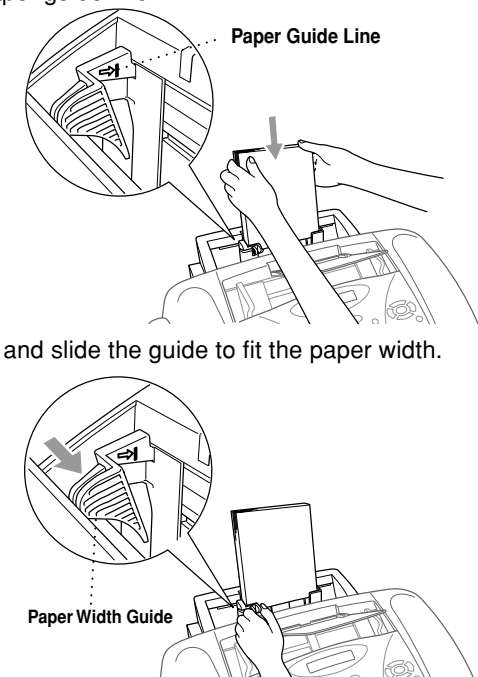


Go to Next Page

8 Install the Ink Cartridges


- A.** Check that the power is turned on (by plugging in the power cord).
The LCD shows:

CHECK CARTRIDGE


 
- B.** Open the control panel cover by pulling it toward you (1), then lift the top cover toward the back (2). After a few seconds, the print head will move left to its replacement position.

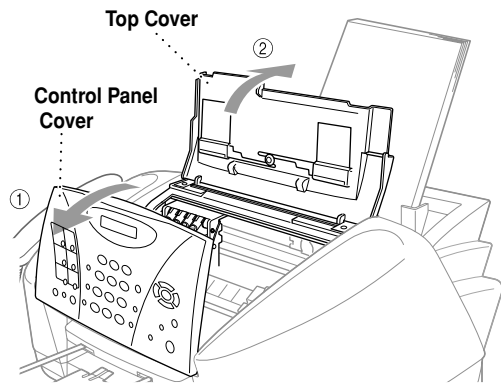

 - C.** Remove the protective blue tape from the colored ink cartridge covers.
- The bottom of the white shipping cover is wet with ink that will cause stains, so wipe it clean before you place it down.
 - Do not throw away the white shipping cover. You will need it for future transportation.

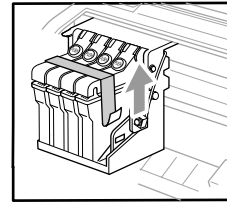

  - D.** Push the four colored ink cartridge covers one at a time so they pop up. Then remove the white shipping cover by pulling it toward you and then lifting it up and out.

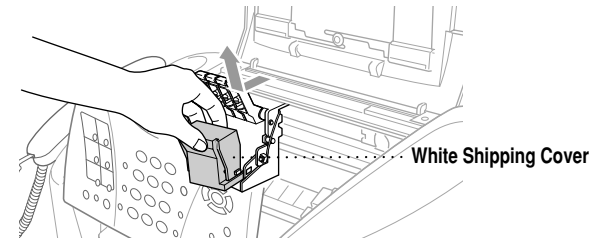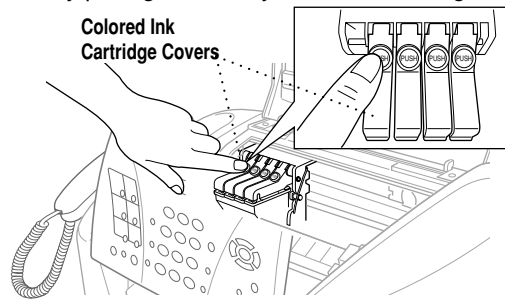



- E.** Open the Black ink cartridge bag and take out the ink cartridge.
- F.** Carefully remove the sealing tape from the bottom of the ink cartridge. Be sure to peel the tape in the direction away from you.

Important

To prevent spilling ink and staining your hands and clothing, peel the sealing tape gently and slowly. Do not touch the ink opening on the cartridge or the removed tape.



  - G.** Each color has its own correct position. Match the colors of the covers. First, gently insert the Black ink cartridge, and then press the cover down until it clicks.

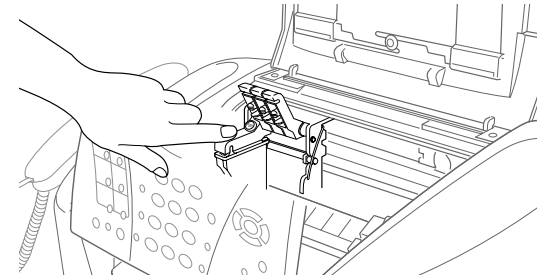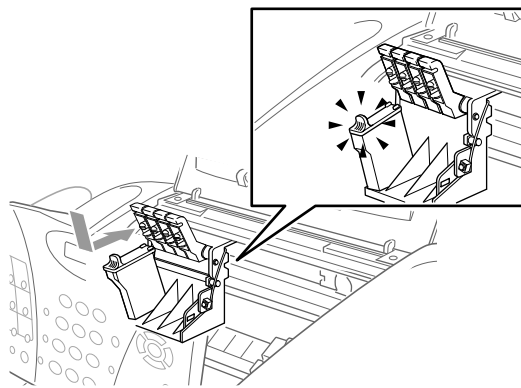

- H.** Repeat Steps E-G to install each color ink cartridge.

- I.** After installing all ink cartridges, close the top cover and control panel cover until they click into place. Your FAX will enter a "head cleaning" cycle for approximately **four minutes**.

 
- J.** Make sure the paper is loaded in the multi-purpose sheet feeder. The LCD shows **CLEANING** and **PLEASE WAIT**. After the cleaning cycle is finished, the LCD shows **PRESS FAX START**.

- Press **Black Fax Start** and go to Step 9 "Check Color Block Quality and Alignment".

9 Check Color Block Quality and Alignment

The FAX starts printing the **PRINT QUALITY CHECK SHEET** (only during initial ink cartridge installation).

Check the sheet to see if the quality and alignment are OK by following STEPs A and B.

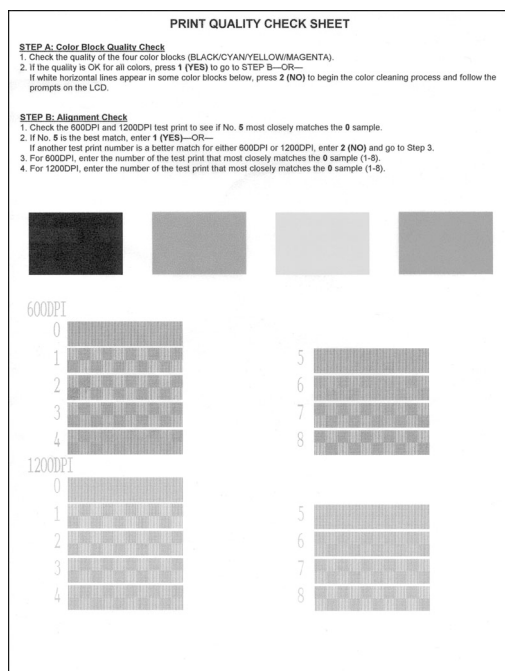

STEP A: Color Block Quality Check

The LCD shows:

IS STEP "A" OK?
1. YES 2. NO

Check the quality of the four color blocks printed on the sheet. (BLACK/CYAN/YELLOW/MAGENTA).

If the quality is OK for all colors, press **1** (YES) to go to **STEP B** —OR—

If white horizontal lines appear in some color blocks below, press **2** (NO).



The LCD asks you if the print quality is OK for each color.

BLACK OK?
1. YES 2. NO

Press **2** (NO) for any color with a problem.

The LCD shows:

START CLEANING?
1. YES 2. NO

Press **1** (YES), then FAX starts cleaning the colors.

After cleaning is finished, press **Black Fax Start**. The FAX starts printing **PRINT QUALITY CHECK SHEET** again and goes back to the first step of **STEP A**.

 
STEP B: Alignment Check

The LCD shows:

IS STEP "B" OK?
1. YES 2. NO

Check the 600DPI and 1200DPI test print to see if No.5 most closely matches the **OK** sample (0).

If No.5 is the best match, enter **1** (YES)—OR—

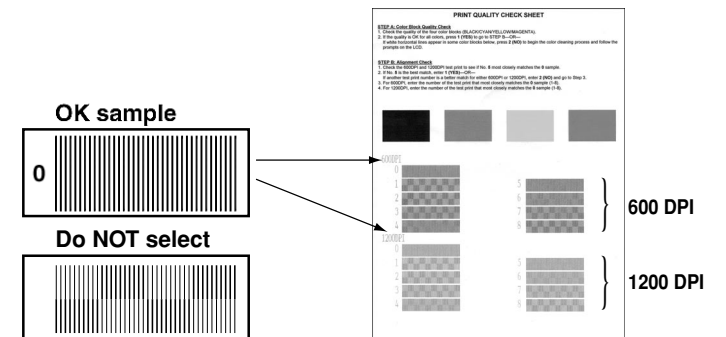

If another test print number is a better match for either 600DPI or 1200DPI, enter **2** (NO) to select it.

For 600DPI, enter the number of the test print that most closely matches the 0 sample (1-8).

600DPI ADJUST
SELECT BEST #

 
For 1200DPI, enter the number of the test print that most closely matches the 0 sample (1-8).

1200DPI ADJUST
SELECT BEST #

Go to Next Page



FAX-1800C Control Panel

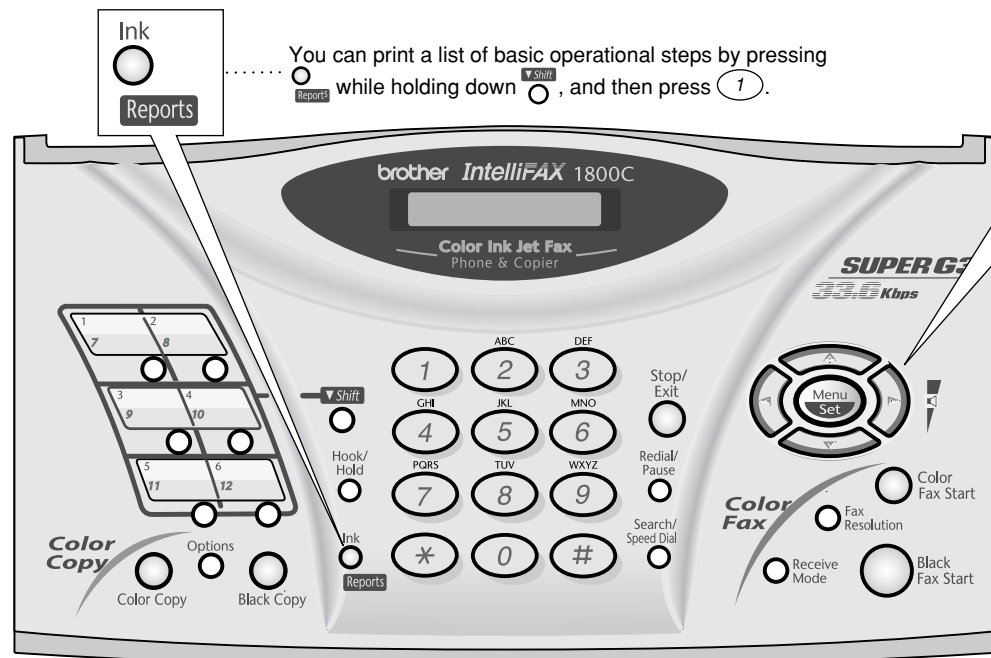

Navigation Keys

- * Access the Menu
- * Go to next menu level
- * Accept an option
- * Scroll through the current menu level
- * Back to previous menu level
- * Forward to next menu level
- * Exit the Menu

10 Select a Receive Mode

Choose the mode that best suits your needs by pressing **Receive Mode** repeatedly until the LCD shows the setting you want to use.

FAX ONLY

For use with a dedicated fax line. Every call is answered as a fax.

FAX/TEL

For receiving fax and voice calls on one line. The FAX answers every call and receives a fax or double rings for you to pick up a voice call.

TAD: ANSWER MACH.

For use with an external answering device. The TAD answers every call and stores voice messages.

Fax messages are printed.

Make sure that TAD is connected to external jack.

MANUAL

You control the phone line and must answer every call yourself.

For more details, see page 6-1 in Owner's Manual.

11 Set Date and Time

Your FAX displays the date and time, and prints it on every fax you send.

A. Press **Menu/Set**, **1**, **3**.

3. DATE/TIME

YEAR:XX

B. Enter the last two digits of the year and press **Menu/Set**.

MONTH:XX

C. Enter two digits for the month and press **Menu/Set**.

DAY:XX

D. Enter two digits for the day and press **Menu/Set**.

TIME:XX:XX

E. Enter the time in 24-hour format and press **Menu/Set**.

F. Press **Stop/Exit**.

Note: If you can't step forward, press **Stop/Exit** and repeat from step A.

12 Set Station ID

You should store your name and fax number to be printed on all fax pages you send.

A. Press **Menu/Set**, **1**, **4**.

4. STATION ID

FAX:

B. Enter your fax number, then press **Menu/Set**.

TEL:

C. Enter your telephone number, then press **Menu/Set**.

NAME:

D. Enter your name using the dial pad and the chart below, then press **Menu/Set**. Use the right arrow to create spaces.



E. Press **Stop/Exit**.

For more details, see pages 5-2 to 5-3 in Owner's Manual.

Key	once	twice	three times	four times	five times
2	A	B	C	2	A
3	D	E	F	3	D
4	G	H	I	4	G
5	J	K	L	5	J
6	M	N	O	6	M
7	P	Q	R	7	P
8	T	U	V	8	T
9	W	X	Y	9	W

Note: If you can't step forward, press **Stop/Exit** and repeat from step A.

  13 For the USA, complete the Warranty Registration and Test Sheet ...and fax it to Brother at: 1-877-268-9575

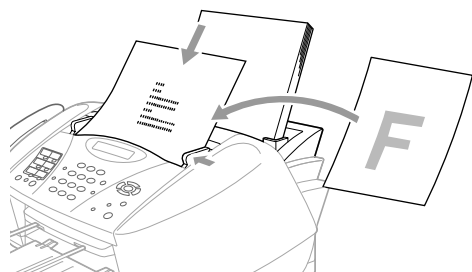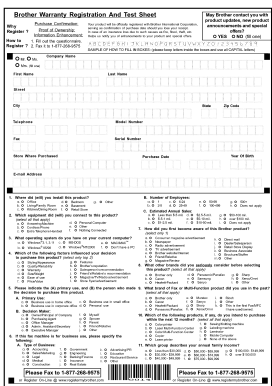


- A. Fill out the Test Sheet.
- B. Place the sheet face down in the ADF.
- C. Enter the fax number: 1-877-268-9575.
- D. Press **Black Fax Start**.

For Improving Print Quality

If horizontal streaks appear like this, clean the print head.
(See *Cleaning the Print Head* in Owner's Manual or visit us at <http://solutions.brother.com>)



If characters and lines are stacked like this, check alignment.
(See *Print Quality Check* in Owner's Manual or visit us at <http://solutions.brother.com>)

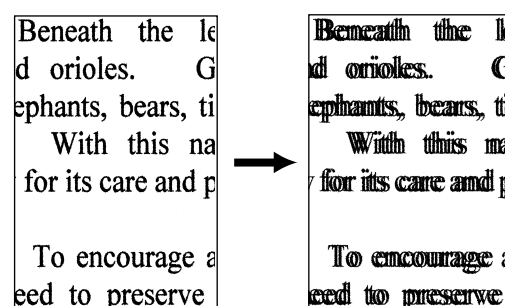

14 Using FAX-1800C as a Printer

You can download the Brother Printer Driver from the Brother Solutions Center to use the FAX-1800C as a printer.

Visit us at:

<http://solutions.brother.com>

- Note:
- Please download the Printer Driver first before connecting the machine to your computer with the USB cable.
 - You must use the appropriate USB cable. If you don't have it, please purchase a USB cable that is no longer than 6 feet long (1.8 meters).
 - You must connect the enclosed Filter Core and Cable Tie to the USB cable to meet FCC Emission Requirements.