

Installation Instructions for:

Model: SU-2-00

Installation Materials Supplied



- SU-2 Sensor Unit
- Anchor Screw

Caution

- Disconnect all power before installation or service.
- All installations and maintenance work must be performed by qualified personnel.
- The SU-2 must be installed in accordance with state, local and national electrical codes and requirements.

Installation Instructions for SU-2-00

1. Turn off all power to the light fixture by switching off the circuit breaker.
2. The RJ11 data cable should already be installed and connected to the CU-2 mounted in the ballast cavity of the fixture or mounted in a UL approved enclosure.
3. The SU-2 Sensor should be mounted to the ceiling within a few feet of the lighting fixture and over the service area of the light.
4. Select a place for the RJ11 data cable to exit the plenum and make a small cut in the ceiling tile for the cable to exit.
5. Install the SU-2 anchor screw (as shown).
6. Connect the RJ11 data cable to the Sensor (bottom entry).
7. Slide the SU-2 onto the screw head as shown.
8. Slip the excess RJ11 data cable up into the plenum area and adjust the ceiling tile to the original position.

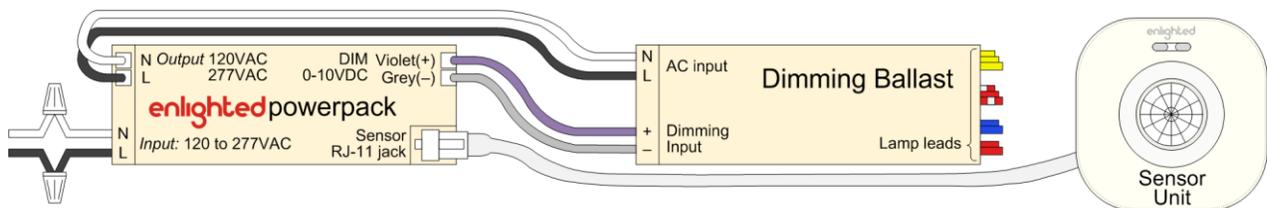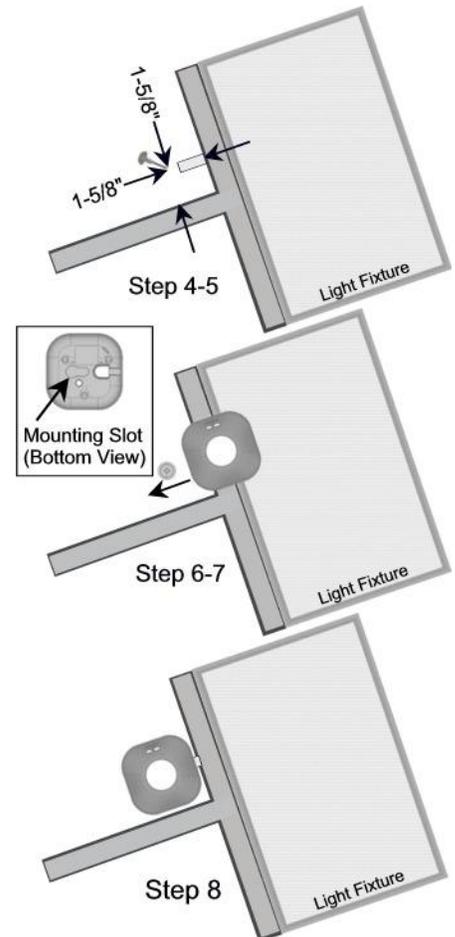



enlighted Inc.
930 Benecia Ave.
Sunnyvale, CA 94085
www.enlightedinc.com

Phone: 650 964-1094
Fax: 408 730-5754
Support: 855 874-1691
support@enlightedinc.com

FCC ID: AQQ-SU2

Warning:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation

Changes or modifications not expressly approved by Enlighted Inc. could void the user's authority to operate the equipment.

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement