

# 1 Mile Walkie Talkie

CONTENTS: 2 Walkie Talkies, 1 Instruction Guide

## HOW TO OPERATE

1. Slide the POWER switch to LOW OR HIGH to switch on, Front LED flashes in RED.

Side LED with Green = A channel = 462.6125MHz

Side LED with RED = B channel = 462.5875MHz

Side LED with ORANGE = C channel = 462.5625MHz

Walkie talkies can be communicated when they are at the same channel, Press the PTT button, front LED will in RED.

2. Press the PTT button to talk, which activates the device into "sending" mode. When the PTT button isn't pressed, the unit is in "receiving" mode, ready to receive and hear any messages.

3. Slide the POWER switch to OFF, Product turns off, Front LED turns OFF.

**Important:** Only one Walkie-Talkie can transmit (send a message) at a time. When earphone is inserted into product, the speaker of the product will not transmit voice, Voice will be transmitted by the earphone.

**Calling Another Unit:** Set both units to the same channel. Press the PTT Button twice to call.

**Tips:** When you are finished speaking, say "OVER" so the other Walkie-Talkie in use will know it is his or her turn to talk. When the conversation is complete, say "OVER AND OUT."

## HOW TO REPLACE/INSTALL BATTERIES

One unit of the product requires 3 x 1.5V AAA/LR03 type batteries (6 batteries in total for a pair).



Open the battery door at the back of the unit with a screwdriver.

Remove the old batteries if exist.

Please ensure the polarity of the battery is correct. The polarity is printed on the bottom of each battery slot.

Insert fresh batteries.

Close the battery door and tighten the screw.

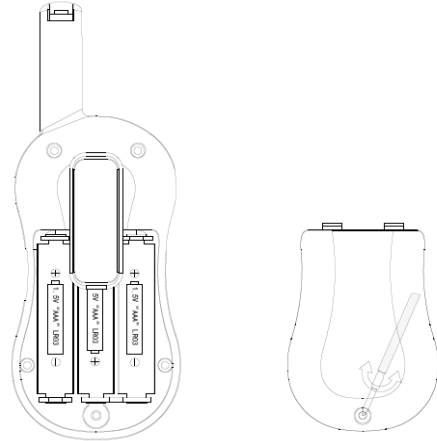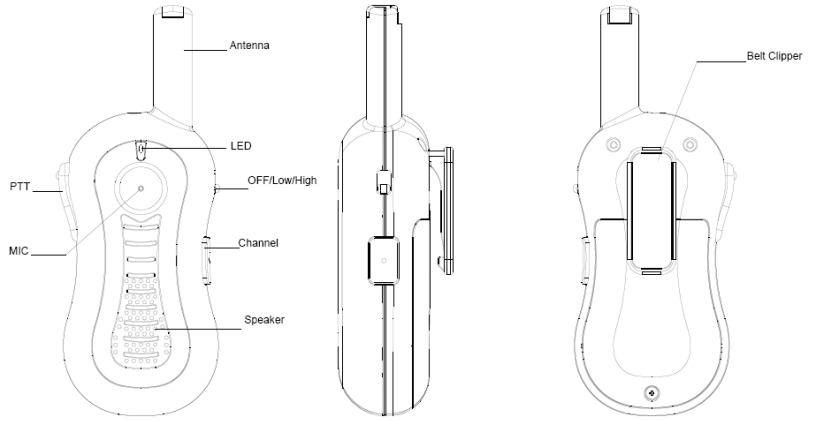

## IMPORTANT SAFETY INSTRUCTIONS

All of the safety and operating instructions should be read, adhered to and followed before the unit is operated. Please retain the packaging for future reference since it contains important information.

### WARNING.

- Not suitable for children under 3 years, small parts.
- Use this unit only for its intended use as described in this manual.
- You can plug headphones into the HEADPHONE JACK to listen more stealthily. This will turn off the speaker on the WALKIE TALKIE. Head phone not included.

**Special Note to Adults:** Parental guidance is recommended when installing or replacing batteries. Regularly examine the toy for damage. In the event of any damage, the toy must not be used until the damage has been repaired. This toy is not intended for children under 3 years old.

**NOTE:** If normal function of the product is disturbed or interrupted, strong electromagnetic interference may be causing the issue. To reset product, turn it completely off, then turn it back on. If normal operation does not resume, move the product to another location and try again. To ensure normal performance, change the batteries, as low batteries may not allow full function.

**Care and Maintenance:** Always remove batteries from the toy when it is not being used for a long period of time. Wipe the toy gently with a clean damp cloth. Keep the toy away from direct heat. Do not submerge the toy in water. This can damage the electronic assemblies.

## CAUTION

•To maintain compliance with the FCC's RF exposure guidelines, hold the transmitter and antenna at least 1 inch (2.5 centimeters) from your face and speak in a normal voice, with the antenna pointed up and away from the face.

•Use only the belt clip supplied for this product. When transmitting, take it out of the belt to ensure that the antenna is at least 1 inch (2.5 centimeters) from your body.

•This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment.

•Use only the antenna supplied. Unauthorized antennas, modifications, or attachments could damage the transmitter and may violate FCC regulations.

**SAFETY INFORMATION:** Your wireless hand-held portable transceiver contains a low power transmitter. This product sends out radio frequency (RF) signals when the Push-to-Talk (PTT) button is pressed. The device is authorized to operate at a duty factor not to exceed 50%. In August 1996, the Federal Communications Commissions (FCC) adopted RF exposure guidelines with safety levels for hand-held wireless devices.

**WARNING:** It is recommended that any adjustment to this equipment be performed by, or under the immediate supervision and responsibility of, a certified technician. This technician should be qualified to perform transmitter maintenance and repair duties in the private land mobile services

## WARNINGS CONCERNING THE USE OF THE BATTERY

Requires 3 x 1.5 V AAA/LR03 alkaline batteries (not included). Batteries are small objects. - Replacement of batteries must be done by adults. - Follow the polarity (+/-) diagram in the battery compartment. - Promptly remove dead batteries from the toy. - Dispose of used batteries properly. - Remove batteries for prolonged storage. - Only batteries of the same or equivalent type as recommended are to be used. - DO NOT incinerate used batteries. - DO NOT dispose of this product in fire, as batteries inside may explode or leak. - DO NOT dispose of batteries in fire, as batteries may explode or leak. - DO NOT mix old and new batteries or types of batteries (i.e. alkaline/ standard). - DO NOT use rechargeable batteries. - DO NOT recharge non-rechargeable batteries. - DO NOT short-circuit the supply terminals.

### Battery disposal

Requires 3 x 1.5 V AAA/LR03 alkaline batteries (not included). Batteries or battery packs must be recycled or disposed of properly. When this product has reached the end of its useful life it should not be disposed of with other household waste.

The Waste Electrical and Electronic Equipment Regulations require it to be separately collected so that it can be treated using the best available recovery and recycling techniques. This will minimize the impact on the environment and human health from soil and water contamination by any hazardous substances, decrease the resources required to make new products and avoid using up landfill space. Please do your part by keeping this product out of the municipal waste stream! The "wheelie bin" symbol means that it should be collected as "waste electrical and electronic equipment". You can return an old product to your retailer when you buy a similar new one. For other options, please contact your local council.

## FCC STATEMENT

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesirable operation. This equipment has been tested and found to comply with the limits for Class B digital devices pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference to radio communications. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction, may cause harmful interference to radio communication. However, there is no guarantee that interference will not occur in a particular installation. If this toy does cause interference to radio or television reception (you can check this by turning the toy off and on while listening for the interference), one or more of the following measures may be useful: • Reorient or relocate the receiving antenna • Increase the separation between the toy and the radio or the TV • Consult the dealer or an experienced TV-radio technician for help. NOTE: Changes, adjustments or modifications to this unit, including but not limited to, replacement of any transmitter component (crystal, semiconductor, etc.) could result in a violation of FCC rules under part 15 and/or 95 and must be expressly approved by kidzlane or they could void the user's authority to operate the equipment.

MADE IN CHINA.

Product name: 1 Mile Walkie Talkie

Manufactured and Imported by



BROOKLYN, NY 11211  
www.kidzlane.com  
© 2016 KIDZLANE



AC00087-US-001-IS